









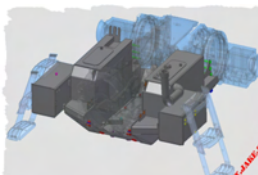







JAKE PRODUCTS

	<p>JAKE 350</p> <p>For mounting 3-point fastening cranes with lifting moment up to 45 kNm on the wheel tractors</p>		<p>JAKE 600</p> <p>For mounting flange fastening cranes with lifting moment up to 60 kNm on the wheel tractors</p>
	<p>JAKE 800, JAKE 800 HD</p> <p>For mounting flange fastening cranes and loading cranes on the wheel tractors (crane size not limited)</p>		<p>JAKE 800 Tilt</p> <p>For mounting flange fastening cranes on the wheel tractors, especially for harvester use</p>
	<p>Digger JAKE</p> <p>For mounting excavators with 3-point fastenings (or same kinds of) on the wheel tractors</p>		<p>JAKE Front Linkage</p> <p>For mounting different attachments, especially ploughs and blades, on the front of wheel tractors</p>
	<p>JAKE Armour Plate</p> <p>For the protection of the bottom of the wheel tractor</p>		<p>JAKE Standard Legs</p> <p>For providing stability of the tractor-crane combination (JAKE 600)</p>
	<p>JAKE Tele Legs</p> <p>For providing stability of the tractor-crane combination (JAKE 600, JAKE 800, JAKE 800 Tilt)</p>		<p>JAKE Heavy Duty Legs</p> <p>For providing stability of the tractor-crane combination (JAKE 600, JAKE 800, JAKE 800 Tilt)</p>
	<p>JAKE Forest Tank</p> <p>Armoured fuel tank for replacing an original plastic fuel tank, includes integrated armour plate</p>		<p>JAKE Oil Tank</p> <p>For hydraulic oil, capacity 110 litres (JAKE 600, JAKE 800)</p>
	<p>JAKE Boom Support</p> <p>A reliable support for a boom of the crane for stabilizing road driving and giving more traction to the front wheel in forest</p>		<p>JAKE Axle Stabilizer</p> <p>Provides stability of the tractor equipped with a front loader, a front linkage, a crane or a digger by locking axle oscillation</p>
	<p>JAKE D114 Digger</p> <p>A digger for modern tractors. Operated by two electric joysticks, uses tractor hydraulics or additional PTO pump</p>		<p>JAKE Wheel Weights</p> <p>Balances the nose of the tractor by increasing the weight of front wheels</p>

* Uusimäen Konepaja Ky * PL 20 * FI-62601 LAPPAJÄRVI *

* tel. +358 40 566 4018 * www.jake.fi * info@jake.fi *