




Ref No	Part No	Description
1	11402-40820	Gasket Set
2	11141-35F00	• Gasket, Cylinder Head
3	11173-35F00	• Gasket, Cylinder Head Cover No.1
4	11178-33E00	• Gasket, Cylinder Head Cover No.2
5	11182-35F00	• Cover, 2nd Air Passage
6	09161-11008	• Washer, Head Cover
7	11482-40F00	• Gasket, Clutch Cover
8	11491-33E02	• Gasket, Starter Clutch Cover
9	09280-33004	• O Ring, Crankshaft Hole Plug
10	11492-33E00	• Gasket, Starter Idle Gear Cap
11	11483-18G00	• Gasket, Magneto Cover
12	11484-35F00	• Gasket, Breather Cover
13	12837-18G00	• Gasket, Tensioner Adjuster
14	14181-02F00	• Gasket, Muffler Joint
15	14181-46E00	• Gasket, Exhaust Pipe
16	09280-12012	• O Ring, Muffler Front
17	16491-35F00	• O Ring, Oil Pump
18	09280-19008	• O Ring, Oil Strainer
19	15201-35F00	• O Ring, Fuel Pump

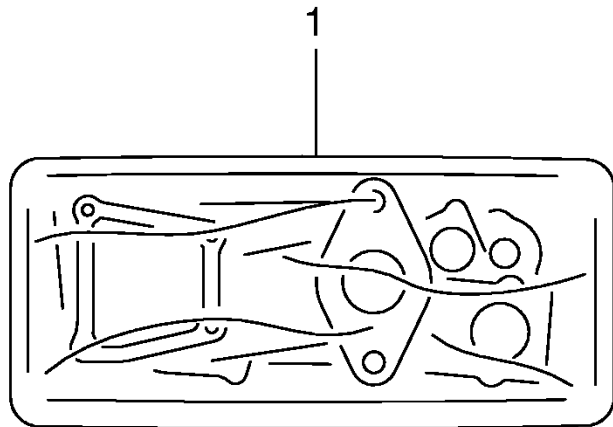


Ref No	Part No	Description
1	11171-35F00	Cover, Cylinder Head
2	11173-35F00	Gasket, Head Cover No.1
3	11178-33E00	Gasket, Head Cover No.2
4	09106-07009	Bolt (7x17.5)
5	09161-11008	Washer
6	09206-08007	Pin
7	11182-35F00	Gasket, 2nd Air Passage

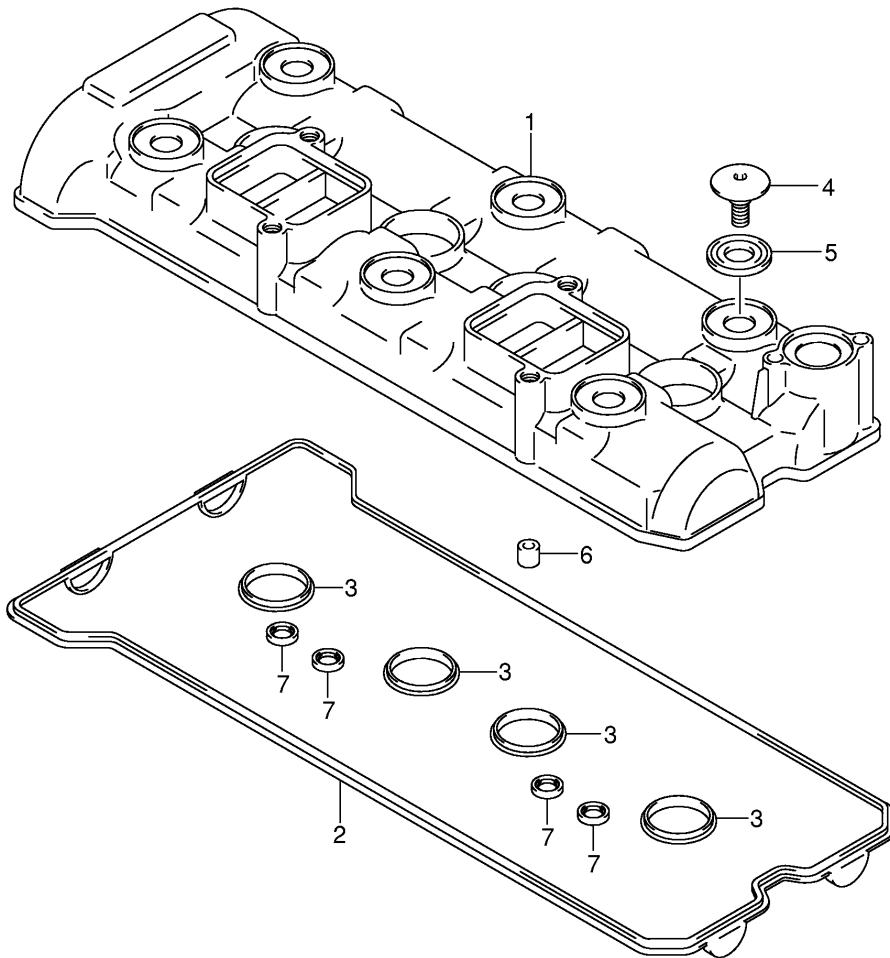


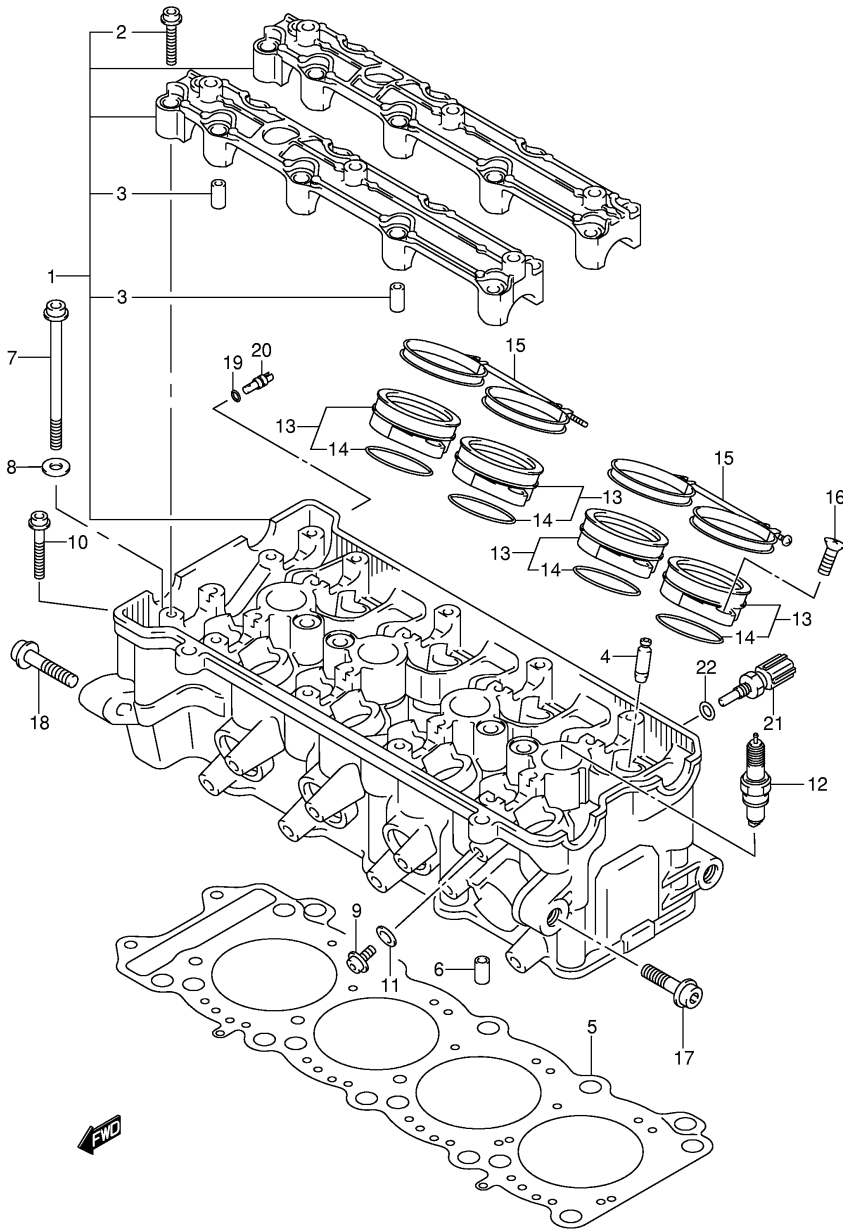

Ref No	Part No	Description
1	11100-18G00	Head Assy, Cylinder
2	07120-06403	• Bolt
3	09206-08007	• Pin
4	11115-11D70	Guide, Valve (os 0.3)
5	11141-35F00	Gasket, Cylinder Head
6	04211-11169	Pin
7	09103-10330	Bolt
8	09160-10082	Washer
9	09103-06222	Bolt, Oil Gallery
10	07120-06503	Bolt, Cylinder Head
11	09168-06023	Gasket
12	09482-00458	Spark Plug (ngk,cr9e)
12	09482-00459	Spark Plug (denso,u27esr-n)
12	09482-00456	Spark Plug (ngk,cr8e)
12	09482-00460	Spark Plug (ngk,cr10e)
12	09482-00457	Spark Plug (denso,u24esr-n)
12	09482-00461	Spark Plug (denso,u31esr-n)
13	13101-40F10	Pipe, Intake
14	09280-46006	• O Ring
15	13170-35F01	Clamp
16	02122-06163	Screw
17	09106-10069	Bolt, Eng Mounting Head (10x45)
18	09106-10070	Bolt, Eng Mounting Head (10x55)
19	09280-04004	O Ring
20	09493-80005	Jet, Oil
21	13650-10G00	Sensor, Water Temperature
22	09168-12017	Gasket

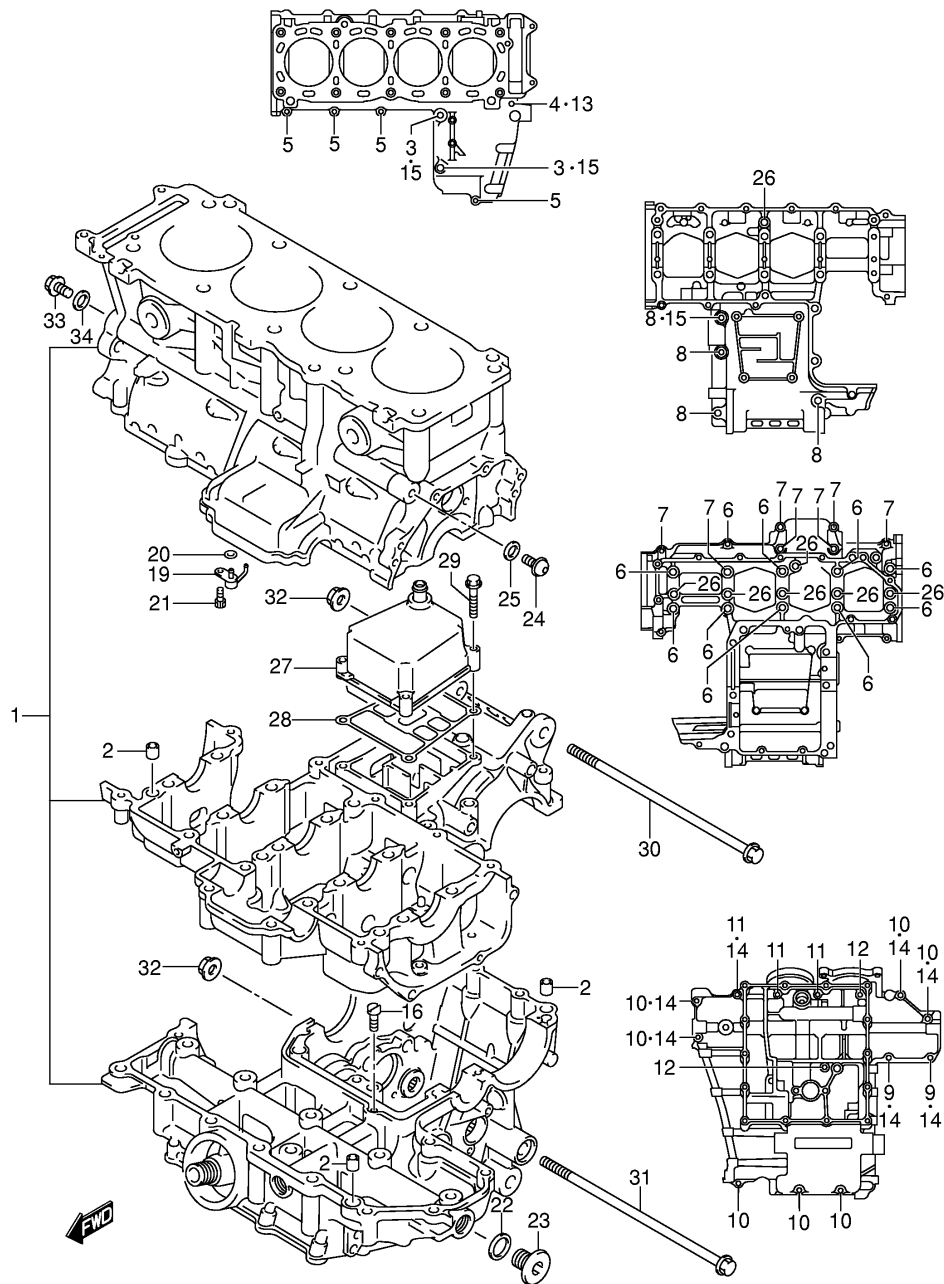



Ref No	Part No	Description
1	11302-40820	Crankcase Set
2	11319-33E50	. Pin
3	09106-08139	. Bolt (8x120)
4	09168-06023	. Gasket (5.8x13x1.2)
5	01547-06403	. Bolt
6	09103-09012	. Bolt (9x95)
7	09103-08170	. Bolt
8	07120-08653	. Bolt
9	01547-06303	. Bolt
10	01547-06403	. Bolt
11	01547-06603	. Bolt
12	01547-06703	. Bolt
13	01547-06803	. Bolt
14	09168-06023	. Gasket (5.8x13x1.2)
15	09168-08016	. Gasket (8.2x14x1)
16	09493-28012	. Jet
17	12228-48B00-0E0	. Bearing, Thrust Rh (green)
18	12228-48B00-0B0	. Bearing, Thrust Lh (brown)
18	12228-48B00-0C0	. Bearing, Thrust Lh (red)
18	12228-48B00-0D0	. Bearing, Thrust Lh (yellow)
18	12228-48B00-0E0	. Bearing, Thrust Lh (green)
18	12228-48B00-0F0	. Bearing, Thrust Lh (blue)
18	12228-48B00-0G0	. Bearing, Thrust Lh (orange)
18	12228-48B00-0H0	. Bearing, Thrust Lh (black)
19	11390-35F00	Jet, Piston Cooling
20	09280-04004	O Ring (d:1.2,id:4.0)
21	09106-06075	Bolt, Piston Cooling
22	09168-16002	Gasket
23	09248-16013	Plug, Oil Gallery
24	09248-10010	Plug, Oil Gallery Upper Lh
25	09168-10002	Gasket, Oil Gallery Lh
26	09280-08012	O Ring (d:1.9,id:7.8)
27	11370-35F00	Cover, Breather
28	11484-35F00	Gasket, Breather Cover
29	01547-06303	Bolt
30	09103-10041	Bolt (10x215)
31	09103-10041	Bolt (10x215)
32	09159-10058	Nut
33	01550-08123	Bolt, Oil Gallery Upper Rh
34	09168-08016	Gasket, Oil Gallery Rh

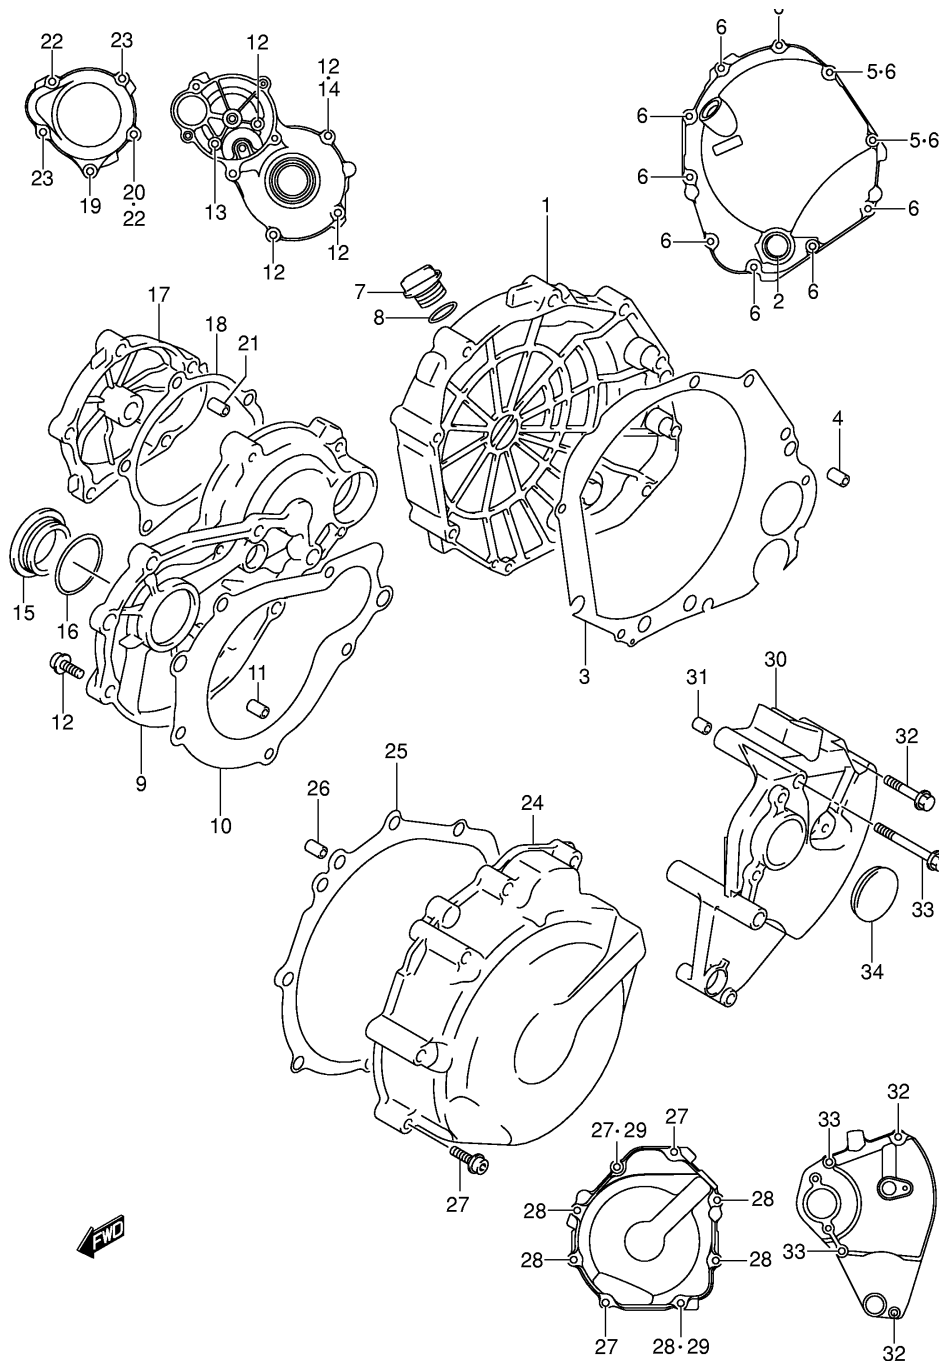

Ref No	Part No	Description
1	11340-40F00	Cover, Clutch
2	11971-33210	• . Lens, Oil Level
3	11482-40F00	Gasket, Clutch Cover
4	04211-09189	Pin
5	09168-06023	Gasket (5.8x13x1.2)
6	01547-06303	Bolt
7	11971-25D00	Plug, Engine Oil Filter
8	09280-17003	O Ring (d:3.1,id:16.8)
9	11381-35F01	Cover, Starter Clutch
10	11491-33E02	Gasket
11	04211-09149	Pin
12	01547-06253	Bolt
13	01547-06353	Bolt
14	09168-06023	Gasket (5.8x13x1.2)
15	09259-36021	Plug, Shaft Hole
16	09280-33004	O Ring (d:3.1,id:32.7)
17	11382-33E00	Cap, Starter Idle Gear
18	11492-33E00	Gasket
19	01547-06553	Bolt
20	09168-06023	Gasket, Bolt (5.8x13x1.2)
21	04211-09149	Pin
22	01547-06253	Bolt
23	01547-06353	Bolt
24	11351-18G01	Cover, Magneto
25	11483-18G00	Gasket
26	04211-09149	Pin
27	01547-06303	Bolt
28	01547-06453	Bolt
29	09168-06023	Gasket (5.8x13x1.2)
30	11361-40F01	Cover, Engine Sprocket
31	04211-09129	Pin
32	01547-06553	Bolt
33	01547-06903	Bolt
34	09250-30003	Cap, Clutch Release Adjust


Ref No	Part No	Description
1	11511-35F01	Pan, Oil
2	09103-06221	Bolt (6x25)
3	09168-06023	Gasket (5.8x13x1.2)
4	09247-14036	Plug, Oil Drain
5	09168-14002	Gasket
6	16520-35F00	Strainer, Engine Oil
7	01550-06203	Bolt
8	09280-19008	O Ring (d:2.62,id:20.3)
9	16440-24F00	Valve Assy, Oil Relief
10	16400-40F00	Pump Assy, Engine Oil
11	16491-35F00	O Ring
12	01547-06203	Bolt
13	16321-35F01	Gear, Oil Pump Drive
14	16331-35F00	Gear, Oil Pump Driven
15	09181-10158	Washer
16	09261-04009	Pin
17	08331-31106	Circlip
18	37820-33D10	Switch, Oil Pressure

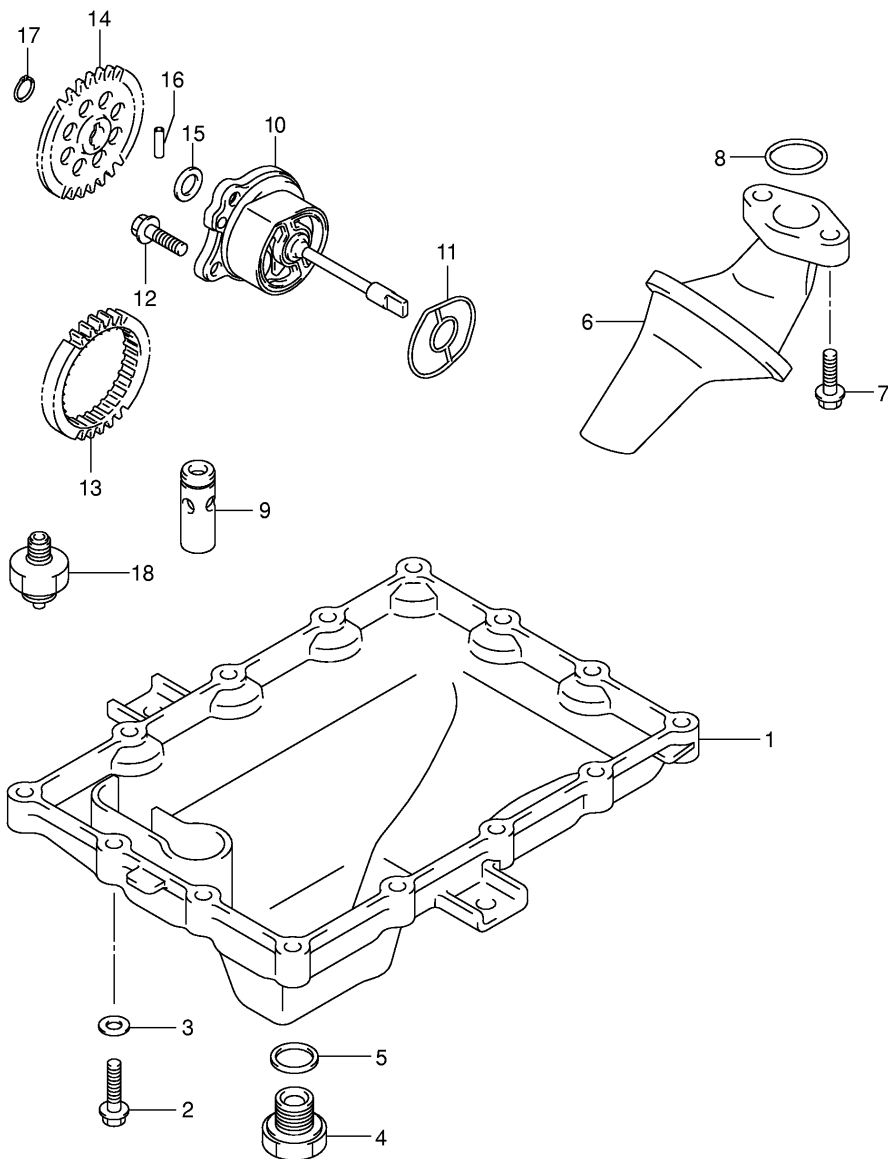

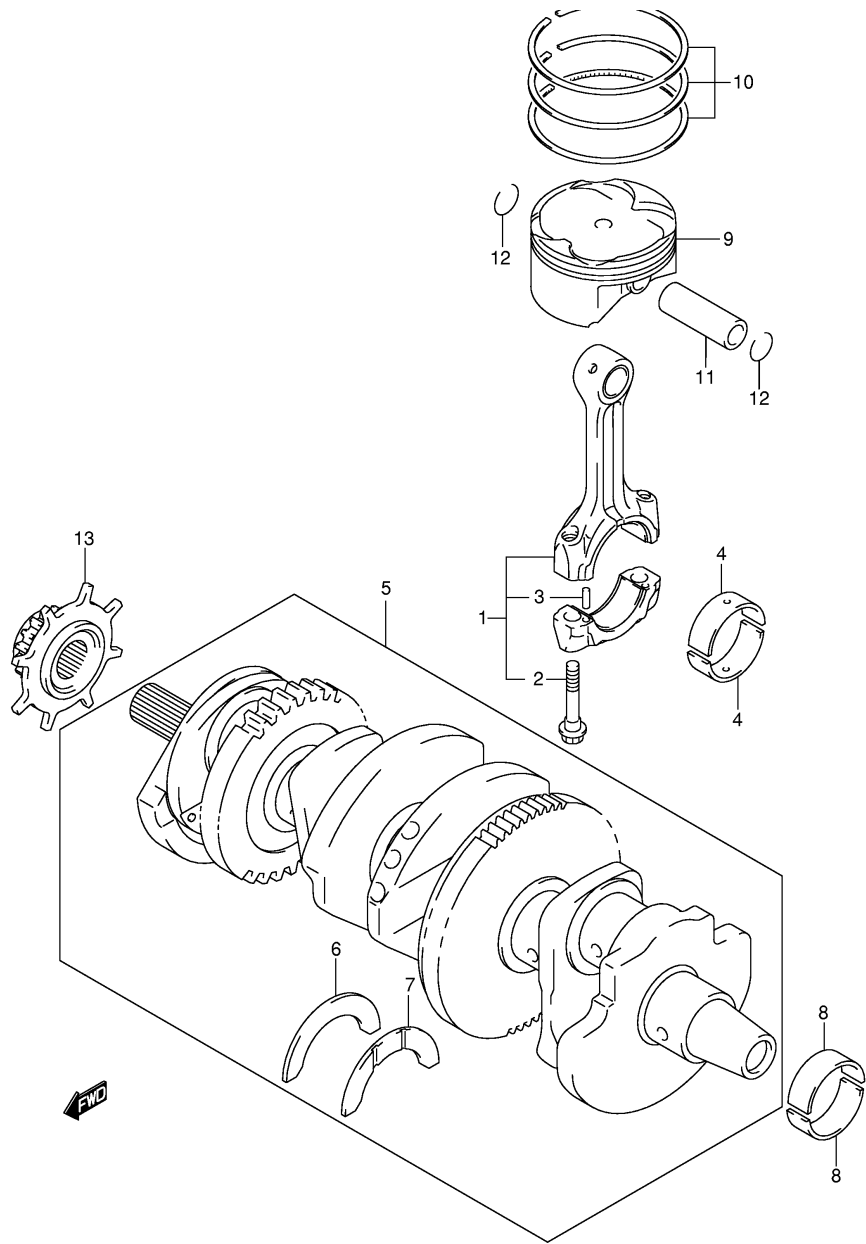


Ref No	Part No	Description
1	12160-40F00	Rod Assy, Connecting
2	12163-24F00	• Bolt
3	12165-27A50	• Pin, Connrod
4	12164-40F00-0A0	Bearing, Crank Pin (green)
4	12164-40F00-0B0	Bearing, Crank Pin (black)
4	12164-40F00-0C0	Bearing, Crank Pin (brown)
4	12164-40F00-0D0	Bearing, Crank Pin (yellow)
5	12000-40830	Crankshaft Set
6	12228-48B00-0E0	• Bearing, Thrust Rh (green)
7	12228-48B00-0B0	• Bearing, Thrust Lh (brown)
7	12228-48B00-0C0	• Bearing, Thrust Lh (red)
7	12228-48B00-0D0	• Bearing, Thrust Lh (yellow)
7	12228-48B00-0E0	• Bearing, Thrust Lh (green)
7	12228-48B00-0F0	• Bearing, Thrust Lh (blue)
7	12228-48B00-0G0	• Bearing, Thrust Lh (orange)
7	12228-48B00-0H0	• Bearing, Thrust Lh (black)
8	12229-40F00-0A0	Bearing, Crankshaft (green)
8	12229-40F00-0B0	Bearing, Crankshaft (black)
8	12229-40F00-0C0	Bearing, Crankshaft (brown)
8	12229-40F00-0D0	Bearing, Crankshaft (yellow)
9	12111-40F00-0F0	Piston
10	12140-40F00	Ring Set, Piston
11	12151-40F00	Pin, Piston
12	09381-16001	Circlip
13	12731-18G00	Sprocket, Cam Chain


Ref No	Part No	Description
1	12611-40F00	Gear, Starter Idle No.1
2	12151-09204	Pin
3	09263-12023	Bearing
4	09181-12167	Washer, Starter Idle No.1
5	09164-12021	Washer
6	12612-40F00	Gear, Starter Idle No.2
7	12600-40830	Clutch Set, Starter
8	09263-26035	• . Bearing
9	08211-10285	Washer
10	08211-20403	Washer
11	09103-10189	Bolt (10x23)

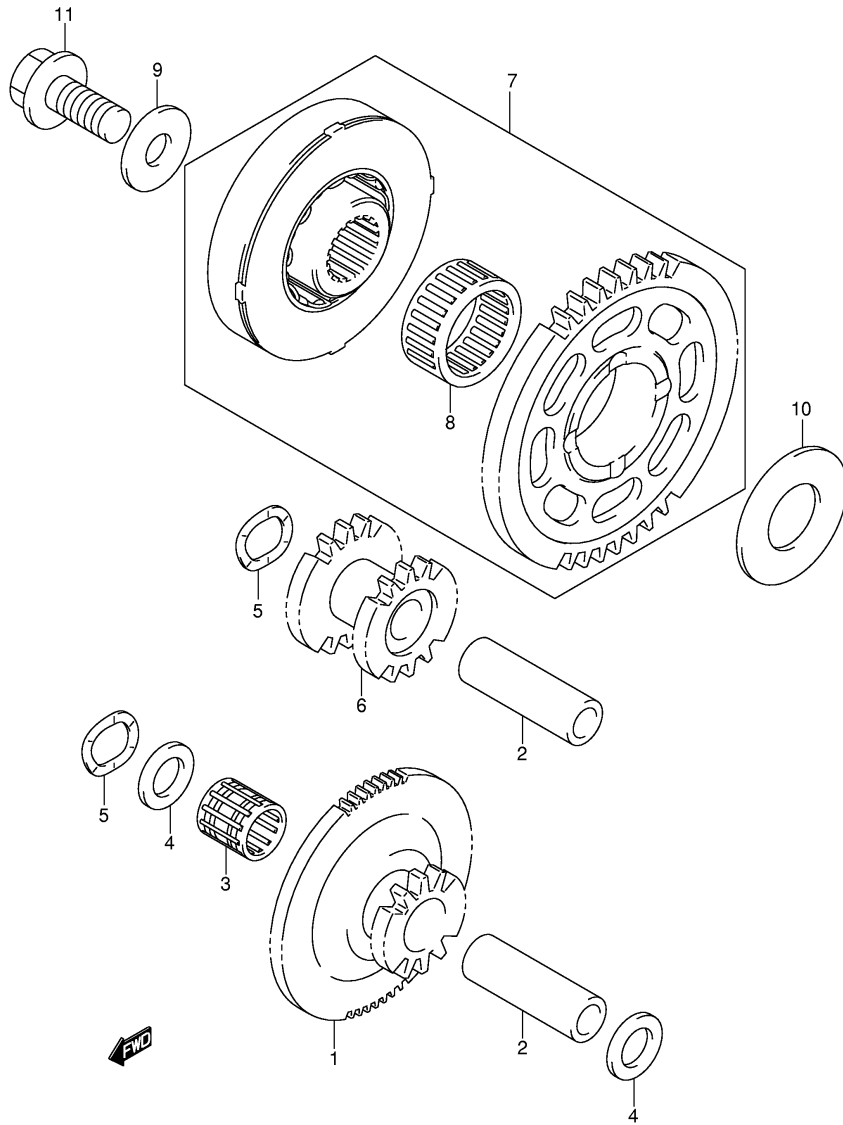


Ref No	Part No	Description
1	12654-40F00	Balancer, Crank
2	12666-40F00	Gear, Crank Balancer
3	12686-40F00	Damper, Crank Balancer Gear
4	12229-40F50-0A0	Bearing, Crank Balancer (green)
4	12229-40F50-0B0	Bearing, Crank Balancer (black)
4	12229-40F50-0C0	Bearing, Crank Balancer (brown)
5	09181-23002	Washer
6	09241-26004	Plug, Balancer Shaft Hole

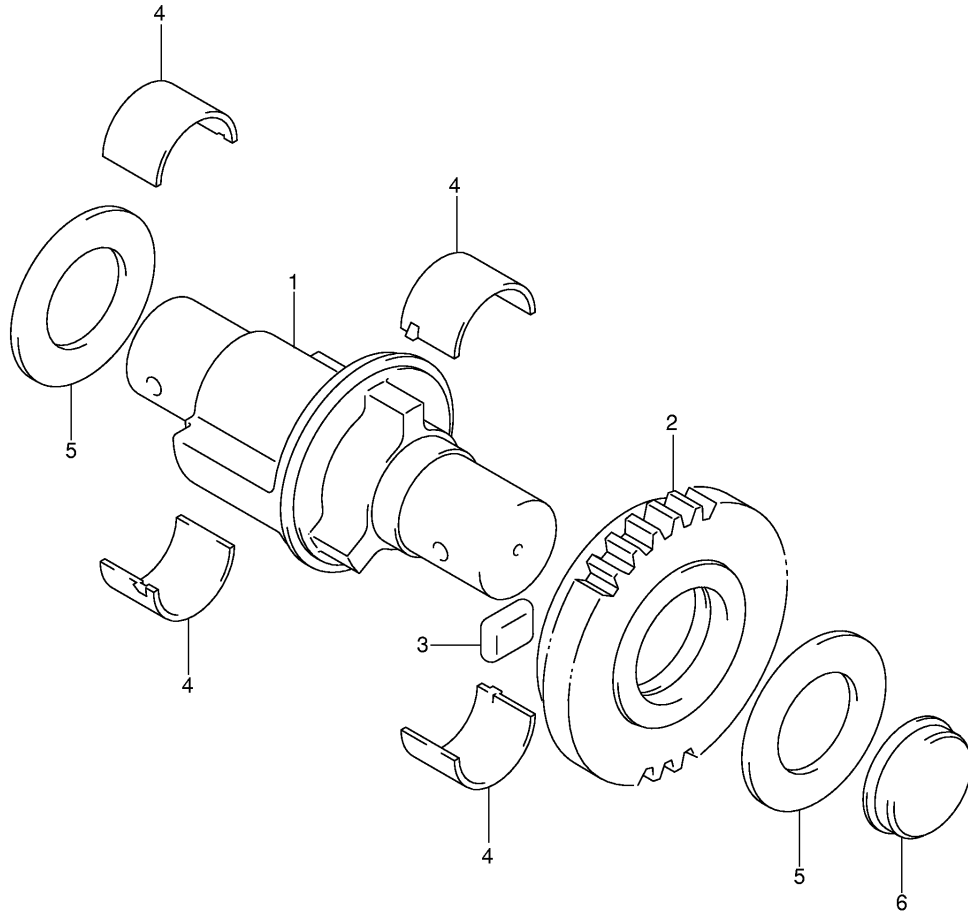


Ref No	Part No	Description
1	12710-18G00	Cam Shaft, Intake
2	12720-18G00	Cam Shaft, Exhaust
3	12891-35F00	Tappet, Exhaust
4	12891-17E00	Tappet, Intake
5	12911-35F00	Valve, Intake
6	12912-35F00	Valve, Exhaust
7	12921-40F00	Spring, Valve
8	12931-35F10	Retainer, Valve Spring
9	12933-35F10	Seat, Valve Spring
10	12932-05C00	Cotter, Valve
11	09289-04003	Oil Seal
12	12892-05C00-120	Shim, Tappet (t:1.20)
12	12892-05C00-125	Shim, Tappet (t:1.25)
12	12892-05C00-130	Shim, Tappet (t:1.30)
12	12892-05C00-135	Shim, Tappet (t:1.35)
12	12892-05C00-140	Shim, Tappet (t:1.40)
12	12892-05C00-145	Shim, Tappet (t:1.45)
12	12892-05C00-150	Shim, Tappet (t:1.50)
12	12892-05C00-155	Shim, Tappet (t:1.55)
12	12892-05C00-160	Shim, Tappet (t:1.60)
12	12892-05C00-165	Shim, Tappet (t:1.65)
12	12892-05C00-170	Shim, Tappet (t:1.70)
12	12892-05C00-175	Shim, Tappet (t:1.75)
12	12892-05C00-180	Shim, Tappet (t:1.80)
12	12892-05C00-185	Shim, Tappet (t:1.85)
12	12892-05C00-190	Shim, Tappet (t:1.90)
12	12892-05C00-195	Shim, Tappet (t:1.95)
12	12892-05C00-200	Shim, Tappet (t:2.00)
12	12892-05C00-205	Shim, Tappet (t:2.05)
12	12892-05C00-210	Shim, Tappet (t:2.10)
12	12892-05C00-215	Shim, Tappet (t:2.15)
12	12892-05C00-220	Shim, Tappet (t:2.20)
13	12800-05830	Shim Set, Tappet Inc. Ref.no.12-1~12-21 (5pcs. Each) & No.14
14	99000-69491	• . Case, Tappet Shim

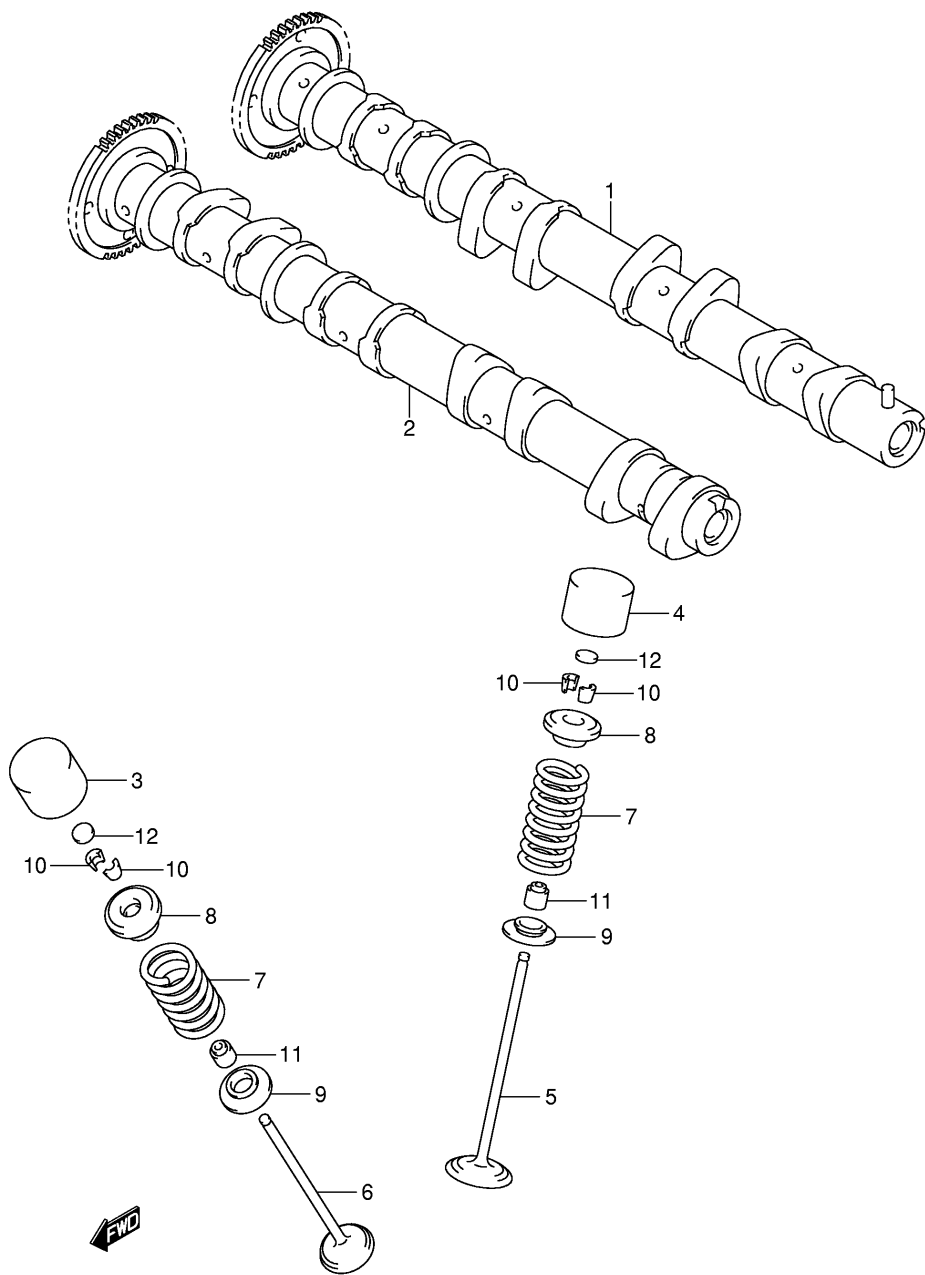

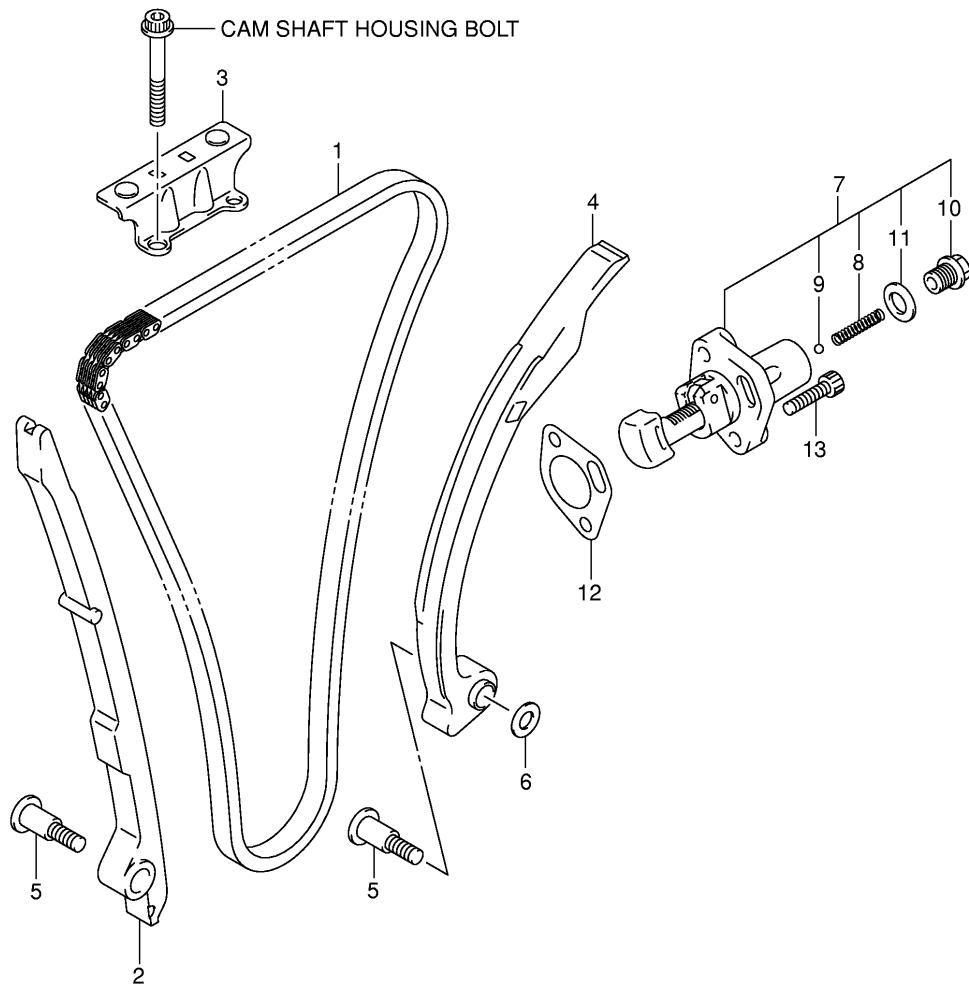

Ref No	Part No	Description
1	12760-40F00	Chain, Cam Shaft Drive
2	12771-18G00	Guide, Cam Chain No.1
3	12782-35F10	Guide, Cam Chain No.2
4	12811-40F00	Tensioner, Cam Chain
5	12812-26B02	Bolt
6	12813-30G00	Washer
7	12830-18G00	Adjuster Assy, Tensioner
8	12831-40F00	• . Spring
9	12839-35F00	• . Ball
10	12833-05A00	• . Plug
11	12837-24F10	• . Gasket
12	12837-18G00	Gasket, Adjuster
13	07130-06253	Bolt




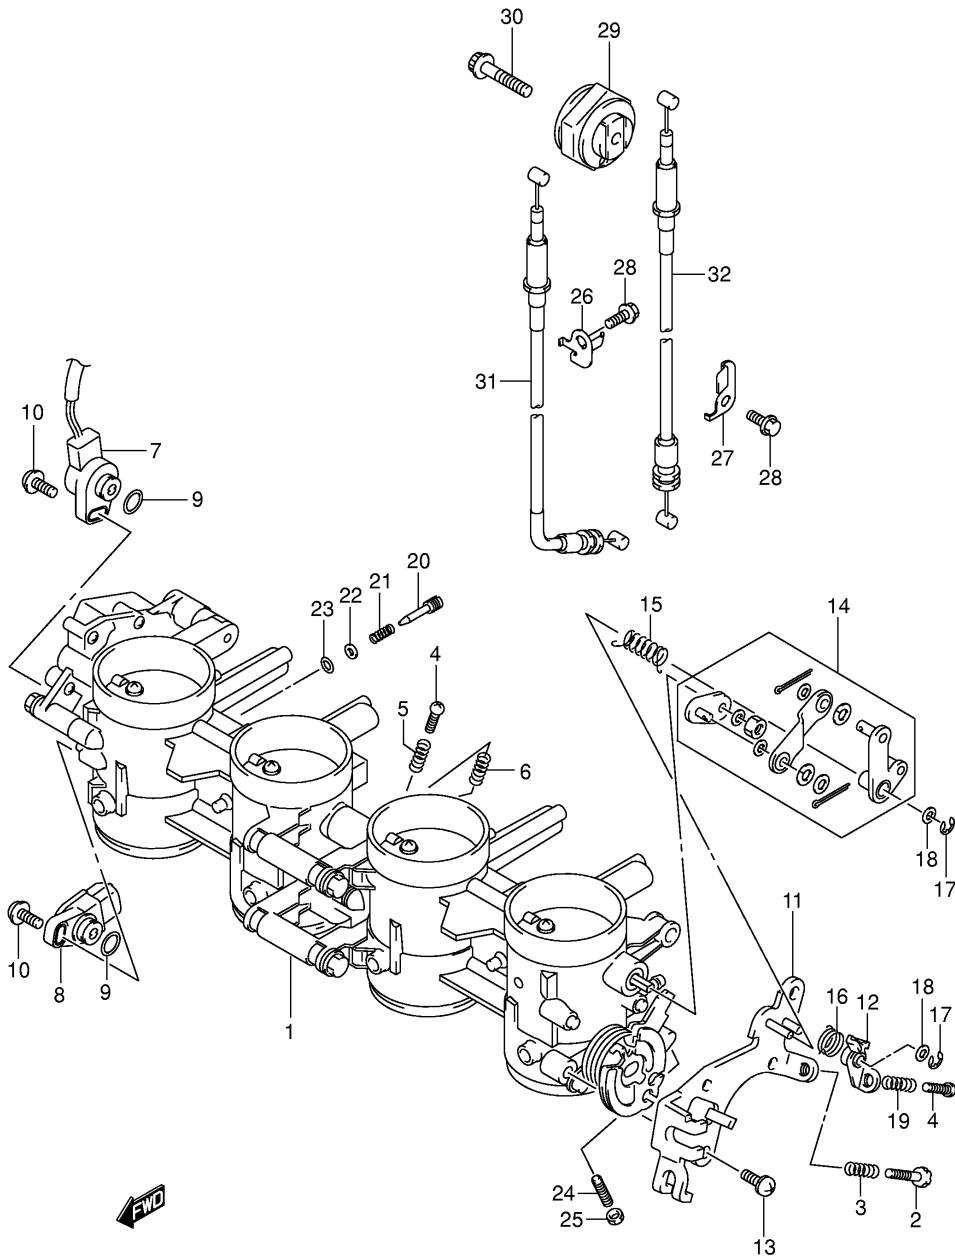


Ref No	Part No	Description
1	13405-40F40	Throttle Body
2	13267-35F00	Screw, Stop
3	13268-35F00	Spring
4	13423-35F00	Screw, Stop
5	13543-24F00	Spring
6	13268-03F50	Spring
7	13580-40F30	Sensor Assy, Throttle No.2
8	13580-18G00	Sensor Assy, Main
9	13575-40F00	O Ring
10	13605-40F00	Screw
11	13565-18G00	Plate, Stay
12	13414-40F00	Lever, Link
13	15153-24F00	Screw
14	13420-40F20	Lever, Link
15	13426-40F00	Spring
16	13426-35F10	Spring
17	13424-35F10	E Clip
18	13427-35F10	Washer
19	13271-26E10	Spring
20	13269-18G00	Screw, Air Adjustment
21	13271-43E00	Spring
22	13291-26E00	Washer
23	13295-26E00	O Ring
24	13267-18G00	Screw
25	13661-10G00	Nut
26	11258-18G00	Bracket, Exhaust Valve Cable
27	11259-18G00	Bracket, Exhaust Valve Cable
28	01547-06123	Bolt
29	11269-18G00	Pulley, Controller
30	07120-05163	Bolt
31	11276-18G00	Cable, Exhaust Valve Open
32	11277-18G00	Cable, Exhaust Valve Close


Ref No	Part No	Description
--------	---------	-------------

- | | | |
|----|-------------|----------------|
| 1 | 15710-10G00 | Injector Assy |
| 2 | 15722-10G00 | Ring, Cushion |
| 3 | 15721-10G00 | O Ring |
| 4 | 13471-18G00 | Pipe, Fuel |
| 5 | 13601-35F00 | Screw |
| 6 | 13473-35F01 | Joint |
| 7 | 15721-24F00 | O Ring |
| 8 | 13697-24F00 | Hose (3x7x35) |
| 9 | 13697-24F20 | Hose (3x7x100) |
| 10 | 13697-35F00 | Hose (3x7x170) |
| 11 | 13471-24F30 | 3 Way |

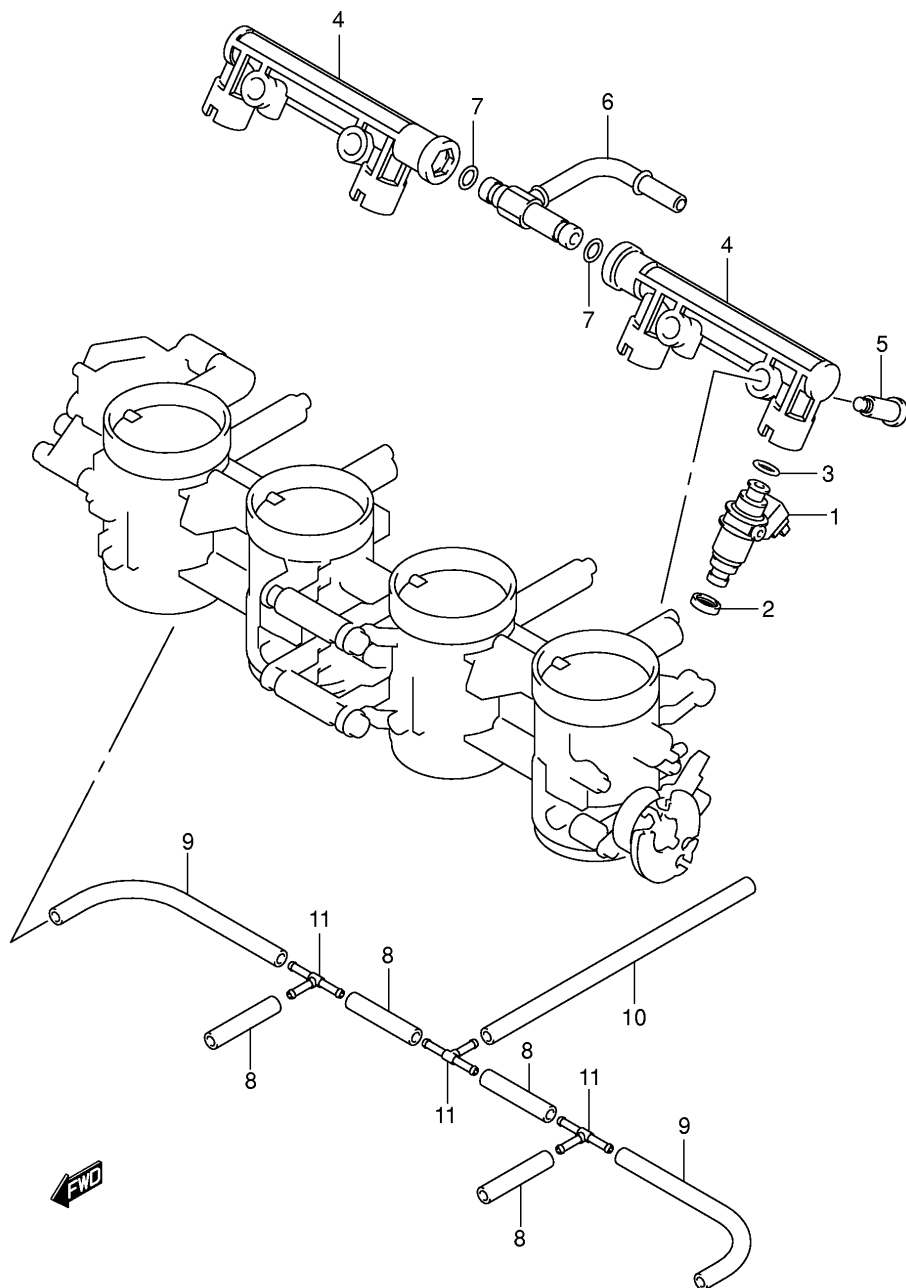


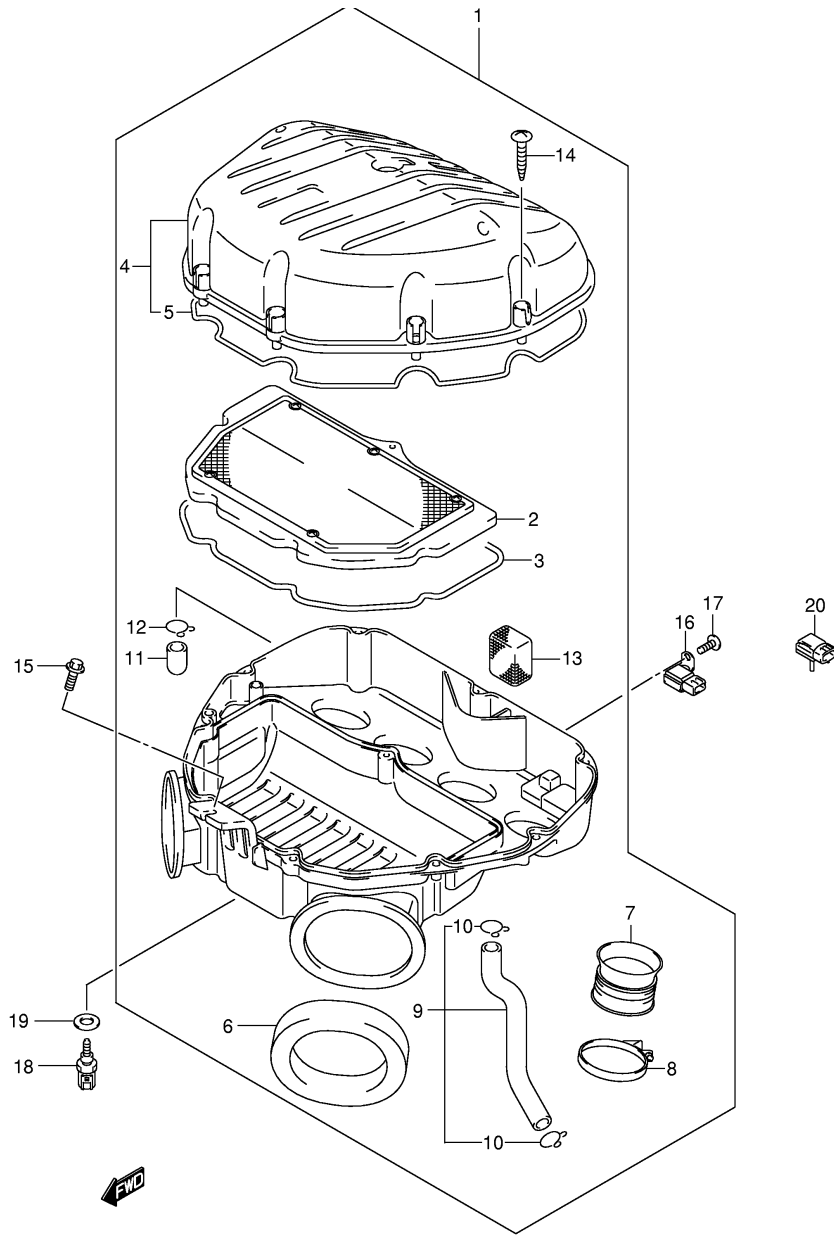

Ref No	Part No	Description
1	13700-40F10	Cleaner Assy, Air
2	13780-35F00	• . Filter Assy
3	13756-35F00	• . Gasket, Case
4	13740-35F00	• . Cap, Air Cleaner
5	13746-35F00	•• .. Gasket, Cap
6	13736-24F01	• . Cushion, Duct
7	13881-40F00	• . Tube, Outlet
8	09402-60208	• . Clamp
9	13850-35F00	• . Tube, Breather
10	09401-14301	•• .. Clip
11	13859-41B10	• . Plug, Drain
12	09401-14301	• . Clip
13	13788-24F00	• . Filter, Breather
14	13831-35F00	• . Screw
15	09116-06130	Bolt
16	15620-35F00	Sensor, Boost
17	03541-06103	Screw
18	13650-61B00	Sensor, Air Temperature
19	09168-12017	Gasket
20	15620-10G00	Sensor, Air Pressure

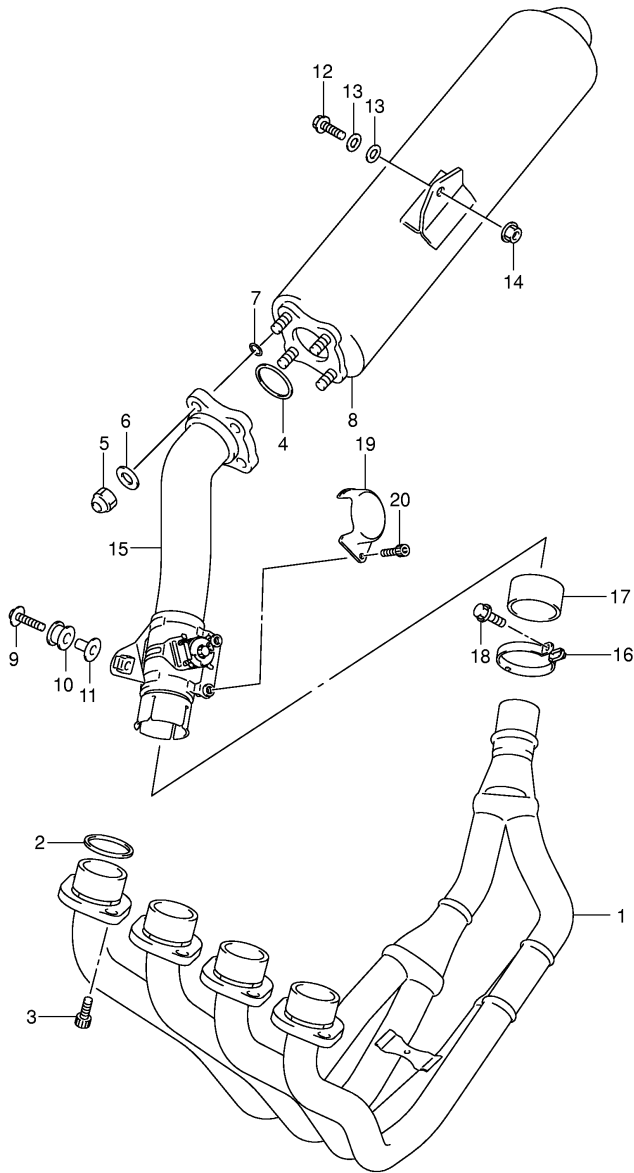



Ref No	Part No	Description
1	14100-40F00	Pipe, Exhaust
2	14181-46E00	Gasket
3	07130-08253	Bolt
4	14181-02F00	Gasket
5	09159-08116	Nut
6	09160-08059	Washer
7	09280-08012	O Ring (d:1.9,id:7.8)
8	14310-18G00	Muffler Assy
8	14310-18G10-H01	Muffler Assy
9	09118-08152	Bolt (8x45)
10	09320-12048	Cushion
11	09180-08152	Spacer
12	09103-08392	Bolt (8x35)
13	09160-08081	Washer
14	08361-25088	Nut
15	14200-18G00	Joint
16	14459-40F00	Clamp
17	14771-40F00	Connector, Joint
18	01550-08403	Bolt
19	14280-40F00	Cover, Exhaust Valve
20	09106-06075	Bolt

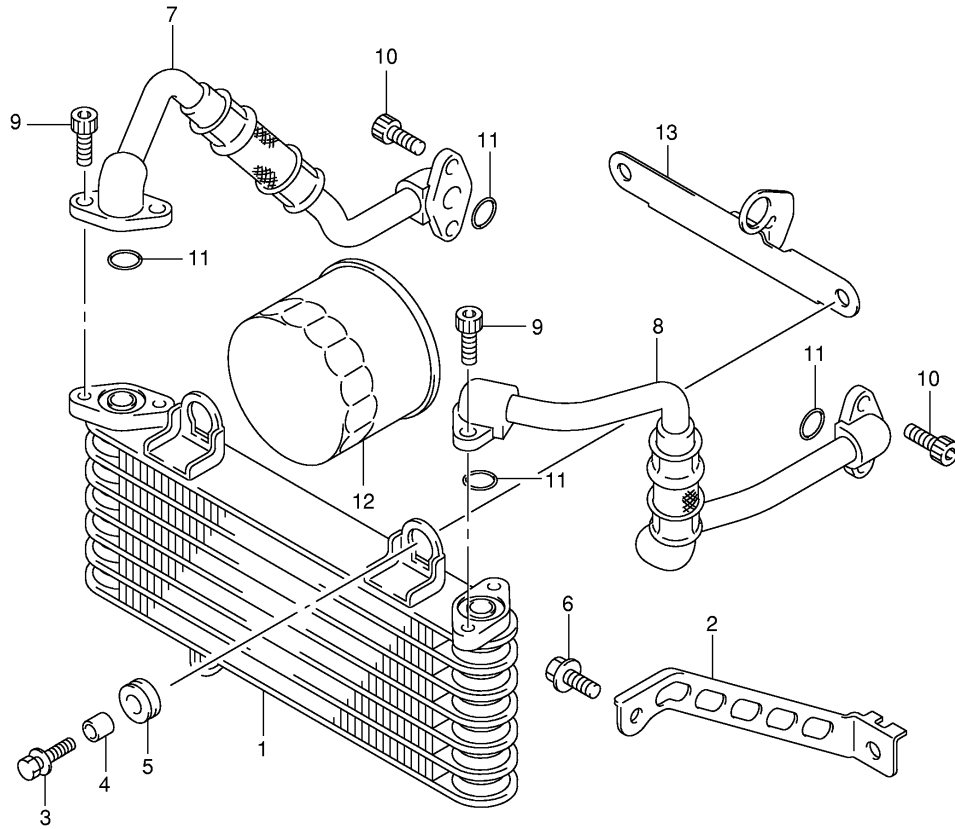

Ref No	Part No	Description
1	16600-40F10	Cooler Assy, Oil
2	16640-40F00	Bracket, Oil Cooler
3	09118-06097	Bolt
4	09180-06310	Spacer
5	09320-10015	Cushion
6	01550-06123	Bolt
7	16460-40F10	Hose, Oil Cooler Rh
8	16470-40F10	Hose, Oil Cooler Lh
9	09106-06096	Bolt
10	09106-06073	Bolt, Crankcase Lower
11	09280-12012	O Ring
12	16510-03G00-X07	Filter Assy, Engine Oil
13	17790-18G00	Bracket Comp, Radiator Support

Ref No	Part No	Description
1	15100-35F30	Pump Assy, Fuel
2	15410-42F00	. Filter Assy, Fuel
3	15420-24FB0	. Strainer, Fuel Pump
4	15111-35F00	. Cushion, Fuel Pump
5	15112-42F00	. Holder, Fuel Pump
6	15114-35F00	. Bush, Fuel Pump
7	15113-35F00	. O Ring
8	15115-35F00	. Nut
9	15116-35F10	. Screw
10	15170-35F10	. Thermistor
11	15171-35F00	. Washer
12	15172-35F00	. Spring Washer
13	15173-35F00	. Nut
14	15201-35F00	O Ring, Fuel Pump
15	07120-06123	Bolt
16	15810-18G00	Hose, Fuel

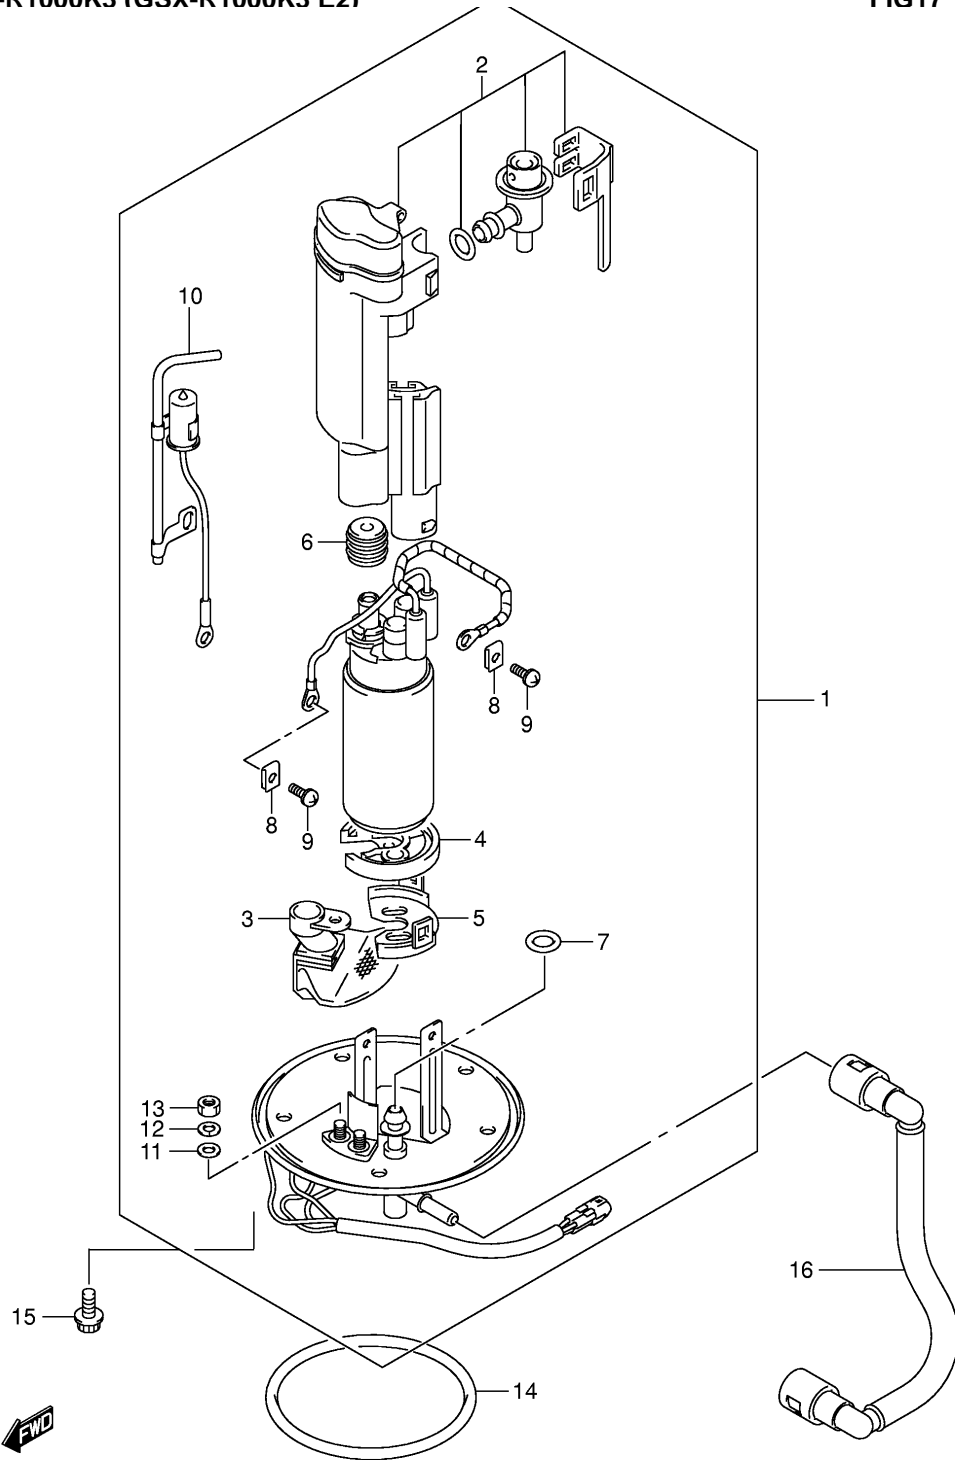


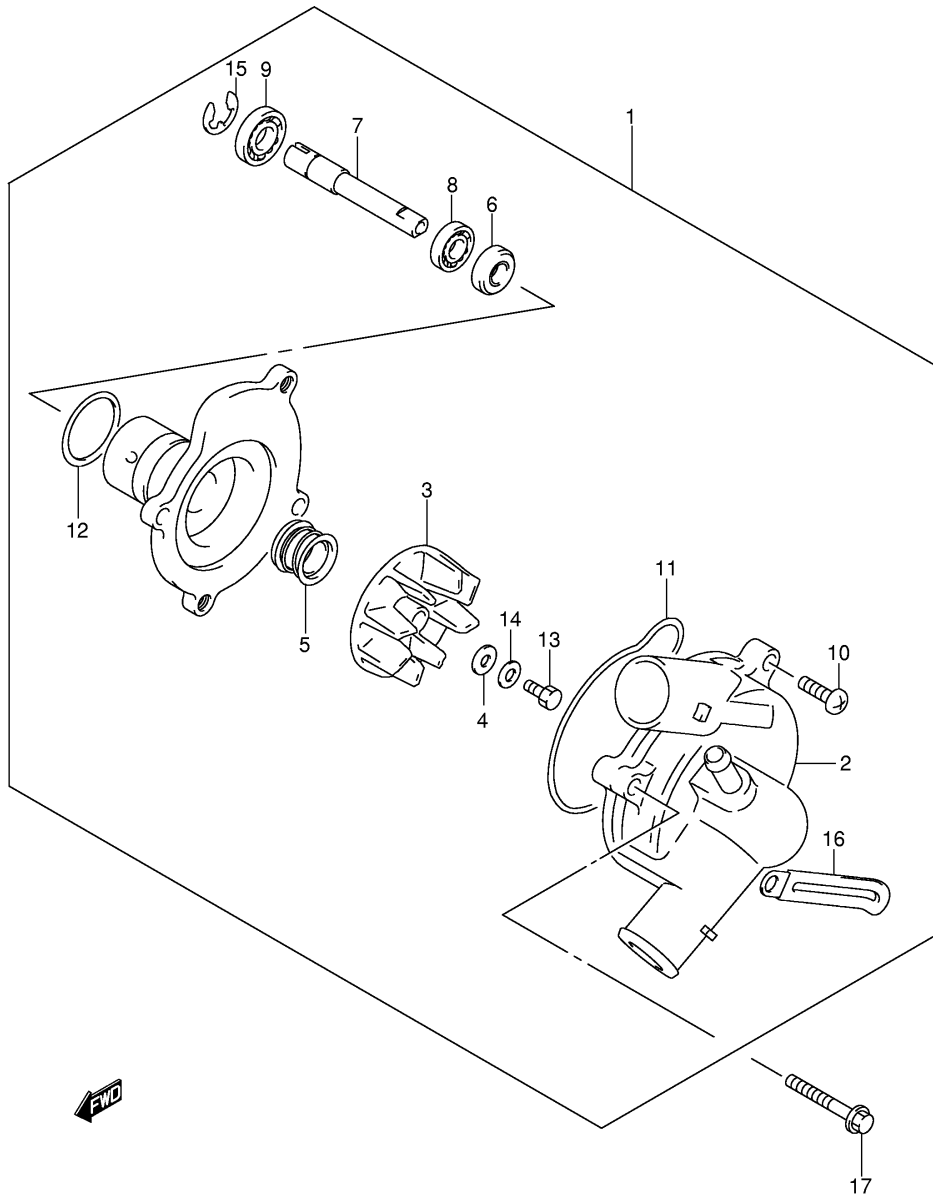


Ref No	Part No	Description
1	17400-40F00	Pump Assy, Water
2	17411-40F00	. Case, Water Pump
3	17491-40F00	. Impeller
4	09168-06025	. Gasket
5	17470-02F10	. Seal, Mechanical
6	17419-29F00	. Oil Seal
7	17511-40F00	. Shaft
8	09262-10014	. Bearing (10x26x8)
9	09262-12001	. Bearing (12x28x8)
10	02112-06163	. Screw
11	17418-40F00	. O Ring
12	17435-40F00	. O Ring
13	09100-06099	. Bolt (6x13)
14	09164-06006	. Lock Washer
15	08332-11093	. E Ring
16	09404-06432	. Clamp (1:80)
17	01547-06353	Bolt




Ref No	Part No	Description
1	17710-40F20	Radiator Assy, Water
2	17730-12C20	Cap
3	09118-06097	Bolt (6x20)
4	09180-06290	Spacer, Upper
5	09180-06293	Spacer, Lower
6	09320-10042	Cushion
7	09320-10051	Cushion
8	17750-35F01	Bracket, Radiator Lower
9	01550-06123	Bolt
10	17800-40F20	Fan Assy, Radiator
11	17711-40F00	Bolt
12	17712-40F00	Nut

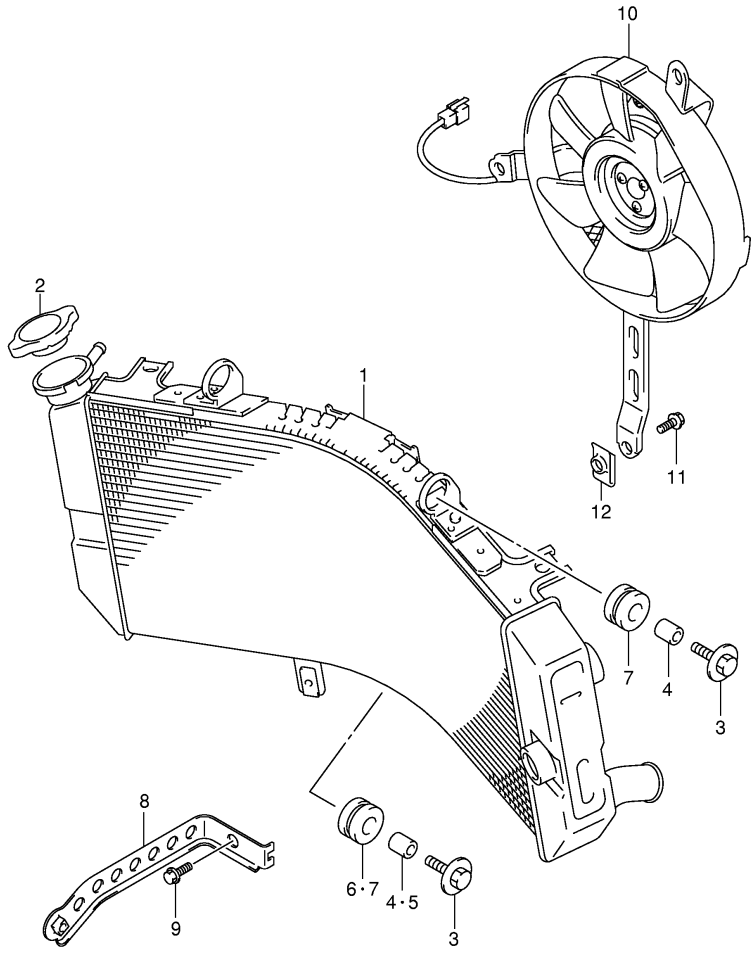


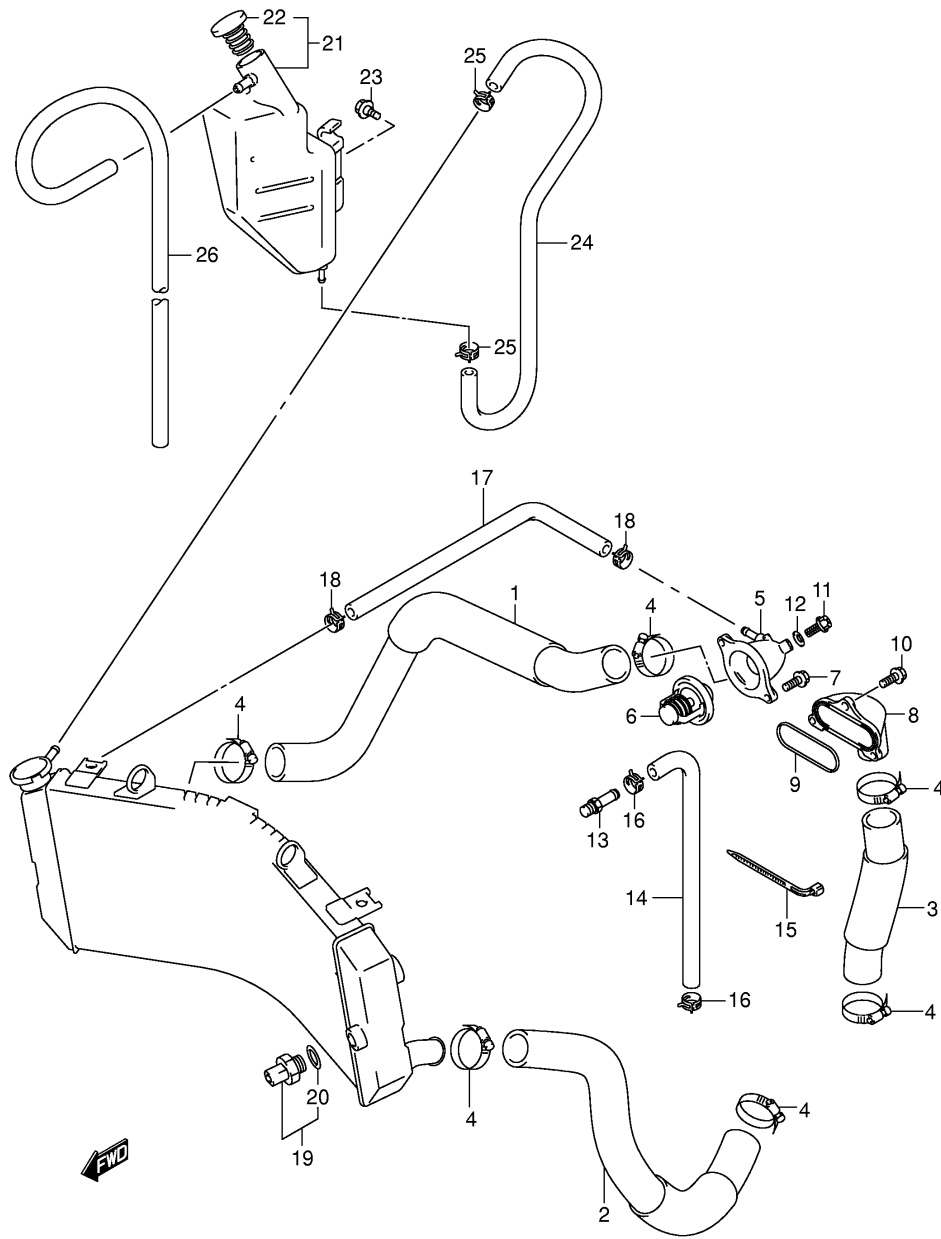


Ref No	Part No	Description
1	17851-40F00	Hose, Radiator Inlet
2	17852-40F10	Hose, Radiator Outlet
3	17853-40F10	Hose, Radiator Outlet
4	09402-38511	Clamp
5	17661-35F00	Cover, Thermostat
6	17670-06G60	Thermostat, Water
7	01547-06203	Bolt
8	17861-33E10	Connector, Cylinder Joint
9	17863-33E00	O Ring
10	01547-06203	Bolt
11	17568-50F00	Bolt, Thermostat Cover Air
12	09168-06026	Gasket, Air Bolt (6.4x11.5x0.8)
13	09362-09011	Union, Bypass
14	17854-40F00	Hose, Water Bypass
15	09407-18402	Clamp, Bypass Hose
16	09401-12409	Clip, Bypass Hose
17	09352-50111-600	Hose, Water Bypass No.2 (5x11x600)
18	09401-10409	Clip
19	17680-33E00	Switch, Radiator Fan
20	17689-50F00	• O Ring
21	17910-18G00	Tank Assy, Reservoir
22	17931-02FA0	• Cap
23	09111-06085	Bolt
24	17981-18G00	Hose, Reservoir Tank Inlet
25	09401-08411	Clip
26	17982-18G00	Hose, Over Flow

Ref No	Part No	Description
1	18450-35F10	Valve Assy, 2nd Air Reed
2	18531-35F10	Cover, Reed Valve
3	09103-06217	Bolt
4	18510-35F00	Valve Assy, Air Cut
5	18516-35F00	Cushion, Air Cut Valve Upper
6	18517-35F00	Cushion, Air Cut Valve Lower
7	09355-11165-600	Hose, Lh (11x16x600)
8	09355-11165-600	Hose, Rh (11x16x600)
9	09401-15101	Clip
10	18711-35F00	Hose, 2nd Air Cleaner
11	09355-35755-600	Hose, Vacuum (3.5x7.5x600)

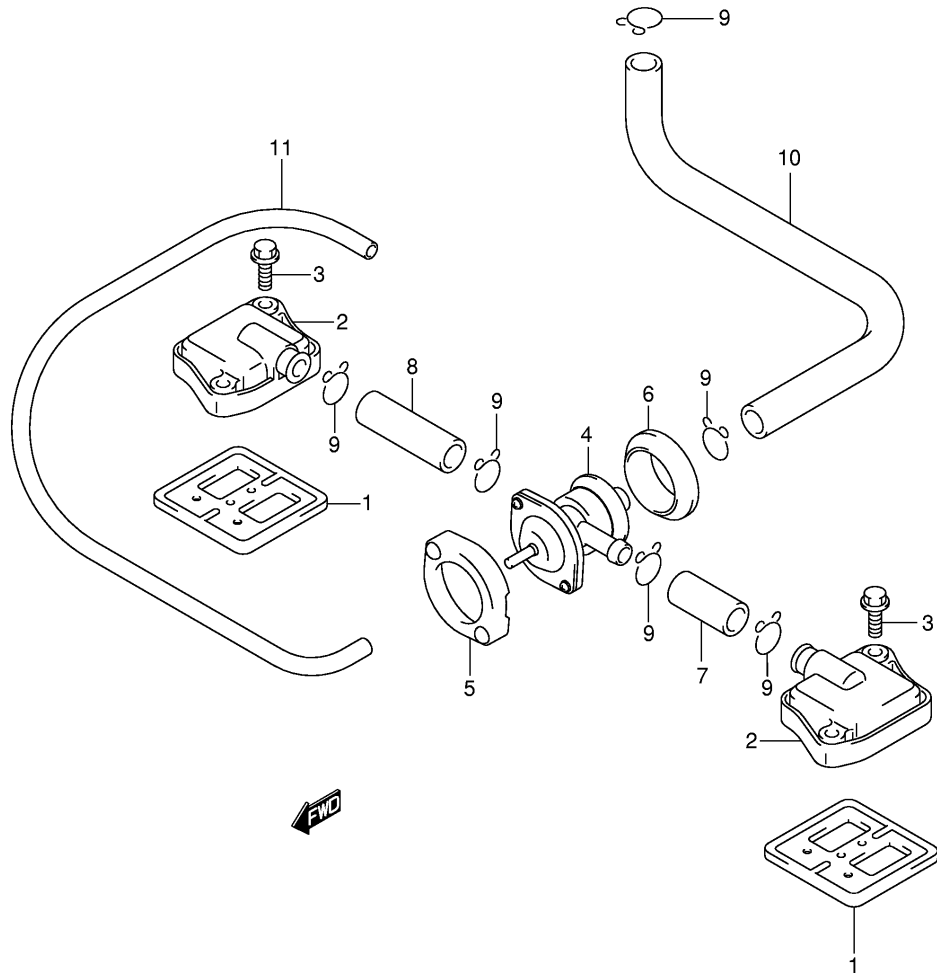


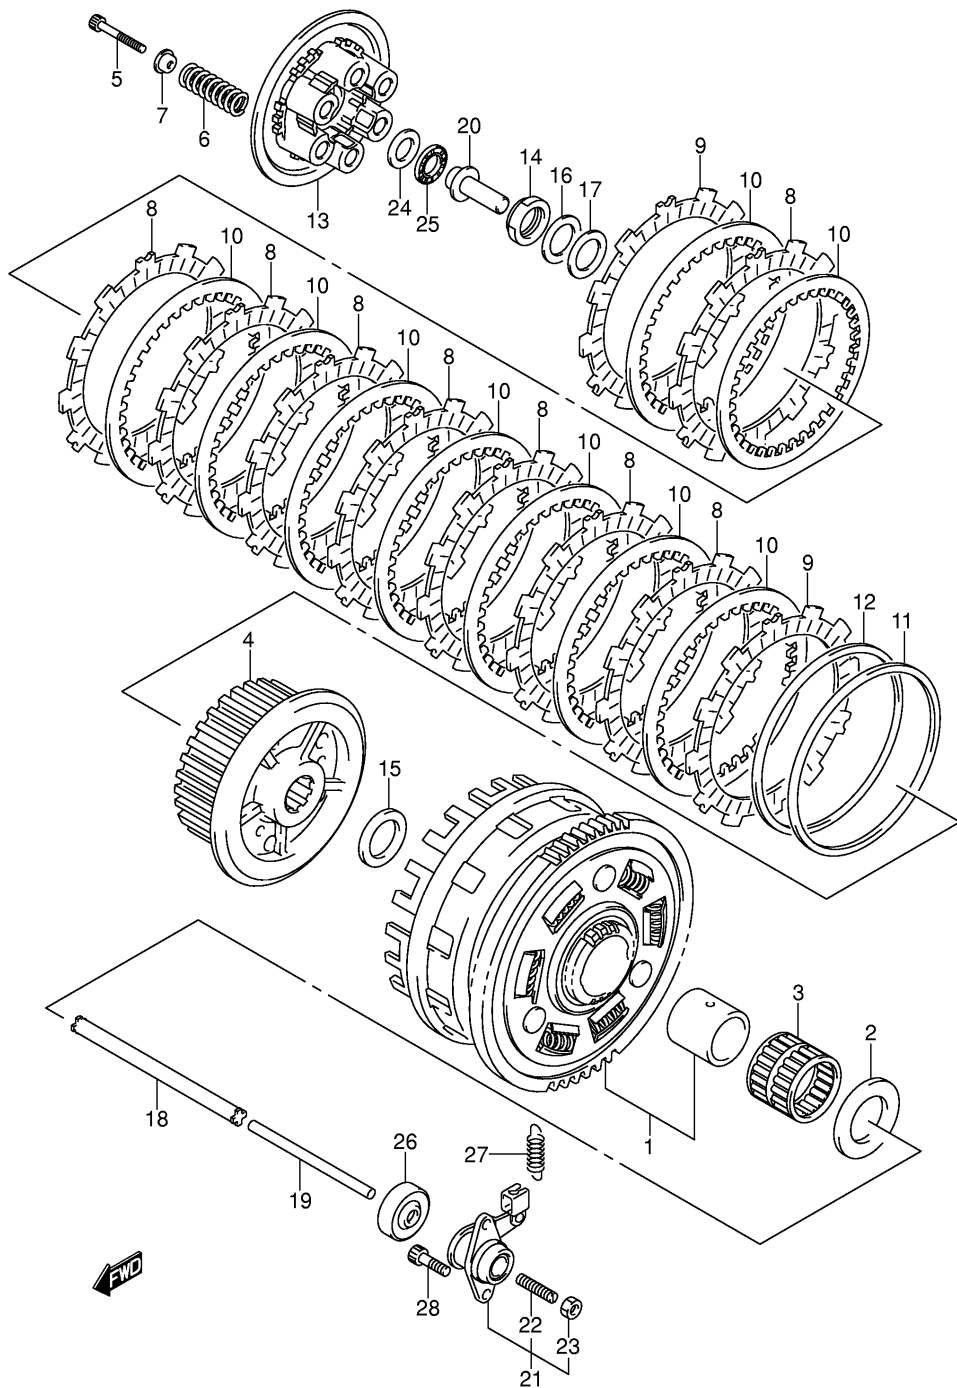


Ref No	Part No	Description
1	21200-40860	Gear Assy, Primary Driven
2	09160-25073	Washer (25x54x2.4)
3	09263-35017	Bearing (35x40x35.8)
4	21410-40F00	Hub, Clutch Sleeve
5	21482-40F00	Bolt, Clutch Spring
6	21413-40F00	Spring, Clutch
7	21414-29F00	Washer, Clutch Spring
8	21441-40F00	Plate, Clutch Drive,no.1
9	21441-40F10	Plate, Clutch Drive,no.2
10	21451-40F00	Plate, Clutch Driven
11	21471-40F00	Seat, Wave Washer
12	21472-40F00	Washer, Clutch Plate Wave
13	21462-40F00	Disc, Clutch Pressure
14	09159-24010	Nut, Clutch Sleeve Hub
15	09160-25056	Washer, Clutch Sleeve Thr
16	09164-24006	Washer, Clutch Wave
17	09181-25223	Washer, Sleeve Hub Nut
18	23110-38B00	Rod, Clutch Push Rh
19	23111-35F00	Rod, Clutch Push Lh
20	23121-31E00	Piece, Clutch Push
21	23200-35F01	Screw Assy, Clutch Release
22	09134-06010	• . Screw (6x25)
23	08310-00067	• . Nut
24	09160-15045	Washer, Clutch Push
25	09263-15003	Bearing, Clutch Push
26	09285-06011	Seal, Clutch Push Rod
27	09443-09044	Spring, Clutch Release
28	01550-06163	Bolt, Clutch Release

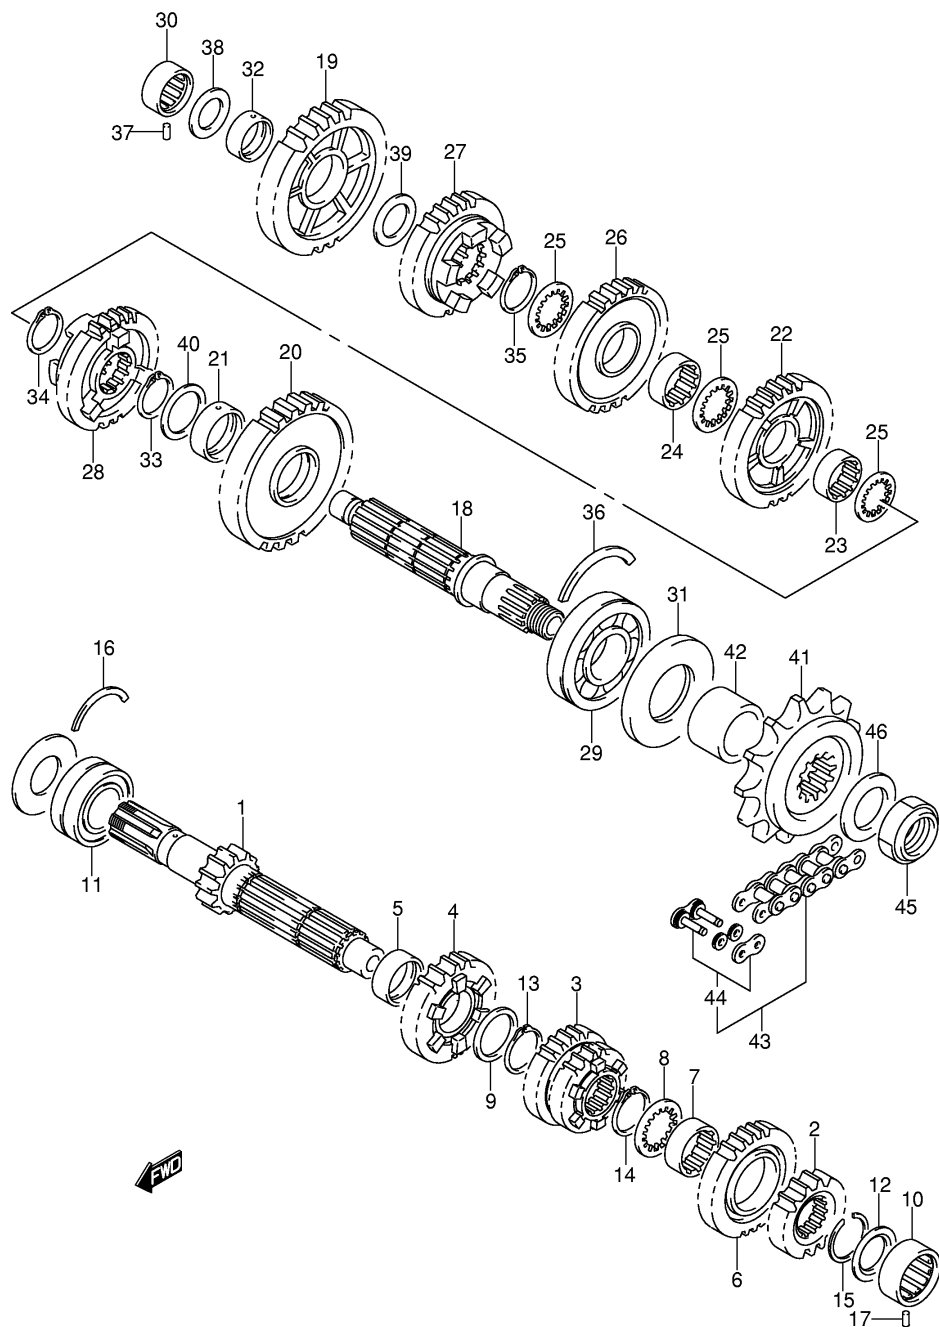

Ref No	Part No	Description
1	24120-40F00	Shaft, Counter (nt:16)
2	24221-40F00	Gear, 2nd Drive (nt:19)
3	24231-40F00	Gear, 3rd & 4th (nt:22/20)
4	24251-40F00	Gear, 5th Drive (nt:23)
5	24252-35F00	Bush 5th Drive Gear
6	24261-40F00	Gear, 6th Drive (nt:24)
7	24262-35F00	Bush, 6th Drive Gear
8	09167-27003	Washer, 6th Drive
9	09181-27014	Washer, 5th Drive
10	09263-20087	Bearing, Cntr Lh
11	09267-25013	Bearing, Cntr Rh
12	09285-20006	Seal, Oil (20x31.2x2.7)
13	09380-27006	Circlip, 5th Drive
14	09380-27006	Circlip, 6th Drive
15	09380-27004	Circlip, 2nd Drive
16	09390-58001	C Ring, Cntr Rh
17	09261-06003	Pin, Cntr Lh
18	24131-40F00	Shaft, Drive
19	24311-40F00	Gear, 1st Driven (nt:43)
20	24321-40F00	Gear, 2nd Driven (nt:39)
21	24322-02F01	Bush, 2nd Driven
22	24331-40F10	Gear, 3rd Driven (nt:37)
23	24262-17E01	Bush, 3rd Driven Gear
24	24262-17E01	Bush, 4th Driven Gear
25	24333-02F00	Washer, 3rd & 4th Driven
26	24341-40F10	Gear, 4th Driven (nt:29)
27	24351-40F10	Gear, 5th Driven (nt:30)
28	24361-40F10	Gear, 6th Driven (nt:29)
29	09262-28025	Bearing, Drive Shaft, Lh
30	09263-20087	Bearing, Drive Shaft, Rh
31	09283-36008	Seal, Drive Shaft, Oil
32	24312-02F00	Bush, 1st Driven Gear
33	09380-27006	Circlip, 2nd Driven Gear
34	09380-27006	Circlip, 3rd Driven Gear
35	09380-27006	Circlip, 4th Driven Gear
36	09390-70001	C Ring, Drive Shaft, Lh
37	09261-06003	Pin, Drive Shaft, Rh
38	09181-20251	Washer, 1st Driven Rh
39	09181-22223	Washer, 1st Driven Lh
40	09160-27008	Washer, 2nd Driven
41	27510-21A31	Sprocket, Engine (nt:17)
42	27531-40F00	Spacer, Engine Sprocket
43	27600-40F01-110	Chain Assy (did50v4,110l)
44	27620-40F01	• Joint Set, Chain
45	09159-20004	Nut, Engine Sprocket
46	09160-25035	Washer (25x40x1.4)

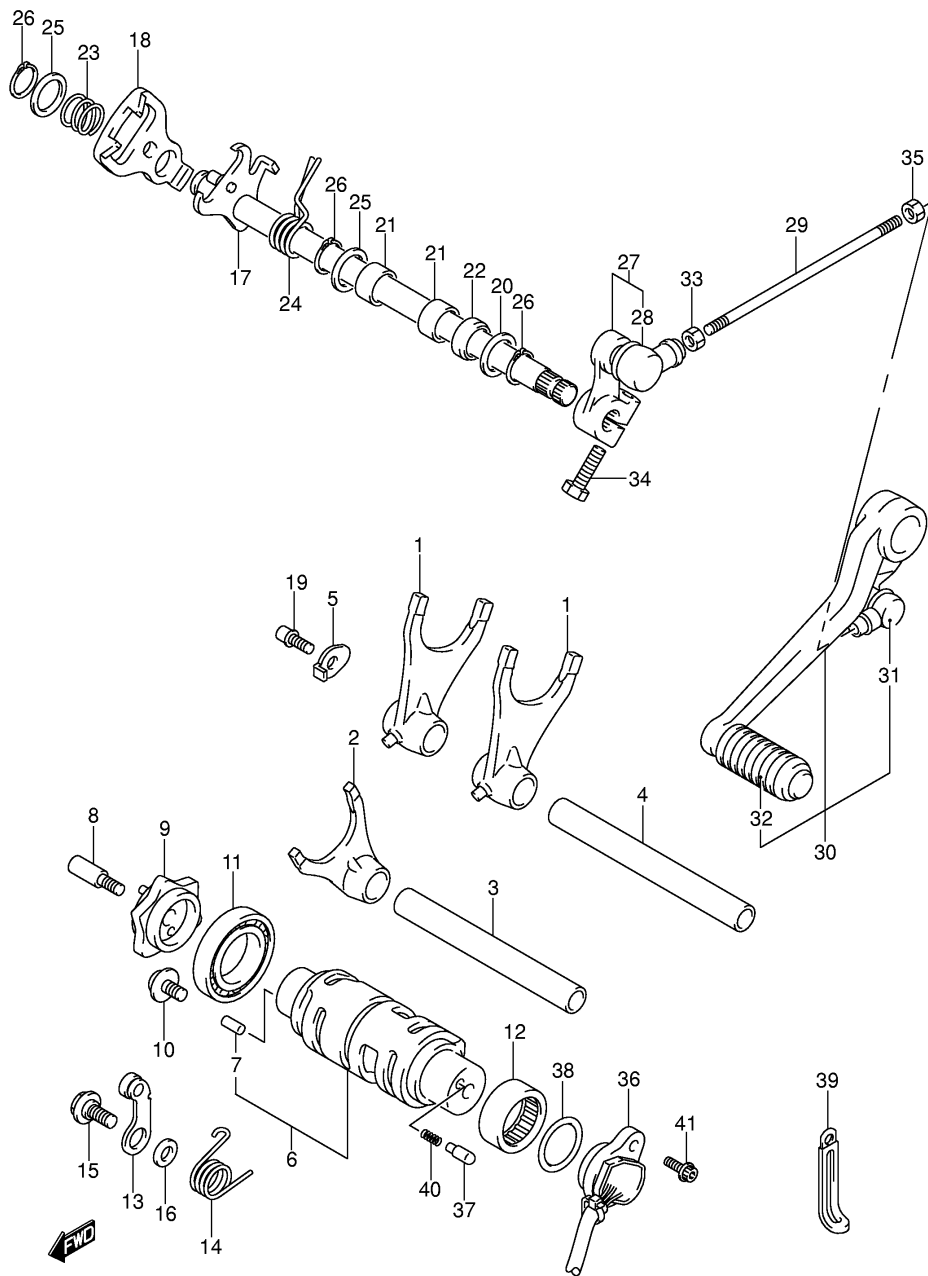


Ref No	Part No	Description
1	25211-35F00	Fork, Gear Shift, No.1
2	25231-35F00	Fork, Gear Shift, No.3
3	25411-26D01	Shaft, Gear Shift Fork, No.2
4	25411-24F00	Shaft, Gear Shift Fork, No.1
5	25451-35F00	Retainer, Gear Shift Fork
6	25310-40F00	Cam, Gear Shift
7	04221-04089	• Pin, Shift Cam
8	25312-42F00	Pin, Cam Shifter
9	25381-13E00	Plate, Gear Shift Cam
10	09136-06147	Screw, Gear Shift Cam
11	09262-25006	Bearing, Gear Shift Cam
12	09263-25018	Bearing, Gear Shift
13	25350-35F00	Stopper, Shift Cam
14	25355-03G00	Spring, Shift Cam Stopper
15	09111-06041	Bolt, Shift Cam (6x14.3)
16	08211-06141	Washer, Cam Stopper
17	25510-40F00	Shaft, Gear Shift
18	25512-06G00	Plate, Gear Shift Cam Drive
19	25671-35F00	Stopper, Gear Shift Arm
20	09160-14016	Washer, Gear Shaft, Lh
21	09263-14027	Bearing, Gear Shaft
22	09283-14006	Seal, Gear Shaft
23	09440-17009	Spring, Shift Return
24	09444-20001	Spring, Shift Return
25	09181-14167	Washer, Gear Shaft, Rh
26	08331-31146	Circlip, Gear Shaft
27	25520-40F00	Arm, Gear Shift Link
28	25526-47000	• Cover, Dust
29	25525-05A10	Rod, Gear Shift Link
30	25600-40F00	Lever Assy, Gear Shift
31	25526-47000	• Cover, Dust
32	25652-20C00	• Rubber, Gear Pedal
33	09140-06025	Nut, Gear Shift Rod, Lh
34	01500-06253	Bolt, Gear Shift Arm
35	08310-00067	Nut, Gear Shift Rod, Rh
36	37730-35F10	Base Assy, Gear Shift Term
37	09209-05011	Contact, Gear Shift Sw
38	09280-26007	O Ring, Gear Shift
39	09404-06429	Clamp (I:45)
40	09440-04010	Spring, Gear Shift Sw
41	09106-05023	Bolt, Gear Shift Sw



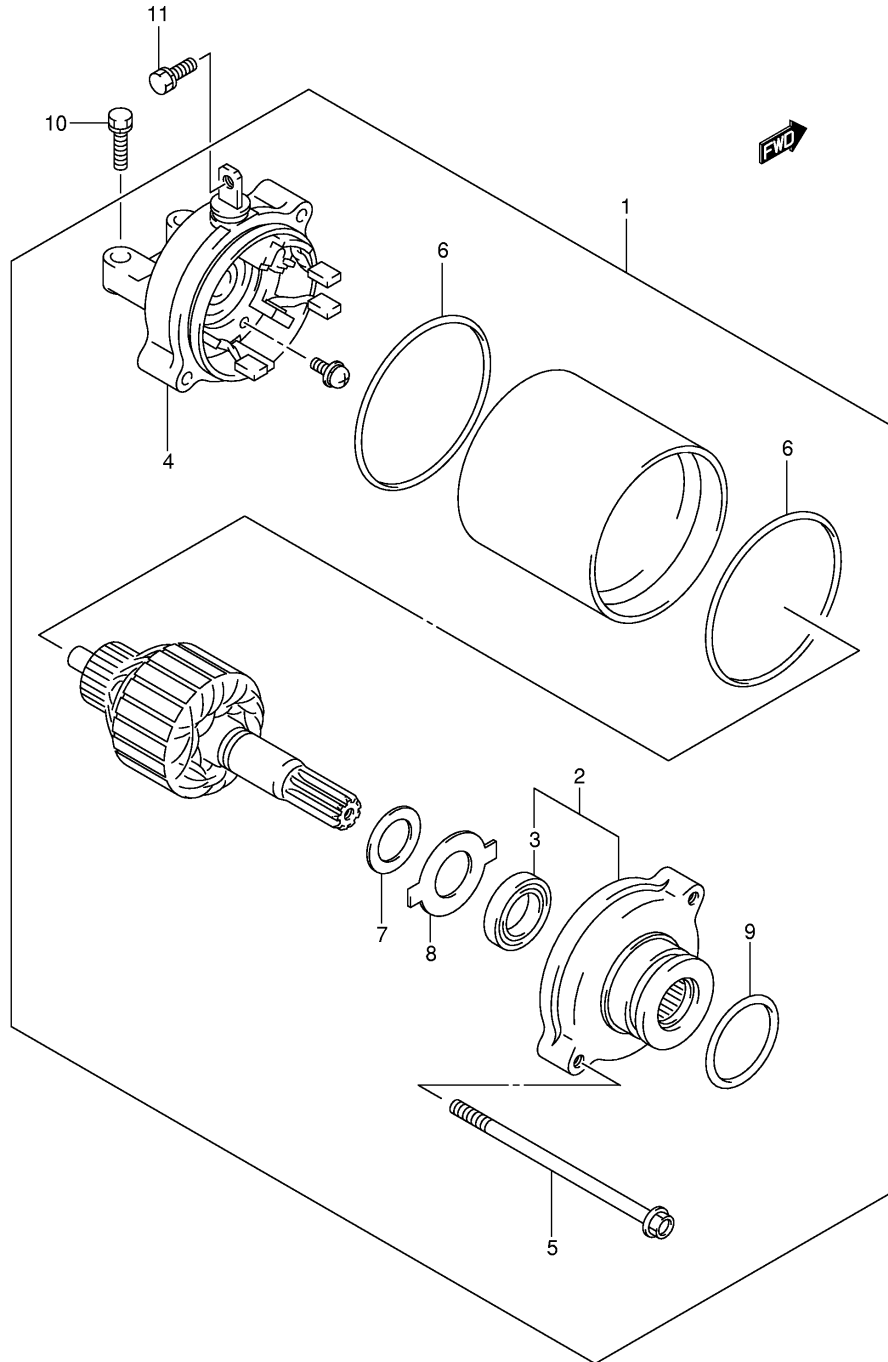



Ref No	Part No	Description
1	31100-40F00	Motor Assy, Starting
2	31150-40F00	• . Housing Assy
3	31153-49210	•• .. Oil Seal
4	31175-40F00	• . Frame Assy
5	31281-40F00	• . Bolt
6	31264-32C10	• . O Ring
7	31361-38300	• . Washer, Plate
8	31361-32C10	• . Plate, Lock
9	09280-24003	• . O Ring (d:3.0,id:24.5)
10	09128-06006	Bolt (6x20)
11	09137-05004	Screw (5x8)

Ref No	Part No	Description
1	31402-40F00	Rotor Assy
2	31401-18G00	Stator Assy
3	32371-33E00	Clamp, Mag Lead
4	09103-12005	Bolt (12x23)
5	07130-06123	Bolt, Mag Lead
6	07130-06353	Bolt, Stator

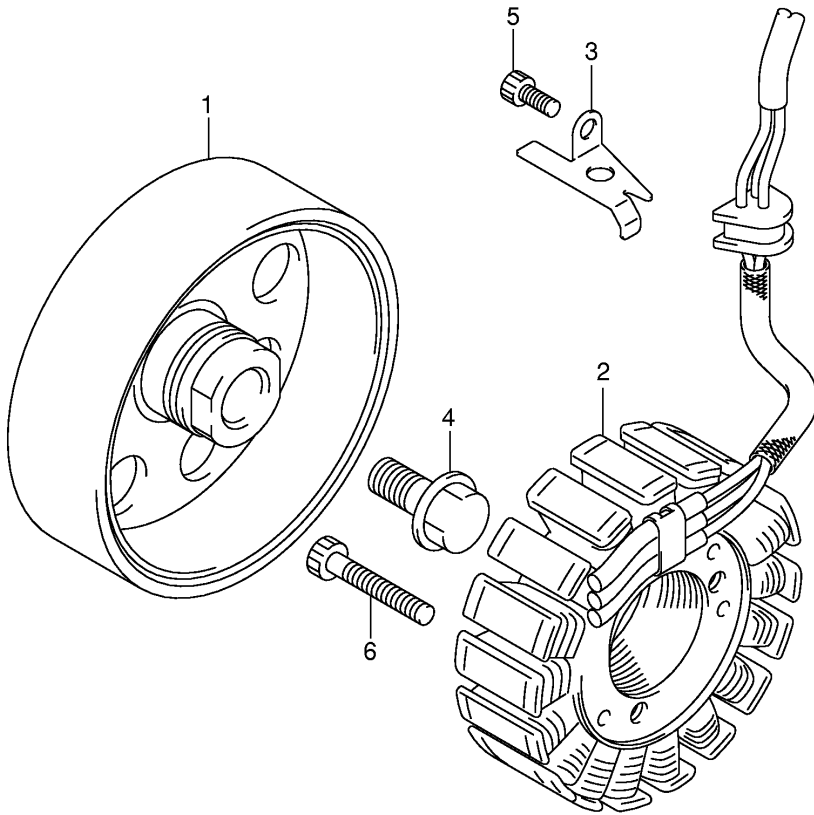


Ref No	Part No	Description
1	32160-02F10	Sensor Assy, Cam Position
2	32161-02F00	• Packing
3	33110-35F00	Stator, Signal Generator
4	33115-33E00	Clamp, Signal Generator
5	02112-05103	Screw, Clamp
6	02112-05103	Screw, Stator
7	07130-06163	Bolt, Cam Position

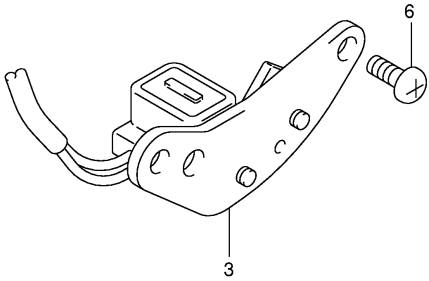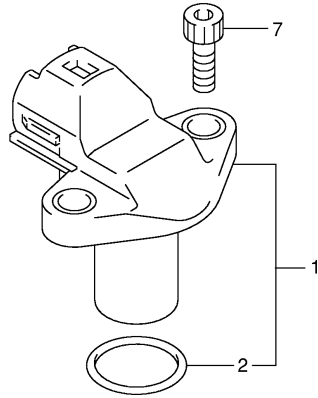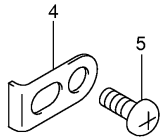


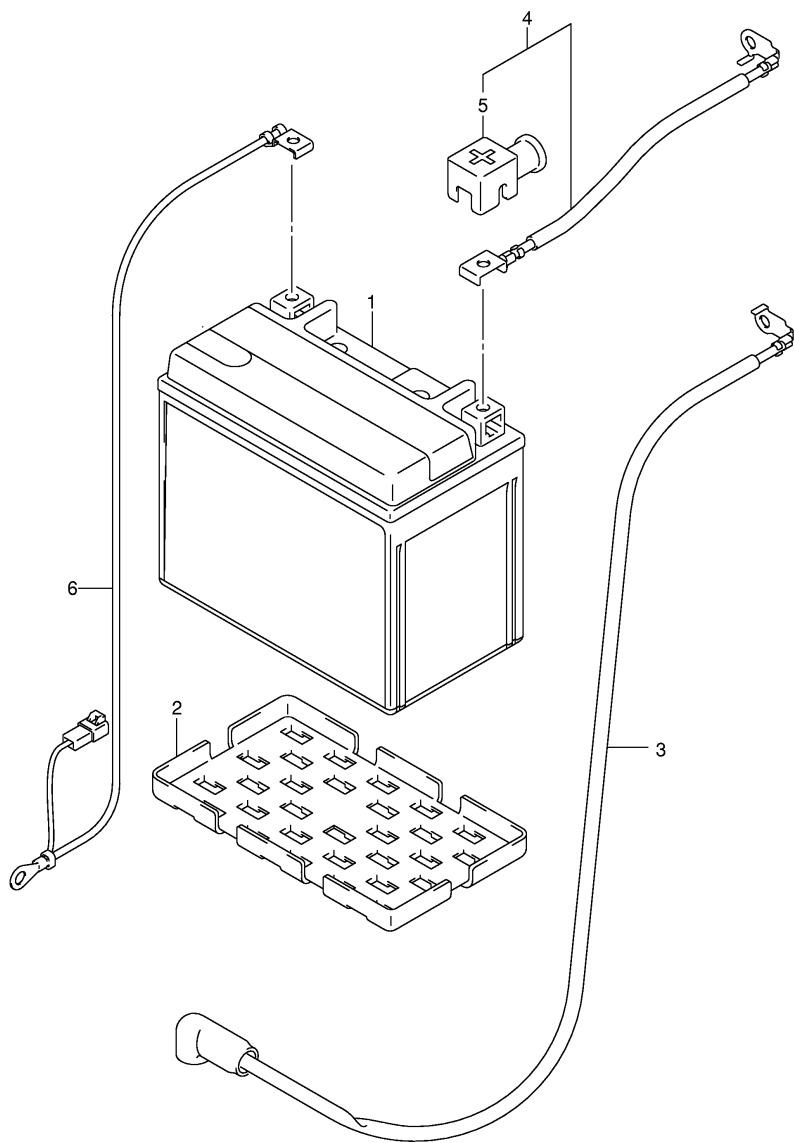


Ref No	Part No	Description
1	33610-48E20	Battery Assy (ftx12-bs,12v,10ah)
2	33652-16G00	Protector, Battery
3	33810-18G00	Wire, Starter Motor
4	33820-18G00	Wire, Battery Plus Lead
5	33624-35B00	• . Cap, Battery Plus
6	33860-18G00	Wire, Battery Minus

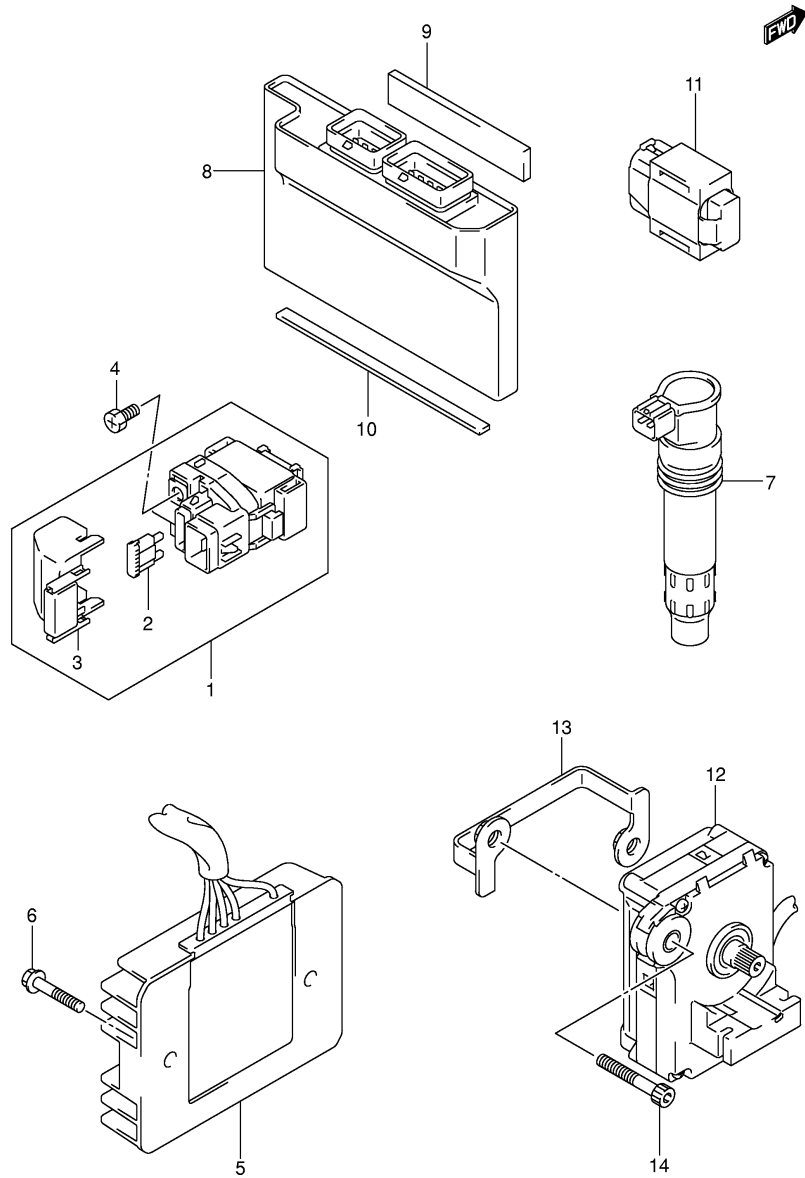

Ref No	Part No	Description
1	31800-35F00	Relay Assy, Starting Motor
2	09481-30101	• . Fuse (30a)
3	31861-26E00	• . Cover, Starter
4	09128-06013	Bolt (6x8)
5	32800-33E20	Rectifier Assy
6	02162-06253	Bolt
7	33410-35F10	Coil Assy, Ignition
8	32920-18G00	Control Unit, Fi
8	32920-18G30	Control Unit, Fi
8	32920-18G40	Control Unit, Fi
9	33652-42F00	Cushion, Fi (10x130x2)
10	33652-49000	Cushion, Fi (90x20x4)
11	33960-06G00	Sensor Assy, Fuel Cut
12	33970-19D20	Actuator Assy, Exhaust
13	33971-18G00	Holder, Actuator
14	07130-06353	Bolt

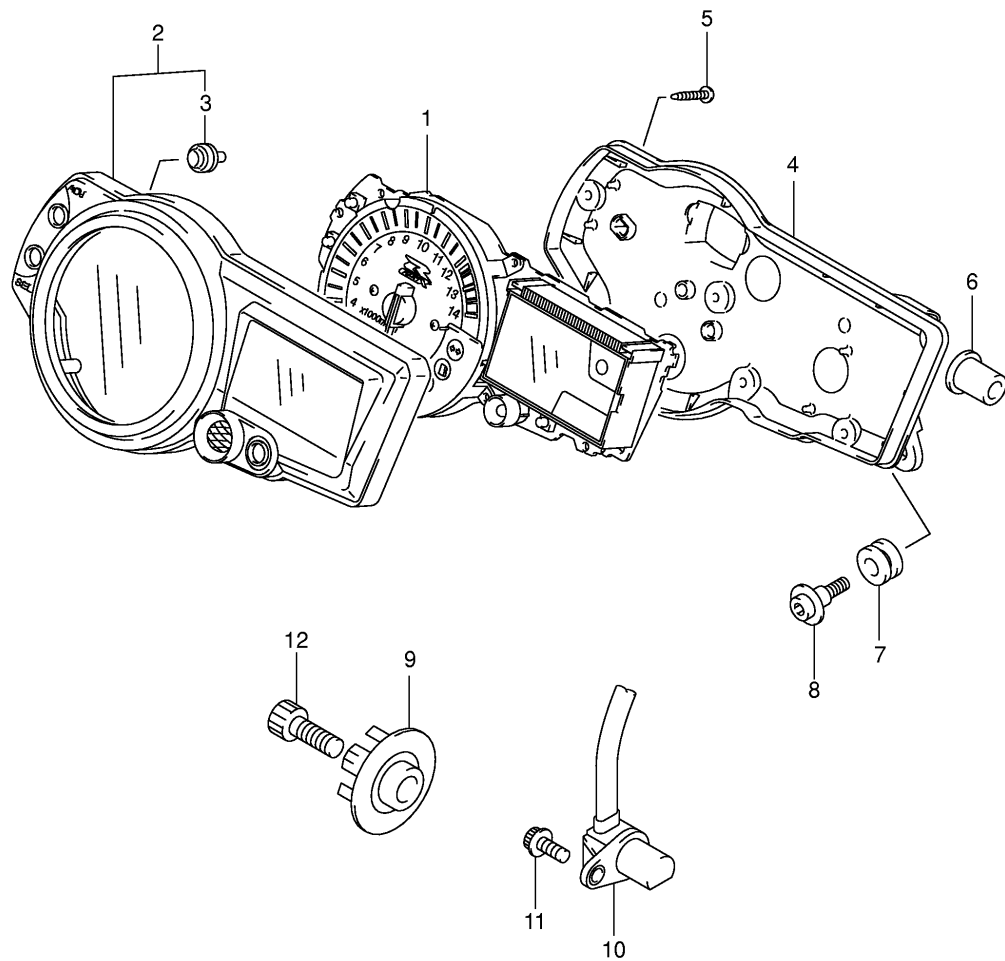


Ref No	Part No	Description
1	34120-18G10	Speed & Tachometer Assy (mile/kilo)
1	34120-18G00	Speed & Tachometer Assy (kilo)
2	34150-18G00	Case, Speedometer Upper
3	34124-24F00	• . Switch, Lever
4	34111-18G00	Case, Speedometer Lower
5	34383-35F00	Screw
6	09320-07010	Cushion
7	34955-33E00	Cushion, Meter
8	34149-18G00	Screw
9	34981-35F00	Rotor, Speed
10	34990-35F00	Sensor, Speed
11	07120-05123	Bolt, Speed Sensor
12	07130-08253	Bolt, Speed Rotor

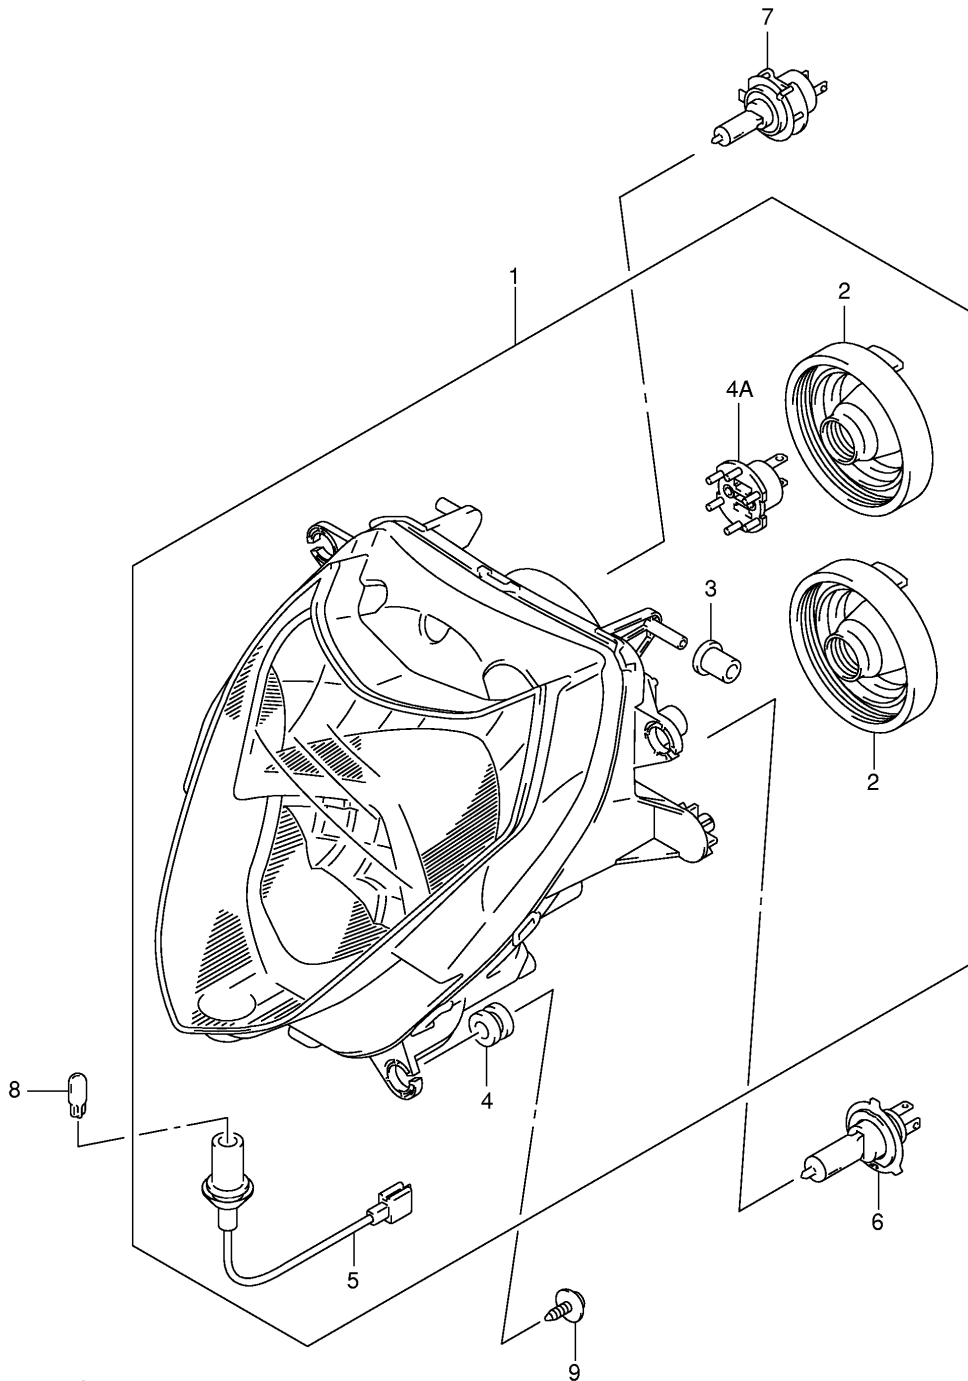


Ref No	Part No	Description
1	35100-18G20-999	Headlamp Assy
1	35100-18G50-999	Headlamp Assy
2	35179-64G00	. Cover, Socket
3	09320-07010	. Cushion
4	09320-09039	. Cushion
4a	34175-33E50	Adapter Assy
5	36118-18G50	. Cord Assy
6	09471-12182	Bulb (12v60/55w,h4)
7	09471-12188	Bulb (12v55w,h7)
8	09471-12216	Bulb (12v5w)
9	09136-05062	Screw




Ref No	Part No	Description
1	35100-18G30-999	Headlamp Assy
2	35179-64G00	• . Cover, Socket
3	09320-07010	• . Cushion
4	09320-09039	• . Cushion
4a	34175-33E50	Adapter Assy
5	09471-12182	Bulb (12v60/55w,h4)
6	09471-12188	Bulb (12v55w,h7)
7	09136-05062	Screw
8	35950-14A00	Reflex Reflector Assy, Fr Side
9	09119-06104	Bolt

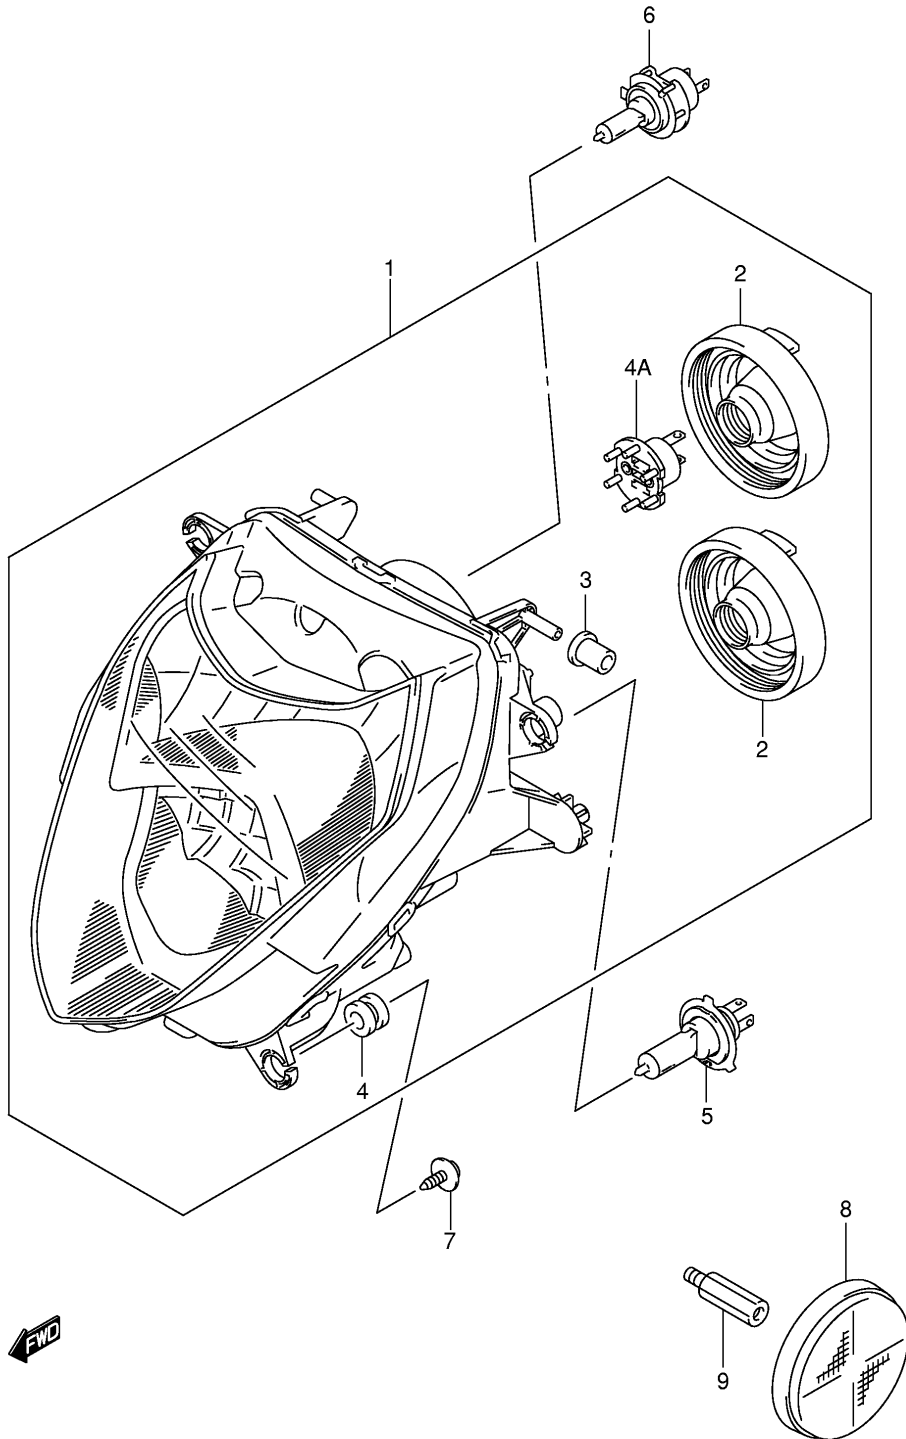


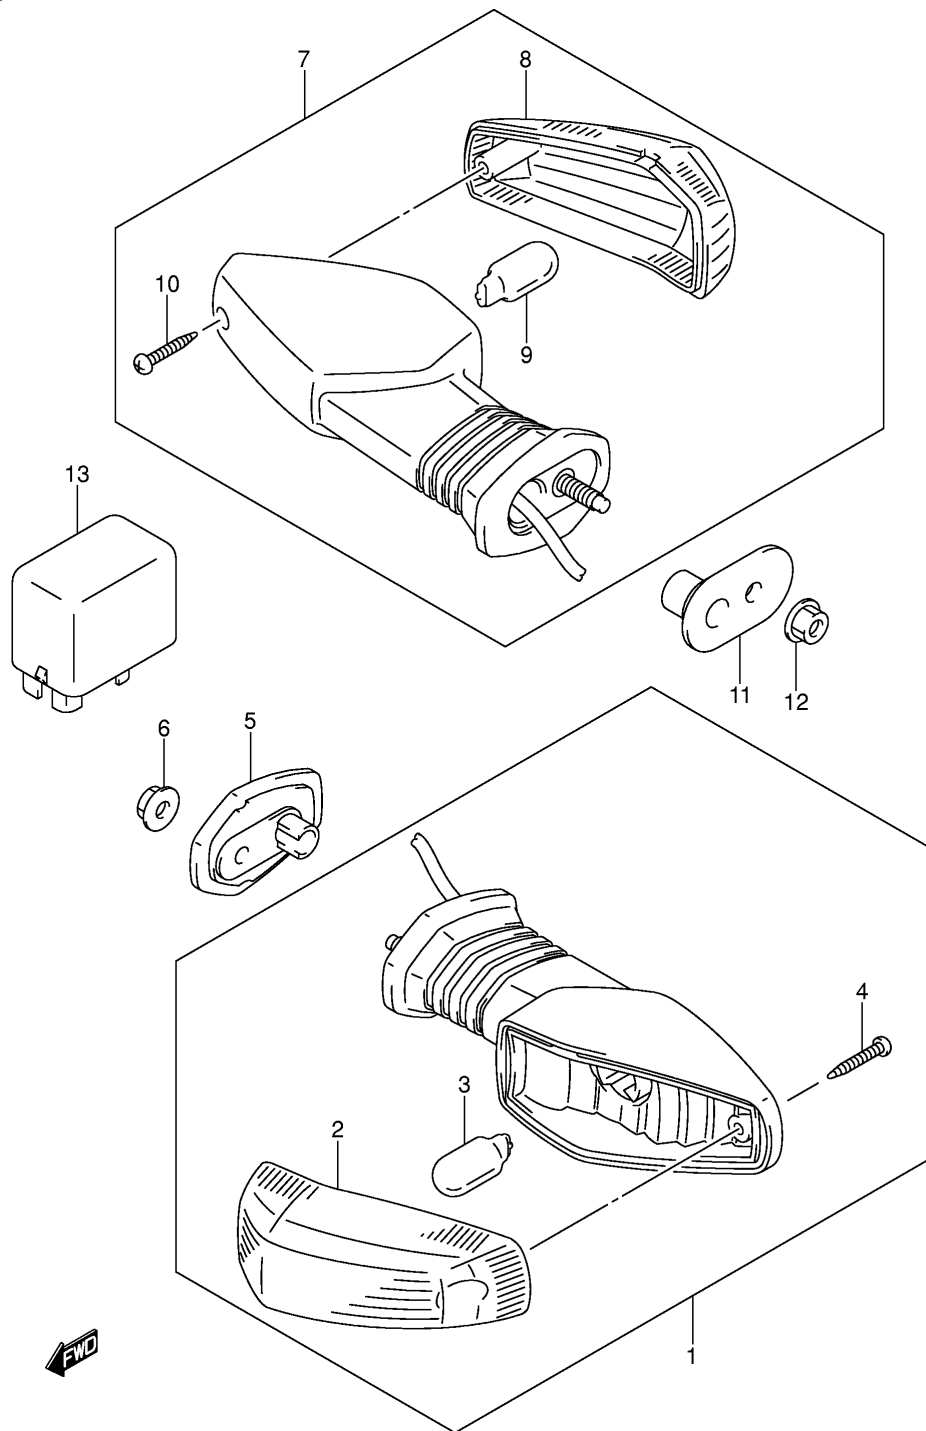

Ref No	Part No	Description
1	35601-18G00	Lamp Assy, Front Turn Rh
1	35602-18G00	Lamp Assy, Front Turn Lh
2	35612-18G00	• Lens, Rh
2	35632-18G00	• Lens, Lh
3	35222-18G00	• Bulb (12v,18w)
4	35725-40511	• Screw
5	35629-18G00	Plate, Front Turn
6	08316-10053	Nut
7	35603-18G30	Lamp Assy, Rear Turn Rh
7	35604-18G30	Lamp Assy, Rear Turn Lh
8	35632-18G00	• Lens, Rh
8	35612-18G00	• Lens, Lh
9	35222-18G00	• Bulb (12v,18w)
10	35725-40511	• Screw
11	35629-31F40	Plate, Rear Turn
12	08316-10053	Nut
13	38610-07F00	Relay Assy, Turnsignal

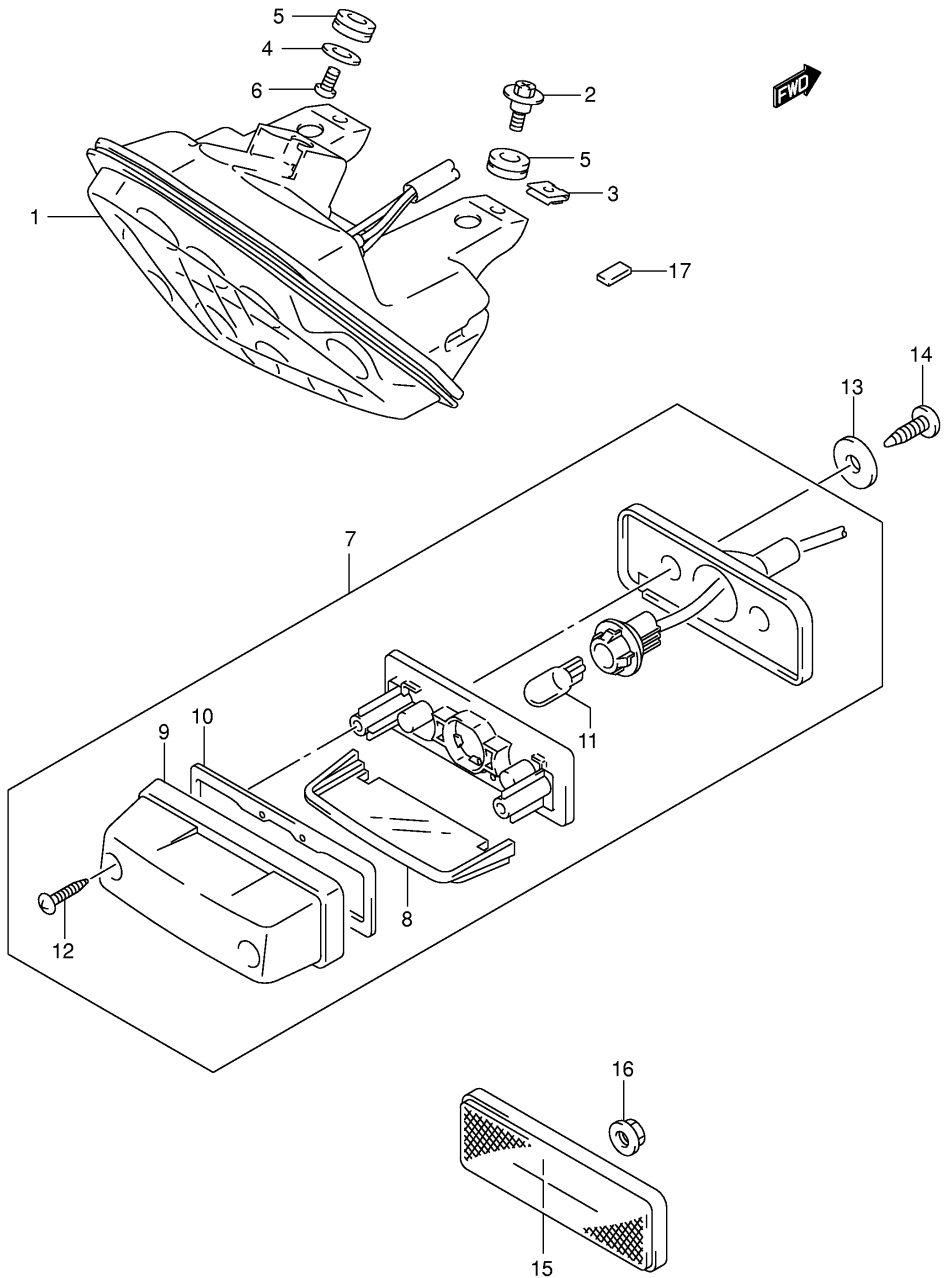



Ref No	Part No	Description
1	35710-18G00	Lamp Assy, Rear Combination
2	09139-06118	Screw
3	09148-06015	Nut
4	09160-05501	Washer (5.5x20x1.2)
5	09320-10049	Cushion
6	02112-05123	Screw, Rear Comp Lamp
7	35910-16G00	Lamp Assy, License
8	35912-16G00	• Lens
9	35917-16G00	• Cover
10	35913-16G00	• Gasket
11	09471-12216	• Bulb (12v,5w)
12	03211-04163	• Screw
13	09160-05501	Washer, License Lamp
14	03541-05163	Screw, License Lamp
15	35970-07F00	Reflector Assy, Rear Side
16	08316-10053	Nut
17	33652-18G00	Cushion, Rear Comb (20x10x3)

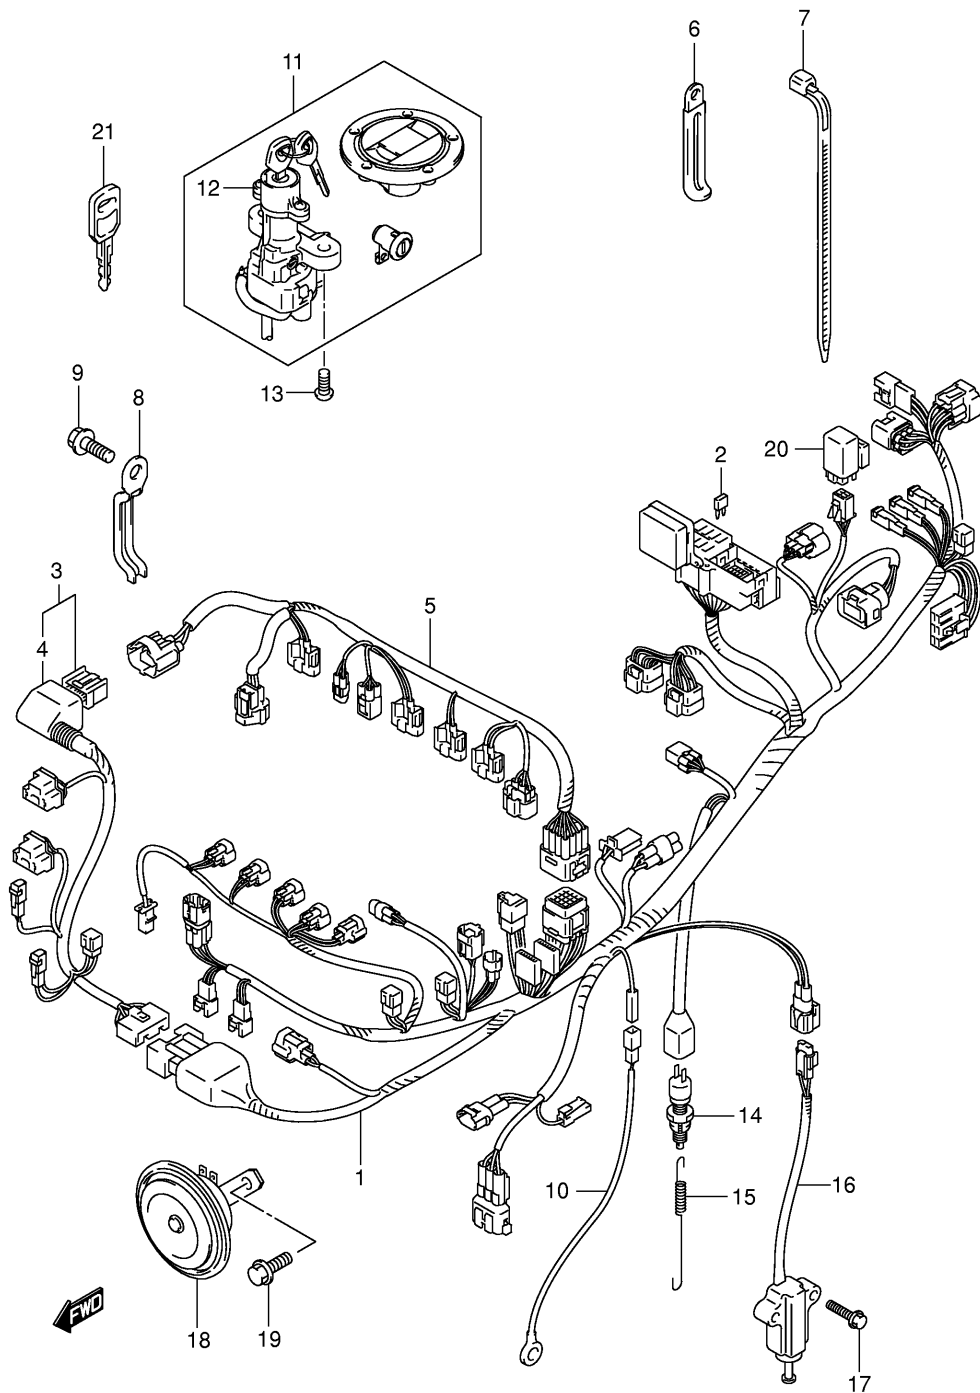


Ref No	Part No	Description
1	36610-18G10	Harness, Wiring No.1
1	36610-18G30	Harness, Wiring No.1
2	09481-10501	• Fuse (10a)
2	09481-10501	• Fuse (10a)
2	09481-15501	• Fuse (15a)
2	09481-15501	• Fuse (15a)
3	36620-18G10	Harness, Wiring No.2
3	36620-18G30	Harness, Wiring No.2
4	36618-33E00	• Cover, Speedometer
5	36859-18G00	Wire, Injector Lead
6	09404-06429	Clamp (l:45)
7	09407-14403	Clamp (l:125)
7	09407-18402	Clamp (l:165)
8	09403-06322	Clip
9	01550-06123	Bolt, Wiring Harness
10	36851-35F00	Wire, Oil Pressure Lead
11	37000-16840	Lock Set
12	37100-16G00	• Lock Assy, Steering
13	09139-08016	Screw
14	37740-24A00	Switch Assy, Stop Lamp
15	09443-06042	Spring
16	37840-35F10	Switch Assy, Side Stand
17	01550-06163	Bolt
18	38500-18G00	Horn Assy
19	01550-08163	Bolt
20	38740-24X50	Relay Assy, Fuel Pump
21	37146-33E00	Key, Blank

Ref No	Part No	Description
1	37200-18G30	Switch Assy, Handle Rh
2	02112-05305	• . Screw
3	02112-05505	• . Screw
4	02112-05103	Screw
5	37400-18G10	Switch Assy, Handle Lh
6	02112-05253	• . Screw
7	02112-05455	• . Screw

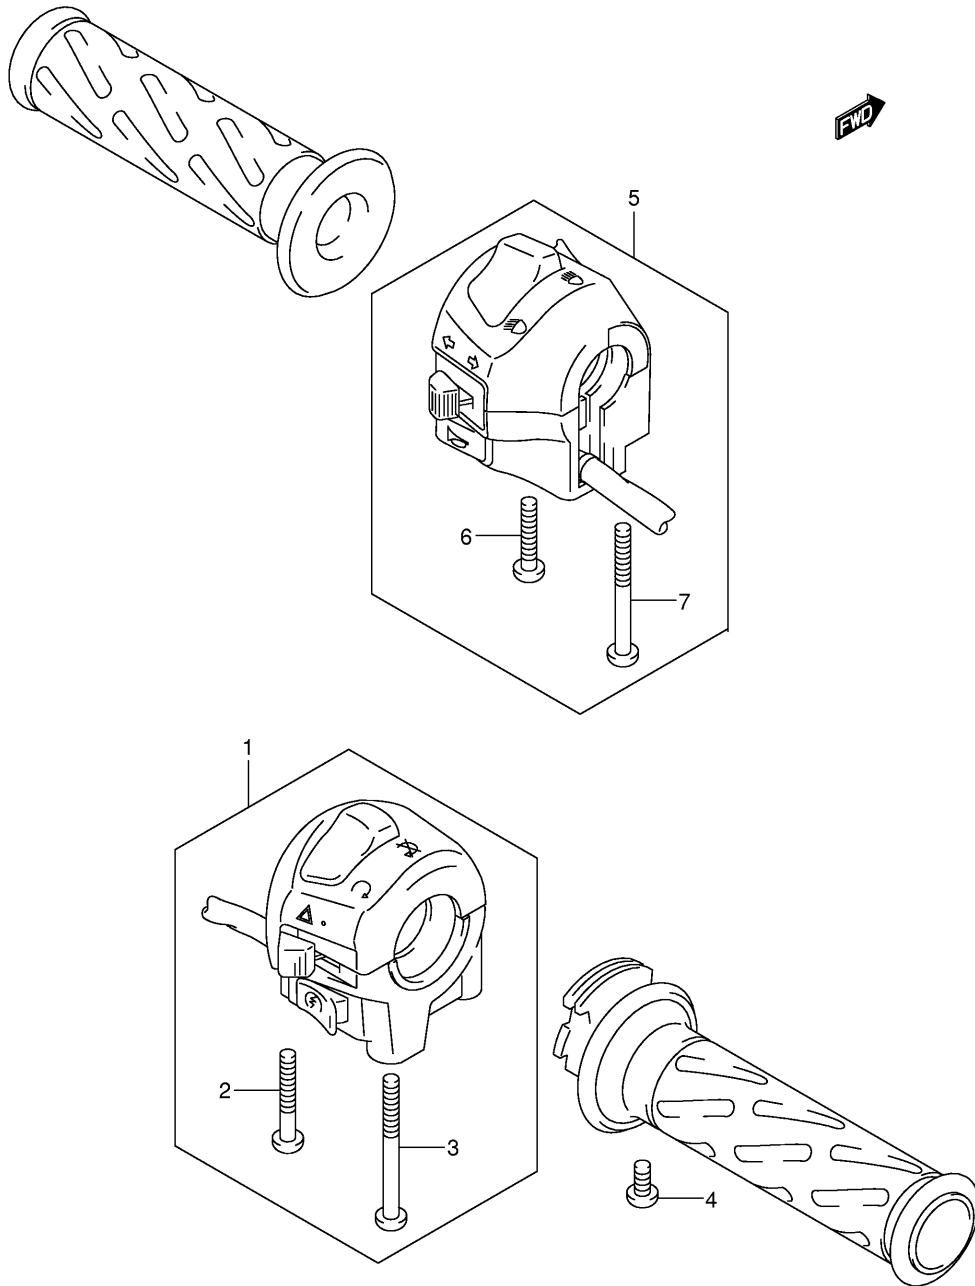


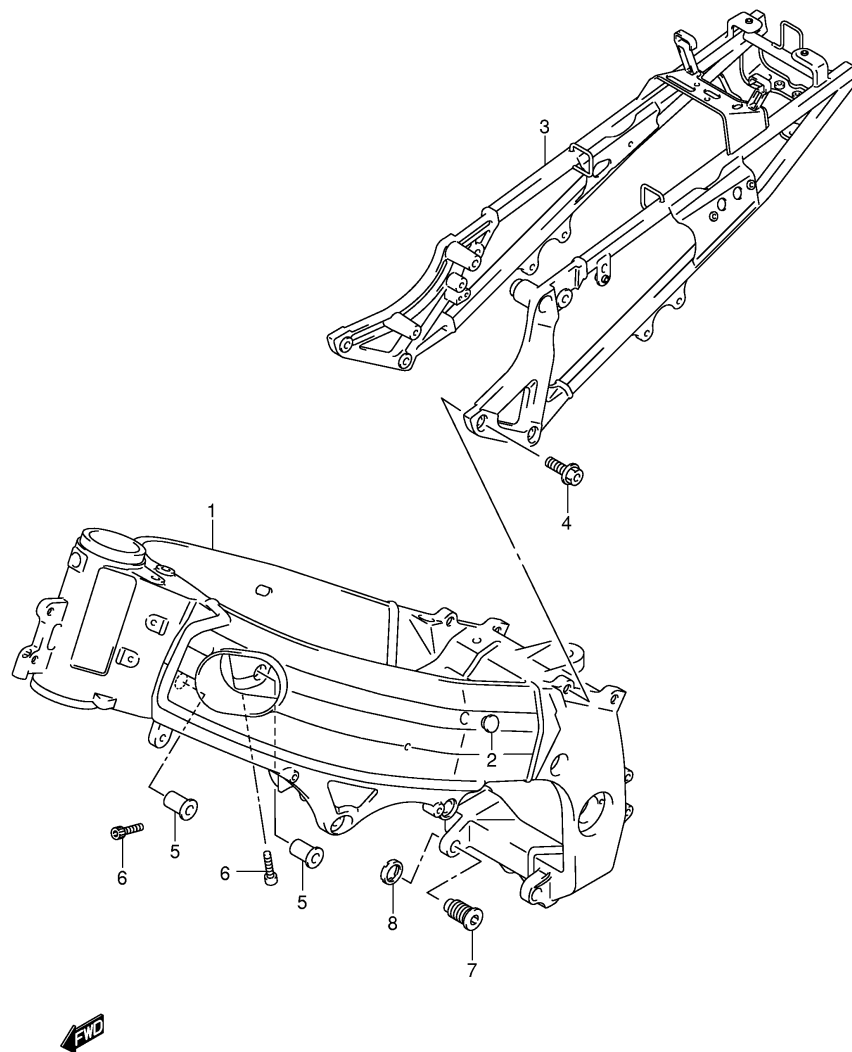


Ref No	Part No	Description
1	41100-18G00-YAP	Frame (black)
2	43585-18G00	Cap, Tank Rail
3	41200-18G00-YAP	Rail, Seat (black)
4	41233-18G00	Bolt, Seat Rail
5	41911-40F01	Spacer, Engine Mount
6	09106-08149	Bolt, Spacer
7	41921-35F00	Bolt, Crankcase Adjust
8	41922-18G00	Nut, Crank Case Adjust

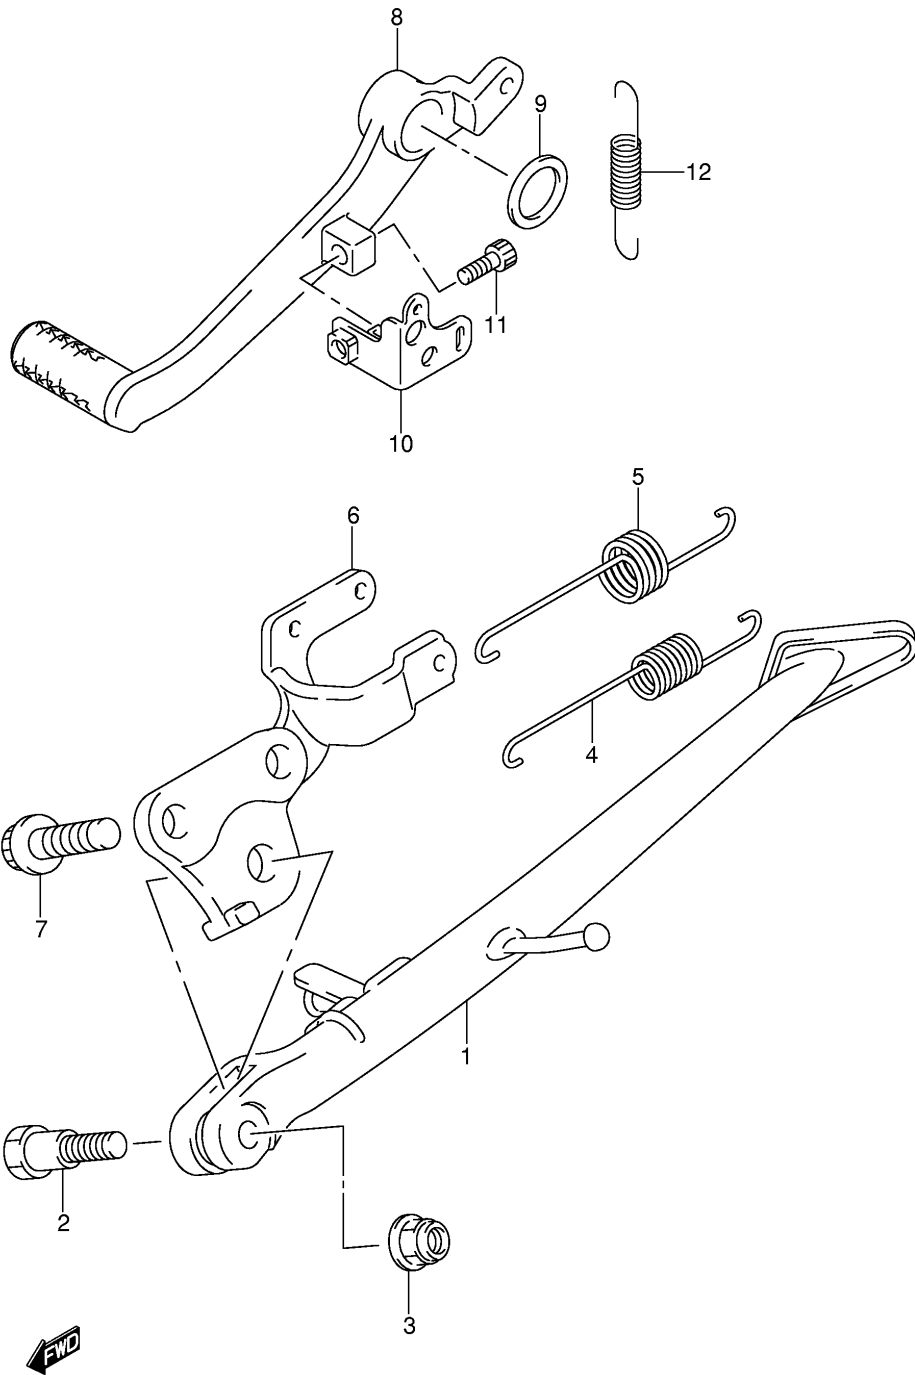


Ref No	Part No	Description
1	42310-40F00	Stand, Prop
2	09111-10059	Bolt, Prop Stand
3	09159-10103	Nut
4	09443-14070	Spring, Inner
5	09443-19016	Spring, Outer
6	42330-35F01	Bracket, Prop Stand
7	09106-10064	Bolt
8	43111-35F10	Pedal, Brake
9	09160-18022	Washer
10	43560-35F10	Hook, Return Spring
11	07130-06163	Bolt
12	09443-11035	Spring, Return

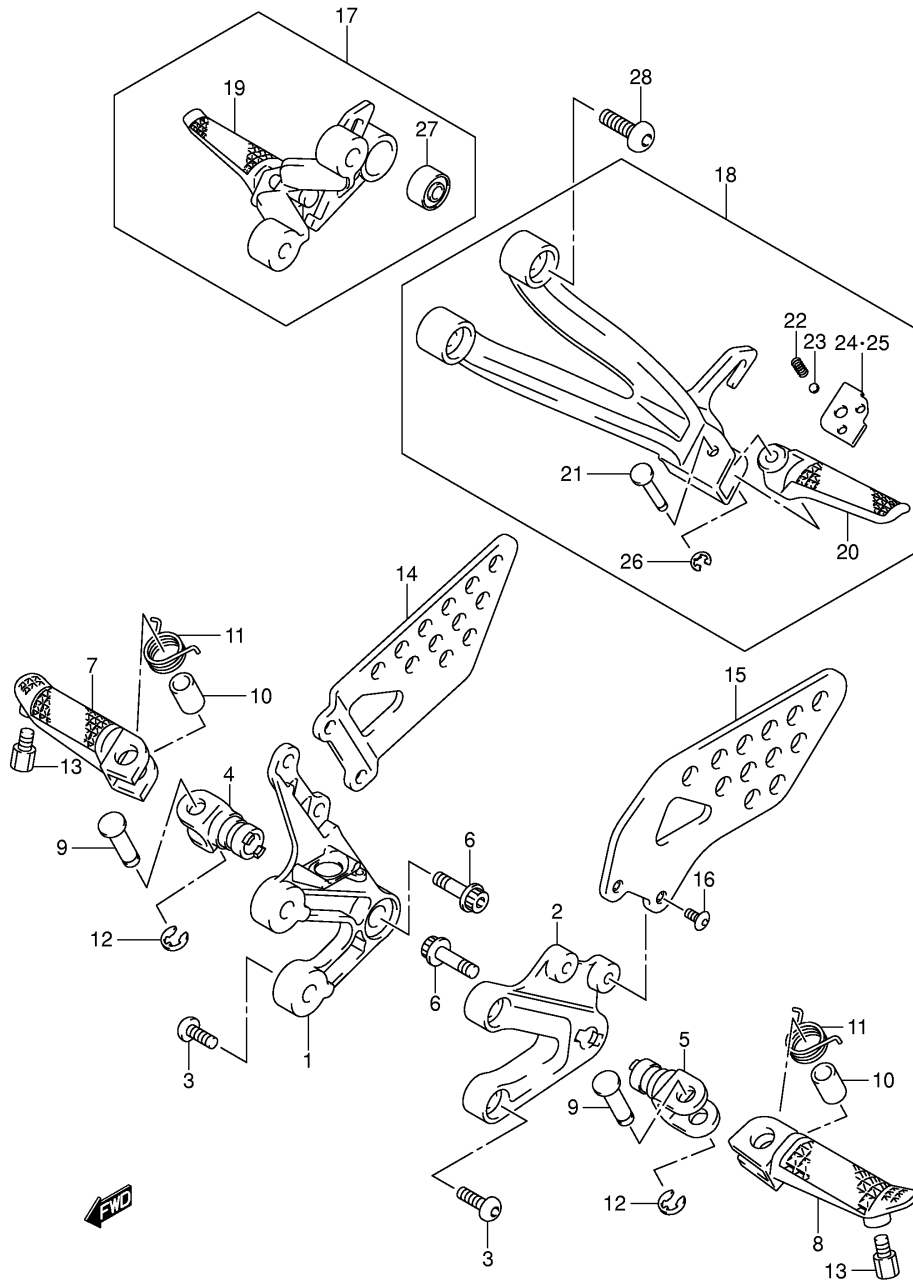

Ref No	Part No	Description
1	43511-18G00	Bracket, Front Footrest Rh
2	43521-18G00	Bracket, Front Footrest Lh
3	09106-08150	Bolt, Bracket
4	43530-35F10	Holder, Footrest Rh
5	43540-35F10	Holder, Footrest Lh
6	09106-10064	Bolt, Holder
7	43516-35F00	Bar, Front Footrest Rh
8	43526-35F00	Bar, Front Footrest Lh
9	09208-08014	Pin
10	09180-08149	Spacer
11	09448-18022	Spring
12	08332-11063	E Ring
13	43576-07D01	Bolt, Bank Sensor
14	43571-18G00	Guard, Footrest Rh
15	43576-18G00	Guard, Footrest Lh
16	09139-05067	Screw, Guard Lh
17	43600-18G00	Footrest Assy, Pillion Rh
18	43700-18G00	Footrest Assy, Pillion Lh
19	43611-35F01	. Bar, Pillion Rh
20	43621-35F01	. Bar, Pillion Lh
21	87259-85510	. Pin
22	09440-05005	. Spring
23	06111-07004	. Ball
24	43816-33E21	. Plate, Rh
25	43826-33E22	. Plate, Lh
26	08332-11043	. E Ring
27	09319-08028	. Bush, Muffler Support
28	09106-08150	Bolt, Bracket

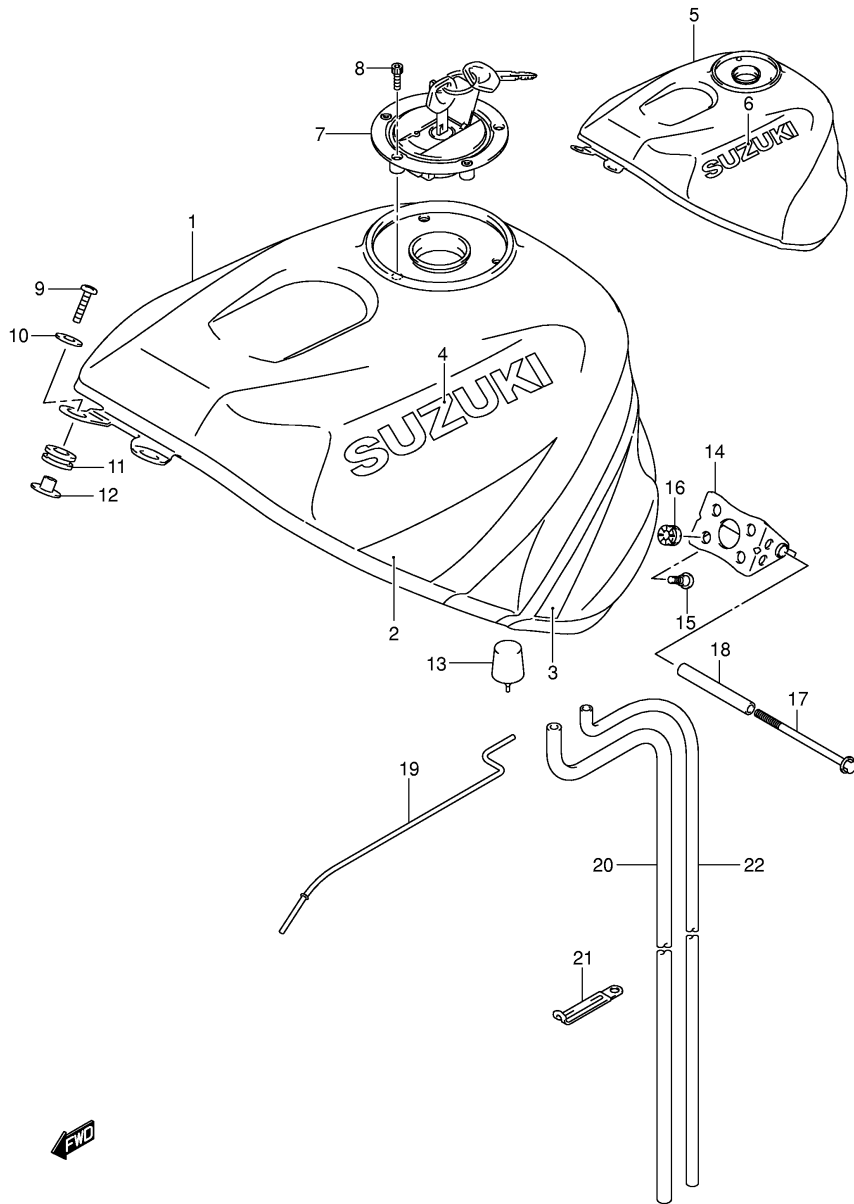


Ref No	Part No	Description
1	44100-18G10-LR5	Tank Assy, Fuel
1	44100-18G10-LR8	Tank Assy, Fuel
1	44100-18G00-LR5	Tank Assy, Fuel
1	44100-18G00-LR8	Tank Assy, Fuel
2	68110-18G00-LS3	. Tape Set, Upper
2	68110-18G00-LR8	. Tape Set, Upper
3	68110-18G10-LS3	. Tape Set, Lower
3	68110-18G10-LR8	. Tape Set, Lower
4	68111-12C30-YBD	. Emblem (white)
4	68111-12C30-YD8	. Emblem (silver)
5	44100-18G40-YD8	Tank Assy Fuel (silver)
5	44100-18G30-YD8	Tank Assy Fuel (silver)
6	68111-12CA0-YC8	. Emblem (black)
7	44200-16850	Cap Set, Fuel Tank
8	09106-05017	Bolt
9	09139-06029	Bolt, Front
10	09160-06054	Washer
11	44511-19F00	Cushion, Front
12	44512-19F00	Spacer, Front
13	44542-18G00	Cushion, Side No.2
14	44530-18G00	Bracket, Rear No.1
15	09139-06132	Screw
16	09320-08071	Cushion
17	09103-06015	Bolt, Joint
18	44561-18G00	Spacer
19	44574-35F00	Stay, Fuel Tank
20	44423-16G01	Hose, Water Drain
21	09404-06431	Clamp
22	44424-18G00	Hose, Breather

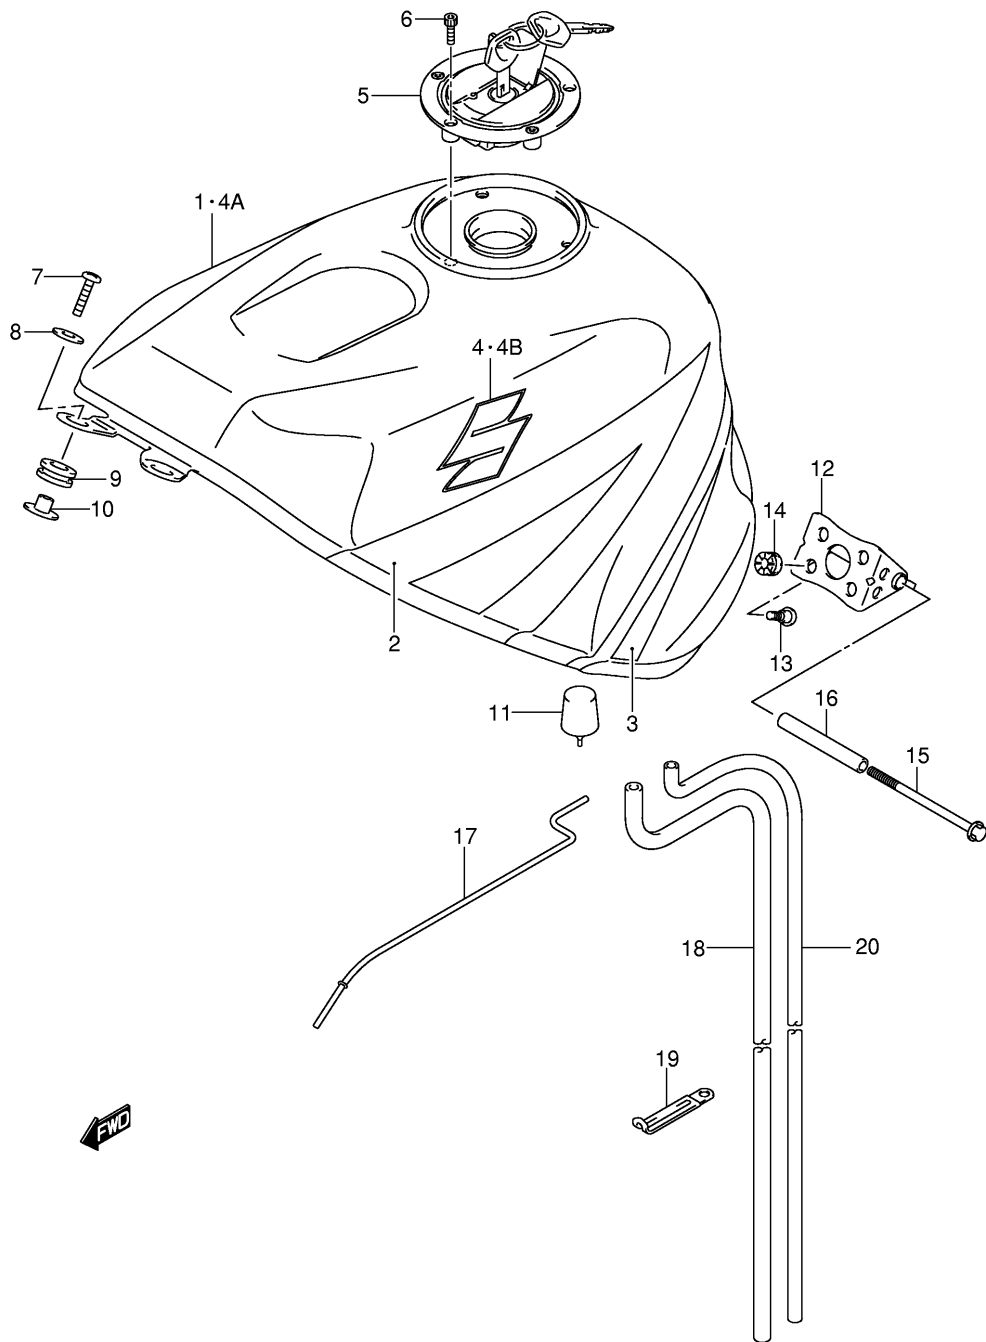

Ref No	Part No	Description
1	44100-18G70-YBA	Tank Assy, Fuel (blue)
1	44100-18G70-YU9	Tank Assy, Fuel (yellow)
1	44100-18G70-019	Tank Assy, Fuel (black)
1	44100-18G60-YBA	Tank Assy, Fuel (blue)
1	44100-18G60-YU9	Tank Assy, Fuel (yellow)
1	44100-18G60-019	Tank Assy, Fuel (black)
2	68110-18G20-LS3	. . Tape Set, Upper
2	68110-18G20-LB4	. . Tape Set, Upper
2	68110-18G20-CT5	. . Tape Set, Upper
3	68110-18G30-YBD	. . Tape Set, Lower (white)
3	68110-18G30-019	. . Tape Set, Lower (black)
3	68110-18G30-YD8	. . Tape Set, Lower (silver)
4	68111-18G00-ABF	. . Emblem
4	68111-18G00-ASJ	. . Emblem
4	68111-18G00-E9Y	. . Emblem (black)
4a	44100-18GD0-019	Tank Assy, Fuel (black)
4b	68111-18G10	. . Emblem
5	44200-16850	Cap Set, Fuel Tank
6	09106-05017	Bolt
7	09139-06029	Bolt, Front
8	09160-06054	Washer
9	44511-19F00	Cushion, Front
10	44512-19F00	Spacer, Front
11	44542-18G00	Cushion, Side No.2
12	44530-18G00	Bracket, Rear No.1
13	09139-06132	Screw
14	09320-08071	Cushion
15	09103-06015	Bolt, Joint
16	44561-18G00	Spacer
17	44574-35F00	Stay, Fuel Tank
18	44423-16G01	Hose, Water Drain
19	09404-06431	Clamp
20	44424-18G00	Hose, Breather


Ref No	Part No	Description
--------	---------	-------------

1	47100-18G00-YBD	Cover Assy, Frame (white)
1	47100-18G00-YAV	Cover Assy, Frame (orange)
2	68135-18G00-MZ3	. Tape, Frame Cover Rh
2	68135-18G00-MZ4	. Tape, Frame Cover Rh
3	68145-18G00-MZ3	. Tape, Frame Cover Lh
3	68145-18G00-MZ4	. Tape, Frame Cover Lh
4	68131-18G00-MZ5	. Emblem
4	68131-18G00-MZ6	. Emblem
5	47100-18G10-YD8	Cover Assy, Frame (silver)
6	68135-18G10-MZ7	. Tape, Frame Cover Rh
7	68145-18G10-MZ7	. Tape, Frame Cover Lh
8	68131-18G10-MZ8	. Emblem, "1000"
9	68131-18G00-HT6	. Emblem
10	09139-06131	Screw, Front
11	09139-06029	Screw, Upper
12	09180-06286	Spacer
13	09320-10045	Cushion
14	09409-06314-5PK	Clip, Lower (black)

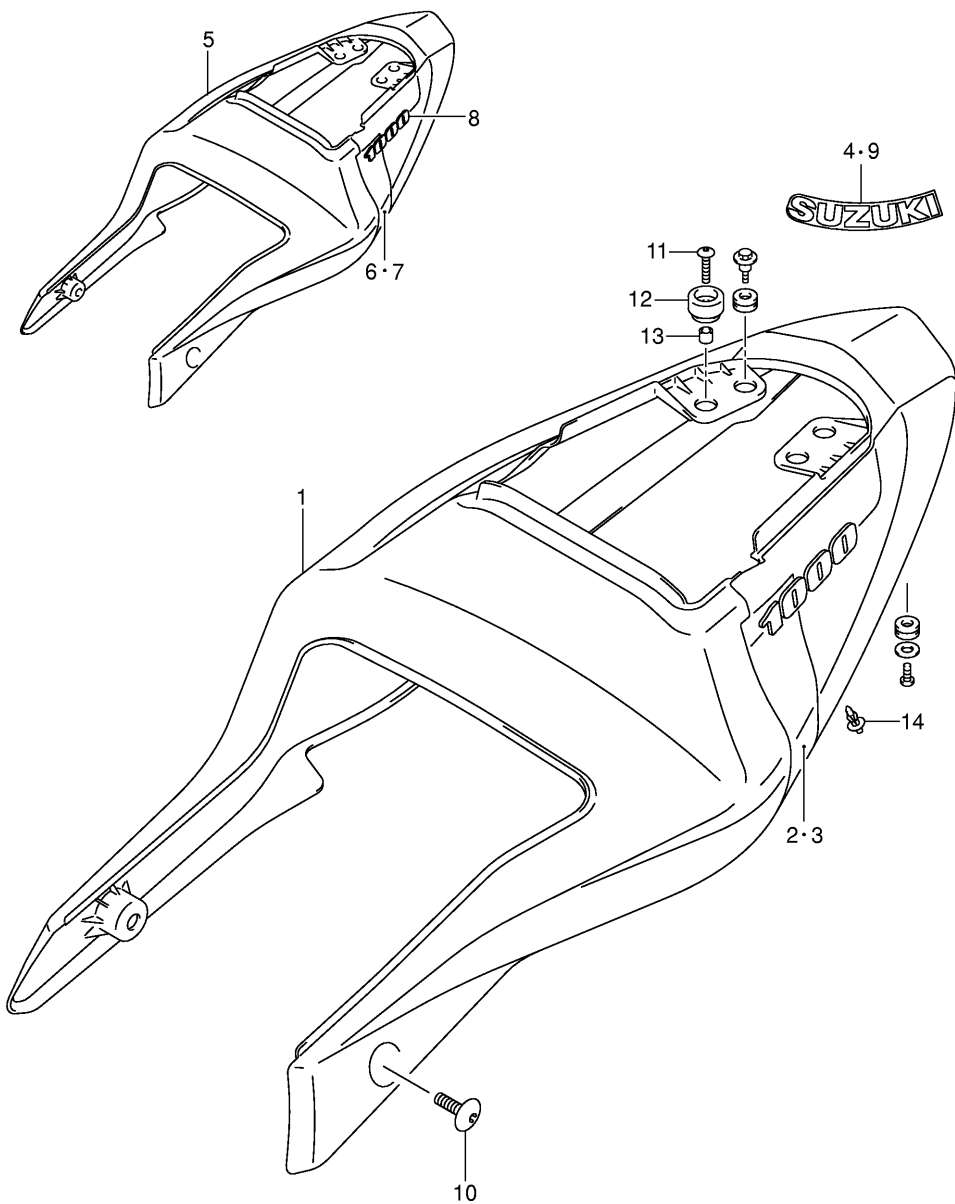


Ref No	Part No	Description
--------	---------	-------------


1	47100-18G20-YBD	Cover Assy, Frame (white)
1	47100-18G20-YU9	Cover Assy, Frame (yellow)
1	47100-18G20-019	Cover Assy, Frame (black)
2	68135-18G20-AKR	. . Tape, Frame Cover Rh
2	68135-18G20-AKS	. . Tape, Frame Cover Rh
2	68135-18G20-AKT	. . Tape, Frame Cover Rh
3	68145-18G20-AKR	. . Tape, Frame Cover Lh
3	68145-18G20-AKS	. . Tape, Frame Cover Lh
3	68145-18G20-AKT	. . Tape, Frame Cover Lh
4	68131-18G20-019	. . Emblem (black)
4	68131-18G20-YD8	. . Emblem (silver)
5	47100-18G30-1TX	Cover Assy, Frame (black)
6	68131-18G30-AZM	. . Emblem, "1000"
7	68131-18G00-E9Y	. . Emblem, "suzuki"
8	09139-06131	Screw, Front
9	09139-06029	Screw, Upper
10	09180-06286	Spacer
11	09320-10045	Cushion
12	09409-06314-5PK	Clip, Lower (black)

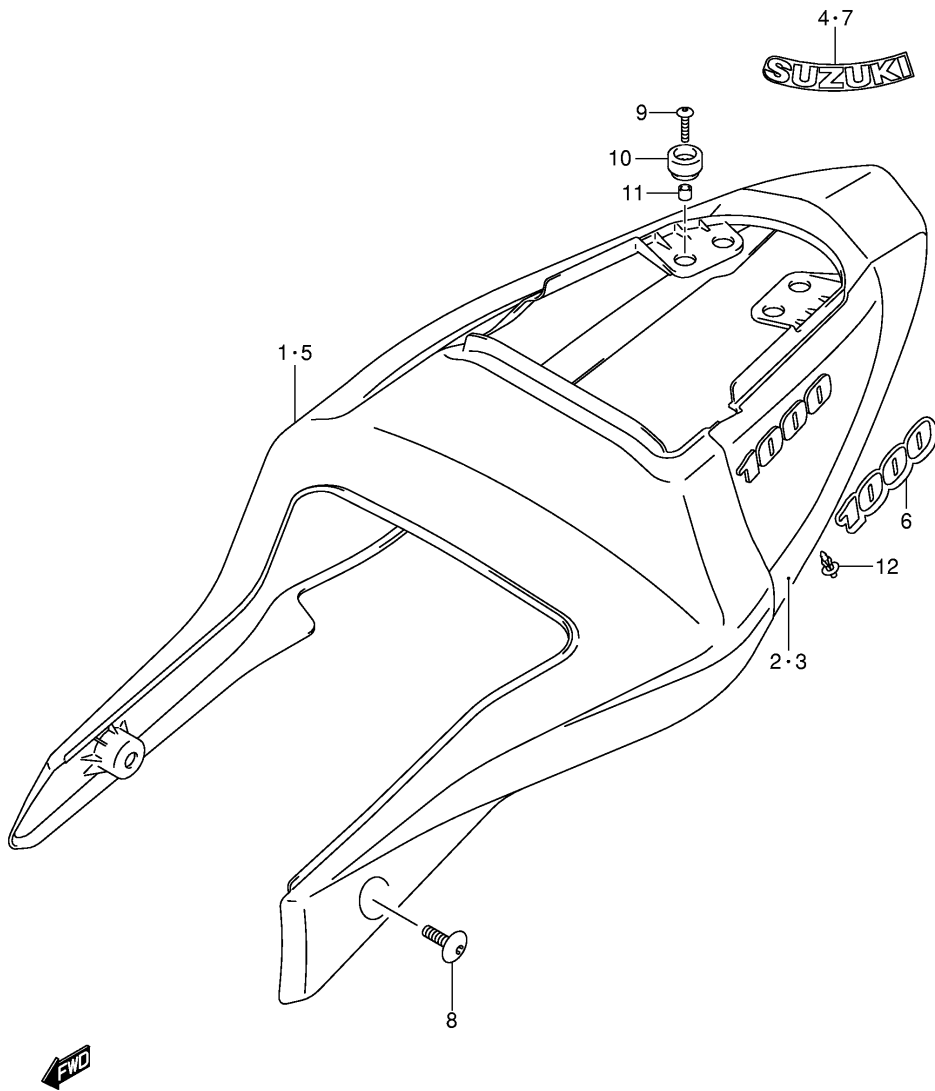


Ref No	Part No	Description
1	53110-18G00-019	Fender, Front (black)
1	53110-18G00-YD8	Fender, Front (silver)
2	09139-06107	Screw

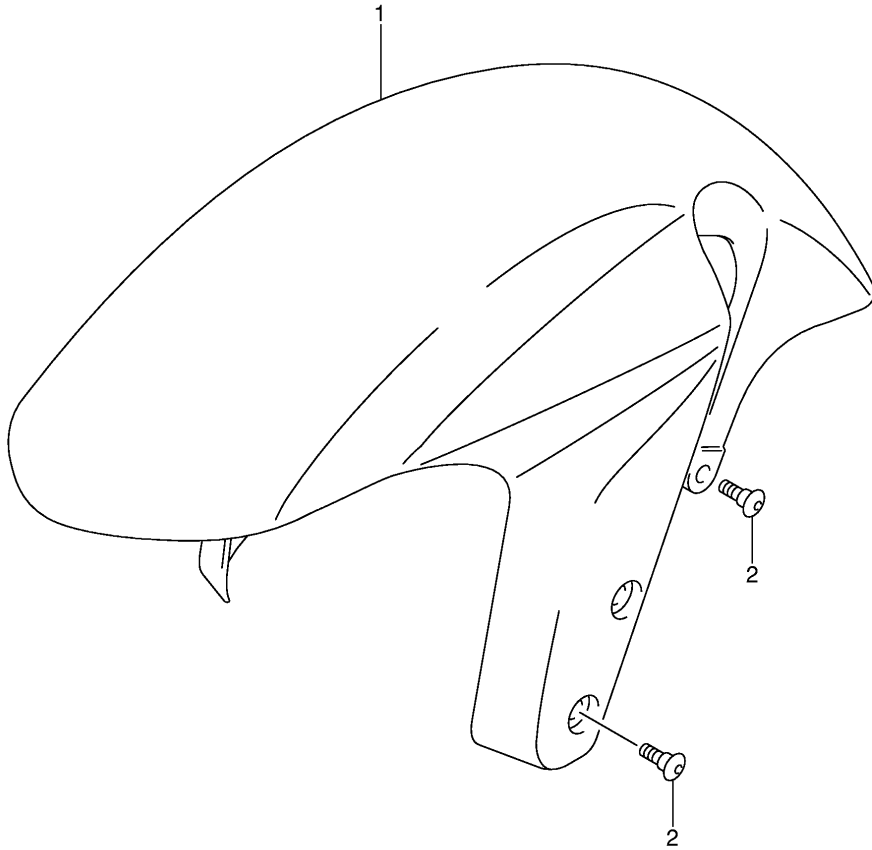


Ref No	Part No	Description
1	56111-18G00	Handlebar, Rh
2	56151-18G00	Handlebar, Lh
3	56123-35F00	Bolt, Handlebar
4	09250-14006	Cap
5	56200-18840	Balancer Set, Handlebar
6	02122-06403	• . Screw
7	09160-06131	• . Washer
8	56272-10G00	• . Expander
9	56273-10G00	• . Nut
10	56500-16G00	Mirror Assy, Rear View Rh
11	56600-16G00	Mirror Assy, Rear View Lh
12	94576-24F00	Cushion
13	07130-06303	Bolt
14	09250-05009	Cap
15	58200-18G00	Cable Assy, Clutch
16	58621-06G00	Guide, Clutch Cable
17	01550-06123	Bolt
18	58300-18G00	Cable Assy, Throttle No.1
19	58300-18G10	Cable Assy, Throttle No.2
20	58621-18G00	Guide, Throttle Cable
21	01550-06163	Bolt

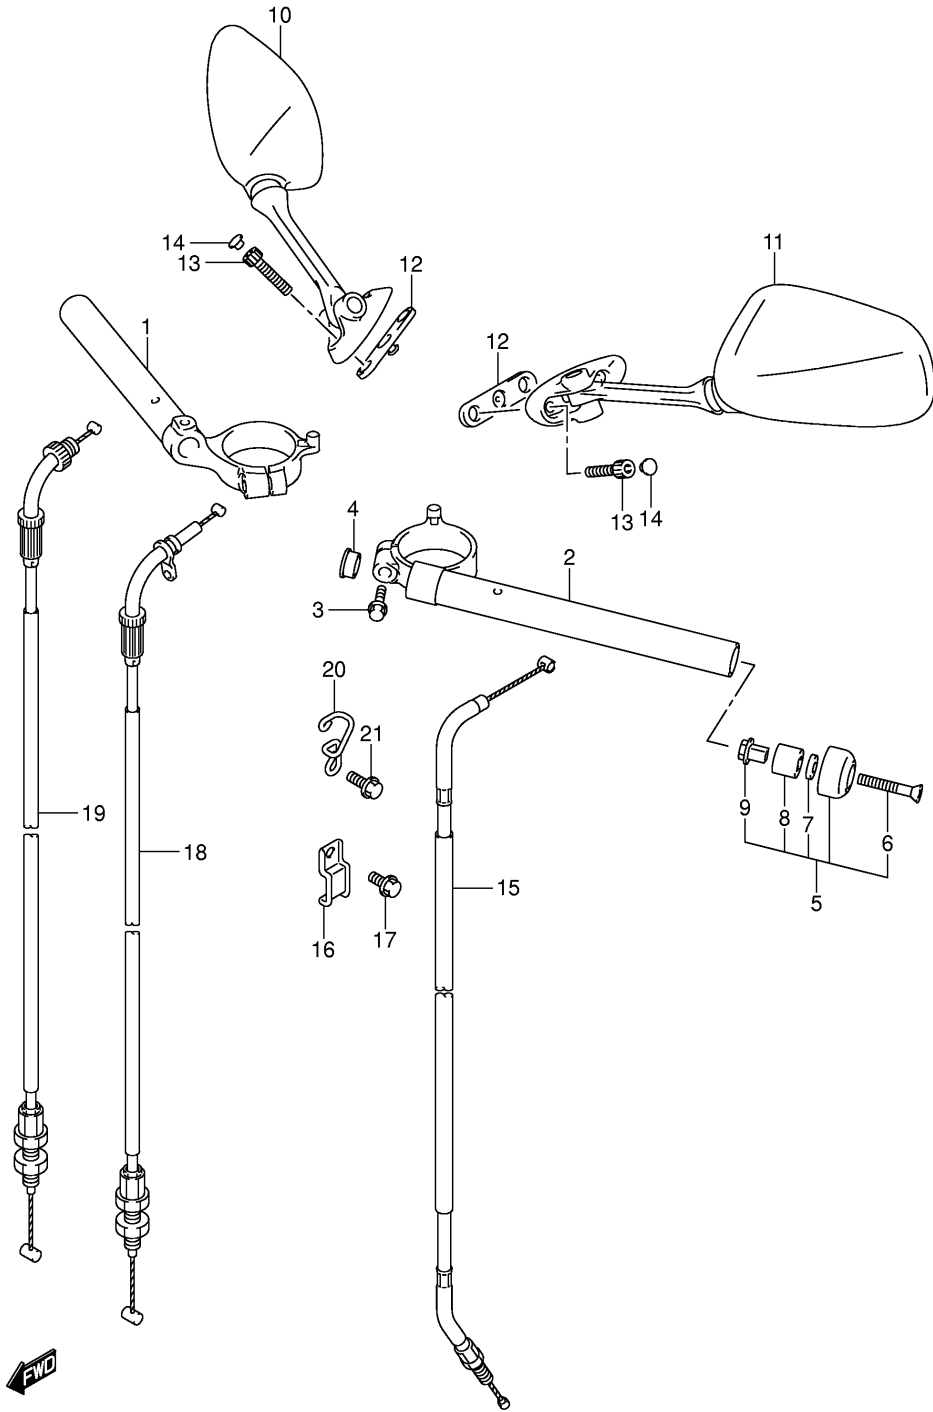


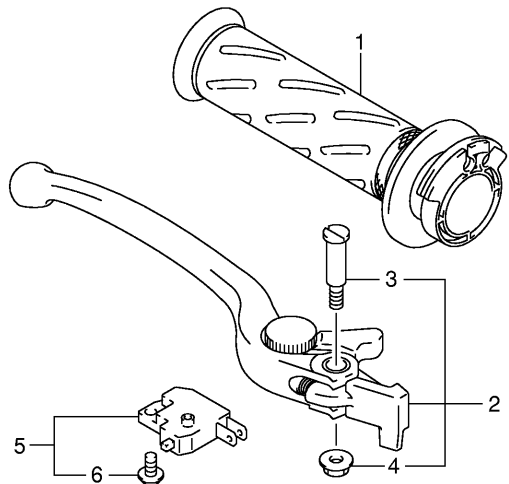


Ref No	Part No	Description
1	57110-46E01	Grip, Throttle
2	57300-33E01	Lever Assy, Brake
3	57431-17C00	• Bolt, Knocker
4	08316-10063	• Nut
5	57460-17C00	Switch Assy, Stop
6	57465-17C00	• Screw
7	57211-22D01	Grip, Lh
8	57500-40F00	Lever Assy, Clutch
9	57621-40F00	• Lever, Clutch
10	57431-45C01	• Bolt
11	08319-21063	• Nut
12	57560-05A00	• Switch Assy, Clutch
13	02122-03208	• Screw
14	01547-06203	• Bolt, Holder
15	57641-33E20	• Nut, Cable Adjuster
16	57644-33E00	• Spring
17	57642-33E00	• Screw, Spring

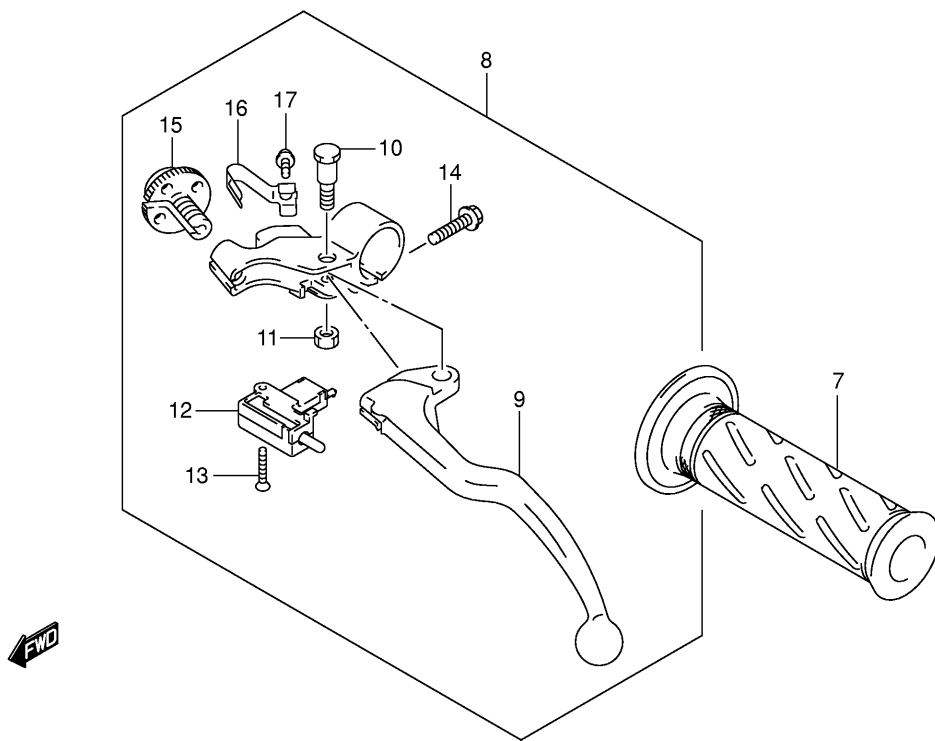


Ref No	Part No	Description
1	63110-18G00-291	Fender, Rear Front
2	09111-06081	Bolt, Front Rh
3	09116-06168	Bolt, Front Lh
4	63121-18G00	Plate, Rear Fender Rh
5	63122-18G00	Plate, Rear Fender Lh
6	03542-06163	Screw
7	63112-18G00-291	Fender, Rear (black)
8	09116-06168	Bolt, Rear
9	01550-06163	Bolt, Rear
10	08322-01063	Washer, Lic Plate
11	09800-21039	Tool Assy
12	09280-61002	Band, Tool

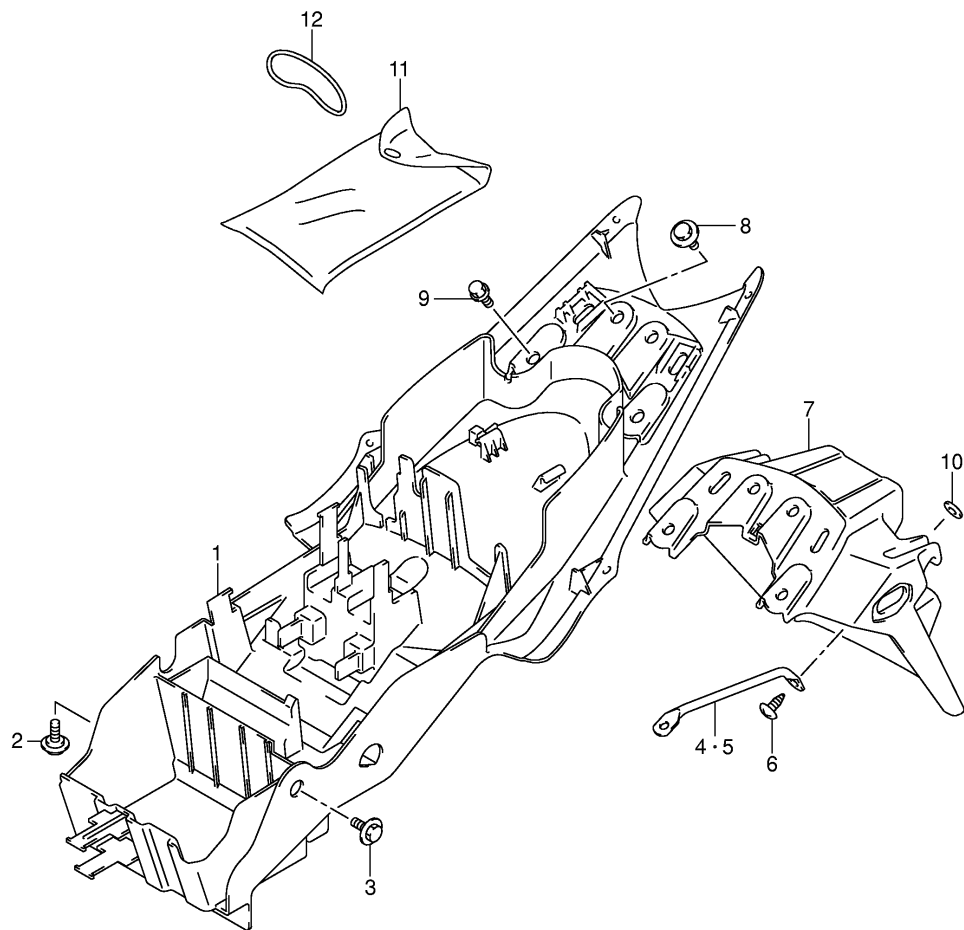

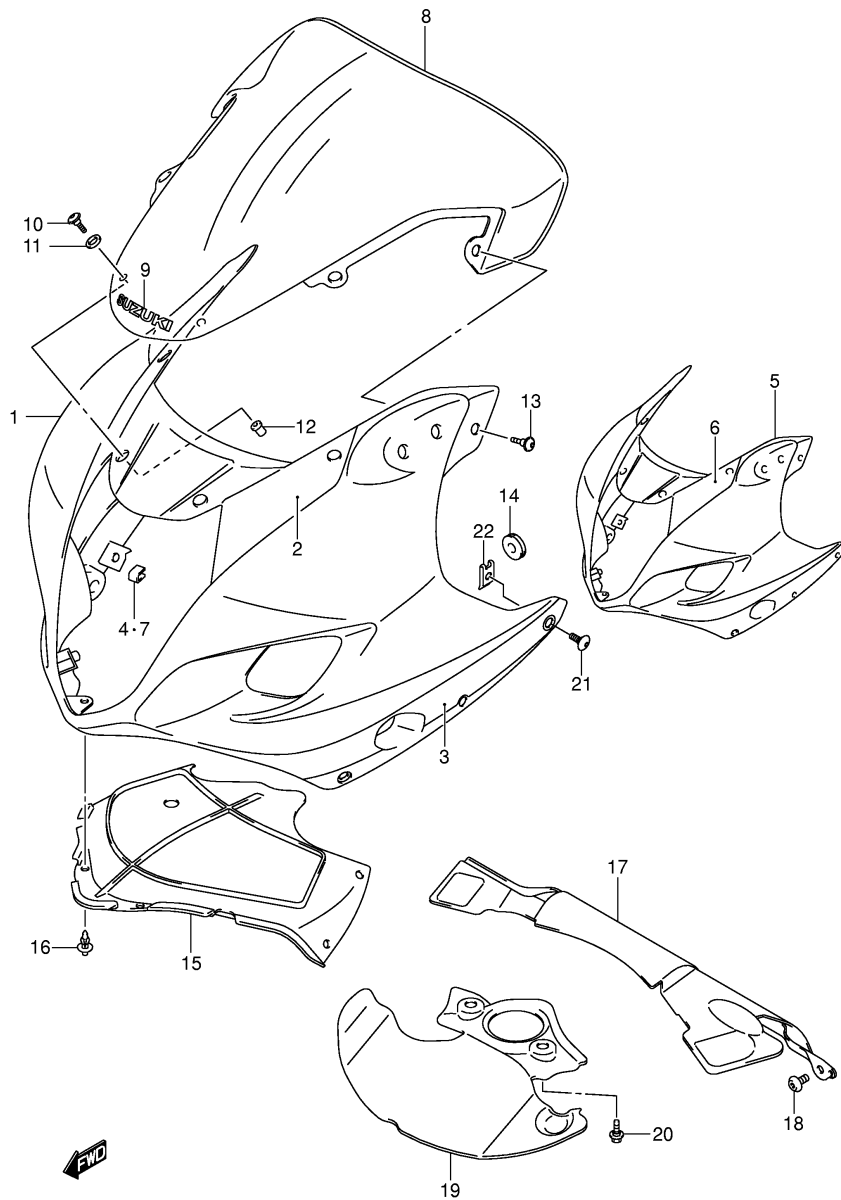



Ref No	Part No	Description
1	94410-18G00-YBA	Cowling, Body (blue)
1	94410-18G00-019	Cowling, Body (black)
2	68280-18G00-LR5	• . Tape Set, Front
2	68280-18G00-CT5	• . Tape Set, Front
3	68280-18G10-LS3	• . Tape Set, Side
3	68280-18G10-LR8	• . Tape Set, Side
4	94425-14G00	• . Cushion
5	94410-18G10-YD8	Cowling, Body (silver)
6	68280-18G00-FP2	• . Tape Set, Front
7	94425-14G00	• . Cushion
8	94610-18G00-CT5	Windscreen
9	68275-18G00-CT5	• . Tape
10	09139-05025	Screw
11	08322-01053	Washer
12	09159-05019	Nut
13	09139-05055	Screw, Rear
14	09320-08028	Cushion, Headlamp
15	94419-18G00	Cover, Body Cowl
16	09409-06314-5PK	Clip, Lid (black)
17	94457-18G00	Cover, Cowl Front Lower
18	09139-05074	Bolt Lower Cover
19	94458-18G00	Cover, Bracket
20	63161-43E00	Bolt, No.2
21	09139-05064	Screw
22	94484-24F00	Nut

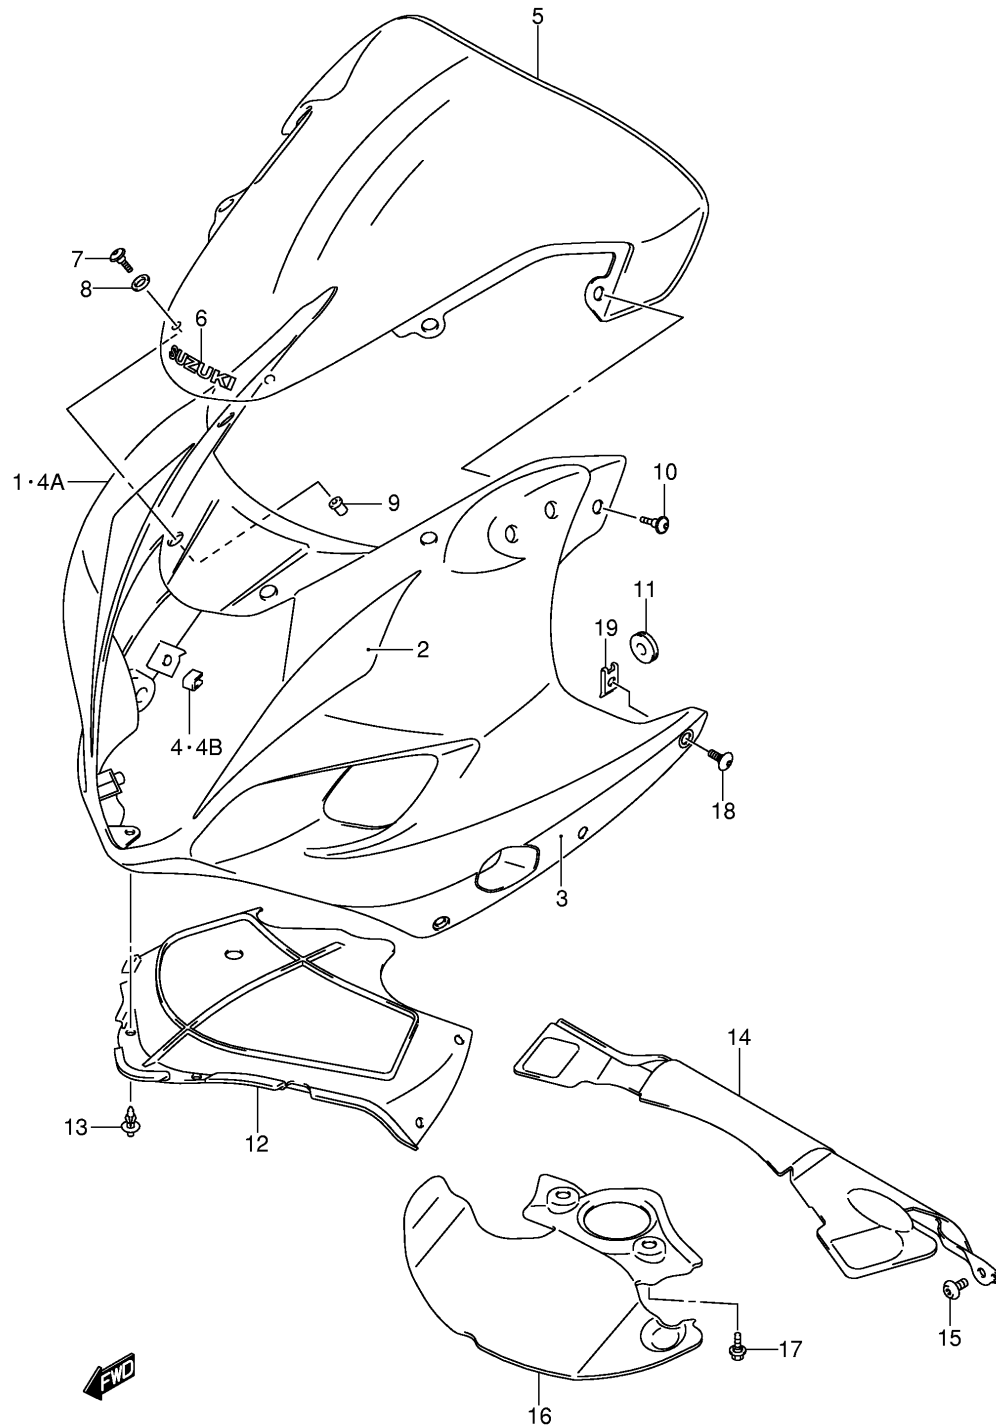


Ref No	Part No	Description
1	94410-18G20-YBA	Cowling, Body (blue)
1	94410-18G20-YU9	Cowling, Body (yellow)
1	94410-18G20-019	Cowling, Body (black)
2	68280-18G20-YBD	• . Tape Set, Front (white)
2	68280-18G20-019	• . Tape Set, Front (black)
2	68280-18G20-YD8	• . Tape Set, Front (silver)
3	68280-18G30-AKU	• . Tape Set, Side
3	68280-18G30-AKV	• . Tape Set, Side
3	68280-18G30-ALM	• . Tape Set, Side
4	94425-14G00	• . Cushion
4a	94410-18G30-019	Cowling, Body (black)
4b	94425-14G00	• . Cushion
5	94610-18G00-CT5	Windscreen
6	68275-18G00-CT5	• . Tape
7	09139-05025	Screw
8	08322-01053	Washer
9	09159-05019	Nut
10	09139-05055	Screw, Rear
11	09320-08028	Cushion, Headlamp
12	94419-18G00	Cover, Body Cowl
13	09409-06314-5PK	Clip, Lid (black)
14	94457-18G00	Cover, Cowl Front Lower
15	09139-05074	Bolt Lower Cover
16	94458-18G00	Cover, Bracket
17	63161-43E00	Bolt, No.2
18	09139-05064	Screw
19	94484-24F00	Nut

Ref No	Part No	Description
1	94510-18G00	Brace, Cowling
2	01550-08303	Bolt
3	94402-18G00	Pipe, Air Intake Rh
4	94423-18G00	Molding, Rh
5	94403-18G00	Pipe, Air Intake Lh
6	94433-18G00	Molding, Lh
7	09409-08308-5ES	Clip, Front (black)

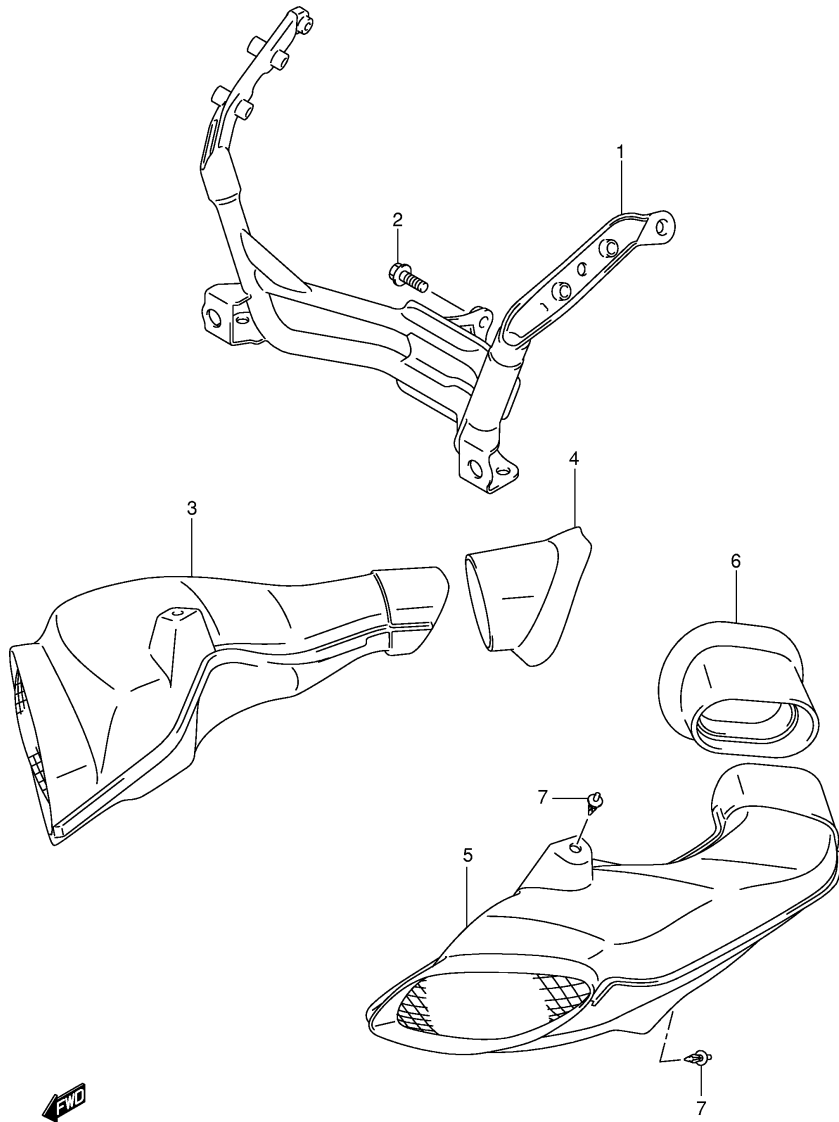

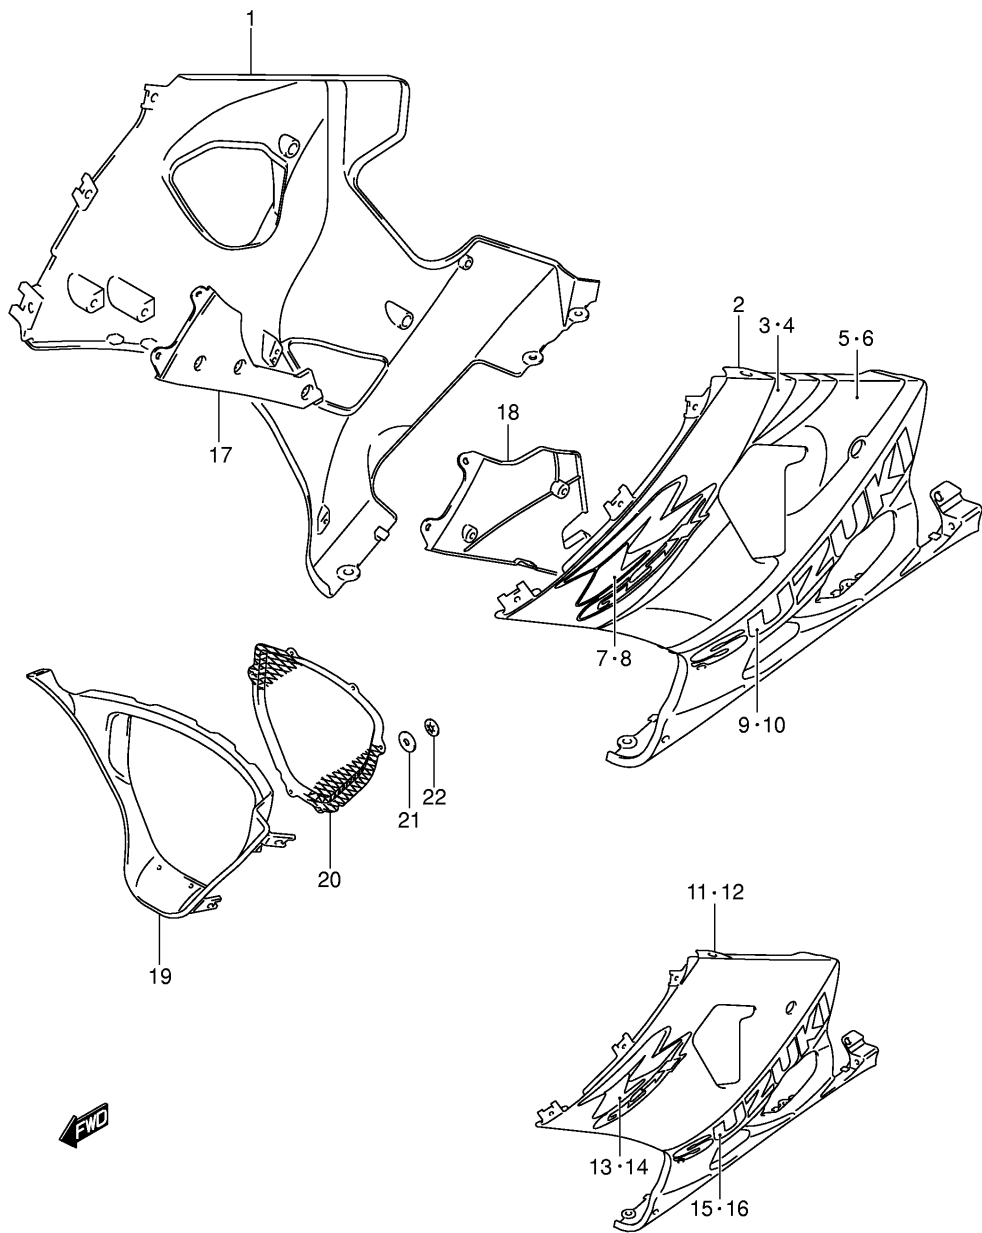



Ref No	Part No	Description
1	94407-18G00-MW2	Cowl Assy, Under Rh
1	94407-18G00-YAV	Cowl Assy, Under Rh (orange)
2	94408-18G00-MW2	Cowl Assy, Under Lh
2	94408-18G00-YAV	Cowl Assy, Under Lh (orange)
3	68185-18G00-LS3	. . Tape, Under Upper Rh
3	68185-18G00-LR8	. . Tape, Under Upper Rh
4	68195-18G00-LS3	. . Tape, Under Upper Lh
4	68195-18G00-LR8	. . Tape, Under Upper Lh
5	68180-18G00-LW8	. . Tape Set, Under Center Rh
5	68180-18G00-LR8	. . Tape Set, Under Center Rh
6	68190-18G00-LW8	. . Tape Set, Under Center Lh
6	68190-18G00-LR8	. . Tape Set, Under Center Lh
7	68181-18G10-MZ9	. . Emblem, "gsxr" Rh
7	68181-18G10-NA1	. . Emblem, "gsxr" Rh
8	68191-18G10-MZ9	. . Emblem, "gsxr" Lh
8	68191-18G10-NA1	. . Emblem, "gsxr" Lh
9	68181-18G00-YBD	. . Emblem, "suzuki" Rh
9	68181-18G00-019	. . Emblem, "suzuki" Rh
10	68191-18G00-YBD	. . Emblem, "suzuki" Lh
10	68191-18G00-019	. . Emblem, "suzuki" Lh
11	94407-18G10-YD8	Cowl Assy, Under Rh (silver)
12	94408-18G10-YD8	Cowl Assy, Under Lh (silver)
13	68181-18G10-NA1	. . Emblem, "gsxr" Rh
14	68191-18G10-NA1	. . Emblem, "gsxr" Lh
15	68181-18G20-YC8	. . Emblem, "suzuki" Rh
16	68191-18G20-YC8	. . Emblem, "suzuki" Lh
17	94461-18G00	Cowl, Under Inner Rh
18	94462-18G00	Cowl, Under Inner Lh
19	94498-18G00	Cowl, Under Center
20	94491-18G00	Net, Under Center
21	09320-04501	Cushion
22	09148-03010	Nut

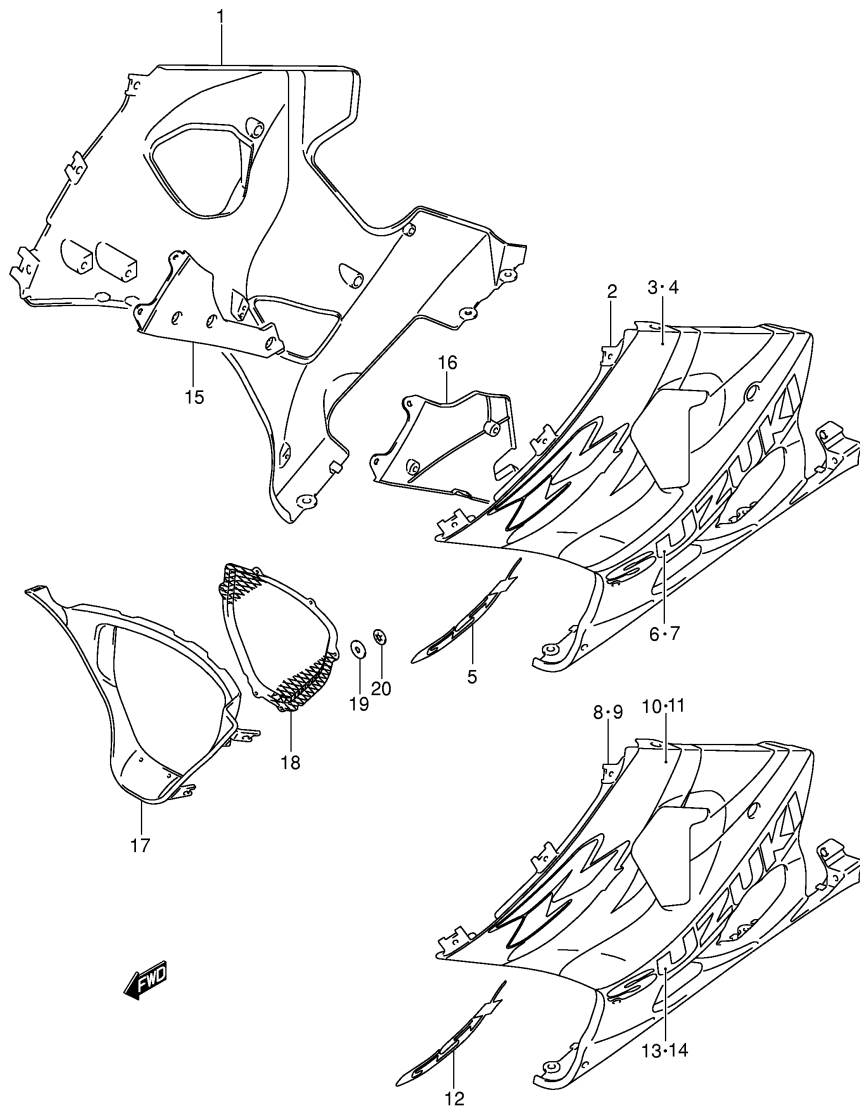

Ref No	Part No	Description
1	94407-18G20-YBD	Cowl Assy, Under Rh (white)
2	94408-18G20-YBD	Cowl Assy, Under Lh (white)
3	68180-18G10-YFL	. Tape Set, Rh
4	68190-18G10-YFL	. Tape Set, Lh
5	68181-18G40-AKW	. Emblem, "gsx"
6	68181-18G30-019	. Emblem, Rh (black)
7	68191-18G30-019	. Emblem, Lh (black)
8	94407-18G30-ZTX	Cowl Assy, Under Rh (gray)
8	94407-18G30-YU8	Cowl Assy, Under Rh (gray)
9	94408-18G30-ZTX	Cowl Assy, Under Lh (gray)
9	94408-18G30-YU8	Cowl Assy, Under Lh (gray)
10	68185-18G10-YFM	. Tape, Rh
10	68185-18G10-YFN	. Tape, Rh
11	68195-18G10-YFM	. Tape, Lh
11	68195-18G10-YFN	. Tape, Lh
12	68181-18G40-AKW	. Emblem, "gsx"
13	68181-18G30-019	. Emblem, Rh (black)
14	68191-18G30-019	. Emblem, Lh (black)
15	94461-18G00	Cowl, Under Inner Rh
16	94462-18G00	Cowl, Under Inner Lh
17	94498-18G00	Cowl, Under Center
18	94491-18G00	Net, Under Center
19	09320-04501	Cushion
20	09148-03010	Nut


Ref No	Part No	Description
1	94407-18G50-1TX	Cowl Assy, Under Rh (black)
2	94408-18G50-1TX	Cowl Assy, Under Lh (black)
3	68181-18G60-AZN	. Emblem, "gsxr" Rh
4	68191-18G60-AZN	. Emblem, "gsxr" Lh
5	68181-18G50-0AT	. Emblem, Rh (chrome)
6	68191-18G50-0AT	. Emblem, Lh (chrome)
7	94461-18G00	Cowl, Under Inner Rh
8	94462-18G00	Cowl, Under Inner Lh
9	94498-18G00	Cowl, Under Center
10	94491-18G00	Net, Under Center
11	09320-04501	Cushion
12	09148-03010	Nut

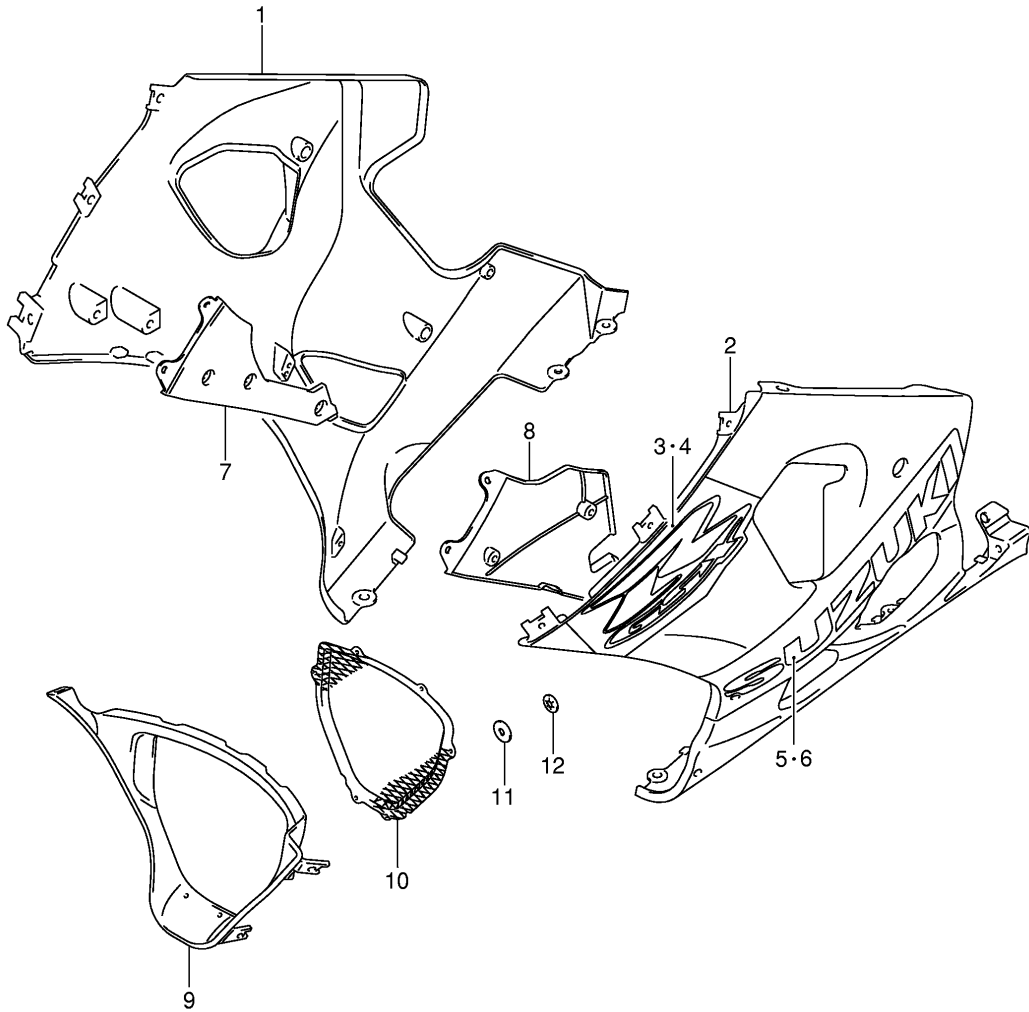

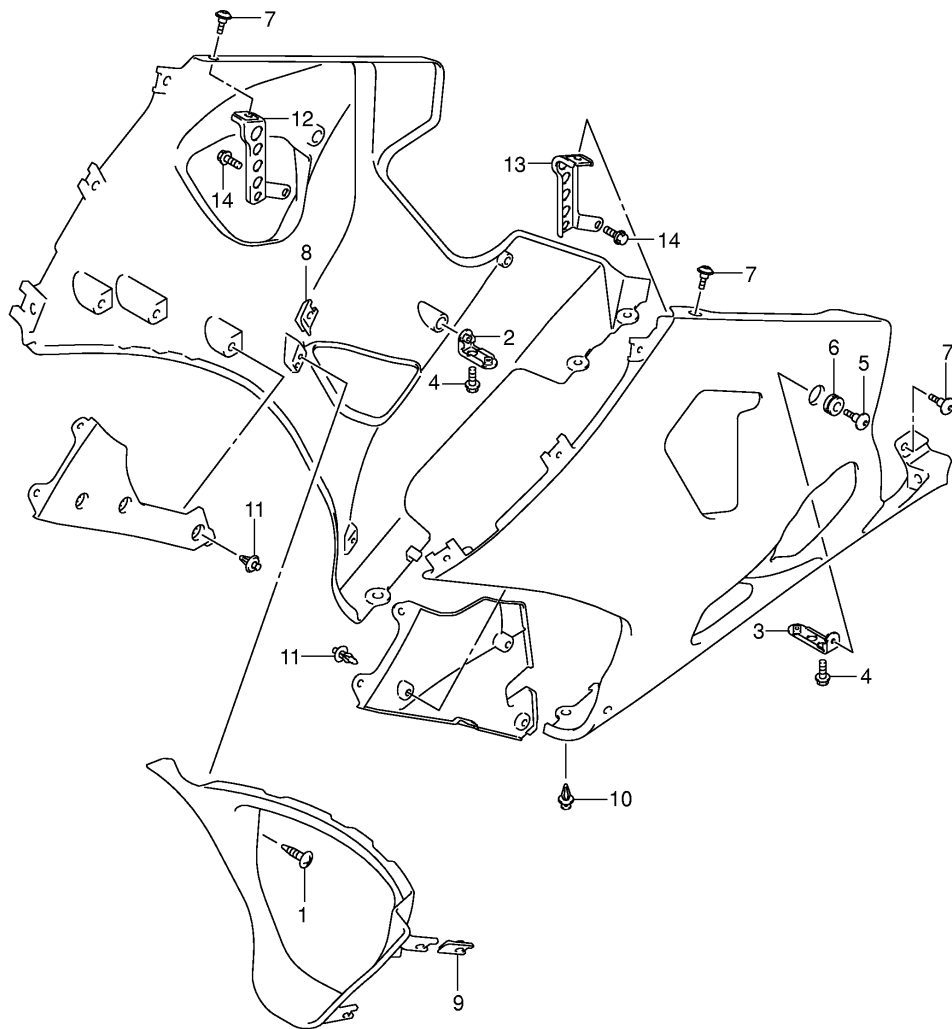


Ref No	Part No	Description
1	03541-05123	Screw, Under Cowl Center Rh
2	94533-33E01	Bracket, Under Rh
3	94534-33E01	Bracket, Under Lh
4	01550-06123	Bolt, Bracket
5	09139-06087	Screw, Under Cowl
6	09320-09016	Cushion
7	09139-05064	Screw, Cowl Joint
8	09148-05019	Nut, Under Rh
9	94484-24F00	Nut, Under Lh
10	94479-35F00	Clip, Under Cowl
11	09409-06314-5PK	Clip, Inner Cover (black)
12	94520-18G00	Bracket, Rear Upper Rh
13	94530-18G00	Bracket, Rear Upper Lh
14	01550-06123	Bolt, Bracket



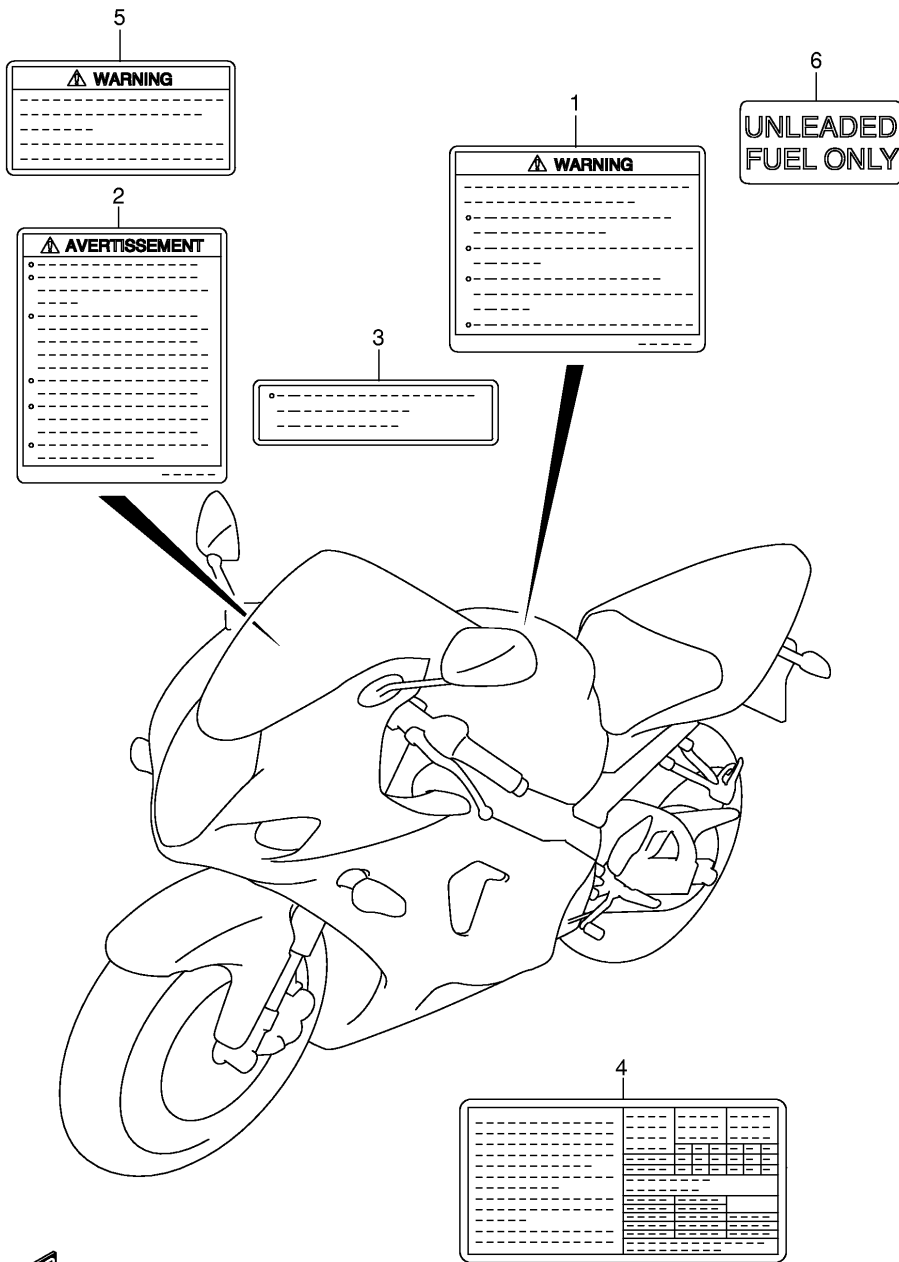


Ref No	Part No	Description
1	68319-29F00	Label, Warning (english)
1	68319-29F20	Label, Warning (german)
1	68319-29F30	Label, Warning (french)
1	68319-29F40	Label, Warning (italian)
1	68319-29F50	Label, Warning (spanish)
1	68319-29F70	Label, Warning (dutch)
1	68319-29F80	Label, Warning (portuguese)
1	68319-30F40	Label, Warning (portuguese)
1	68319-29F90	Label, Warning (swedish)
1	68319-29FA0	Label, Warning (finnish)
1	68319-29FB0	Label, Warning (norwegian)
1	68319-29FC0	Label, Warning (danish)
1	68319-30F90	Label, Warning (english)
2	68922-29F00	Label, Screen (english)
2	68922-29F20	Label, Screen (german)
2	68922-29F30	Label, Screen (french)
2	68922-29F40	Label, Screen (italian)
2	68922-29F50	Label, Screen (spanish)
2	68922-29F70	Label, Screen (dutch)
2	68922-29F80	Label, Screen (portuguese)
2	68922-29F90	Label, Screen (swedish)
2	68922-29FA0	Label, Screen (finnish)
2	68922-29FB0	Label, Screen (norwegian)
2	68922-29FC0	Label, Screen (danish)
2	68922-14F40	Label, Screen (italian)
2	68922-14F90	Label, Screen (swedish)
3	18803-40F00	Label, Fuel Information
3	18803-02F11	Label, Fuel Information
4	68332-18G00	Label, Tire Information
5	68613-24F00	Label, Warning Steering
6	68623-17D00	Label, Fuel
6	86932-73060	Label, Fuel
7	99011-40F60-01A	Manual, Owner's (english)
7	99011-40F60-01F	Manual, Owner's (french)
7	99011-40F60-SDE	Manual, Owner's
7	99011-40F60-01K	Manual, Owner's (german)
7	99011-40F60-01W	Manual, Owner's (swedish)
7	99011-40F60-057	Manual, Owner's (portuguese)
7	99011-40F61-057	Manual, Owner's (portuguese)




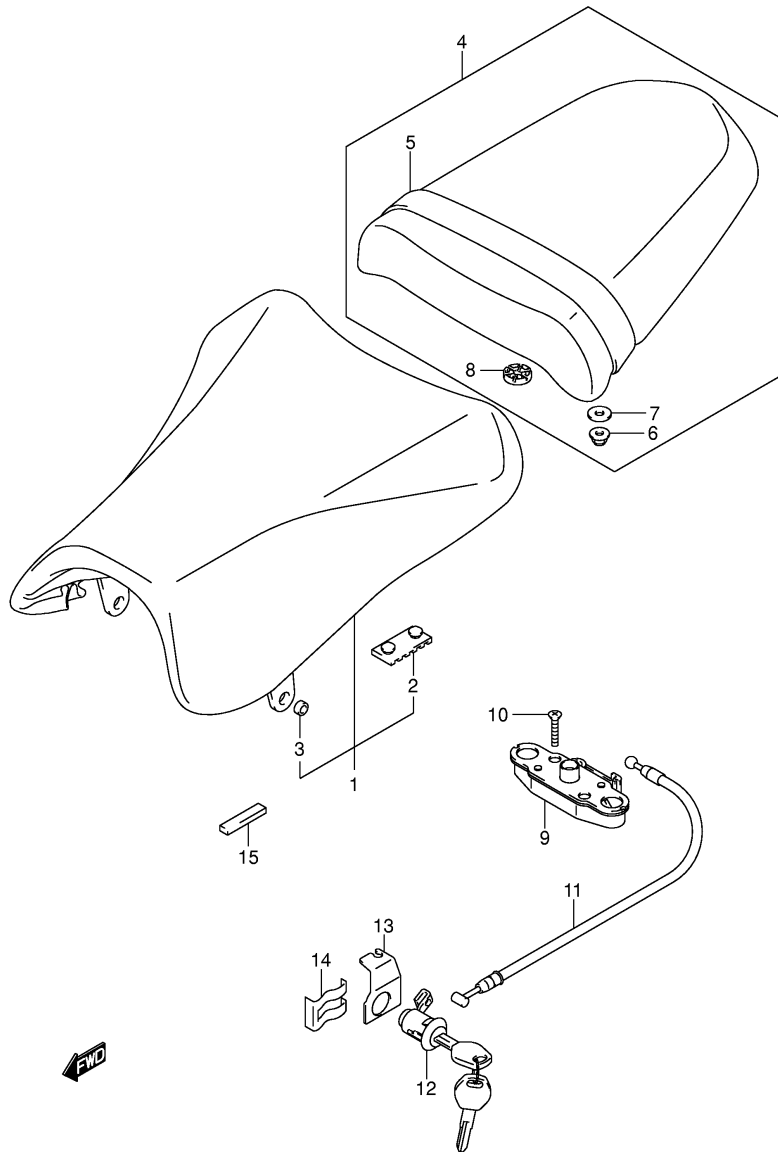


Ref No	Part No	Description
1	45100-18G00-6BY	Seat Assy (black)
2	45149-12C00	• Cushion
3	45112-33E00	• Spacer (6.5x10.5x6)
4	45300-18G00-6BY	Seat Assy, Pillion (black)
5	45180-18G00-6BY	• Band Assy, Seat (black)
6	08319-31063	• Nut
7	09160-06088	• Washer
8	45213-31300	• Cushion
9	45220-20A01	Bracket, Seat Support
10	02122-06303	Screw, Rear
11	45280-18G00	Cable, Seat Lock
12	95700-14810	Lock Assy, Seat
13	45288-14F00	Guide, Seat Lock Cable
14	45289-11F00	Plate, Seat Lock Assy
15	45148-18G00	Cushion, Seat Support

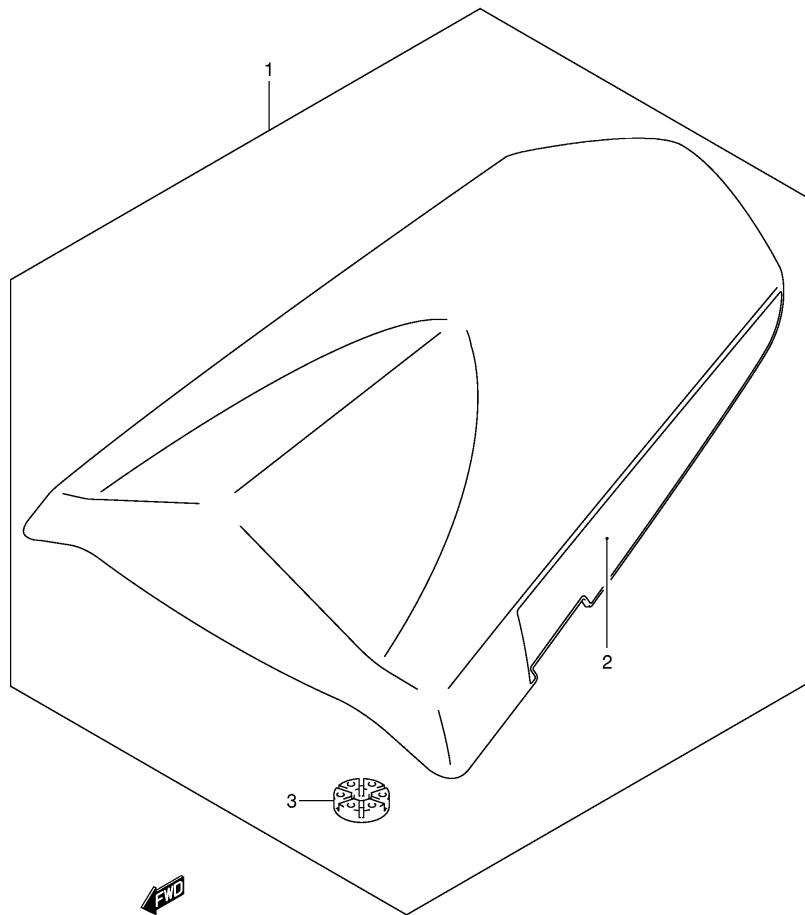


Ref No	Part No	Description
1	45500-18G00-YBD	Box Assy, Seat Tail (white)
1	45500-18G00-YD8	Box Assy, Seat Tail (silver)
1	45500-18G00-YAV	Box Assy, Seat Tail (copper)
2	68160-18G00-YU8	• . Tape Set, Box Seat Tail
2	68160-18G00-YD8	• . Tape Set, Box Seat Tail
3	45213-31300	• . Cushion

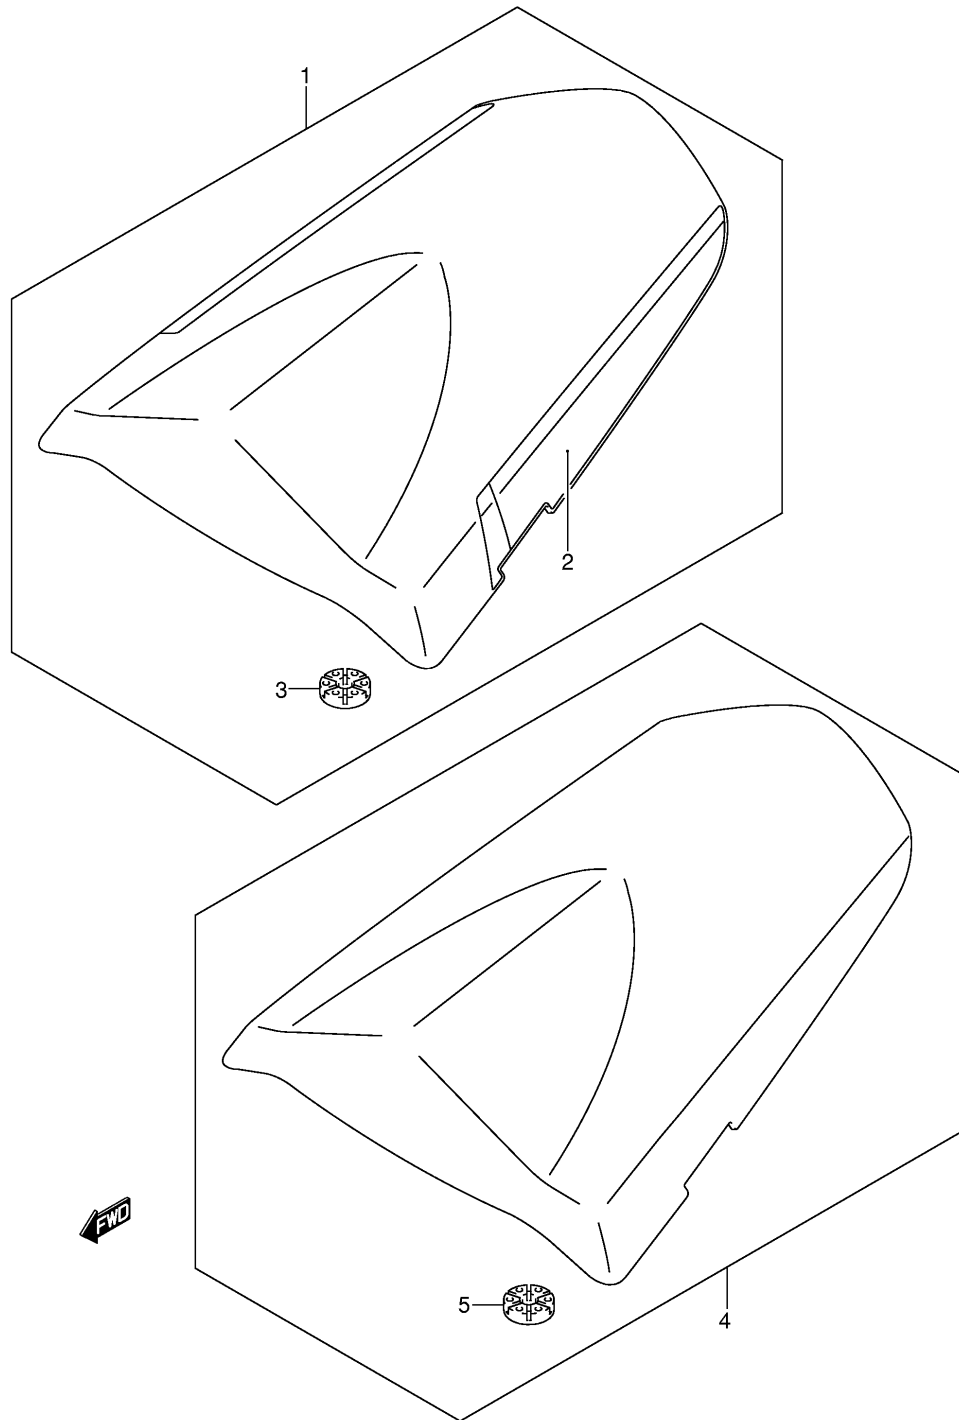

Ref No	Part No	Description
2	68160-18G10-AKP	• . Tape Set, Box Seat Tail
2	68160-18G10-AGR	• . Tape Set, Box Seat Tail
2	68160-18G10-LA1	• . Tape Set, Box Seat Tail
3	45213-31300	• . Cushion
4	45550-18G00-019	Box, Seat Tail (black)
5	45213-31300	• . Cushion

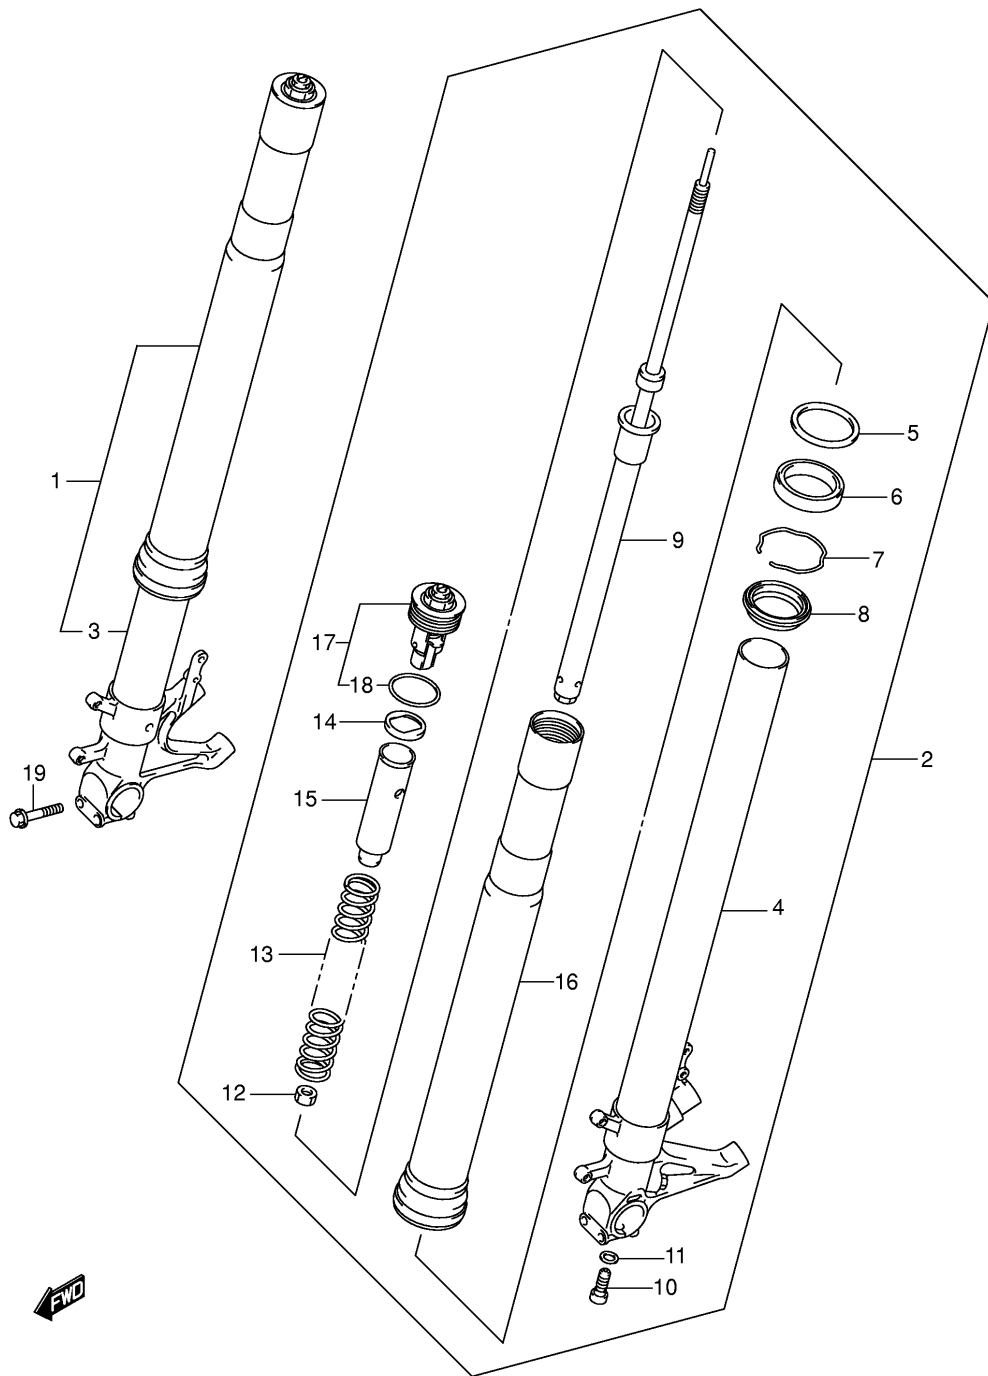



Ref No	Part No	Description
1	51103-40F30	Damper Assy, Front Fork Rh
2	51104-40F30	Damper Assy, Front Fork Lh
3	51110-40F30	. Tube, Inner Rh
4	51120-40F30	. Tube, Inner Lh
5	51158-40F00	. Washer
6	51153-40F00	. Seal, Oil
7	51156-14200	. Ring, Stopper
8	51173-02FA0	. Seal, Dust
9	51146-40F30	. Cylinder
10	51147-16G00	. Bolt
11	51148-41310	. Gasket
12	51129-24F00	. Nut
13	51171-40F30	. Spring, Front
14	51158-40F30	. Guide, Spring
15	51176-40F30	. Spacer, Spring
16	51130-40F30	. Tube, Outer
17	51351-40F30	. Cap, Front Fork
18	62278-14100	•• O Ring
19	51328-40F30	Bolt

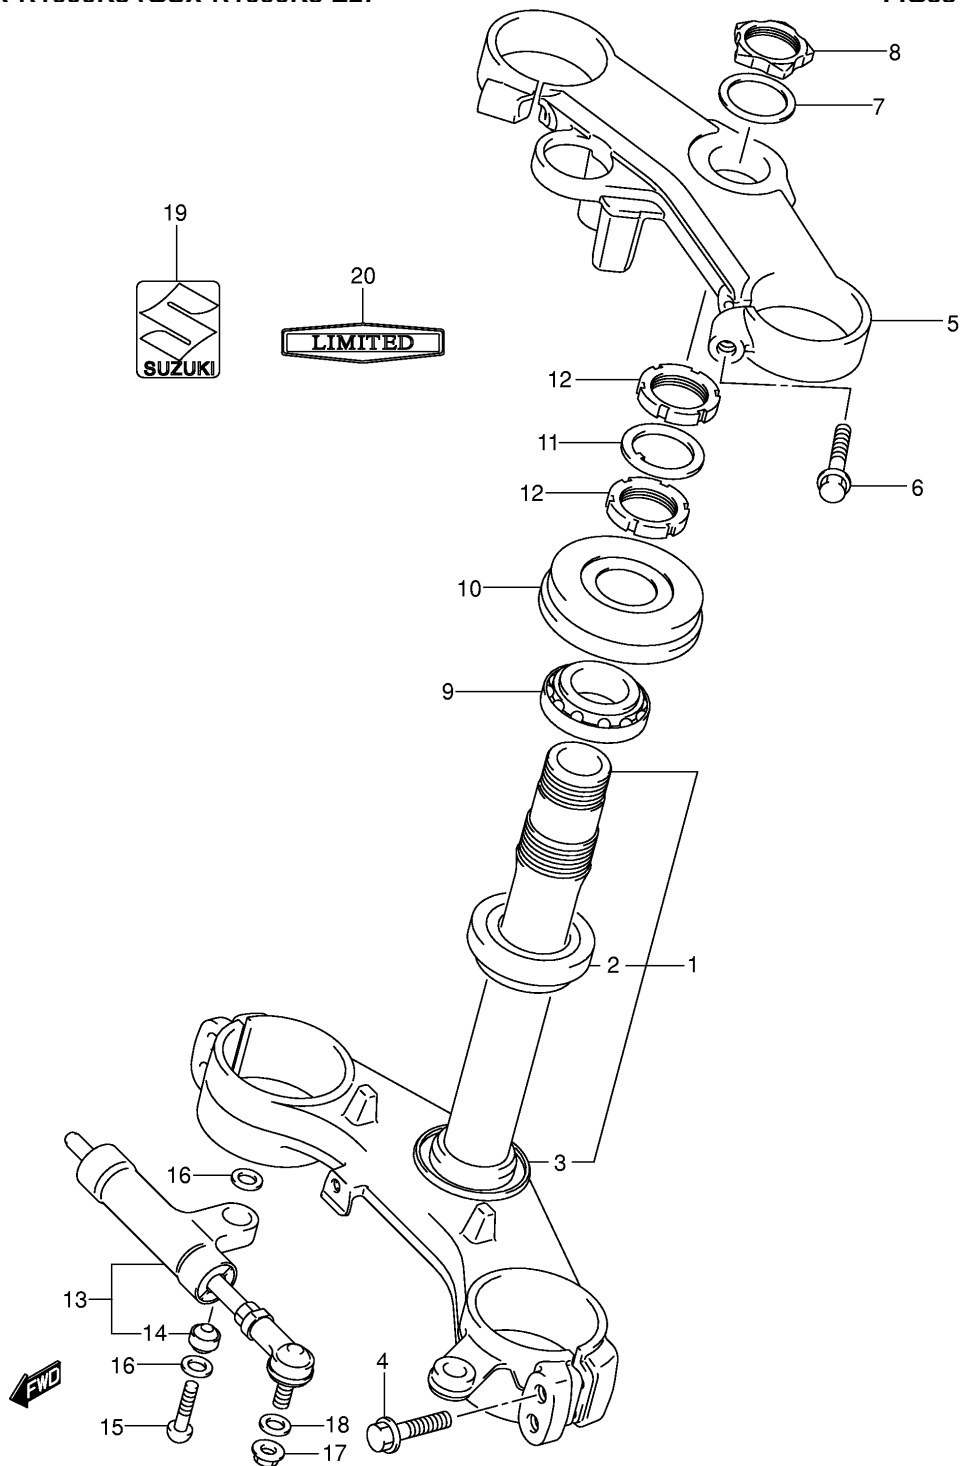

Ref No	Part No	Description
1	51410-40F10	Stem, Steering
2	09267-30010	• . Bearing (30x55x17)
3	51644-12C00	• . Seal, Stem Lower
4	51328-40F30	Bolt
5	51311-40F10	Head, Steering Stem
6	51328-40F30	Bolt
7	51356-40F30	Washer
8	51353-40F30	Nut
9	09267-30010	Bearing (30x55x17)
10	51643-33E00	Seal, Stem Upper Dust
11	51641-33E00	Washer, Stem
12	51631-33E00	Nut, Stem
13	51750-40F20	Damper Assy, Steering
14	09269-08003	• . Bearing (8x17.5x11)
15	09106-08130	Bolt
16	64339-14101	Seal, Dust
17	08319-31087	Nut
18	09160-08059	Washer, Strg Damper
19	68281-35F00	Emblem, "s"
20	68281-35F10	Emblem, "limited"


Ref No	Part No	Description
1	54111-35F00-019	Wheel, Front (17xmt3.50) (black)
2	54731-35F00	Spacer, Hub Bearing
3	09262-25061	Bearing (25x52x15)
4	09285-32004	Seal (32x52x7)
5	54711-35F10	Axle, Front
6	54712-33E00	Nut, Axle
7	59210-18G00	Disc, Front Brake
8	09106-08148	Bolt
9	55110-18G00	Tire, Front, 120/70zr17 M/c (58w)
10	43130-24A00	Valve Assy, Wheel Rim (tr412)
11	43222-73H10	Balancer (10g)
11	43224-73H10	Balancer (20g)
11	43226-73H10	Balancer (30g)

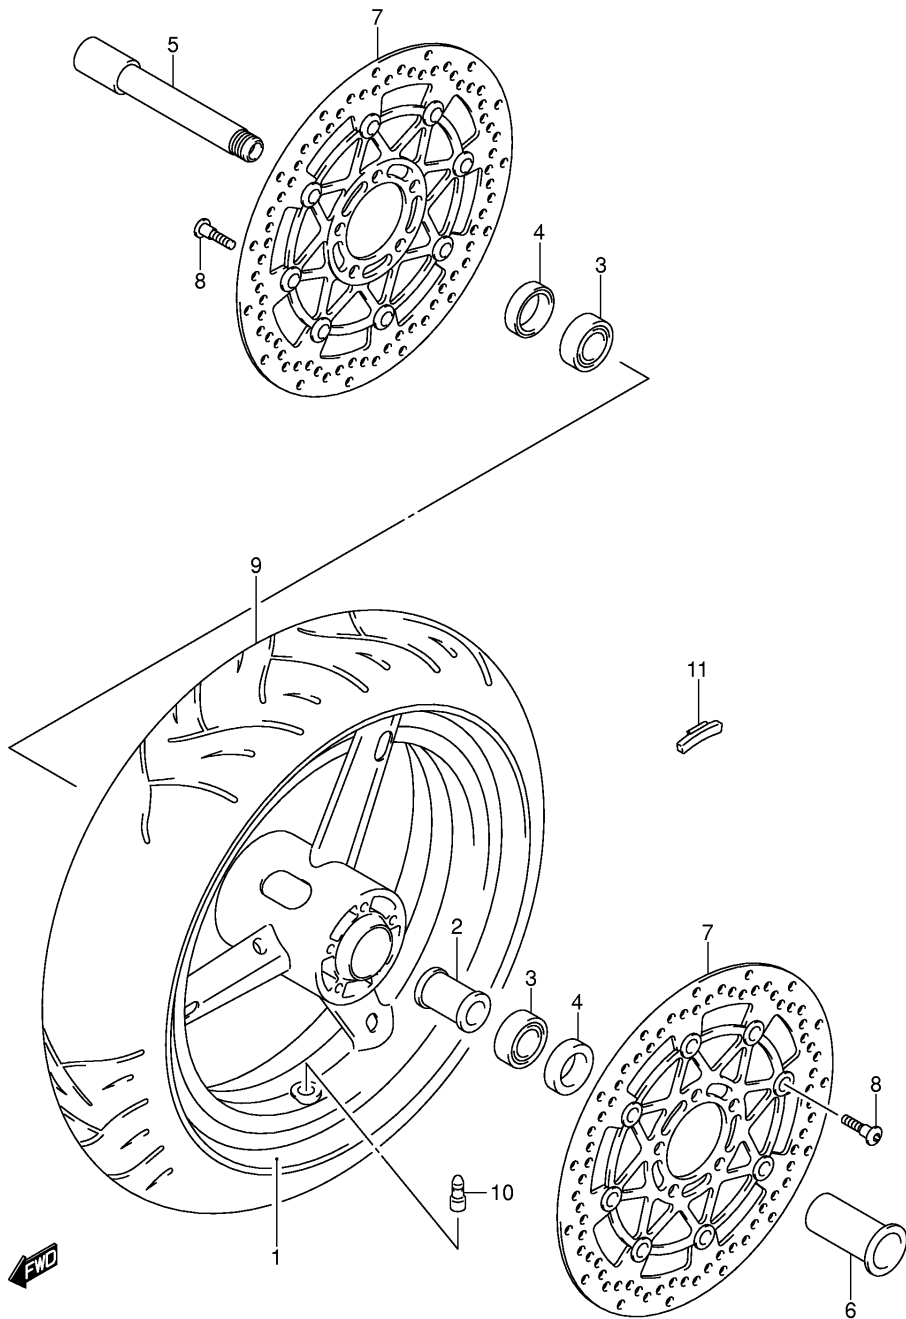


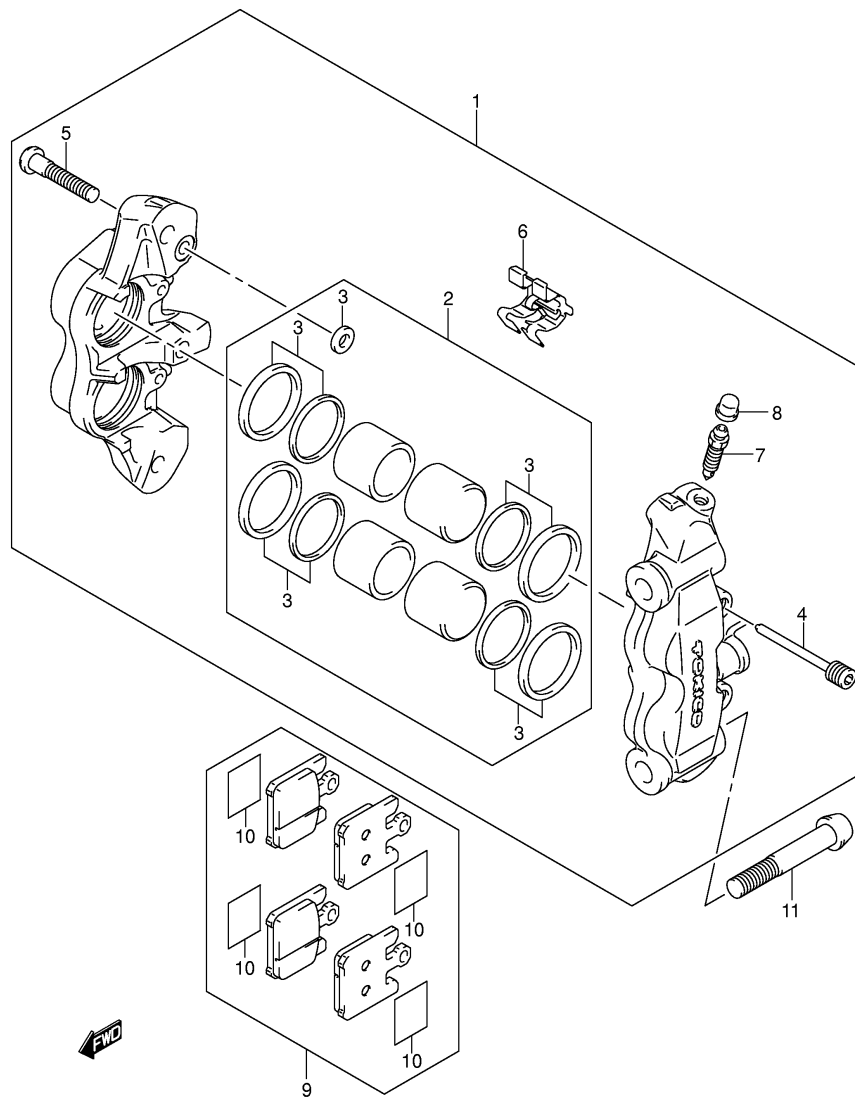


Ref No	Part No	Description
1	59100-18G00-999	Caliper Assy, Front Rh
1	59300-18G00-999	Caliper Assy, Front Lh
2	59300-35850	• . Piston Set
3	59300-18820	•• . Seal Set, Piston
4	59141-18G00	• . Pin, Pad
5	59145-18G00	• . Bolt
6	59151-18G00	• . Spring, Pad
7	59121-18410	• . Bleeder
8	55156-66310	• . Cap
9	59100-18851	Pad Set
10	59181-18G00	• . Tape
11	09106-10076	Bolt

Ref No	Part No	Description
1	59100-29G10-999	Caliper Assy, Front Rh
1	59300-29G10-999	Caliper Assy, Front Lh
2	59100-29810	• . Piston Set
3	59300-29850	•• .. Seal Set, Piston
4	59141-18G00	• . Pin, Pad
5	59145-18G00	• . Bolt
6	59151-29G00	• . Spring, Pad
7	59121-18410	• . Bleeder
8	55156-66310	• . Cap
9	59100-29820	Pad Set
10	09106-10076	Bolt

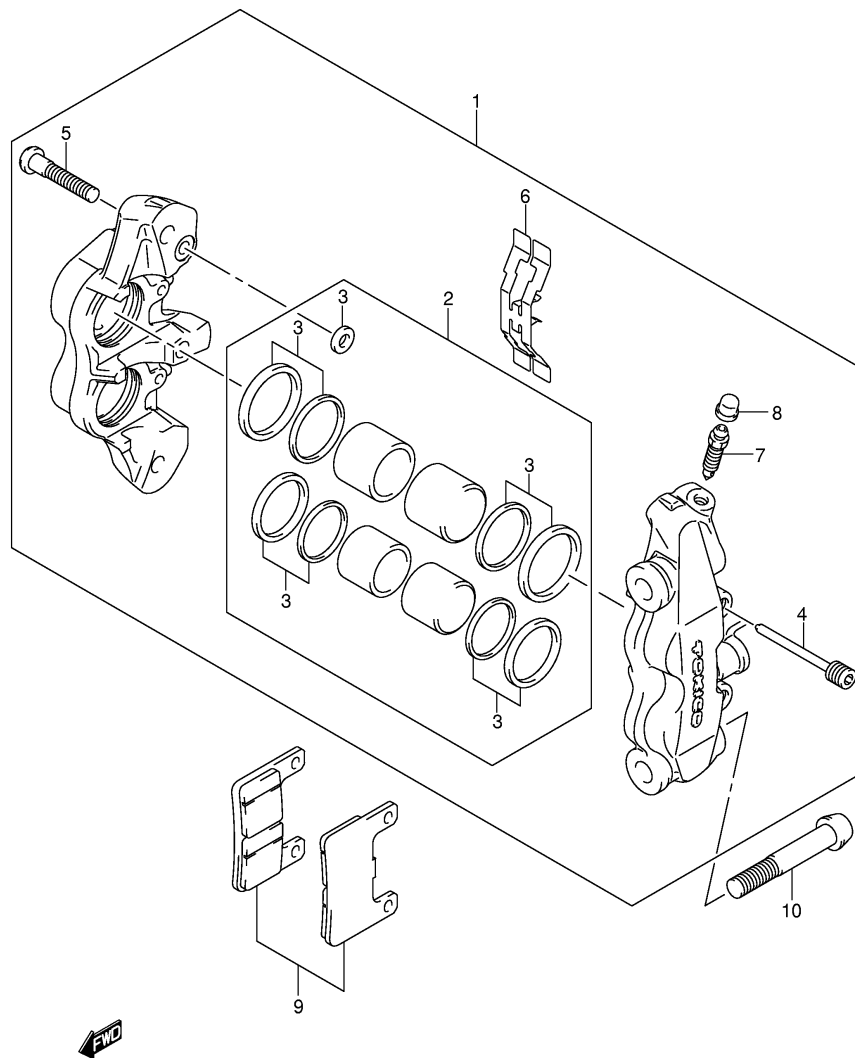


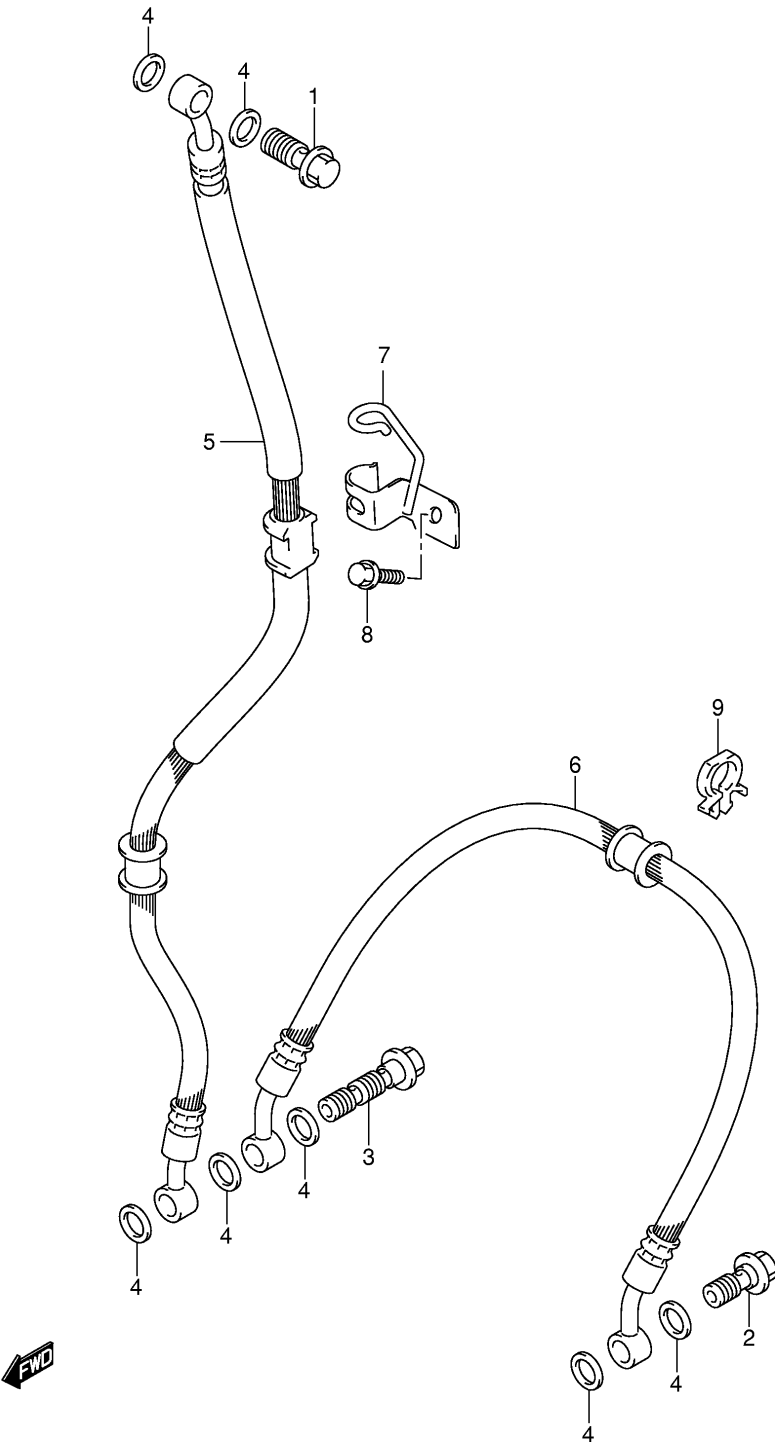


Ref No	Part No	Description
1	09360-10042	Bolt, Upper (10x1.25x22)
2	09360-10042	Bolt, Lh (10x1.25x22)
3	09360-10044	Bolt, Rh (10x1.25x36)
4	09161-10009	Washer
5	59480-18G00	Hose, Front Brake No.1
6	59240-18G00	Hose, Front Brake No.2
7	59260-40F00	Clamp, Brake Hose No.1
8	01547-06123	Bolt
9	09403-14304	Clamp, Brake Hose No.2

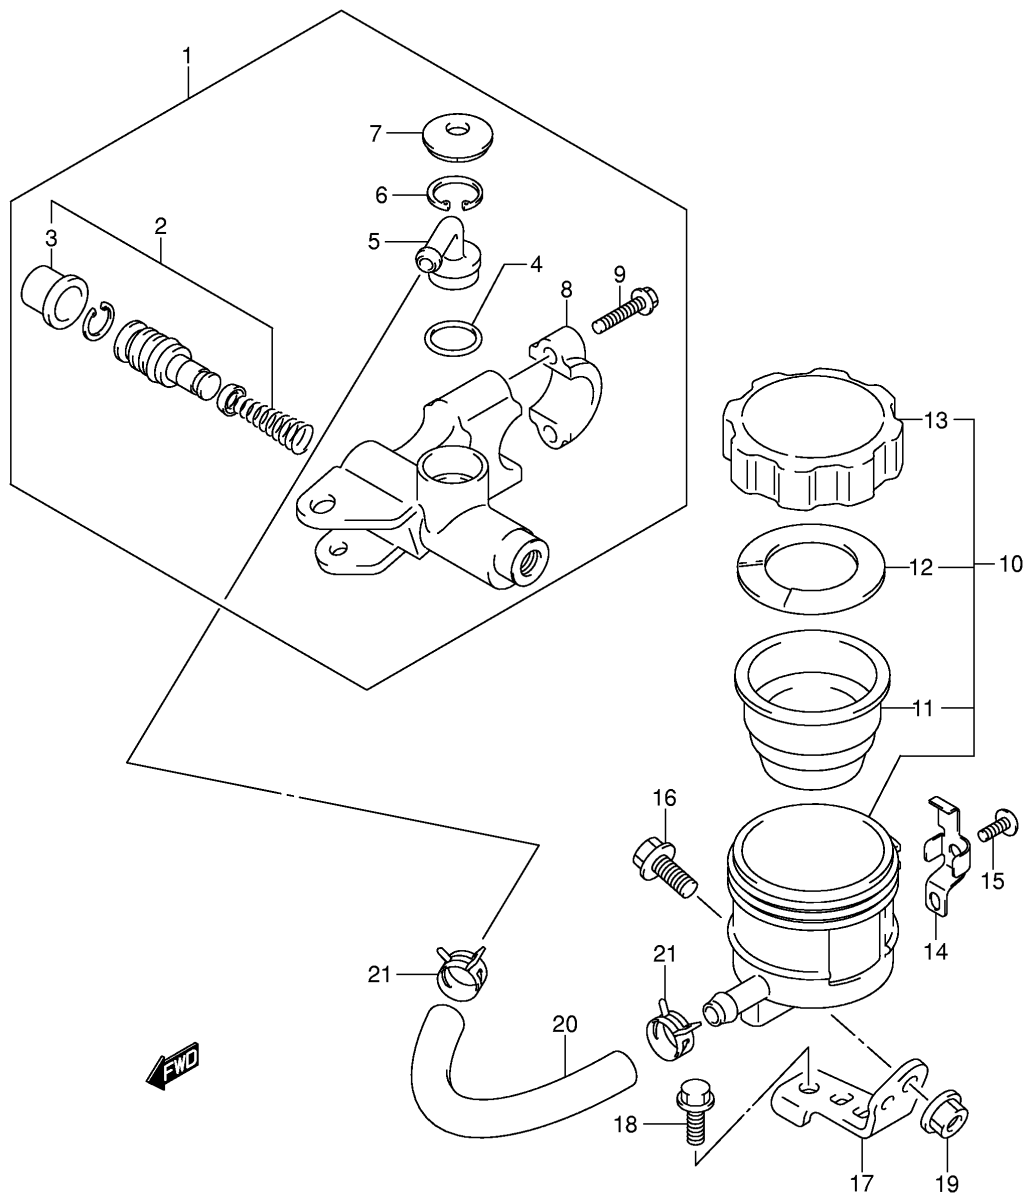

Ref No	Part No	Description
1	59600-18G00	Cylinder Assy, Front Master
2	59600-45870	• . Piston/cup Set
3	59666-44300	•• .. Boot
4	69686-34200	• . O Ring
5	59672-17C00	• . Connector
6	69674-00B20	• . Circlip
7	59673-17C00	• . Cover, Dust
8	59671-36500	• . Holder
9	59675-02FA0	• . Bolt
10	59740-07D00	Tank Assy, Reservoir
11	59667-18441	• . Diaphragm
12	59668-18441	• . Plate
13	59669-07D00	• . Cap
14	59743-17C00	Plate, Tank Cap
15	02142-04103	Screw
16	01547-06163	Bolt
17	59751-40F00	Bracket, Reservoir Tank
18	01547-06123	Bolt
19	08316-10063	Nut
20	59731-32C00	Hose, Reservoir Tank
21	59735-17C00	Clamp, Hose

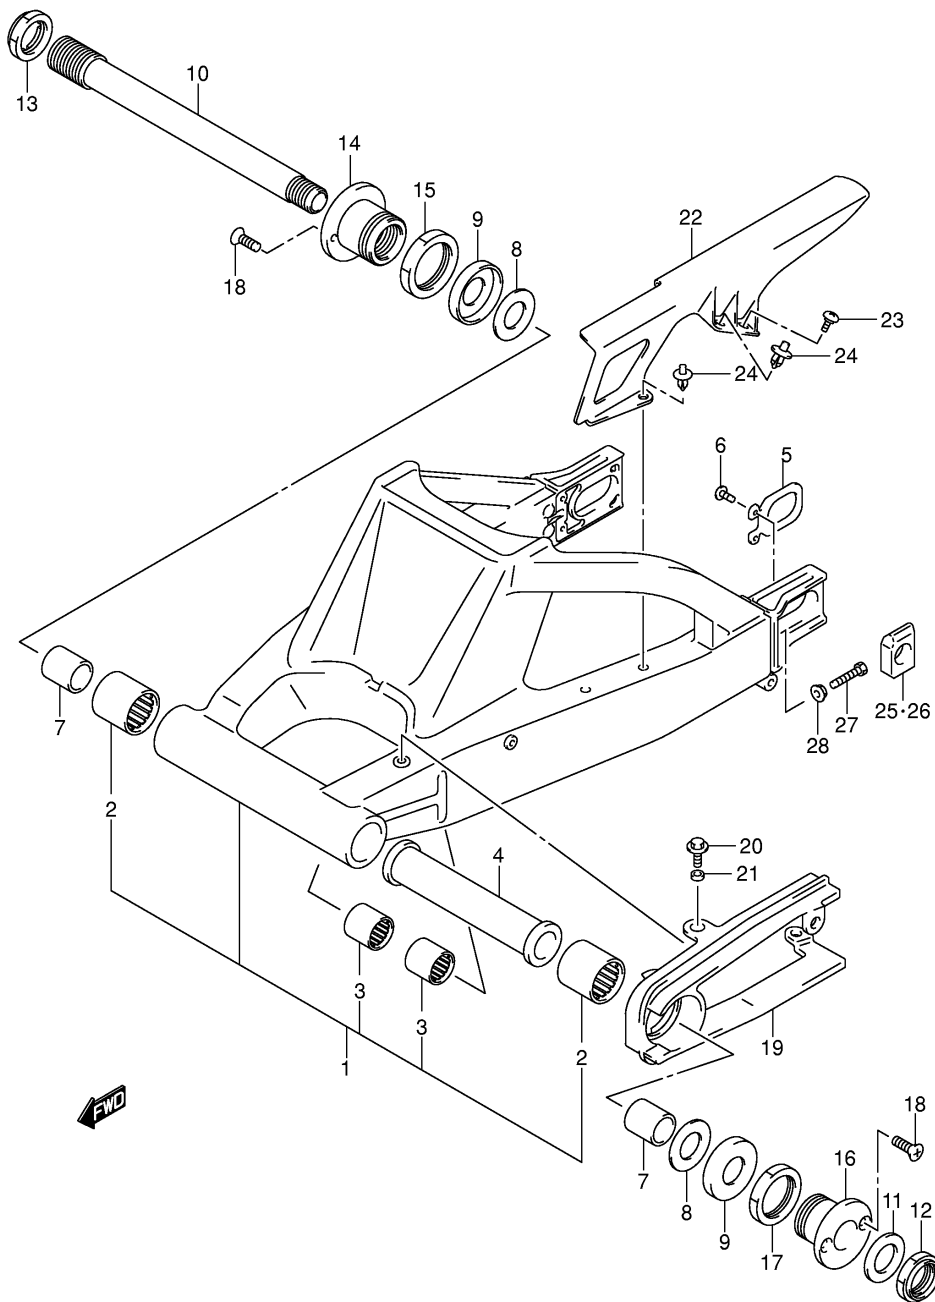



Ref No	Part No	Description
1	61000-18G00-YAP	Swinging Arm Assy, Rear (black)
2	09263-30040	. Bearing, Pivot (30x47x2)
3	09263-17039	. Bearing, Rod (17x24x20)
4	61281-33E10	. Spacer, Center
5	61124-33E00	Plate, Bracket
6	09125-06073	Screw
7	61251-17E10	Spacer, Bearing
8	08211-25481	Washer, Thrust
9	61262-17E10	Seal, Dust
10	61211-16G00	Shaft, Pivot
11	09160-25070	Washer
12	09159-25001	Nut
13	61214-40C31	Nut, Pivot
14	61212-33E10	Boss, Rr Swgarm Pivot, R
15	61213-33E00	Nut, Rr Swgarm Pivot Boss, R
16	61214-33E10	Boss, Rr Swgarm Pivot, L
17	61215-33E00	Nut, Rr Swgarm Pivot Boss, L
18	02122-05123	Screw, Boss
19	61273-40F00	Buffer, Chain Touch Defense
20	09116-06152	Screw
21	09180-06176	Spacer
22	61311-35F01	Case, Chain
23	09139-06083	Screw (6x16)
24	09409-08308-5ES	Clip
25	61445-40F00	Adjuster, Chain Rh
26	61446-40F00	Adjuster, Chain Lh
27	09100-08287	Bolt (8x50)
28	08316-10083	Nut

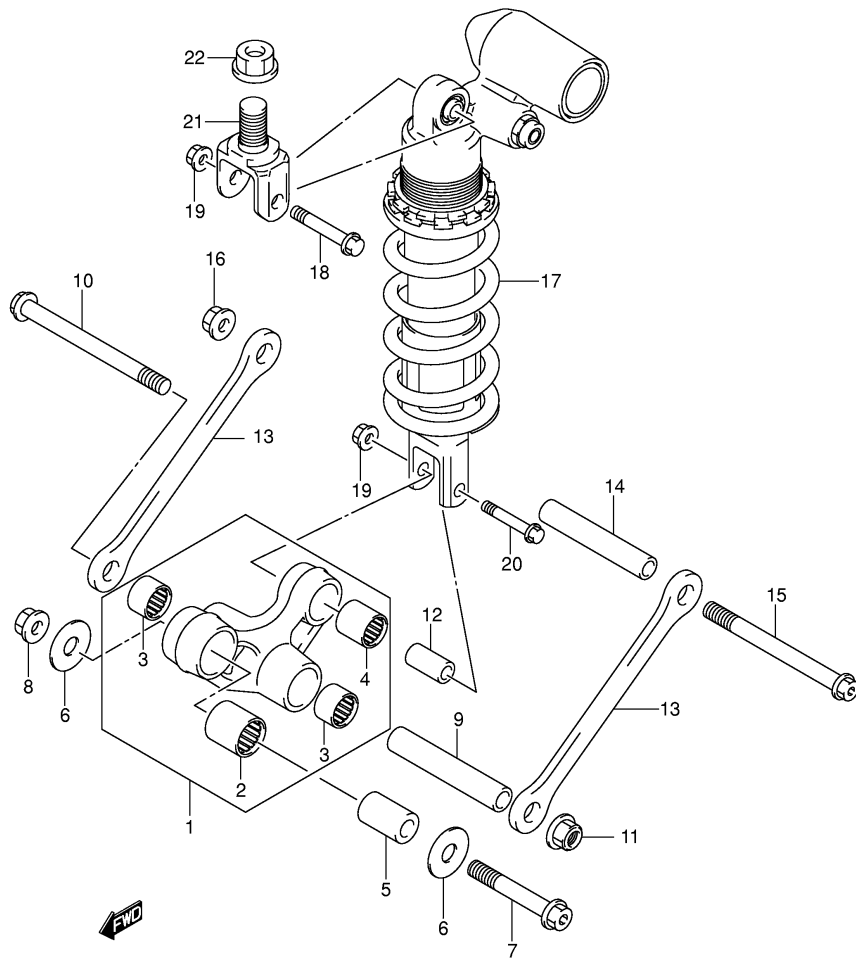


Ref No	Part No	Description
1	62600-35810	Lever Set, Rear Cushion
2	09263-20073	. Bearing, Front (20x27x30)
3	09263-17039	. Bearing, Center (17x24x20)
4	09263-17034	. Bearing, Rear (17x24x26)
5	62684-12C00	Spacer, Front
6	09160-12037	Washer
7	62658-35F00	Bolt, Front
8	08319-31128	Nut
9	62626-33D00	Spacer, Center
10	62621-35F00	Bolt, Center
11	08319-31128	Nut
12	62684-40A10	Spacer, Rear
13	62641-35F00	Rod, Rear Cushion Lever
14	62626-33D00	Spacer, Rod
15	62621-35F00	Bolt, Rod
16	08319-31128	Nut
17	62100-40F30-163	Absorber Assy, Rear Shock
18	09103-10143	Bolt, Upper (10x55)
19	08319-31107	Nut
20	09103-10143	Bolt, Lower (10x55)
21	62993-35F00	Bracket, Absorber
22	09159-20006	Nut

Ref No	Part No	Description
1	64111-40F00-019	Wheel, Rear (17xmt6.00) (black)
2	64731-40F00	Spacer, Hub Bearing
3	09262-28043	Bearing (28x52x12)
4	69211-18G00	Disc, Rear Brake
5	09106-08148	Bolt
6	69721-18G00	Bracket, Rear Caliper
7	64711-33E20	Axle, Rear
8	09159-25001	Nut
9	09160-25070	Washer, Rr Axle Nut
10	64741-35F00	Spacer, Axle Rh
11	64751-40F00	Spacer, Axle Lh
12	64610-35F30	Drum, Rear Sprocket
13	64733-35F00	Retainer, Sprocket Drum
14	09262-32007	Bearing (32x65x17)
15	09285-39001	Seal (39x65x7)
16	64651-35F00	Absorber, Hub Shock
17	64511-40F10	Sprocket, Rear (nt:42)
18	08319-31107	Nut
19	65110-18G00	Tire, Rear, 190/50zr17 M/c (73w)
20	43130-24A00	Valve Assy, Wheel Rim (tr412)
21	43222-73H10	Balancer (10g)
21	43224-73H10	Balancer (20g)
21	43226-73H10	Balancer (30g)
22	09284-37001	Seal, Rear Wheel Bearing, R

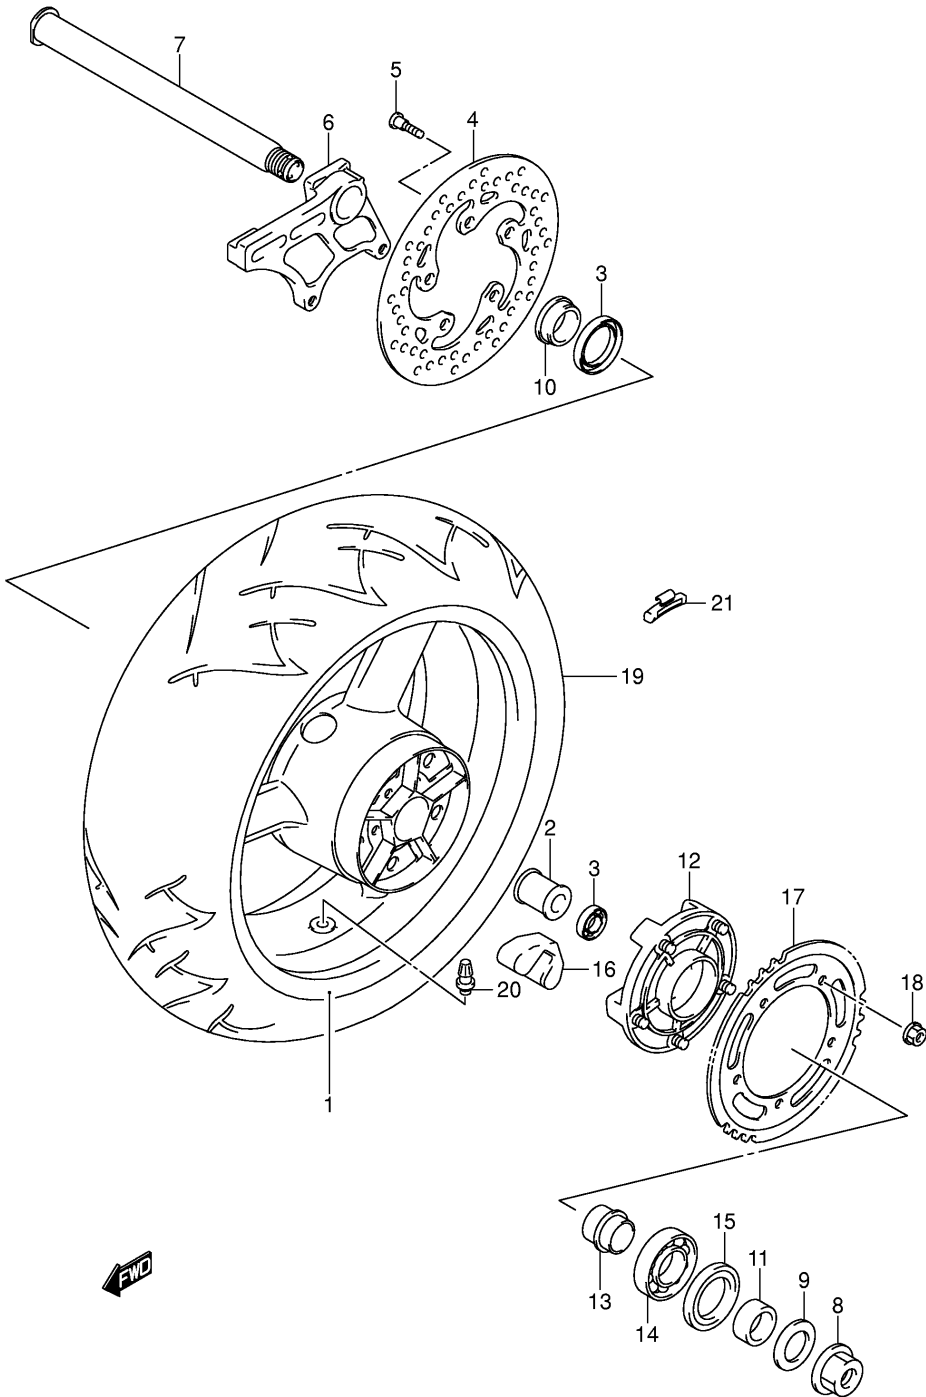


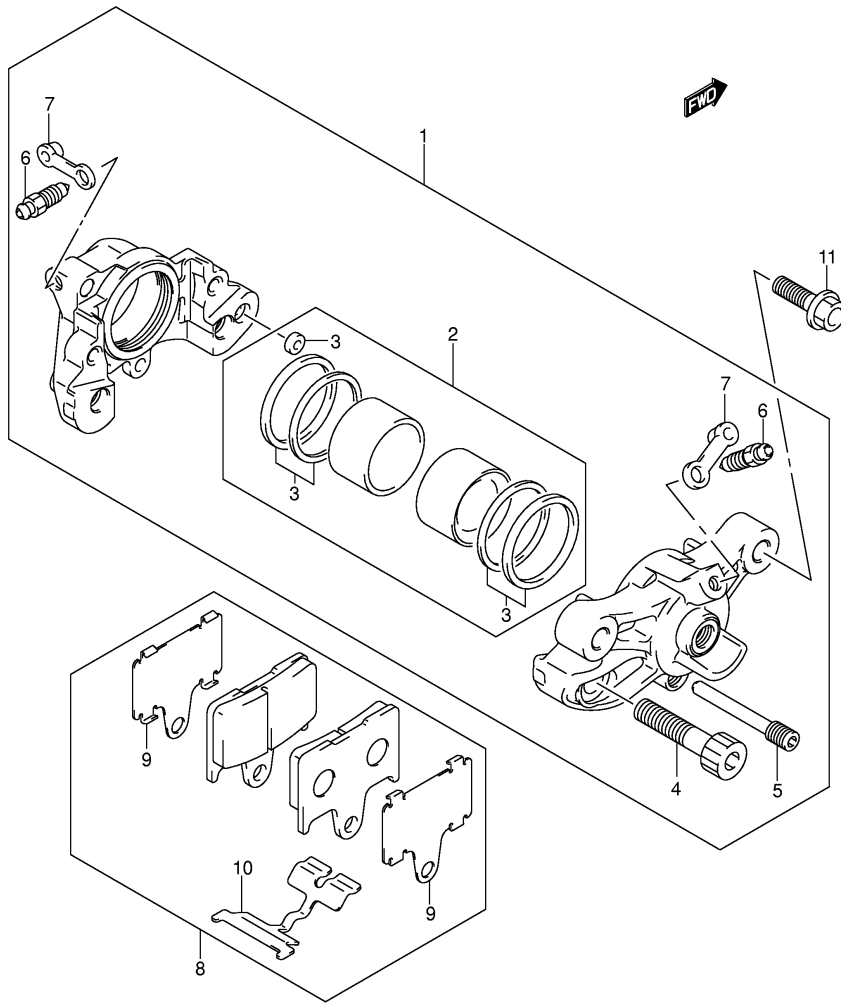

Ref No	Part No	Description
1	69100-18G00-999	Caliper Assy, Rear
2	69100-40811	• . Piston Set
3	69100-14880	• • . Seal Set, Piston
4	69145-40F00	• . Bolt
5	69141-40F00	• . Pin, Pad
6	59121-01A00	• . Bleeder
7	59122-01A00	• . Cap
8	69100-18810	Pad & Spring Set
9	69171-40F00	• . Shim, Pad
10	69315-18G00	• . Spring, Pad
11	09103-08359	Bolt

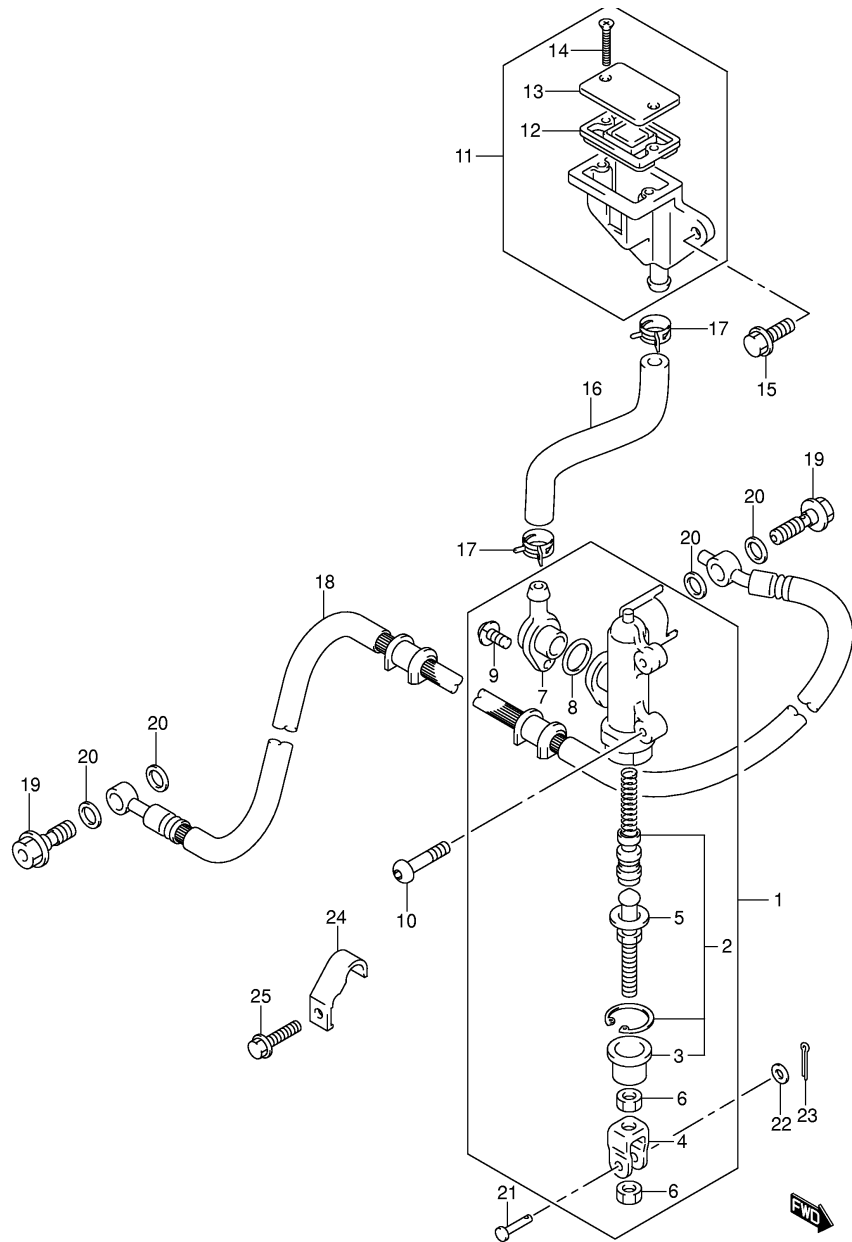

Ref No	Part No	Description
1	69600-16G00	Cylinder Assy, Rear Master
2	69600-34820	. . Piston / Cap Set
3	69691-00A00	• • .. Boot
4	69692-27A30	. . Yoke
5	69670-48B00	. . Rod, Push
6	69693-05A00	. . Nut
7	69672-05A00	. . Connector
8	69686-34200	. . O Ring
9	02112-74123	. . Screw
10	09139-06028	Bolt (6x20)
11	69740-01D02	Tank Assy, Rear Reservoir
12	59667-04700	. . Diaphragm
13	59669-05D00	. . Cap
14	69689-04A00	. . Screw
15	09103-06222	Bolt
16	69731-18G00	Hose, Reservoir Tank
17	09401-13417	Clamp
18	69480-18G00	Hose, Rear Brake
19	09360-10042	Bolt (10x1.25x22)
20	09161-10009	Washer (10x15x1.5)
21	09200-06037	Pin
22	08322-01063	Washer
23	04111-20158	Pin, Cotter
24	69268-40F10	Clamp, Rr Brake Hose
25	09103-06223	Bolt

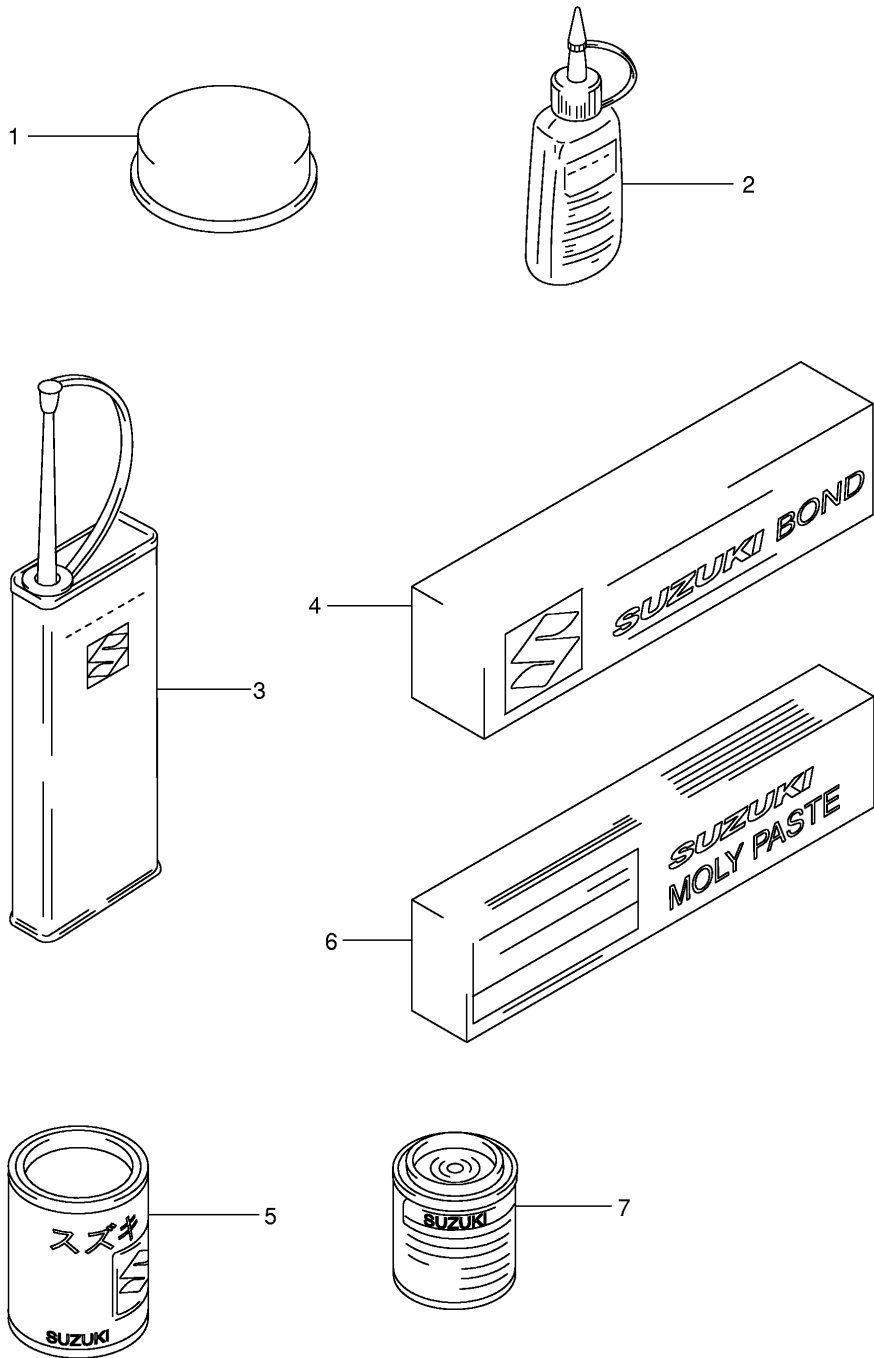

Ref No	Part No	Description
1	99000-25110	Suzuki Pbc Grease
2	99104-32020	Thread Lock Super (1361a)
2	99104-32030	Thread Lock Super (1363a)
2	99000-32050	Thread Lock Super (1342)
2	99000-32100	Thread Lock Super (1305)
2	99000-32130	Thread Lock Super (1360)
3	99000-32040	Thread Lock Cement
4	99000-31140	Suzuki Bond (1207b)
5	99000-25030	Suzuki Super Grease
6	99000-25140	Suzuki Moly Paste
7	99000-10109-019	Paint (black)
7	99000-10209-YBA	Paint (pearl Suzuki Deep Blue No.2)
7	99000-10209-YD8	Paint (sonic Silver Metallic)
7	99000-10209-YU9	Paint (pearl Yellow)