 
 



Ref No	Part No	Description
1	11171-17C00	Cover, Cylinder Head
2	11173-06B02	Gasket, Head Cover No. 1
3	11178-27A01	Gasket, Head Cover No. 2
4	11179-27A02	Gasket, Head Cover No. 3
5	09106-07009	Bolt (l:5.5)
6	09106-07010	Bolt (l:19)
7	09161-11008	Washer
8	09360-08009	Bolt, Union
9	07110-08125	Plug, Head Cover
10	09168-08008	Gasket
11	04221-08129	Pin
12	11176-26D00	Cover, Breather
12	11176-48B10	Cover, Breather
13	11177-26D00	Gasket, Breather Cover
13	11177-48B00-H17	Gasket, Breather Cover
14	01517-06254	Bolt
14	01517-06204	Bolt
15	11400-26860	Gasket Set (na)
15	11401-48814	Gasket Set (na)

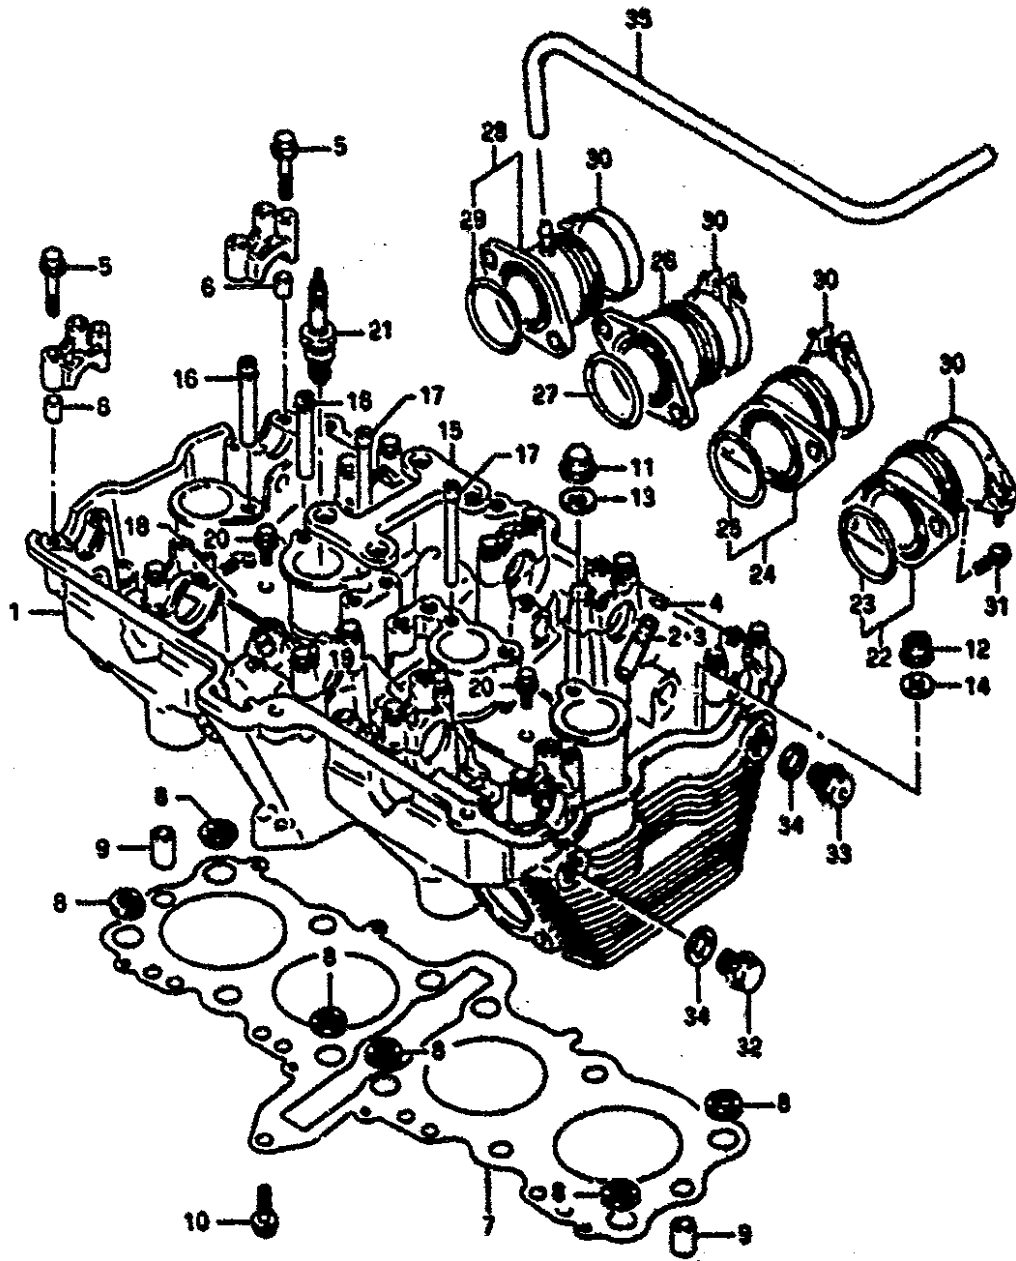

Ref No	Part No	Description
1	11100-41C00	Head Assy, Cylinder
1	11100-41C10	Head Assy, Cylinder
2	11116-06B70	• . Guide, Valve, In
3	11116-06B70	• . Guide, Valve, Ex
4	09381-10004	• . Ring, Valve Guide
5	09103-06026	• . Bolt
6	09206-08001	• . Pin
7	11141-48B21	Gasket, Cylinder Head
8	11143-48B01	O Ring
9	09209-11007	Pin
10	01517-06254	Bolt (6x25)
10	01517-06305	Bolt (6x30)
11	09159-10069	Nut
12	08316-16106	Nut
13	09168-10031	Gasket
14	09160-10060	Wwasher
15	11138-40C10	Plate, Head Reinforcement
16	11131-27A00	Pipe, Oil No. 1, 2
17	11133-27A00	Pipe, Oil No. 3
18	11135-27A02	Plate, Oil Pipe Rh
19	11136-27A02	Plate, Oil Pipe Lh
20	01517-06128	Bolt
21	09482-00389	Spark Plug (ngk, 3r9b)
21	09482-00391	Spark Plug (ngk, 3r10b)
22	13101-41C00	Pipe, Intake Lh
22	13101-40C00	Pipe, Intake Lh
23	09280-40010	• . O Ring
24	13102-41C00	Pipe, Intake Ml
24	13102-40C00	Ppipe, Intake Ml
25	09280-40010	• . O Ring
26	13103-41C00	Pipe, Intake Mr
26	13103-40C00	Pipe, Intake Mr
27	09280-40010	• . O Ring
28	13104-41C00	Pipe, Intake Rh
28	13104-40C00	Pipe, Intake Rh
29	09280-40010	• . O Ring
30	09402-56208	Clamp
30	09402-52208	Clamp
31	02152-06165	Screw
32	09247-14034	Plug, Cylinder Head Ex
32	09247-14032	Plug, Cylinder Head Ex
33	09247-14032	Plug, Cylinder Head In
34	09168-14004	Gasket


Ref No	Part No	Description
1	11210-40C01	Cylinder
1	11210-40C02	Cylinder
1	11210-40C11	Cylinder
2	09108-10081	Stud Bolt (10x164)
3	09108-10099	Stud Bolt (10x157)
4	09108-10108	Stud Bolt (10x168)
5	11241-48B00	Gasket, Cylinder
6	01421-06205	Stud Bolt
7	08316-16064	Nut
8	09206-13006	Pin
9	11328-48B02	Hose, Oil Head Cooler
10	09280-14011	O Ring
11	09280-15007	O Ring
12	07110-06165	Bolt

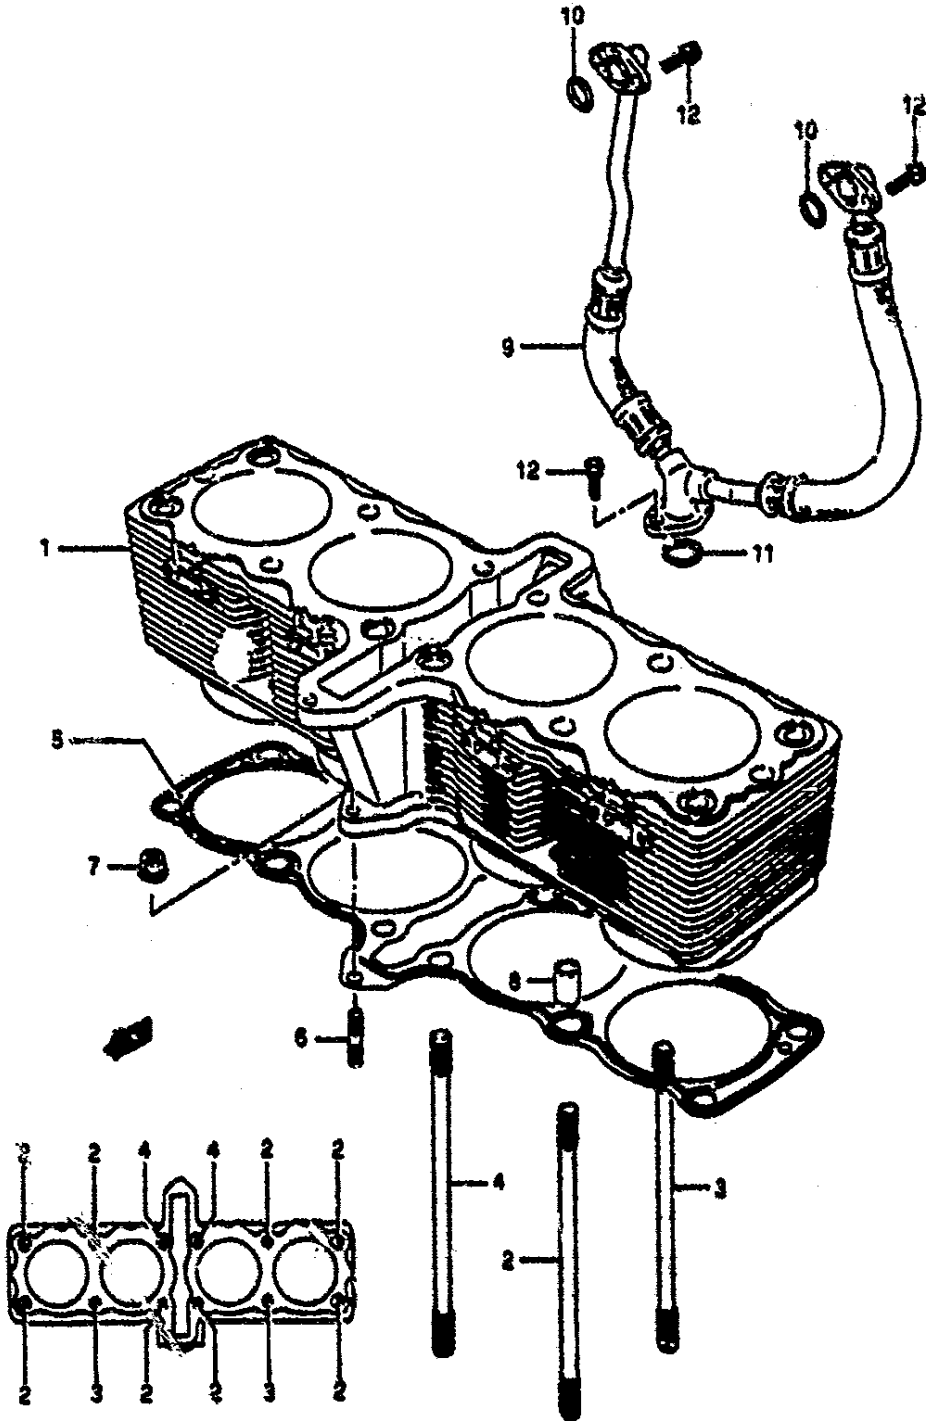

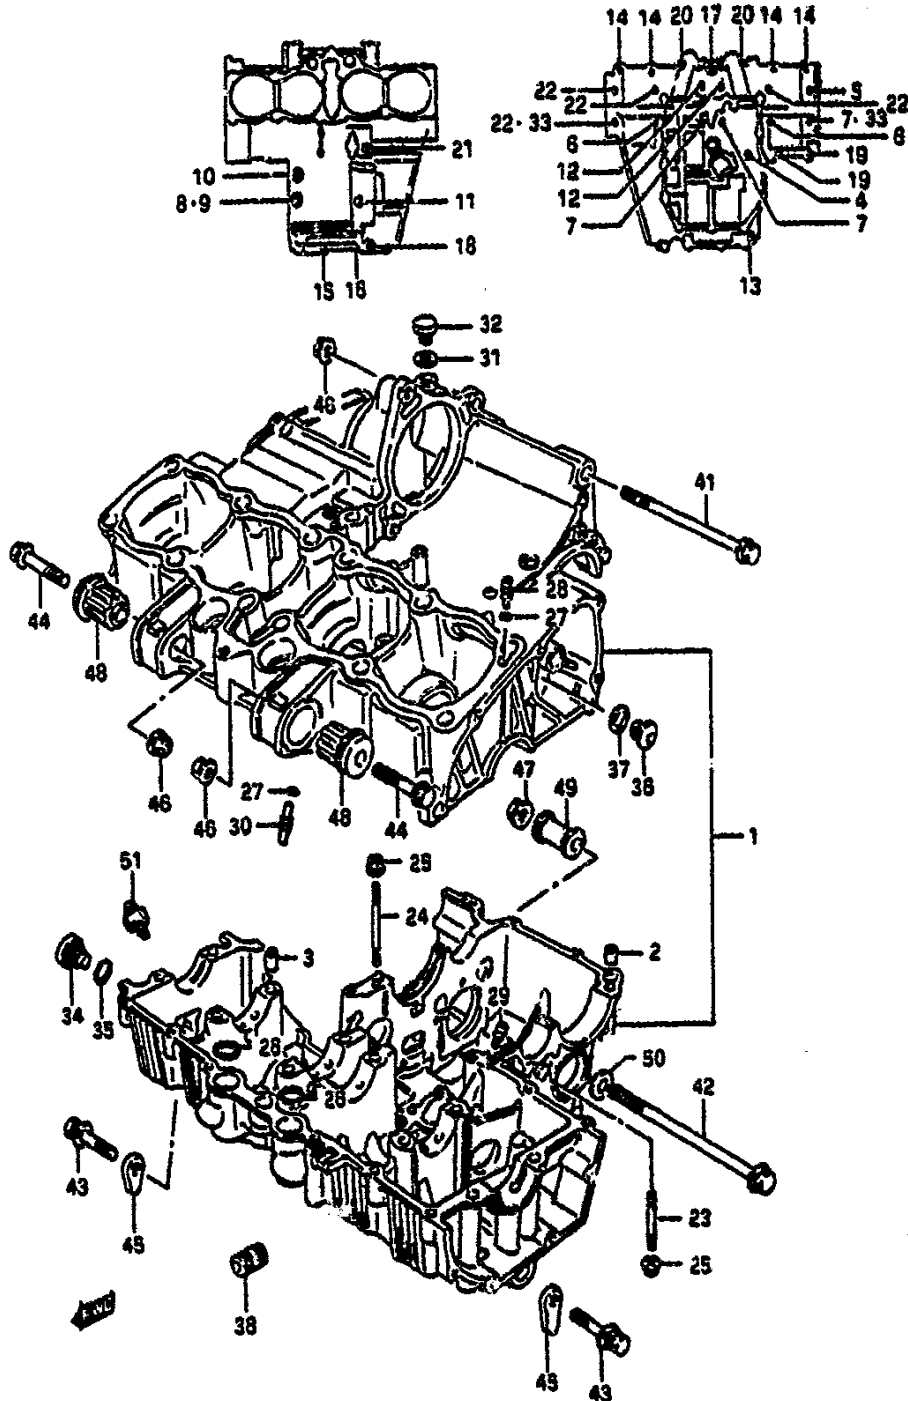 


CRANKCASE

Ref No	Part No	Description
1	11301-40841	Crankcase Set
1	11301-40850	Crankcase Set
2	09206-13004	• Pin
3	09206-11005	• Pin
4	09103-06067	• Bolt (6x105)
5	09103-08097	• Bolt (8x105)
6	09103-08182	• Bolt (8x125)
7	09103-08098	• Bolt (8x115)
8	09106-06072	• Bolt (6x55)
9	09168-06018	• Gasket
10	07110-06405	• Bolt
11	07110-06655	• Bolt
12	07110-08655	• Bolt (l:65)
13	01517-08605	• Bolt
14	01517-06354	• Bolt
15	01517-06404	• Bolt
16	01517-06408	• Bolt
17	01517-06505	• Bolt
18	01517-06605	• Bolt
19	01517-06557	• Bolt
20	01517-06705	• Bolt
21	01517-06805	• Bolt
22	09103-08105	• Bolt (8x95)
23	01421-06408	• Stud Bolt
24	01421-06608	• Stud Bolt
25	09159-06017	• Nut
26	09280-21008	• O Ring, Oil Return
27	09280-04004	• O Ring
28	09493-14002	• Jet, Oil Galy Head
29	09493-24010	• Jet, Oil Galy Gear Shift
30	09493-80008	• Jet, Oil Galy Piston
31	09168-12002	• Gasket, Hole Plug
32	09247-12103	• Plug, Hole
33	09168-08021	• Gasket
34	09248-16003	• Plug, Oil Gallery
35	09280-17002	• O Ring
36	09248-14005	• Plug, Oil Gallery
37	09168-14004	• Gasket
38	16591-06B00	• Union, Oil Filter Stand
39	12228-48B00-0E0	• Bearing, Thrust Rh (green)
40	12228-48B00-0C0	• Bearing, Thrust Lh (red)
40	12228-48B00-0E0	• Bearing, Thrust Lh (green)
40	12228-48B00-0H0	• Bearing, Thrust Lh (black)
41	09103-10139	Bolt (10x150)
42	09100-12060	Bolt (12x178)
43	09118-10060	Bolt (10x60)
44	01517-10558	Bolt
45	09159-10020	Nut
46	09159-10058	Nut
47	08319-31128	Nut
48	11681-27A00	Bush
49	11611-40C01	Spacer (l:27)
50	08322-11128	Wwasher
51	37820-33200	Swwitch, Oil Pressure


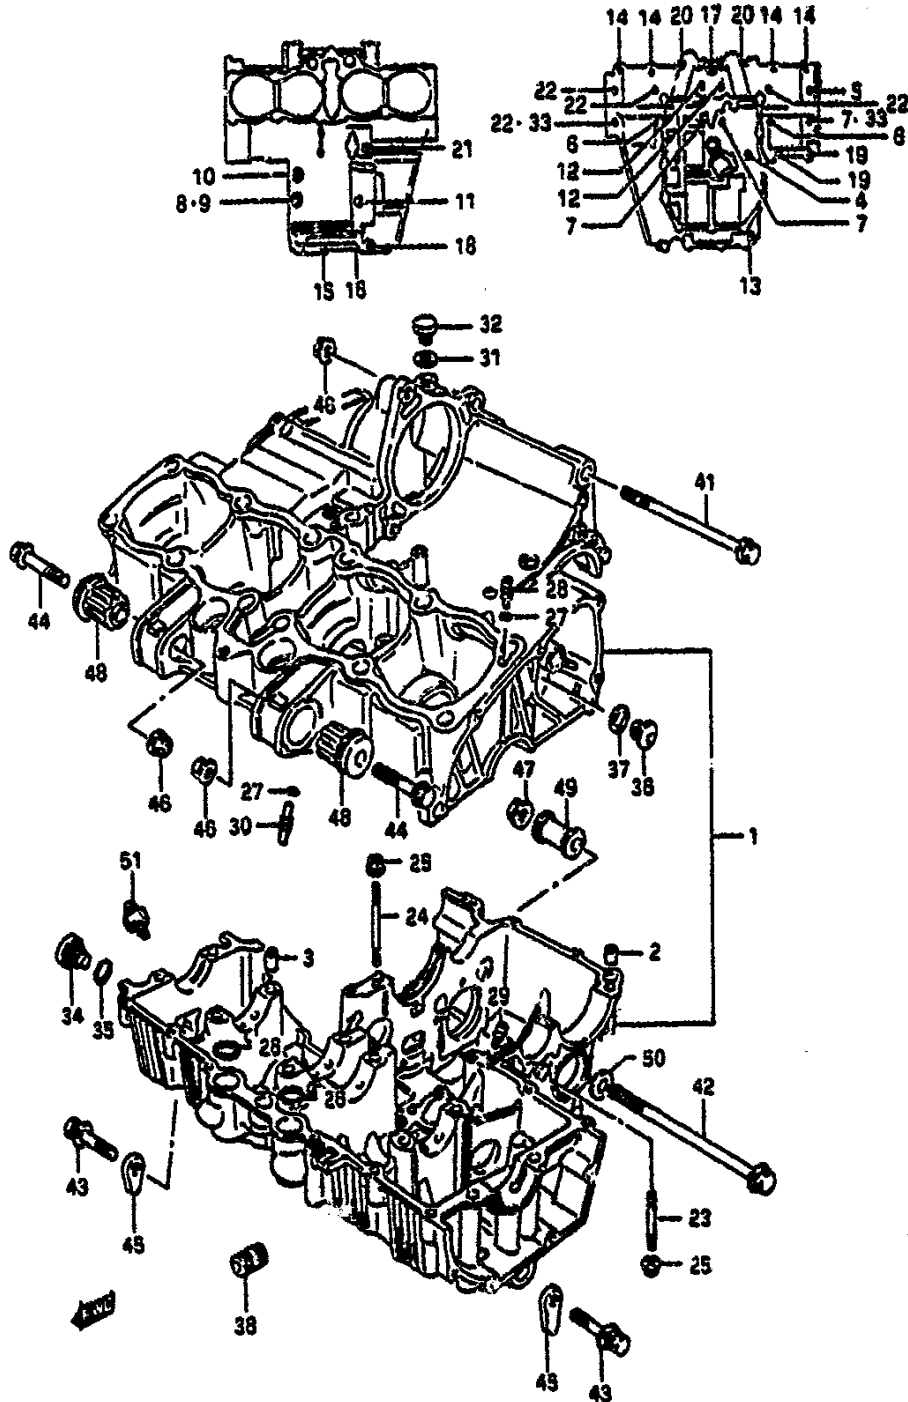 


CRANKCASE


Ref No	Part No	Description
48	13411-05320	. Plunger Assy
49	09493-27002	. Jet, Air (1.35)
49	09493-26004	. Jet, Air (1.3)
30	13331-07D00	. Ring
31	13370-07D00	. Valve Assy, Needle
32	13240-07D00	. Float Assy
33	13374-46710	. O Ring
34	13374-44D80	. O Ring
35	13602-34390	. Screw
36	02112-05128	. Screw
37	13508-17C00	. Cap
38	13671-33600	. Clip
39	13247-02340	. Screw, Drain
40	13550-07D20	. Shaft Assy
41	13557-05A20	. Ring
42	13502-41C00	. Cover, Diaphragm
42	13502-41C30	. Cover, Diaphragm
42	13502-41C10	. Cover, Diaphragm
43	13418-17C00	. Cap, Starter
44	13418-17C10	. Holder
45	13417-09110	. Spring
46	13411-05320	. Plunger Assy
47	13279-47070	. Screw, Air (2.0)
47	13279-47070	. Screw, Air (1 3/4)
48	13268-47070	. Spring
49	13291-29900	. Washer
50	13295-29900	. O Ring
51	09493-25003	. Jet, Air (1.25)
51	09493-24007	. Jet, Air (1.2)
52	13557-07D00	. Ring

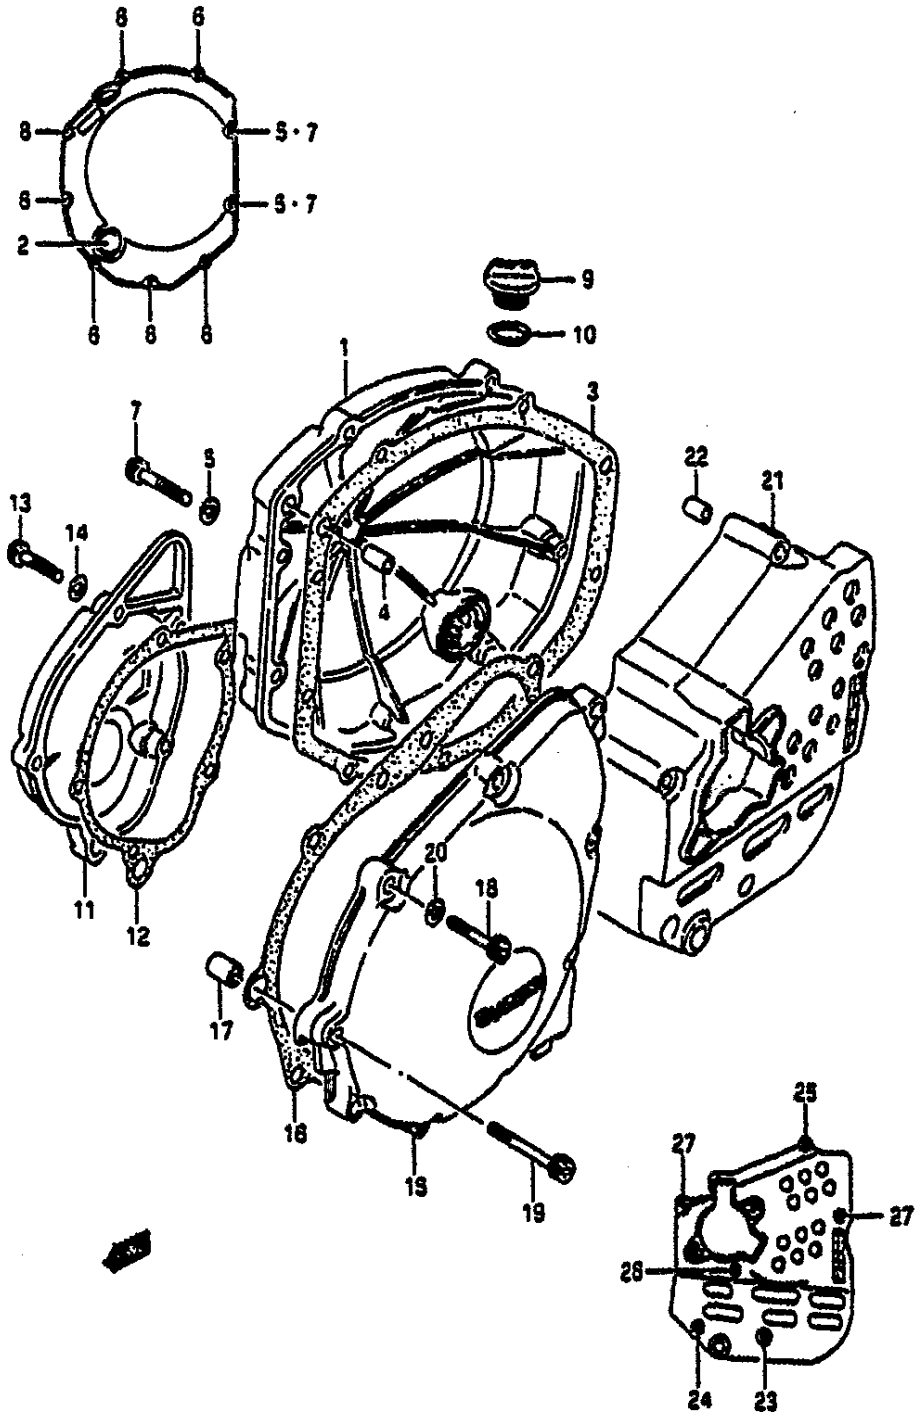 


Ref No	Part No	Description
1	11340-40C00	Cover, Clutch
2	11971-33210	• Lens, Oil Level
3	11482-27A10	Gasket, Clutch Cover
4	04211-09189	Pin
5	09168-06024	Gasket
6	07110-06255	Bolt
7	07110-06305	Bolt
8	07110-06355	Bolt
9	09259-20012	Plug, Engine Oil Filler
10	09280-17003	O Ring
11	11381-27A01	Cover, Signal Generator
12	11491-27A10	Gasket, Signal Generator Cover
13	09106-06059	Bolt (6x23)
14	09168-06024	Gasket
15	11351-40C00	Cover, Starter Gear
16	11483-48B10	Gasket, Starter Gear Cover
17	09206-11005	Pin
18	07110-06255	Bolt
19	07110-06405	Bolt
20	09168-06024	Gasket
21	11361-40C10	Cover, Engine Sprocket
22	04211-09129	Pin
23	07110-06455	Bolt
24	07110-06355	Bolt
25	07110-06555	Bolt
26	07110-06705	Bolt
27	07110-06755	Bolt

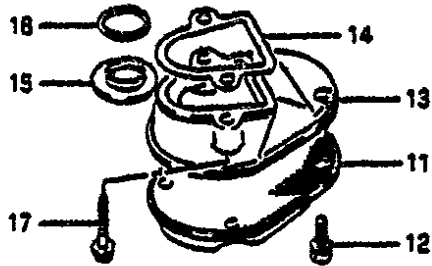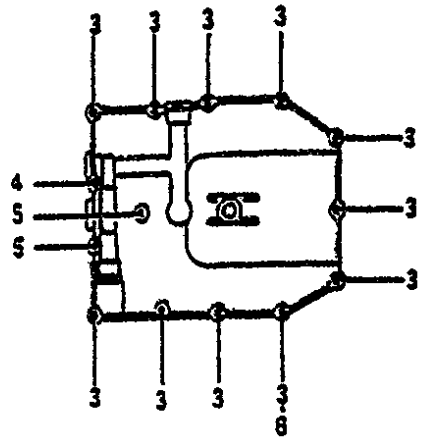  


Ref No	Part No	Description
1	11511-17C02	Pan, Oil
2	11489-27A10	Gasket, Oil Pan
3	07110-06257	Bolt
4	09106-06067	Bolt (6x55)
5	07110-06458	Bolt
6	09168-06024	Gasket
7	09247-14001	Plug, Oil Drain
8	09168-14004	Gasket
9	09248-16010	Plug, Oil Gallery
10	09168-16002	Gasket
11	16520-17C00	Strainer, Engine Oil
12	01137-06128	Bolt
13	16525-17C00	Protector, Strainer
14	16528-27A10	Gasket, Protector
15	16529-27A01	Gasket, Outlet
16	09280-18009	O Ring
17	01517-06257	Bolt
18	16440-17C00	Valve, Oil Reriff
19	09168-16002	Washer
20	09440-09027	Spring
21	16442-34301	Plunger, Oil Control

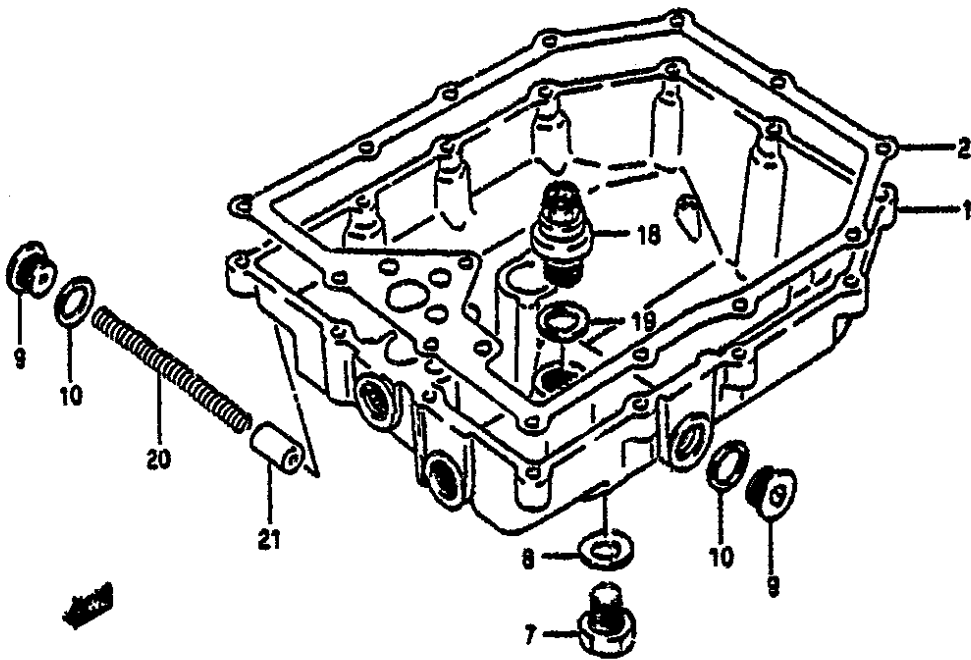 

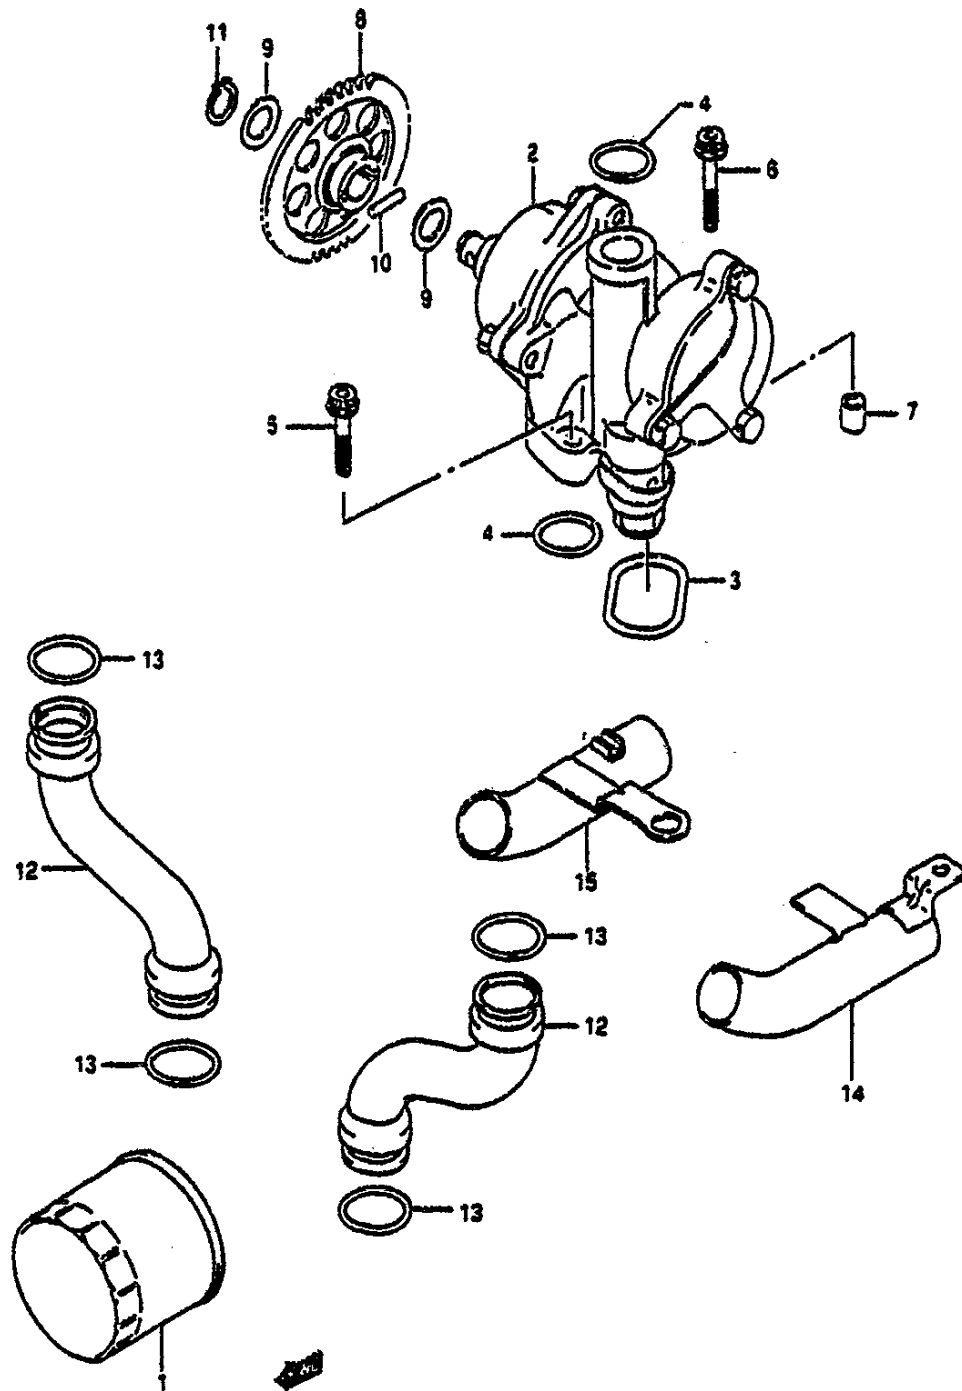 



Ref No	Part No	Description
1	16510-06B01	Filter, Engine Oil
2	16400-06B10	Pump Assy, Engine Oil
3	16491-27A01	O Ring, Oil Pump
4	09280-18009	O Ring
5	07120-06308	Bolt
6	07120-06358	Bolat
7	04211-09129	Pin
8	16331-06B01-0B1	Gear, Oil Pump Driven
9	08221-12205	Washer
10	09261-05006	Pin
11	08331-31129	Circlip
12	16481-48B01	Pipe, Outlet
13	09280-22016	O Ring
14	16530-17C00	Pipe, Oil Under, Lh
15	16540-27A02	Pipe, Oil Under, Rh

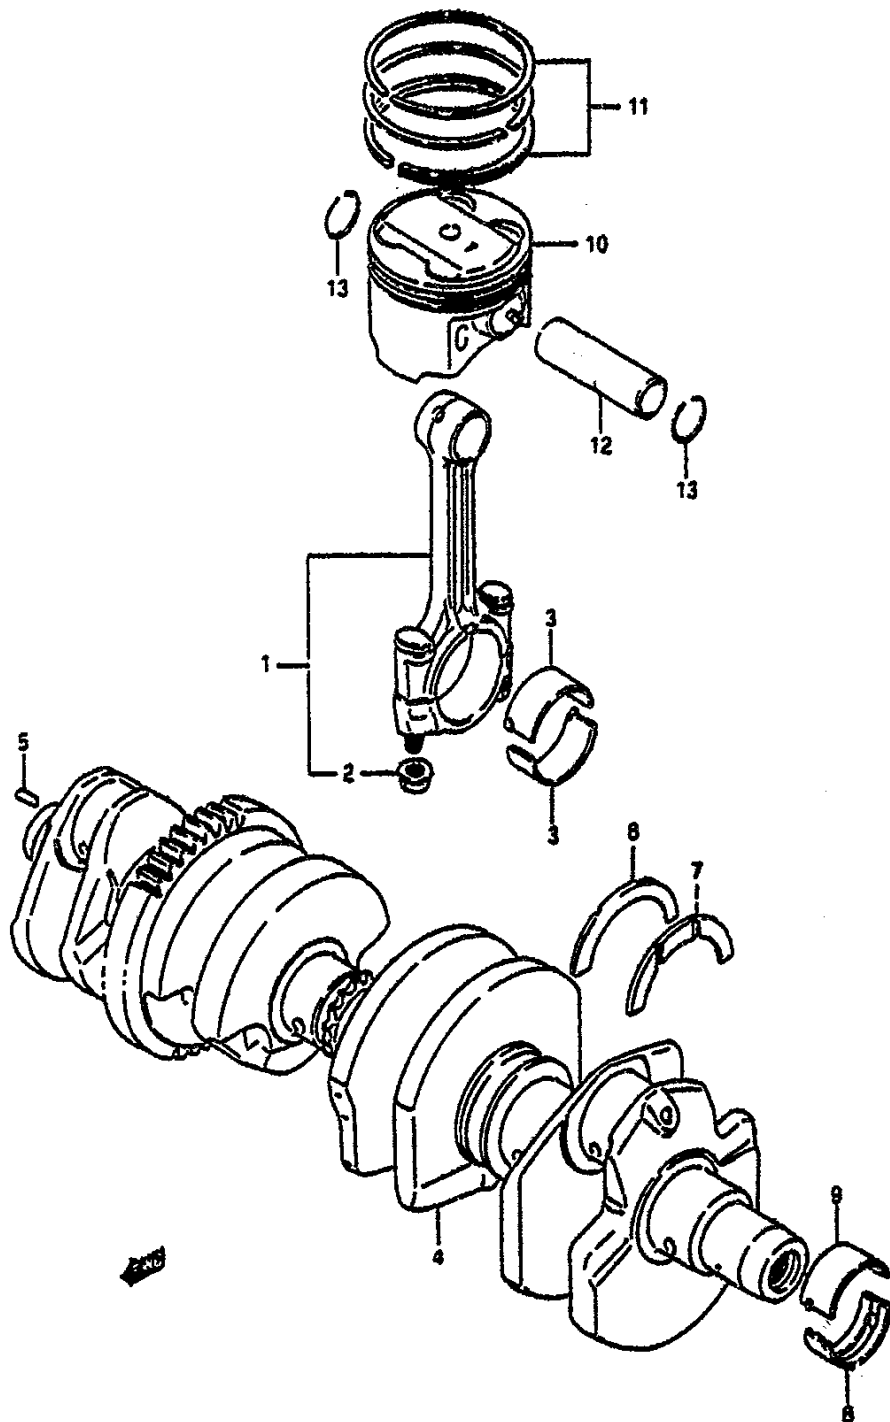 


Ref No	Part No	Description
1	12160-40C02	Rod Assy, Connecting
2	09159-09001	• . Nut
3	12164-48B00-0A0	Bearing, Crank Pin (green)
3	12164-48B00-0B0	Bearing, Crank Pin (black)
3	12164-48B00-0C0	Bearing, Crank Pin (brown)
3	12164-48B00-0D0	Bearing,crank Pin (yellow)
4	12000-40810	Crankshaft Set
5	04221-04089	• . Pin
6	12228-48B00-0E0	• . Bearing, Thrust Rh (green)
7	12228-48B00-0C0	• . Bearing, Thrust Lh (red)
7	12228-48B00-0E0	• . Bearing, Thrust Lh (green)
7	12228-48B00-0H0	• . Bearing, Thrust Lh (black)
8	12229-06B00-0A0	Bearing, Crankshaft (green)
8	12229-06B00-0B0	Bearing, Crankshaft (black)
8	12229-06B00-0C0	Bearing, Crankshaft (brown)
8	12229-06B00-0D0	Bearing, Crankshaft (yellow)
9	12229-06B10-0A0	Bearing, Carankshaft (green)
9	12229-06B10-0B0	Bearing, Crankshaft (black)
9	12229-06B10-0C0	Bearing, Crankshaft (brown)
9	12229-06B10-0D0	Bearing, Crankshaft (yellow)
10	12111-48B04-0F0	Piston
10	12111-48B04-050	Piston (os:0.5)
10	12111-48B04-100	Piston (os:1.0)
11	12140-48B20	Ring Set, Piston
11	12140-48B20-050	Ring Set, Piston (os:0.5)
11	12140-48B20-100	Ring Set, Piston (os:1.0)
12	12151-05A00	Pin, Piston
13	09381-20004	Circlip

Ref No	Part No	Description
1	12611-06B00	Gear, Starter Idle (nt:12/53)
2	09206-11014	Pin
3	12600-48811	Clutch Set, Starter
4	09103-14005	Bolt

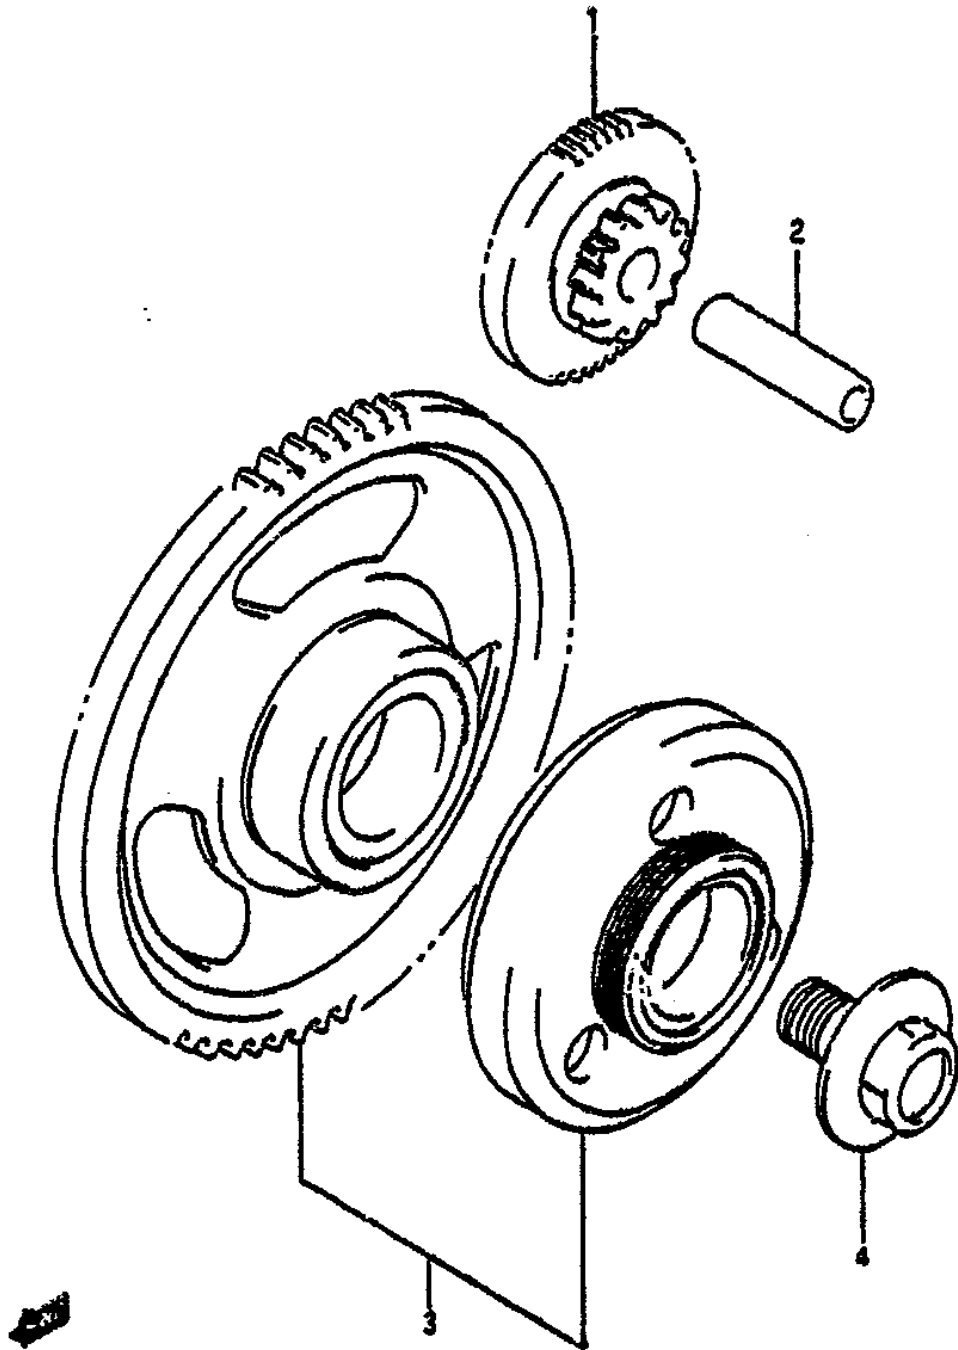 


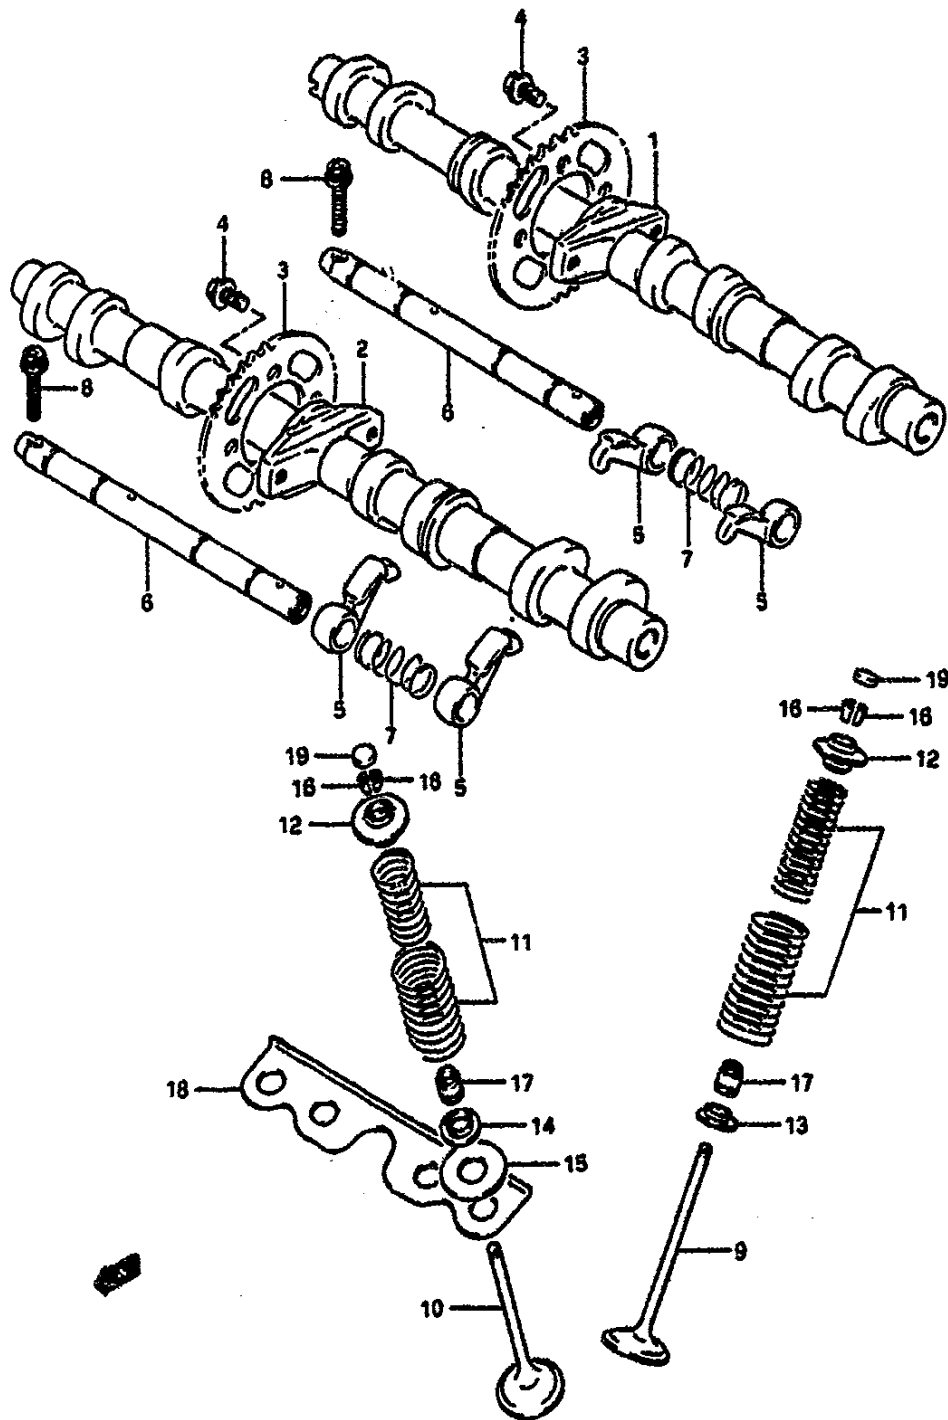 


Ref No	Part No	Description
1	12711-41C00	Cam Shaft, Intake
2	12721-41C00	Cam Shaft, Exhaust
3	12741-06B00	Sprocket, Cam Shaft
4	09103-07001	Bolt
5	12841-33C02	Arm, Valve Locker
6	12861-41C01	Shaft, Valve Locker Arm
7	09440-14019	Spring
8	07120-06255	Bolt
9	12911-41C00	Valve, Intake
10	12912-41C00	Valve, Exhaust
11	12920-41C00	Spring Set, Valve
12	12931-41C00	Retainer, Valve Spring
13	12933-81400	Seat, Spring Intake
14	12934-27A00	Seat, Spring Ex Inner
15	12935-27A00	Seat, Spring Ex Outer
16	12932-27A00	Cotter, Valve
17	09289-05011	Oil Seal
18	11137-27A01	Plate, Valve Seat
19	12892-41C00-230	Shim, Tappet (t:2.30)
19	12892-41C00-235	Shim, tappet (t:2.35)
19	12892-41C00-240	Shim, Tappet (t:2.40)
19	12892-41C00-245	Shim, Tappet (t:2.45)
19	12892-41C00-250	Shim, Tappet (t:2.50)
19	12892-41C00-255	Shim, Tappet (t:2.55)
19	12892-41C00-260	Shim, Tappet (t:2.55)
19	12892-41C00-265	Shim, Tappet (t:2.65)
19	12892-41C00-270	Shim, Tappet (t:2.70)
19	12892-41C00-275	Shim, Tappet (t:2.75)
19	12892-41C00-280	Shim, Tappet (t:2.80)
19	12892-41C00-285	Shim, Tappet (t:2.85)
19	12892-41C00-290	Shim, Tappet (t:2.90)
19	12892-41C00-295	Shim, Tappet (t:2.95)
19	12892-41C00-300	Shim, Tappet (t:3.00)
19	12892-41C00-305	Shim, Tappet (t:3.05)
19	12892-41C00-310	Shim, Tappet (t:3.10)
19	12892-41C00-315	Shim, Tappet (t:3.15)
19	12892-41C00-320	Shim, Tappet (t:3.20)
19	12892-41C00-325	Shim, Tappet (t:3.25)
19	12892-41C00-330	Shim, Tappet (t:3.30)
19	12892-41C00-335	Shim, Tappet (t:3.35)
19	12892-41C00-340	Shim, Tappet (t:3.40)
19	12892-41C00-345	Shim, Tappet (t:3.45)
19	12892-41C00-350	Shim, Tappet (t:3.50)
21	99000-69471	• . Case, Tappet Shim

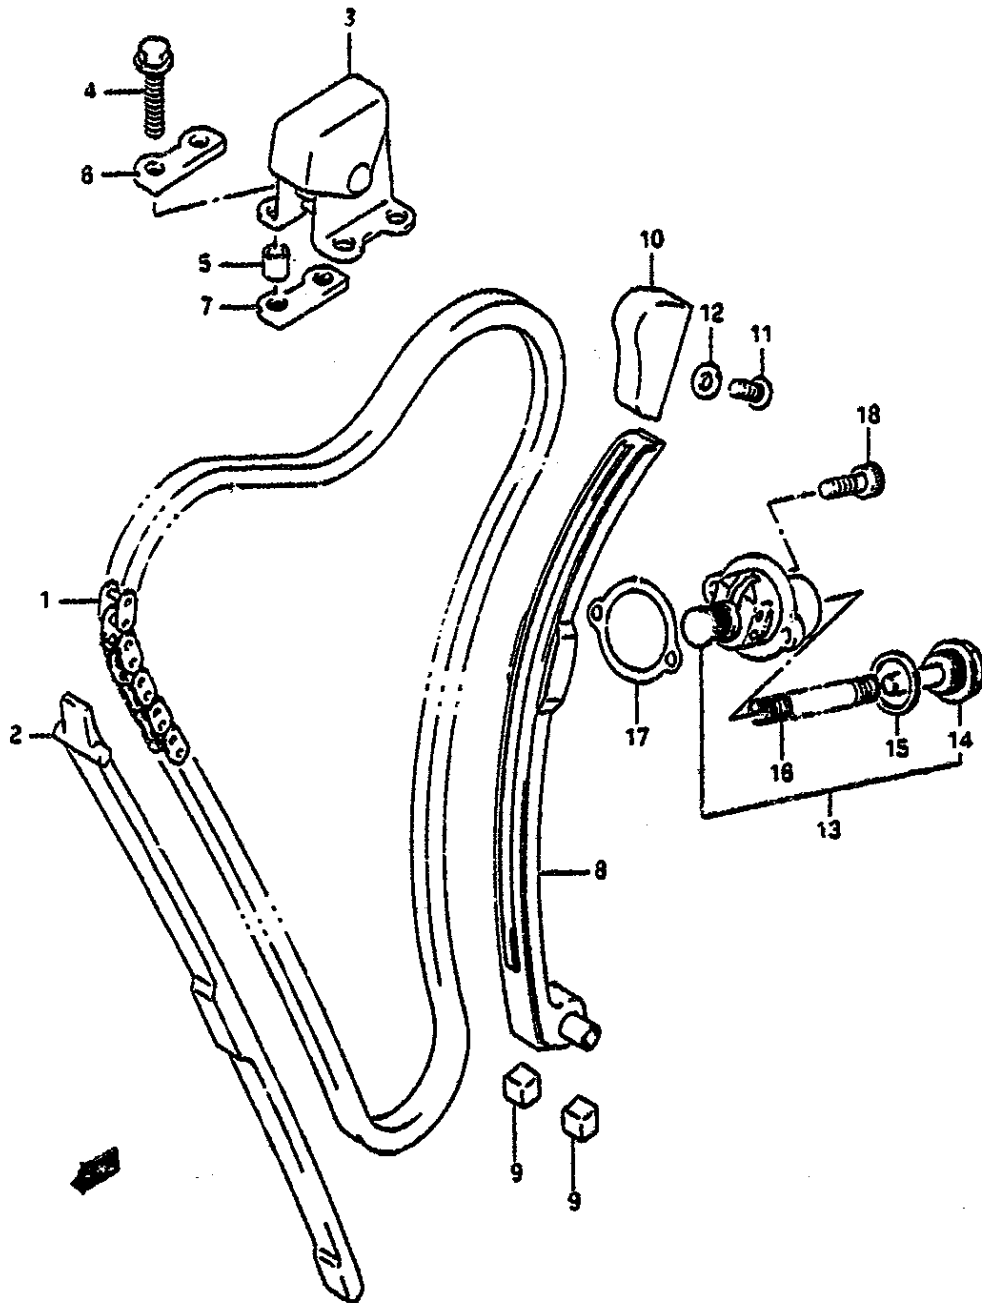 

Ref No	Part No	Description
1	12760-40C01	Chain, Cam Shaft Drive
2	12771-06B01	Guide, Cam Chain No. 1
3	12780-40C00	Idler, Cam Chain
4	01517-06307	Bolt
5	09180-06167	Spacer, Cushion
6	12788-48B01	Cushion (t:5.2)
7	12788-48B11	Cushion (t:8.6)
8	12810-40C00	Tensioner, Cam Chain
9	12814-34200	Cushion
10	12791-06B01	Guide, Cam Chain No. 2
11	01517-06105	Bolt
12	09168-06023	Washer
13	12830-48B02	Adjuster Assy, Tensioner
14	12834-27A00	• Plug
15	12832-27A00	• Gasket
16	12833-06B00	• Spring
17	12837-27A10	Gasket, Adjuster
18	07110-06255	Bolt

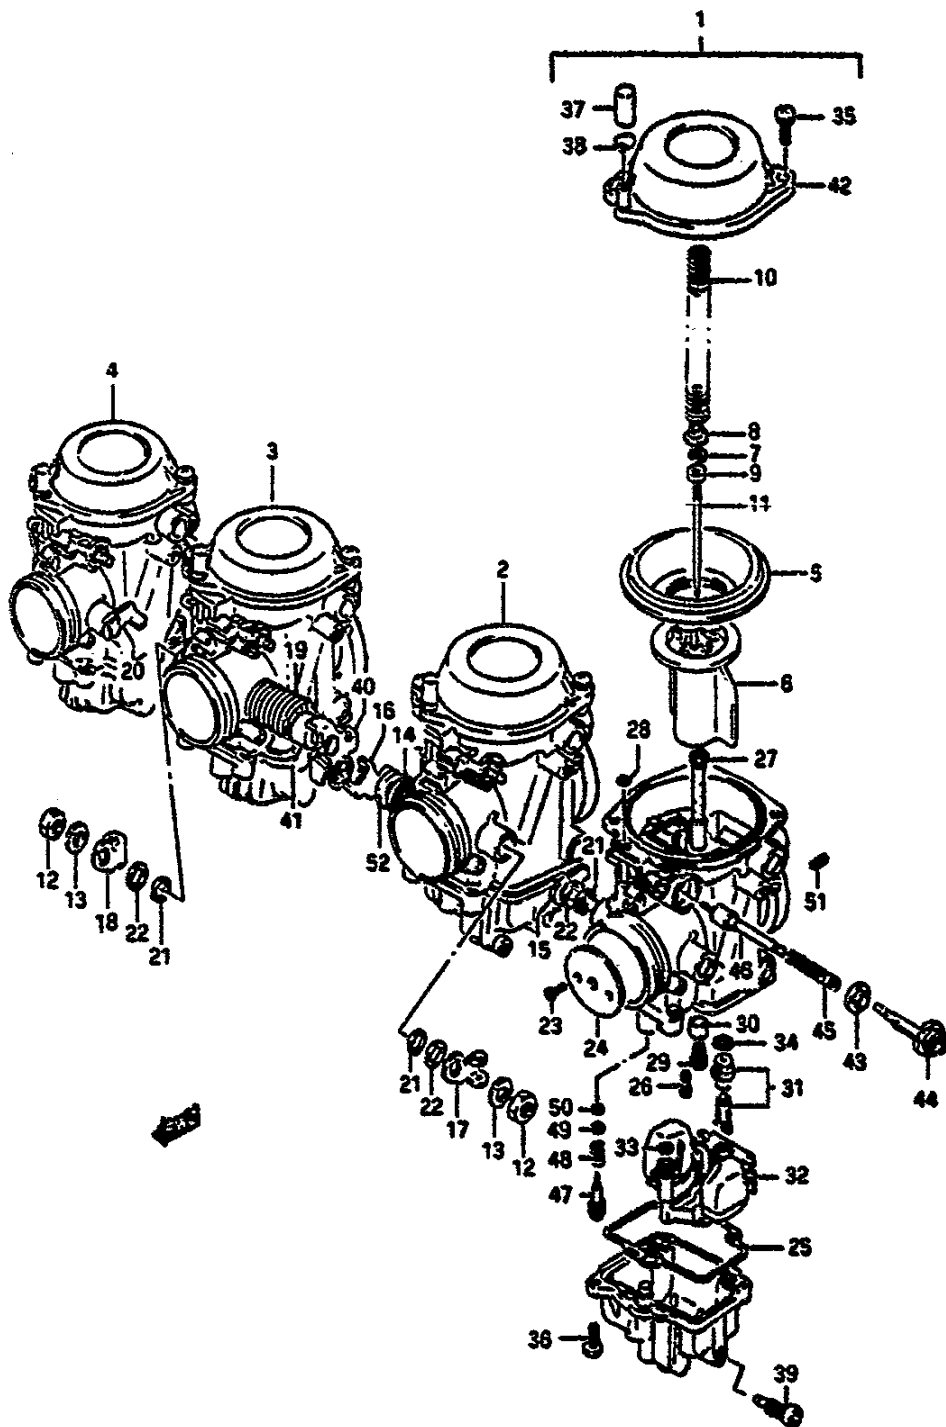 


Ref No	Part No	Description
1	13201-41C00	Carburetor Assy, Lh
1	13201-41C40	Carburetor Assy, Lh
1	13201-42C20	Carburetor Assy, Lh
1	13201-42C10	Carburetor Assy, Lh
1	13201-41C50	Carburetor Assy, Lh
1	13201-41C60	Carburetor Assy, Lh
1	13201-41C90	Carburetor Assy, Lh
1	13201-42C00	Carburetor Assy, Lh
2	13202-41C00	Carburetor Assy, Ml
2	13202-41C40	Carburetor Assy, Ml
2	13202-42C20	Carburetor Assy, Ml
2	13202-42C10	Carburetor Assy, Ml
2	13202-41C50	Carburetor Assy, Ml
2	13202-41C60	Carburetor Assy, Ml
2	13202-41C90	Carburetor Assy, Ml
2	13202-42C00	Carburetor Assy, Ml
3	13203-41C00	Carburetor Assy, Mr
3	13203-41C40	Carburetor Assy, Mr
3	13203-42C20	Carburetor Assy, Mr
3	13203-42C10	Carburetor Assy, Mr
3	13203-41C50	Carburetor Assy, Mr
3	13203-41C60	Carburetor Assy, Mr
3	13203-41C90	Carburetor Assy, Mr
3	13203-42C00	Carburetor Assy, Mr
4	13204-41C00	Carburetor Assy, Rh
4	13204-41C40	Carburetor Assy, Rh
4	13204-42C20	Carburetor Assy, Rh
4	13204-42C10	Carburetor Assy, Rh
4	13204-41C50	Carburetor Assy, Rh
4	13204-41C60	Carburetor Assy, Rh
4	13204-41C90	Carburetor Assy, Rh
4	13204-42C00	Carburetor Assy, Rh
5	13507-07D00	• Diaphragm
6	13501-17D00	• Valve, Piston
7	13394-31210	• E Ring
8	13382-17D00	• Ring
9	13387-41C00	• Ring
10	13417-17D00	• Spring
11	13383-41C00	• Needle, Jet (6zd13-3)
12	08310-22086	• Nut
13	08321-31086	• Lock Washer
14	13573-07D00	• Spring
15	13550-07D00	• Shaft Assy
16	13550-07D10	• Shaft Assy
17	13553-17C00	• Lever
18	13553-44B00	• Lever
19	13573-07D10	• Spring
20	13550-07D30	• Shaft Assy
21	13556-44B00	• Seal
22	13557-47070	• Washer
23	13604-07D00	• Screw
24	13551-07D00	• Valve, Throttle (120)
25	13258-44B00	• Gasket, Float Chamber
26	09492-40014	• Jet, Pilot (40)

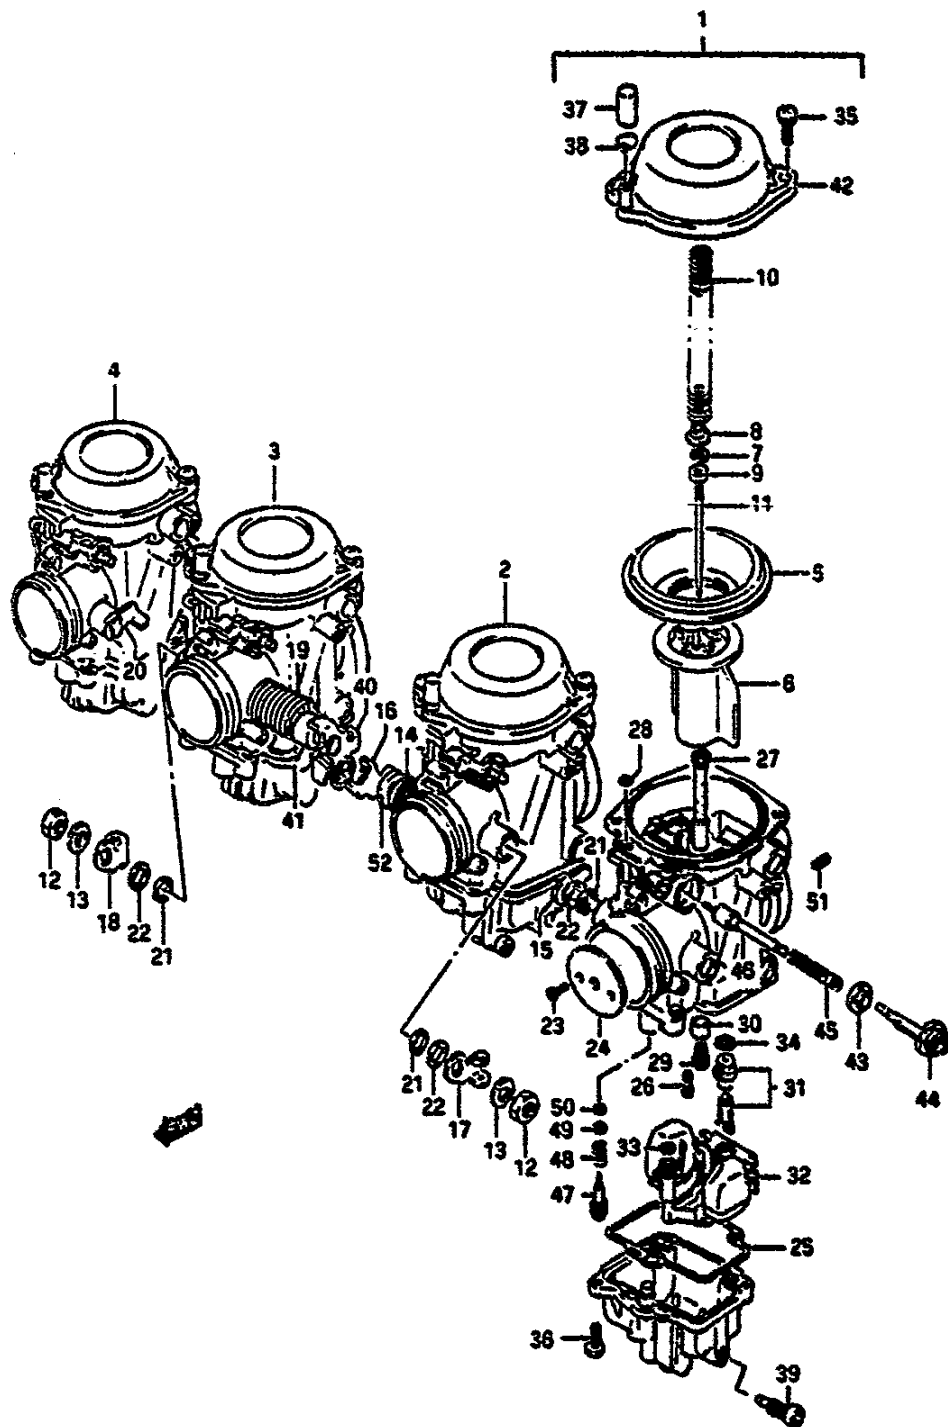 


Ref No	Part No	Description
27	09494-00721	. Jet, Needle (p-2)
28	13278-02340	. O Ring
29	09491-25010	. Jet, Main (125)
30	13331-07D00	. Ring
31	13370-07D00	. Valve Assy, Needle
32	13240-07D00	. Float Assy
33	13374-46710	. O Ring
34	13374-44D80	. O Ring
35	13602-34390	. Screw
36	02112-05128	. Screw
37	13508-17C00	. Cap
38	13671-33600	. Clip
39	13247-02340	. Screw, Drain
40	13550-07D20	. Shaft Assy
41	13557-05A20	. Ring
42	13502-41C00	. Cover, Diaphragm
42	13502-41C30	. Cover, Diaphragm
42	13502-41C10	. Cover, Diaphragm
43	13418-17C00	. Cap, Starter
44	13418-17C10	. Holder
45	13417-09110	. Spring
46	13411-05320	. Plunger Assy
47	13279-47070	. Screw, Air (2.0)
47	13279-47070	. Screw, Air (1 3/4)
48	13268-47070	. Spring
49	13291-29900	. Washer
50	13295-29900	. O Ring
51	09493-25003	. Jet, Air (1.25)
51	09493-24007	. Jet, Air (1.2)
52	13557-07D00	. Ring


Ref No	Part No	Description
1	13413-20C00	Lever, Starter
2	13628-07D00	Plate
3	02112-05128	Screw
4	13628-17C00	Plate
5	13439-17C00	Holder
6	13683-41C00	Hose
7	13683-41C10	Hose
8	13684-20C10	Hose
9	13427-38300	Washer
10	13685-44B00	Nipple
11	13673-44B00	Seal
12	13279-41C00	Adjuster
13	02112-05106	Screw
14	13375-60A00	Spring
15	13680-17D00	Hose Assy
16	13267-44B00	Screw
17	13271-44B00	Spring
18	13268-17C10	Spring
19	13683-17D00	Hose

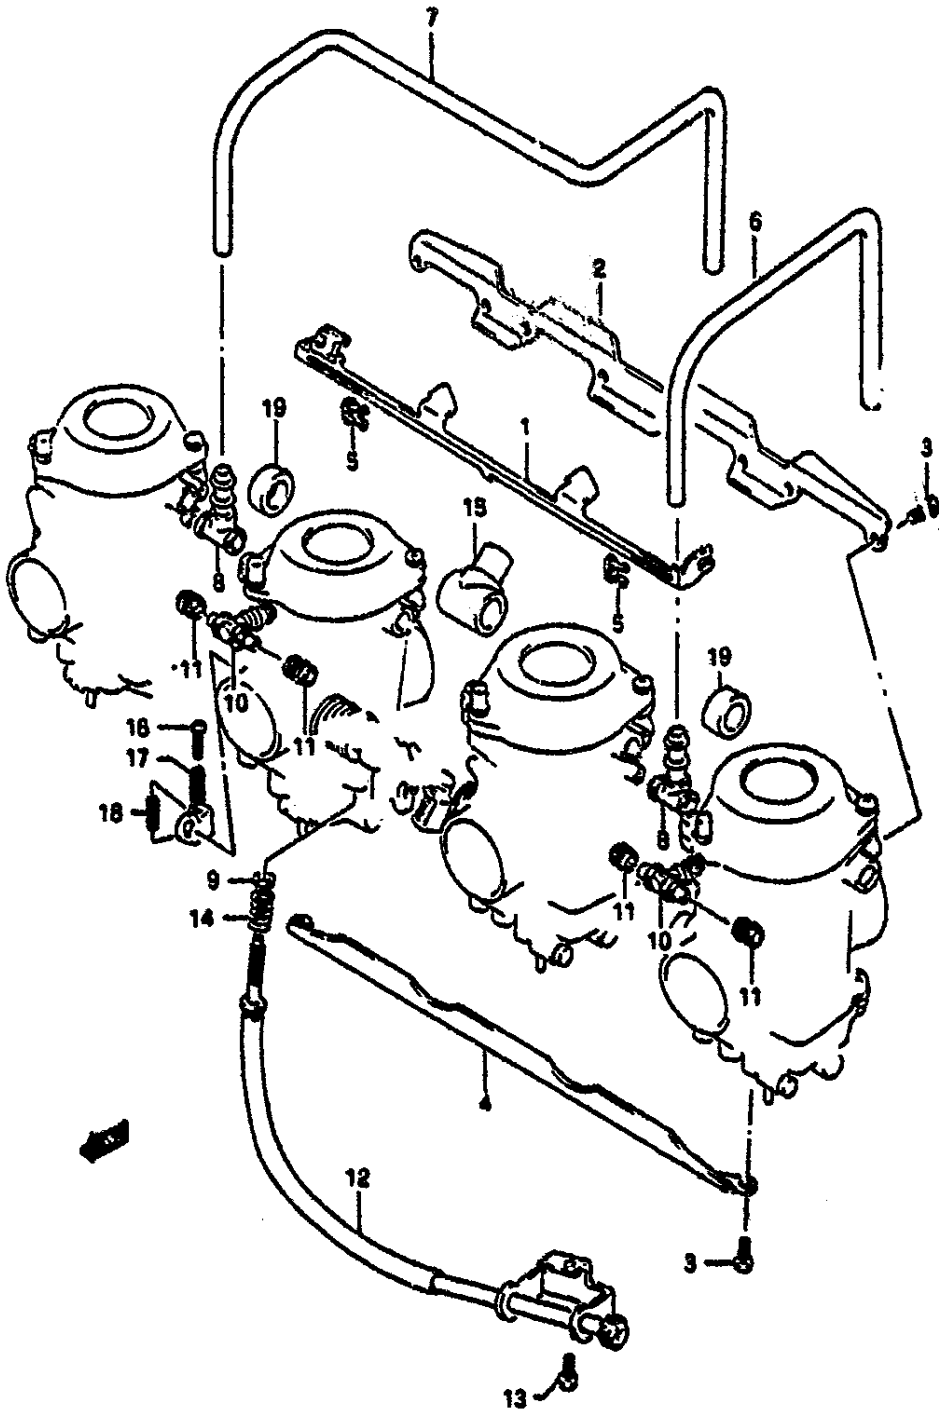 


Ref No	Part No	Description
1	13201-41C30	Carburetor Assy, Lh
1	13201-41C71	Carburetor Assy, Lh
2	13202-41C30	Carburetor Assy, Ml
2	13202-41C71	Carburetor Assy, Ml
3	13203-41C30	Carburetor Assy, Mr
3	13203-41C71	Carburetor Assy, Mr
4	13204-41C30	Carburetor Assy, Rh
4	13204-41C71	Carburetor Assy, Rh
5	13507-17C00	. Diaphragm
6	13501-17C20	. Valve, Piston
7	13394-10010	. E Ring
8	13382-42A00	. Ring
9	13387-47010	. Ring
10	13417-42A00	. Spring
11	13383-40C20	. Needle, Jet (5d42-1)
11	13383-40C40	. Needle, Jet (5d44-3)
12	08310-22086	. Nut
13	08321-31086	. Lock Washer
14	13573-17C00	. Spring
15	13550-17C00	. Shaft Assy
16	13550-17C10	. Shaft Assy
17	13553-17C00	. Lever
18	13553-44B00	. Lever
19	13573-17C10	. Spring
20	13550-17C30	. Shaft Assy
21	13556-44B00	. Seal
22	13557-47070	. Washer
23	13604-42A00	. Screw
24	13551-17C00	. Valve, Throttle (125)
25	13258-44B00	. Gasket, Float Chamber
26	09492-30010	. Jet, Pilot (30)
27	09494-00638	. Jet, Needle (0-8)
27	09494-00639	. Jet, Needle (0-9)
28	13509-17C00	. O Ring
29	09491-24013	. Jet, Main (122.5)
30	13247-38B00	. Screw, Drain
31	13250-40C00	. Float/needle Valve Assy
32	13374-46710	. O Ring
33	13374-44080	. O Ring
34	13602-34390	. Screw
35	13602-05128	. Screw
36	13508-17C00	. Cap
37	13671-33600	. Clip
38	13550-17C20	. Shaft Assy
39	13574-28A00	. Ring
40	13502-45B10	. Cover, Diaphragm
40	13502-41C20	. Cover, Diaphragm
41	13418-17C00	. Cap, Starter
42	13687-17C00	. Hose (5x9x175 80)
43	13267-28A00	. Adjuster
44	13268-43410	. Spring
45	13427-38300	. Washer
46	13418-17C10	. Holder
47	13417-09110	. Spring

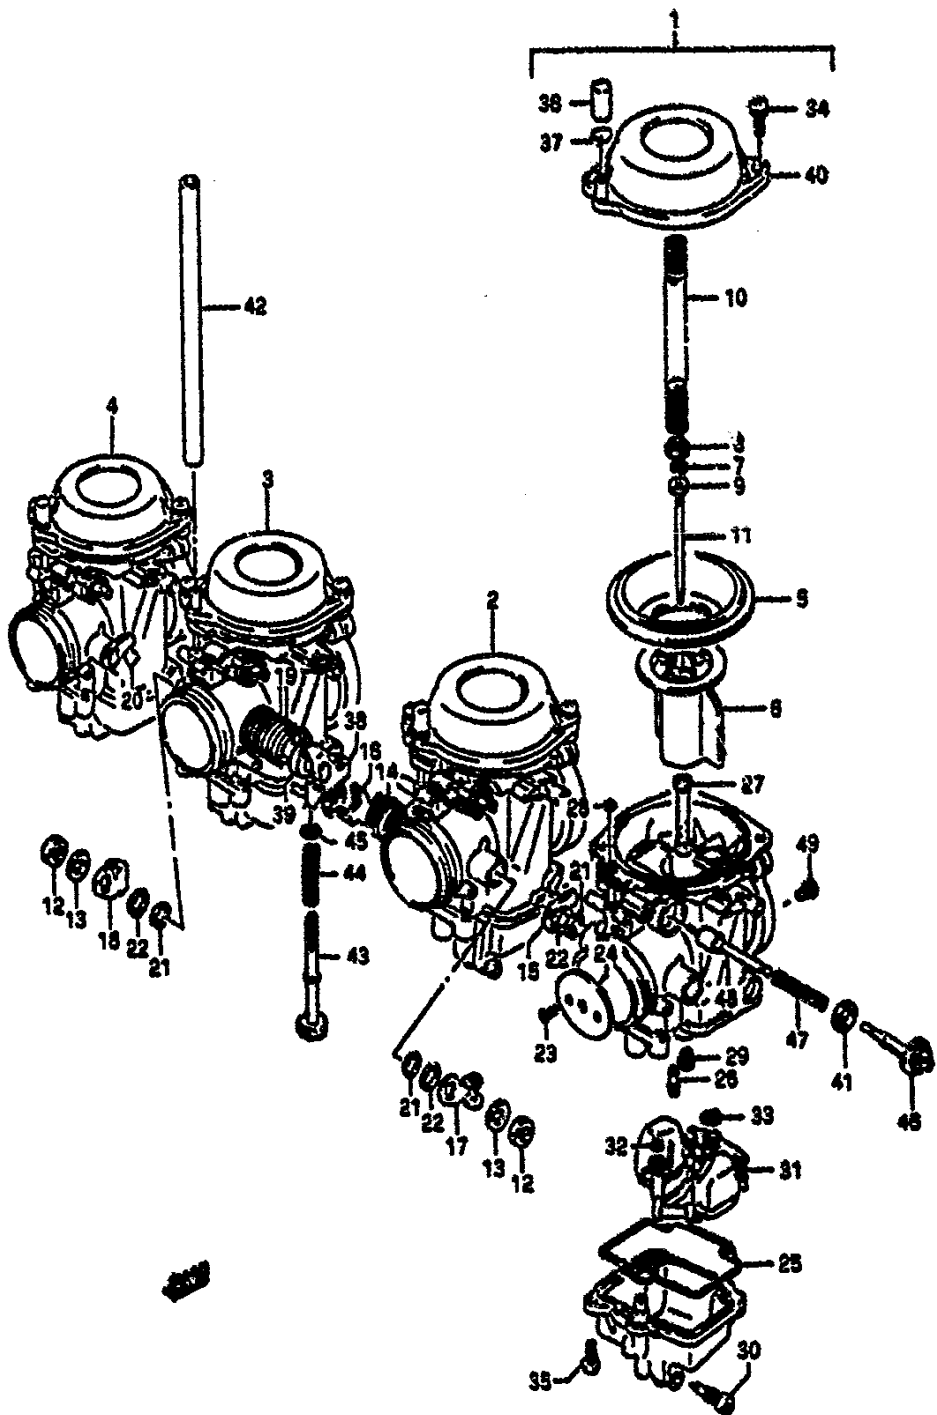 


Ref No	Part No	Description
48	13411-05320	. . Plunger Assy
49	09493-27002	. . Jet, Air (1.35)
49	09493-26004	. . Jet, Air (1.3)

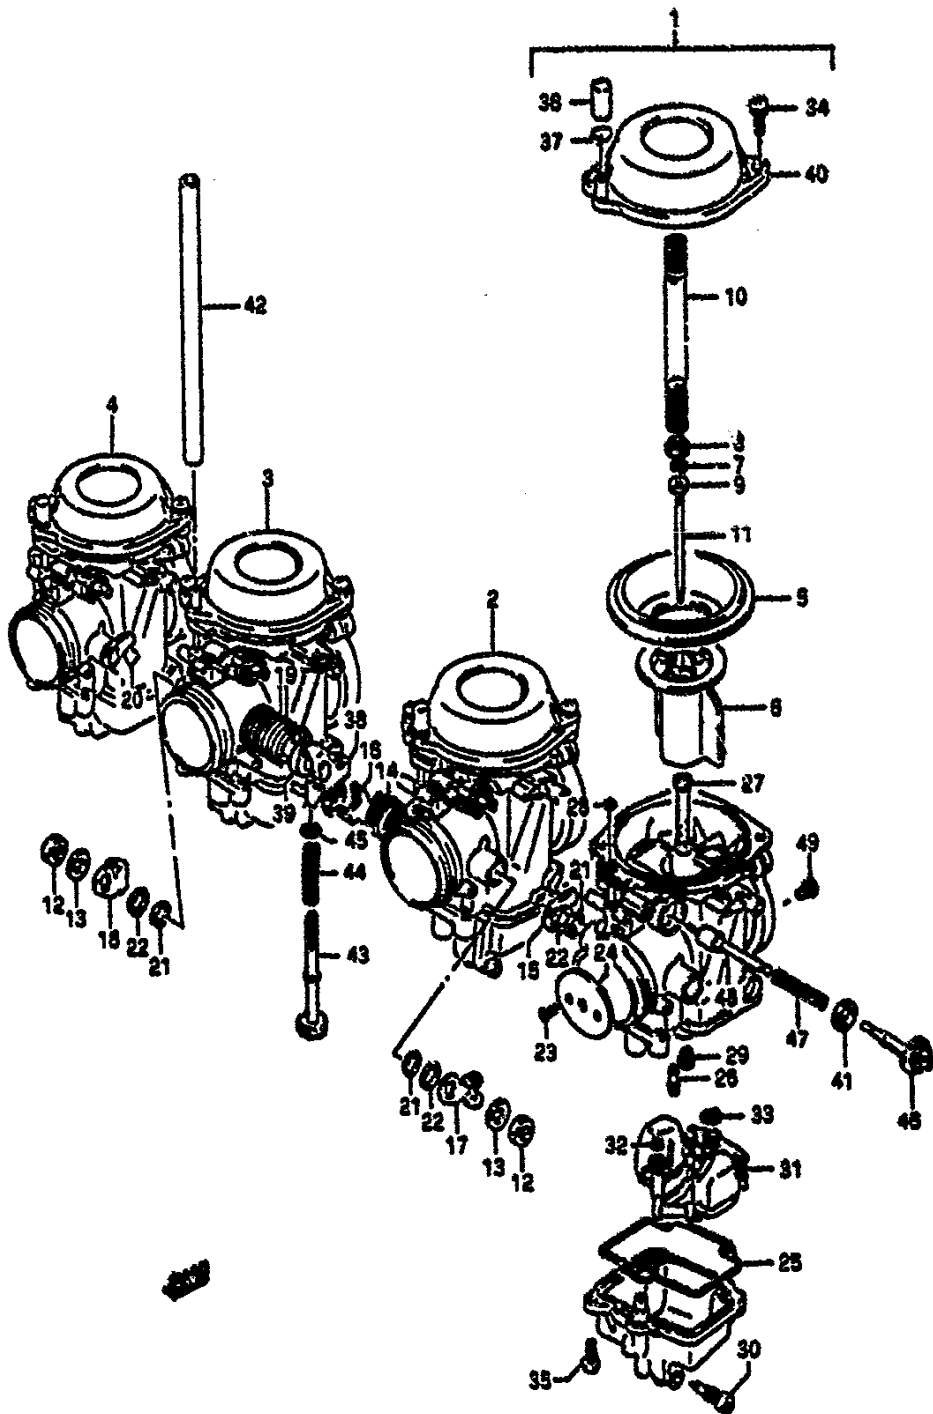 


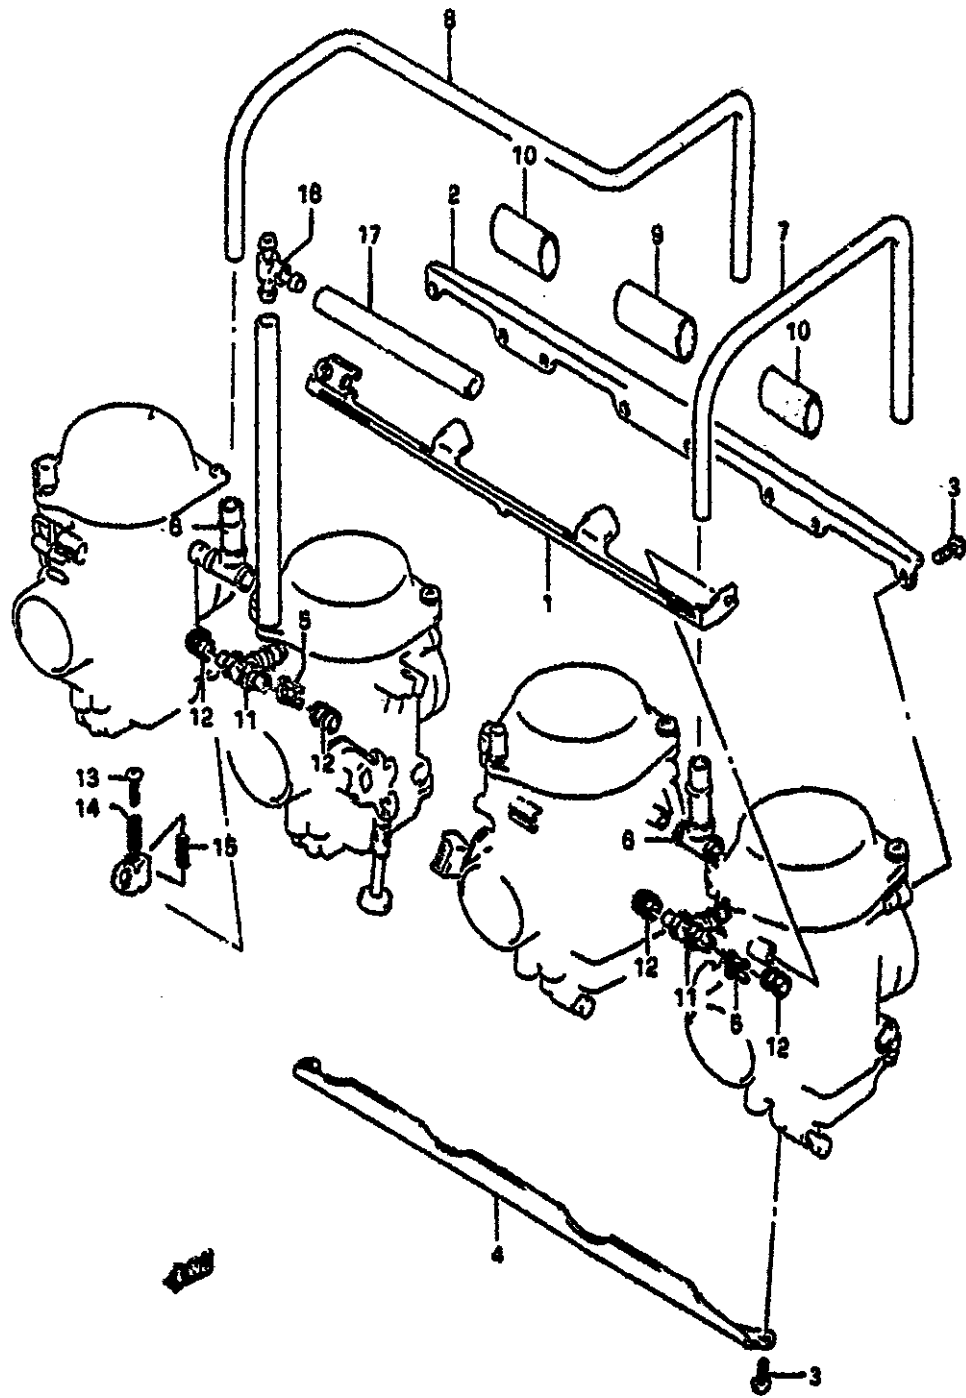 


Ref No	Part No	Description
1	13413-20C00	Lever
2	13628-17C10	Plate
3	13602-05128	Screw
4	13628-17C00	Plate
5	13439-17C00	Holder
6	13684-20C10	Hose
7	13683-41C00	Hose
8	13683-41C10	Hose
9	13684-17C00	Hose
10	13684-17C10	Hose
11	13685-44B00	Nipple
12	13673-44B00	Seal
13	13267-44B00	Screw
14	13271-44B00	Spring
15	13268-17C10	Spring
16	13685-48B00	Nipple
17	13687-17C00	Hose (5x9x175 100)

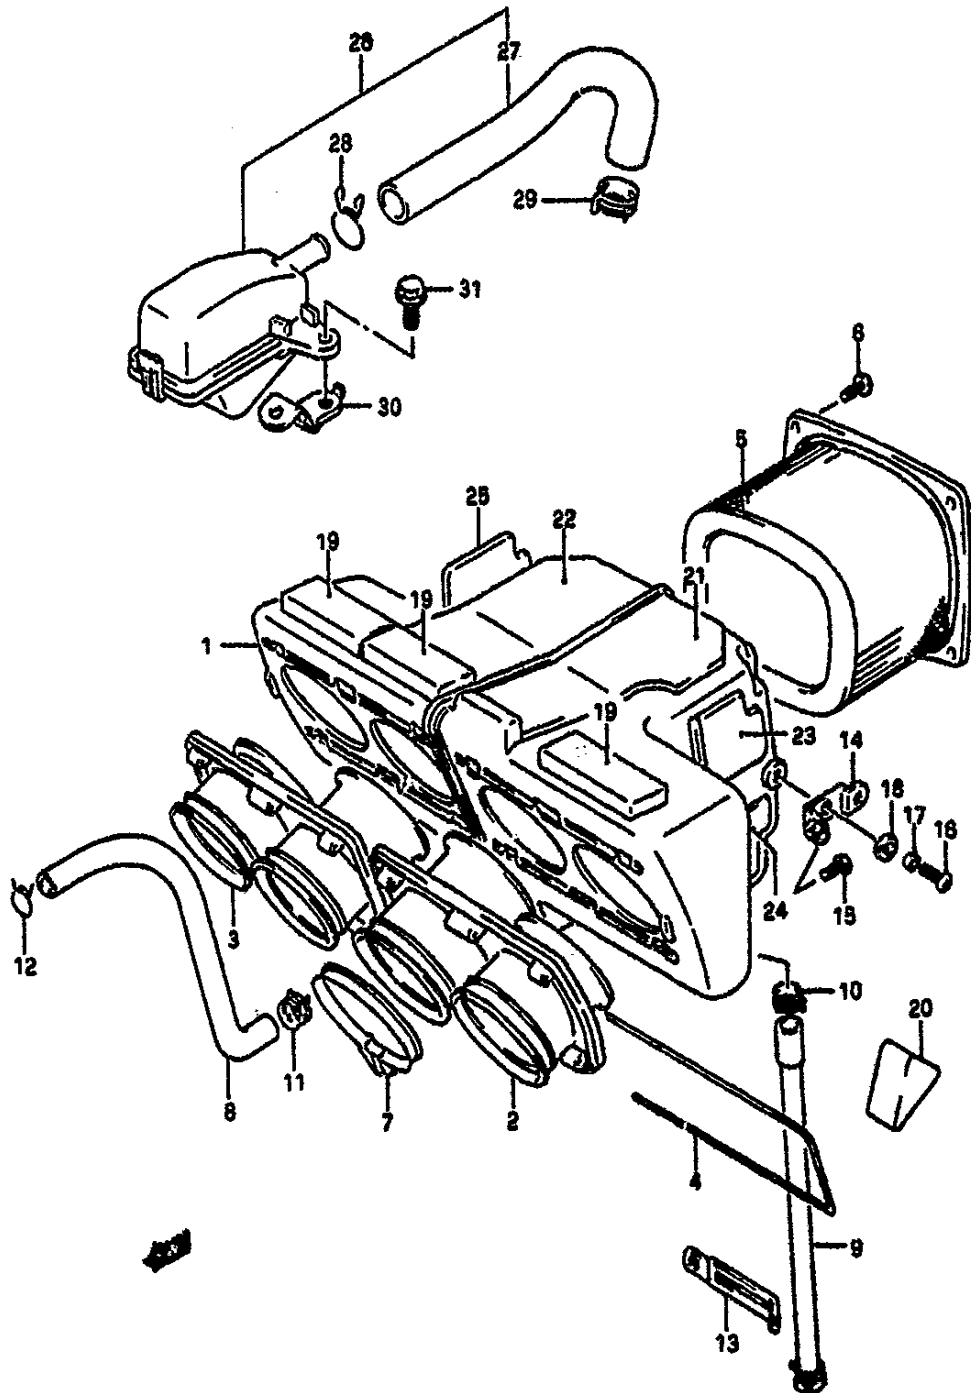 


Ref No	Part No	Description
1	13720-07D00	Case, Air Cleaner
1	13720-17C10	Case, Air Cleaner
1	13720-17C00	Case, Air Cleaner
2	13880-07D00	Tube, Outlet Lh
2	13880-17C00	Tube, Outlet Lh
3	13890-07D00	Tube, Outlet Rh
3	13890-17C00	Tube, Outlet Rh
4	13899-17C01	Shaft, Outlet Tube
5	13780-17C00	Filter Assy
5	13780-17C10	Filter Assy
6	02142-05164	Screw
7	09402-64205	Clamp
7	09402-66208	Clamp
8	13854-40C00	Tube, Breather
9	13870-41C00	Tube, Drain
10	09401-13406	Clip
11	13824-48B10	Clip
12	09401-16402	Clip
13	09404-10404	Clamp, Drain Tube
14	13760-17C01	Bracket, Cleaner Case
15	02142-06166	Screw
16	09125-06029	Screw (6x18)
17	09180-06073	Spacer
18	09161-09003	Cushion
19	13848-17C00	Cushion, Case
20	13897-17C00	Cushion, Air Vent Hose, No.1
21	13842-17C10	Sheet, Air Cleaner, no.1
22	13843-17C10	Sheet, Air Cleaner No.2
23	13844-17C10	Sheet, Air Cleaner No.3
24	13845-17C10	Sheet, Air Cleaner No.4
25	13846-17C10	Sheet, Air Cleaner No.5
26	13700-17D10	Cleaner Assy, 2nd Air
27	13853-17D10	• Tube, 2nd Air Cleaner
28	13824-17D10	• Clip
29	13826-17D10	• Clamp
30	13760-41C10	Bracket, 2nd Air Cleaner
31	01517-06164	Bolt

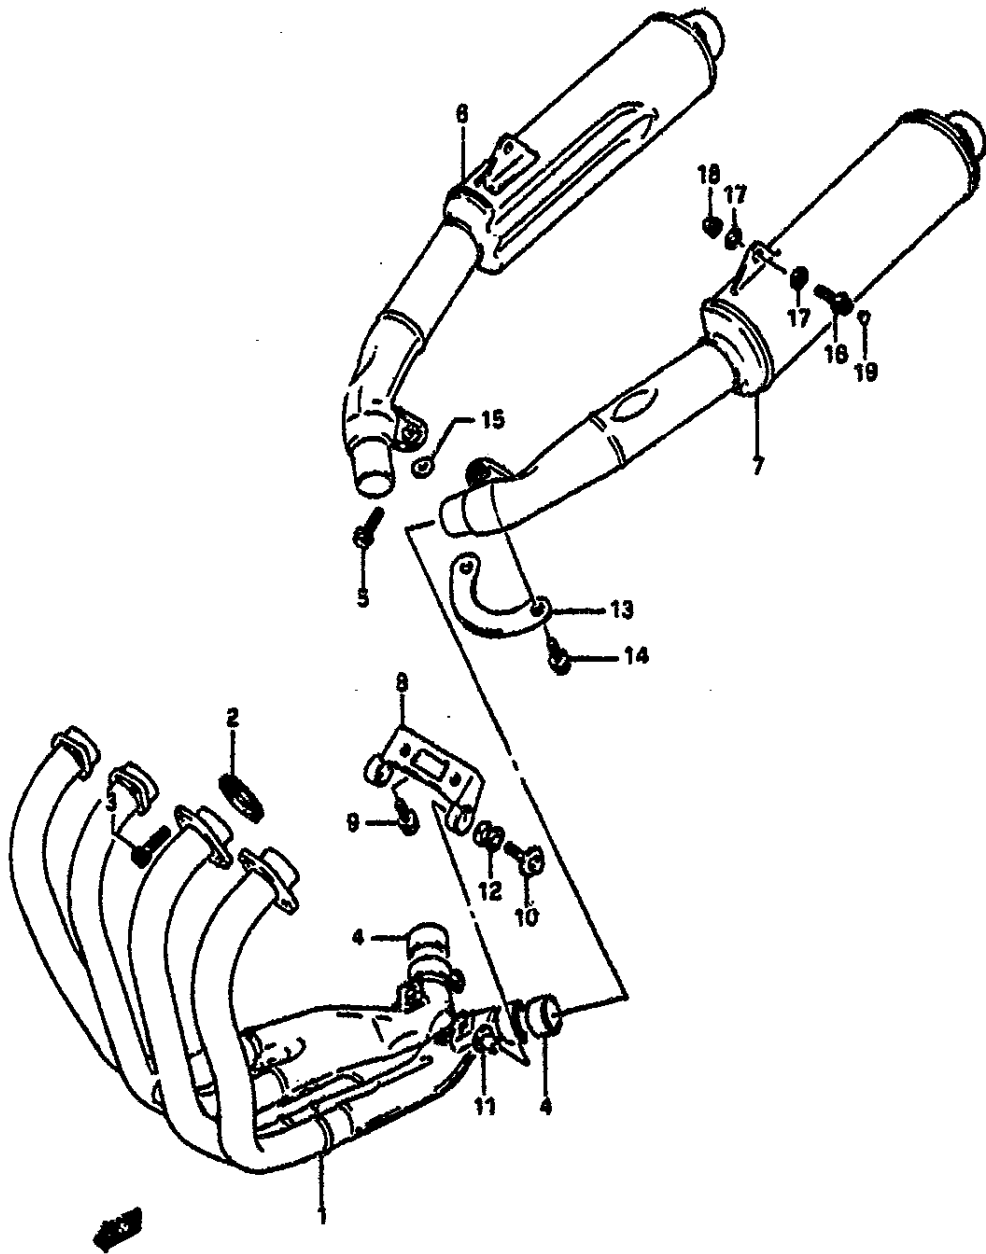 


Ref No	Part No	Description
1	14100-40C04-H01	Exhaust Assy
1	14100-40C30	Exhaust Assy
1	14100-40C13	Exhaust Assy
2	14181-40C00	Gasket, Exhaust Pipe
3	07110-08255	Bolt
4	14771-44B00	Connector, Muffler
5	01517-08407	Bolt
6	14310-40C51	Muffler, Rh
6	14310-40C81	Muffler, Rh
7	14340-40C52	Muffler, Lh
7	14340-40C82	Muffler, Lh
8	14770-40C10	Damper, Muffler Support
9	09100-08240	Bolt (8x20)
10	09118-08080	Bolt (8x35)
11	09180-08157	Spacer
12	09320-12057	Cushion
13	14761-40C01	Plate, Muffler Joint
14	01127-08166	Bolt
15	09160-08002	Washer (8.5x29x1.6)
16	07120-10357	Bolt
16	07120-10407	Bolt
17	09160-10066	Washer
18	08316-16105	Nut
18	08319-31105	Nut
19	09250-08012	Cap

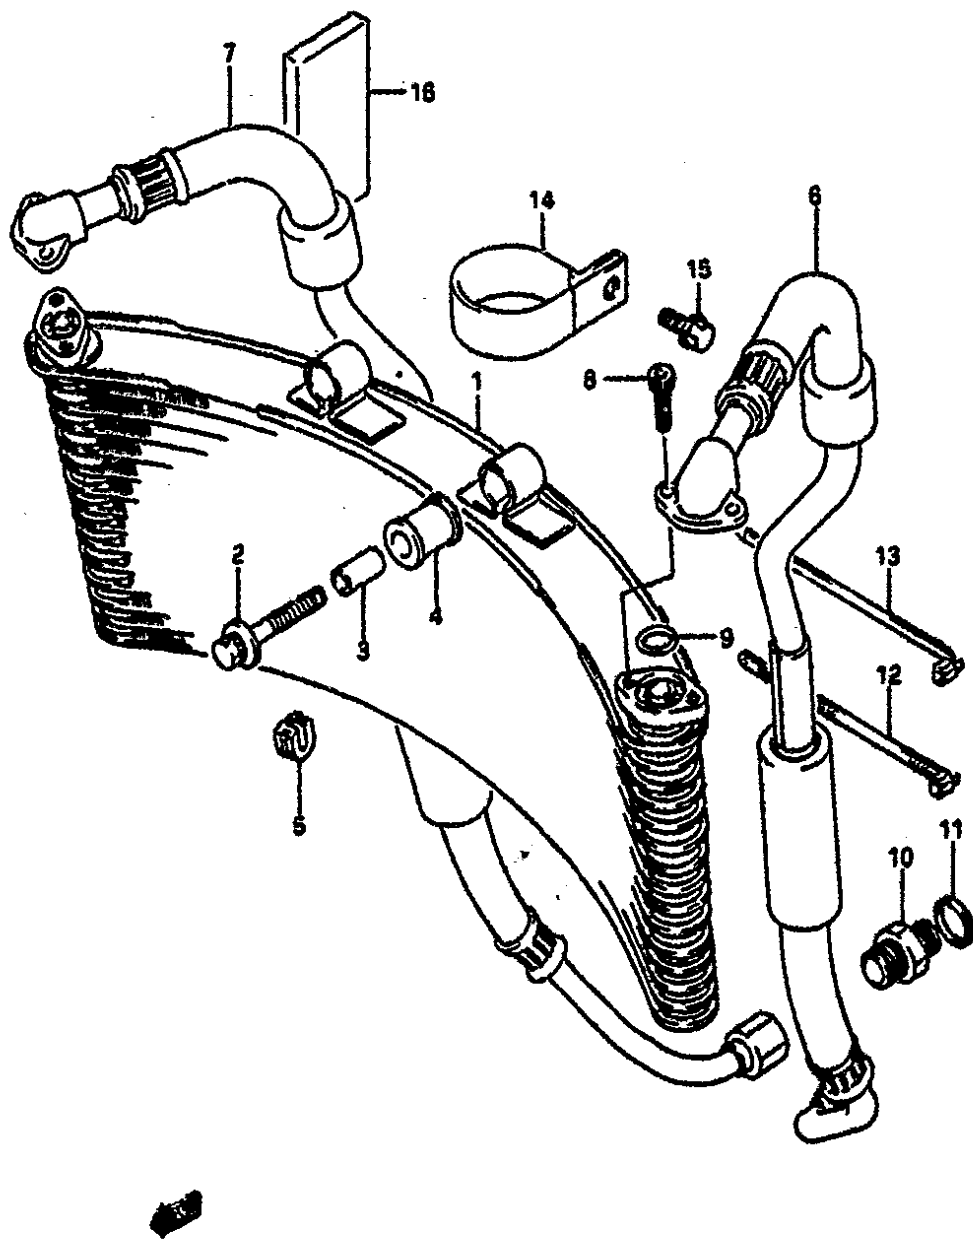 

Ref No	Part No	Description
1	16600-40C03	Cooler Assy, Oil
2	09118-08131	Bolt (8x40)
3	09180-08124	Spacer (8.8x12x24.5)
4	16629-27A01	Cushion, No.1
5	16628-27A00	Cushion, No.2
6	16460-40C10	Hose, Oil Cooler Lh
7	16470-40C10	Hose, Oil Cooler Rh
8	07110-06165	Bolt
9	09280-12008	O Ring
10	09360-20002	Bolt, Union
11	09168-16002	Gasket (16x22x2)
12	09407-22404	Clamp (I:220)
12	09407-22404	Clamp (I:220)
13	09407-25401	Clamp
14	09403-38401	Clamp
14	09403-38401	Clamp
15	01517-06128	Bolt
15	01517-06128	Bolt
16	94435-17D00	Protector

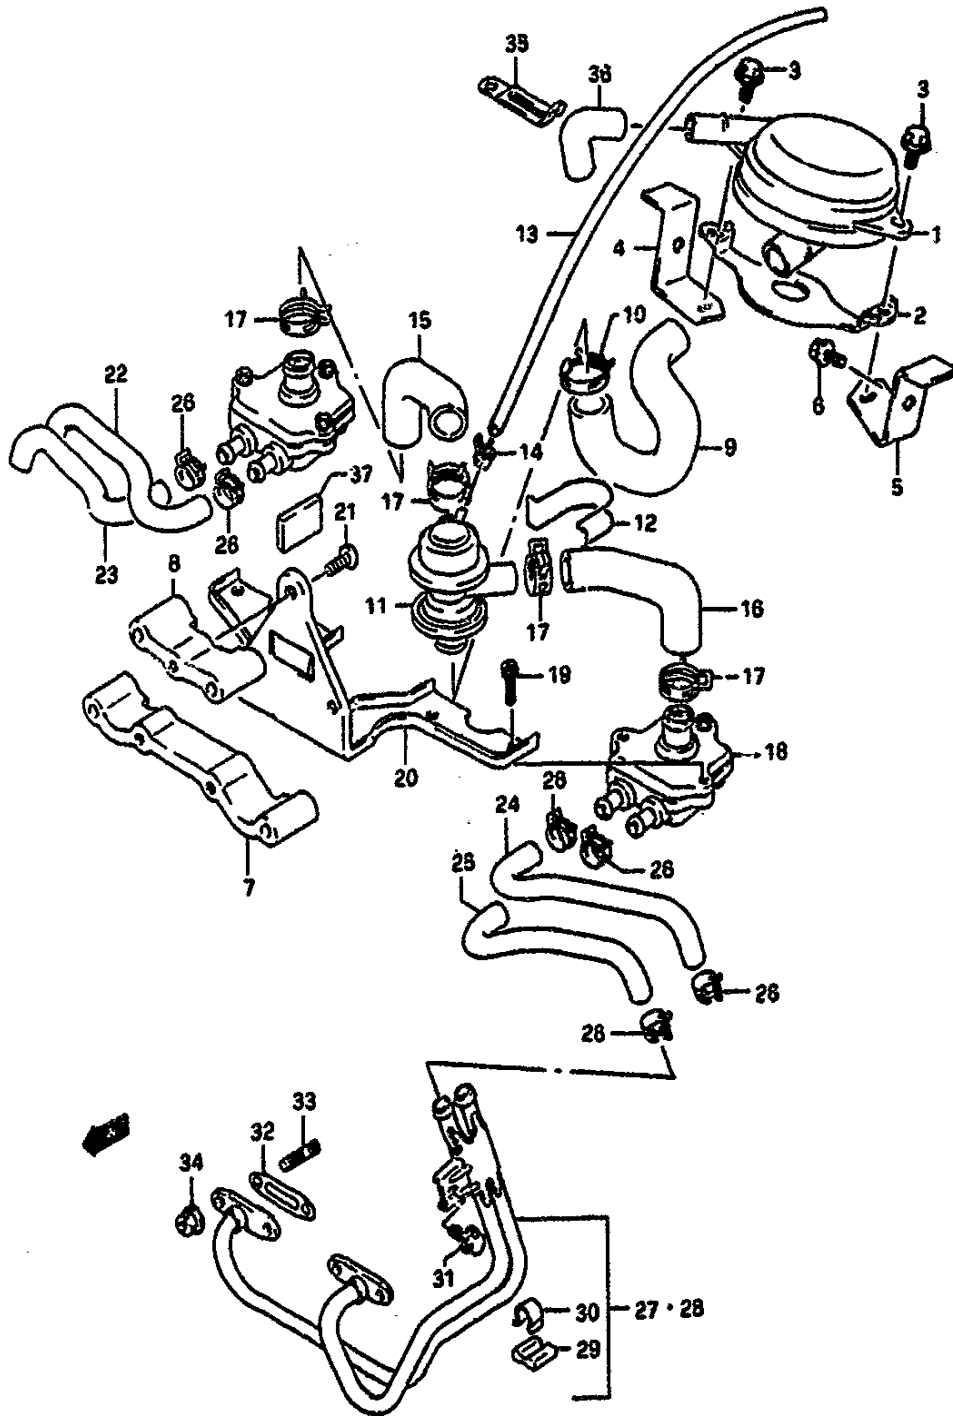 



Ref No	Part No	Description
1	18700-17C02	Cleaner Assy, 2nd Air
2	18761-41C00	Holder, 2nd Air Cleaner
3	01517-06166	Bolt
4	18750-40C01	Bracket, Air Cleaner, Rh
5	18760-40C01	Bracket, Air Cleaner, Lh
6	01517-06166	Bolt
7	18523-40C01	Spacer, Bracket, Lower
8	18524-40C01	Spacer, Bracket, Upper
9	18550-40C01	Hose, 2nd Air, No.3
10	09401-25402	Clip
11	18510-48B00	Valve Assy, Air Switching
12	18522-17C00	Clamp, Switching Valve
13	09359-45852-300	Hose, Vacuum
14	09401-07401	Clip
15	18481-40C00	Hose, 2nd Air No.2, rh
16	18482-40C00	Hose, 2nd Air No.2, lh
17	09401-21401	Clip
18	18450-48B00	Valve Assy, 2nd Air Reed
19	07110-05167	• Bolt
20	18521-40C01	Bracket, Air Valve
21	02142-06126	Screw
22	18445-17D00	Hose, 2nd Air No.1, Rh In
23	18447-17D00	Hose, 2nd Air No.1, Rh Out
24	18446-17D00	Hose, 2nd Air No.1, Lh
25	18448-17D00	Hose, 2nd Air No.1, Lh Out
26	09401-13408	Clip
27	18401-40C00	Pipe, 2nd Air, Rh
28	18402-40C00	Pipe, 2nd Air, Lh
29	18428-48B00	• Cushion
30	18429-17C00	• Clip
31	01517-06125	Bolt
32	18441-17C10	Gasket, Air Pipe
33	01421-06125	Stud Bolt
34	08316-16064	Nut
35	09404-06401	Clamp (l:50)
35	09404-06403	Clamp (l:70)
36	18731-17C00	Hose, Cleaner Inlet
37	18519-17C00	Cushion, Switching Valve

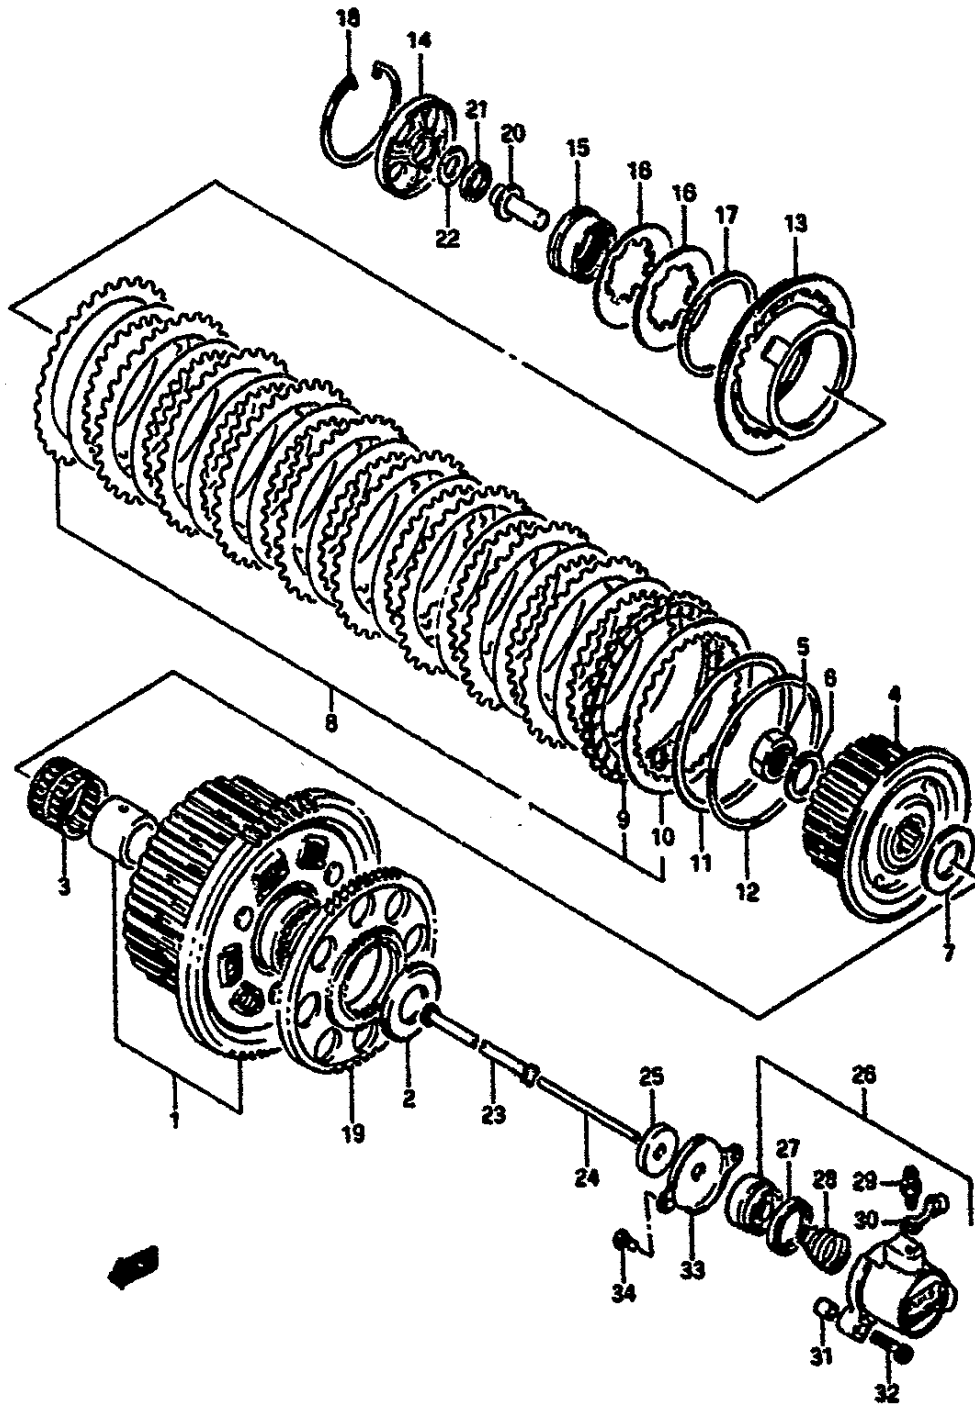 


Ref No	Part No	Description
1	21200-40813	Gear, Primary Driven (nt:72)
1	21200-40820	Gear, Primary Driven (nt:72)
2	09160-25067	Washer
3	09263-35017	Bearing
4	21410-40C01	Hub, Sleeve
5	09140-24014	Nut
6	09164-24006	Washer
7	09160-25056	Washer (25x50x2.5)
8	21400-40C00	Plate Assy, Clutch
9	21441-48B00	• . Plate, Drive No.1 (t:2.6)
10	21451-48B00	• . Plate, Driven (t:2)
11	09164-00007	Wave Washer
12	21471-40C01	Seat, Wave Washer
13	21462-40C02	Disc, Pressure
14	21463-40C01	Lifter, Clutch Pressure Disk
15	21611-40C01	Holder, Clutch Spring
16	09164-47001	Spring
17	21623-40C00	Seat, Clutch Spring
18	09381-84002	Circlip
19	22721-06B02	Gear, Alternator Drive (nt:37/66)
20	23121-07A00	Piece, Push
21	09263-15003	Bearing
22	09160-15015	Washer (15x28x1)
23	23110-27A00	Rod, Push Rh
24	23111-05A01	Rod, Push Lh (l:101.5)
25	09285-06015	Oil Seal
26	23160-06B01	Cylinder, Clutch Release
27	23163-06B00	• . Cup
28	23164-05A00	• . Spring
29	59121-01A00	• . Bleeder
30	59122-01A00	• . Cap, Bleeder
31	04211-09129	Pin
32	07110-06255	Bolt
33	23117-27A03	Cover, Cylinder
34	02112-06106	Screw

Ref No	Part No	Description
1	24121-40C03	Countershaft (nt:13)
2	24221-40C00	Gear, 2nd Drive (nt:19)
3	09380-25013	Circlip
4	24231-48B01	Gear, 3th Drive (nt:20)
5	24241-48B00	Gear, 4th Drive (nt:22)
6	09301-25001	Bush
7	24251-48B02	Gear, 5th Drive (nt:25)
8	24252-48B00	Bush
9	09167-25021	Washer
10	09167-25013	Washer, Lock
11	09169-25001	Washer, Lock
12	09380-25003	Circlip
13	09262-25051	Bearing, Rh
14	09390-62011	C Ring
15	09285-20006	Oil Seal
16	24741-27A00	Holder, Bearing
17	02122-06167	Screw
18	09263-20049	Bearing, Lh
19	04221-07129	Pin
20	24131-40C10	Driveshaft
21	24311-48B00	Gear, 1st Driven (nt:31)
22	09300-22005	Bush
23	08211-20341	Washer, Rh
24	08211-22341	Washer, Lh
25	24321-48B02	Gear, 2nd Driven (nt:31)
26	09300-28002	Bush
27	08211-28361	Washer
28	08331-31286	Circlip
29	24331-48B03	Gear, 3rd Driven (nt:25)
30	24332-48B00	Bush
31	09167-28001	Washer, Rh
32	09167-28008	Washer, Lh (t:2)
33	24341-06B01	Gear, 4th Driven (nt:23)
34	24351-48B03	Gear, 5th Driven (nt:21)
35	09263-20040	Bearing, Rh
36	04221-07209	Pin (l:20)
37	09267-25011	Bearing, Lh
38	09390-62011	C Ring
39	09283-34005	Oil Seal (34x62x6)
40	24751-40C01	Plate
41	01107-06107	Screw
42	27510-48B00	Sprocket, Engine (nt:15)
43	09180-25081	Spacer (25x34x18.1)
44	09159-20004	Nut
45	09167-25019	Washer, Lock
46	09280-25001	O Ring (d:1,id:24.5)
47	27600-40C20-118	Chain, Drive (rk532gsv2x118le)


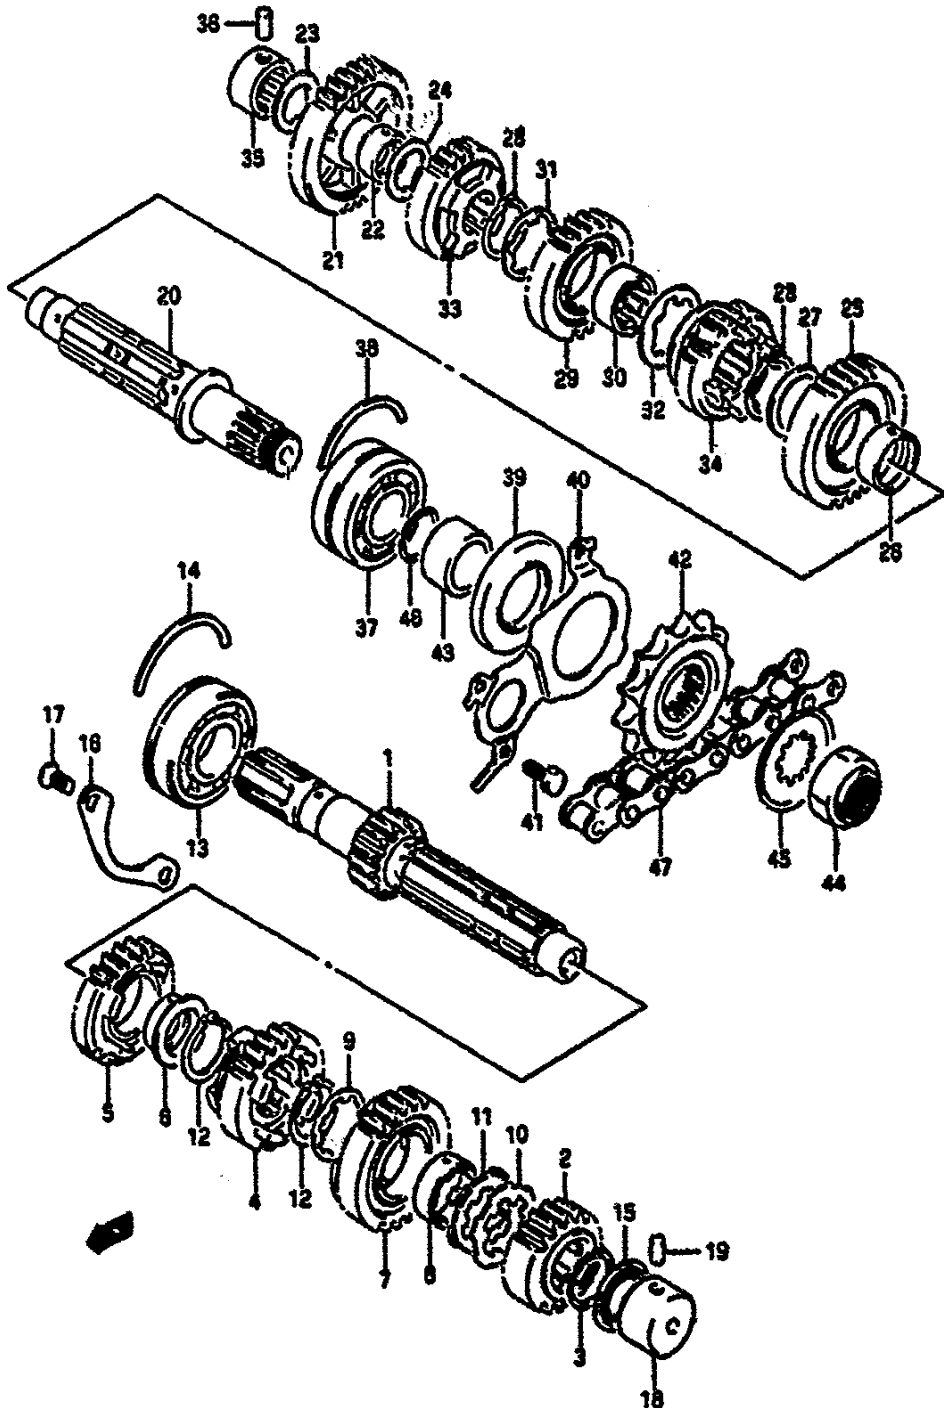 


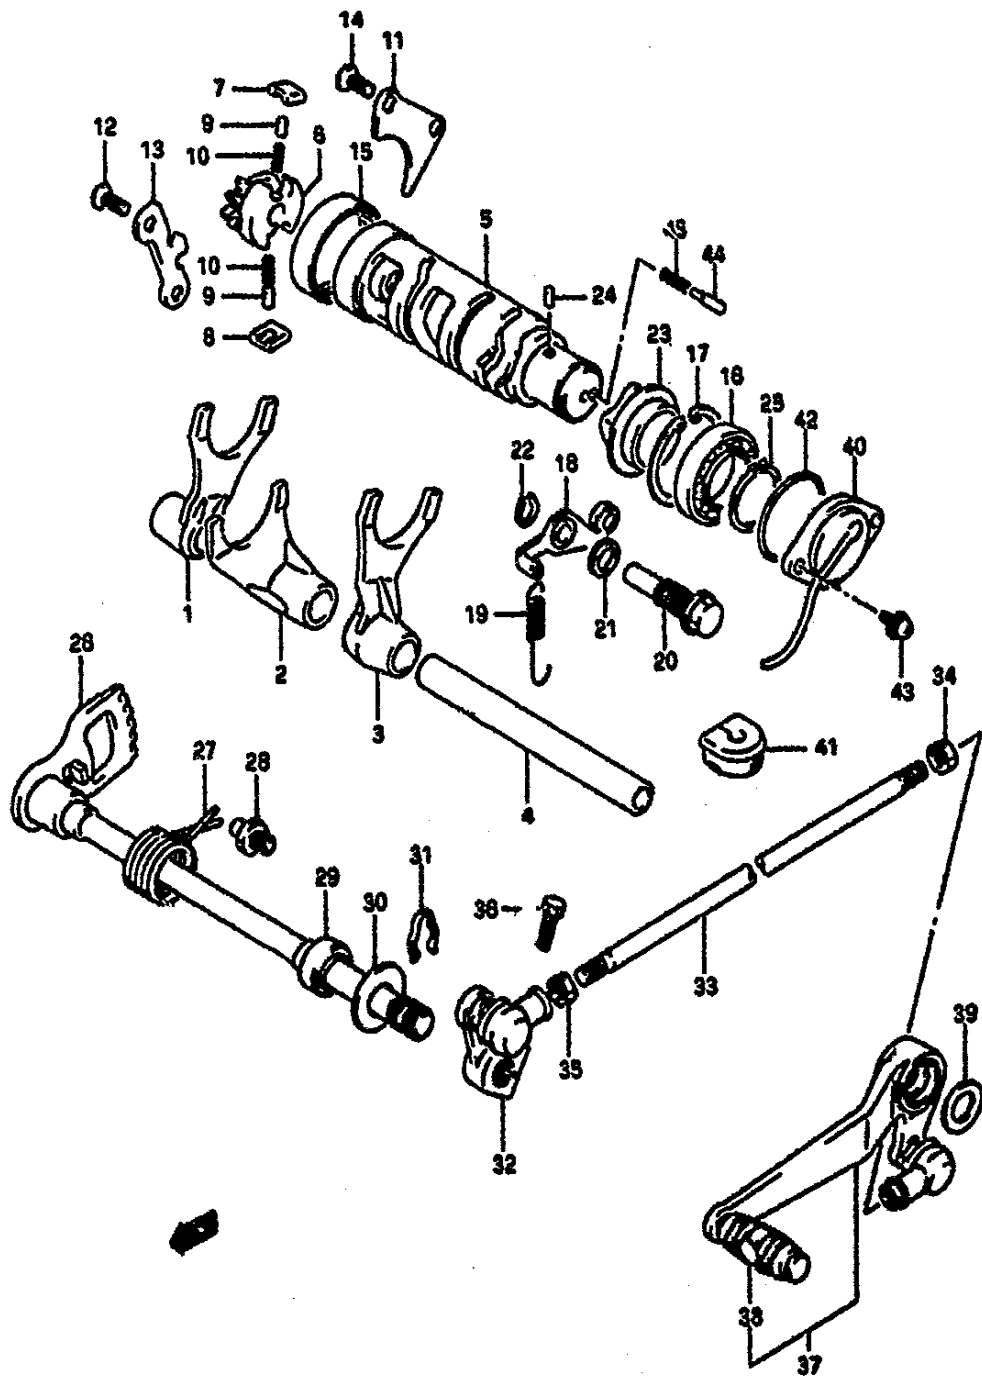 


Ref No	Part No	Description
1	25211-06B01	Fork, Gear Shifting No.1
2	25221-06B00	Fork, Gear Shifting No.2
3	25231-06B00	Fork, Gear Shifting No.3
4	25411-27A00	Shaft, Gear Shifting Fork
5	25310-06B02	Cam, Gear Shifting
6	25322-31301	Gear, Cam Driven
7	25323-34201	Pawl, No.1
8	25324-34201	Pawl, No.2
9	09261-05003	Pin
10	09440-04003	Spring
11	25331-31301	Lifter, Pawl
12	02122-06128	Screw
13	25341-27A00	Guide, Cam
14	02122-06128	Screw
15	09263-43001	Bearing, Rh
16	08110-69050	Bearing, Lh
17	08331-41426	Circlip
18	25350-27A00	Stopper, Cam
19	09443-09031	Spring
20	25353-27A00	Shaft, Stopper
21	09168-10002	Washer
22	08331-31086	Circlip
23	25381-38400	Plate, Stopper
24	06211-04063	Pin
25	08331-31256	Circlip
26	25510-19C00	Shaft, Gear Shifting
27	09444-26017	Spring
28	25671-01000	Stopper, Arm
29	09285-12002	Oil Seal (12x22x9)
30	09160-12020	Washer (12.5x27x1.6)
31	09384-12001	Circlip
32	25520-19C02	Arm, Gear Shift Link
33	25525-17C02	Rod, Gear Shift Link
34	09140-06011	Nut
35	08310-11067	Nut
36	01107-06257	Bolt
37	25600-17C03	Lever Assy, Gear Shifting
38	25652-16500	• . Cover
39	09160-18022	Washer (18x24x1)
40	37720-48B00	Body, Gear Shifting Switch
41	33885-27A01	Grommet, Lead Wire
42	09280-36001	O Ring (d:2.4,id:36.2)
43	09138-05003	Screw
44	09209-05011	Contact
45	09440-04010	Spring

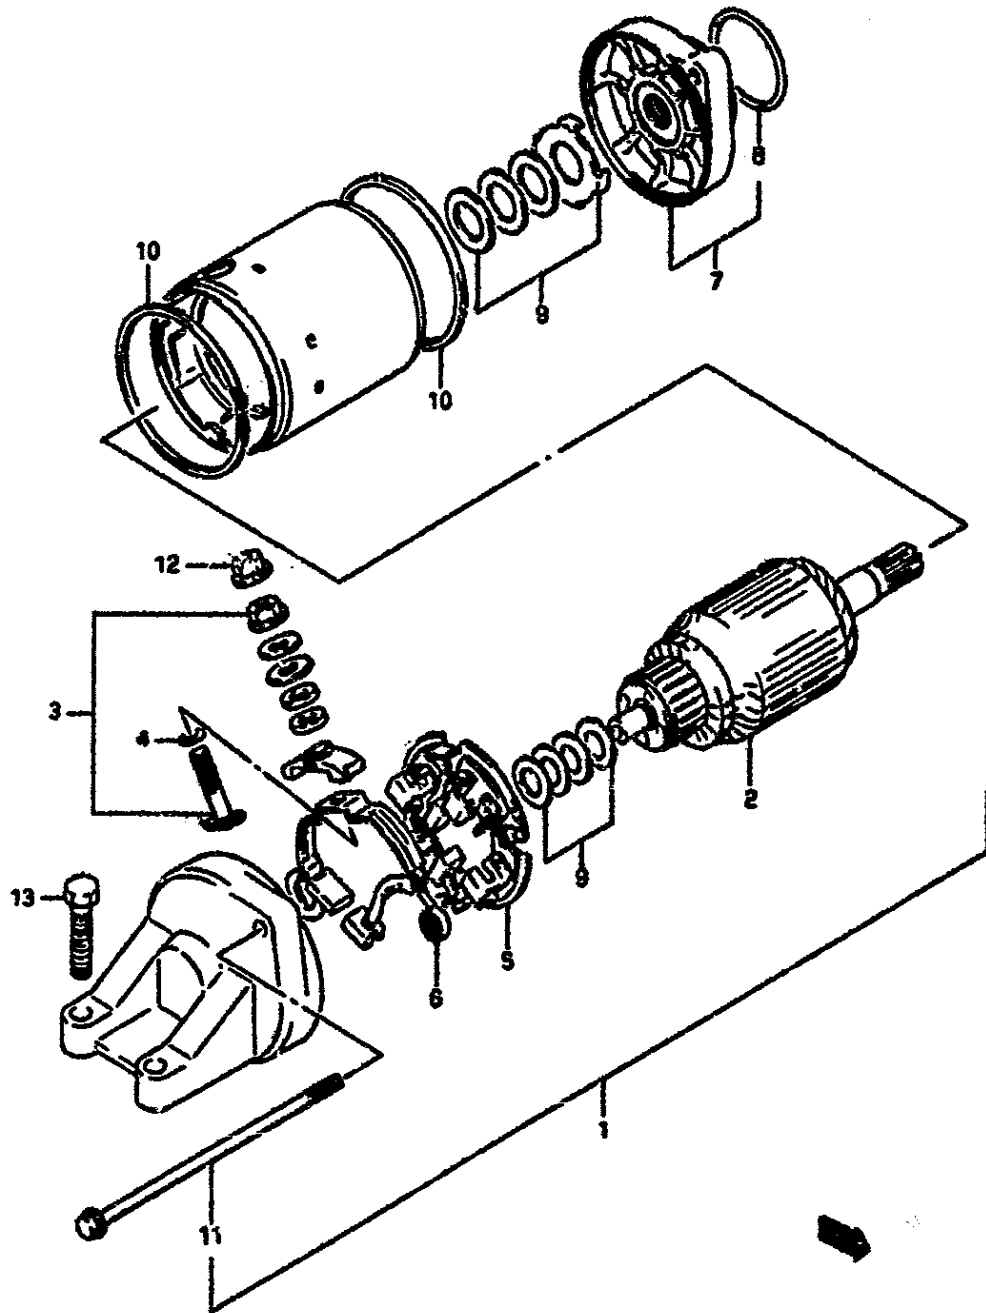 


Ref No	Part No	Description
1	31100-40C02	Motor Assy, Starting
2	31310-40C02	. Armature
3	31130-38B00	. Terminal Set, Brush
4	31143-49040	. O Ring
5	31132-38B00	. Holder Set, Brush
6	31135-38B00	. Spring, Brush
7	31150-40C00	. Bracket Assy, Front
8	31156-40C00	.. O Ring
9	31170-19B10	. Washer Set
10	31264-31300	. O Ring
11	31280-40C00	. Bolt
12	08361-35066	Nut
13	09128-06024	Bolt (I:25)

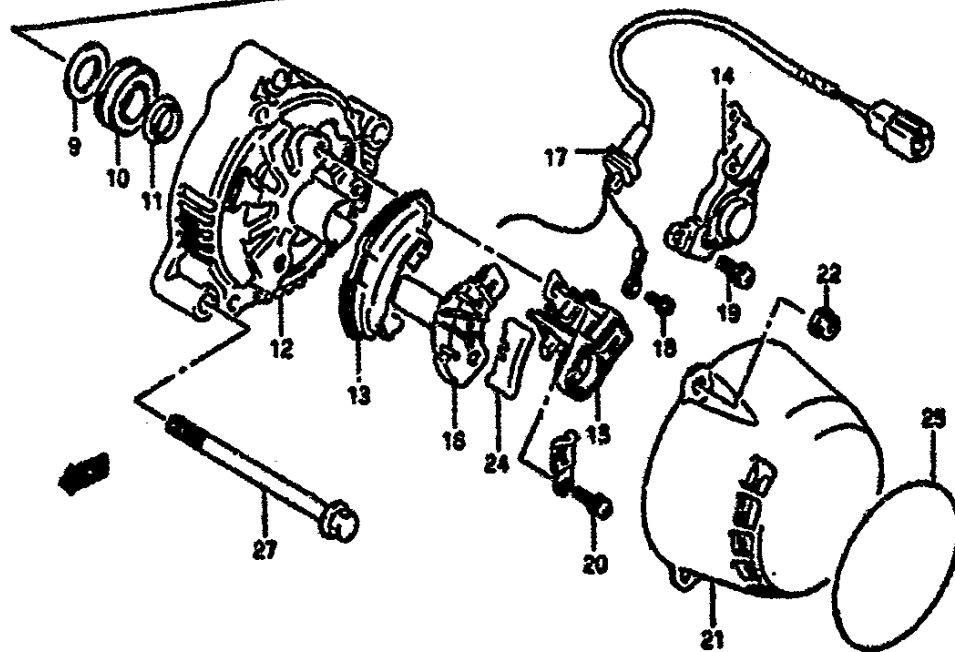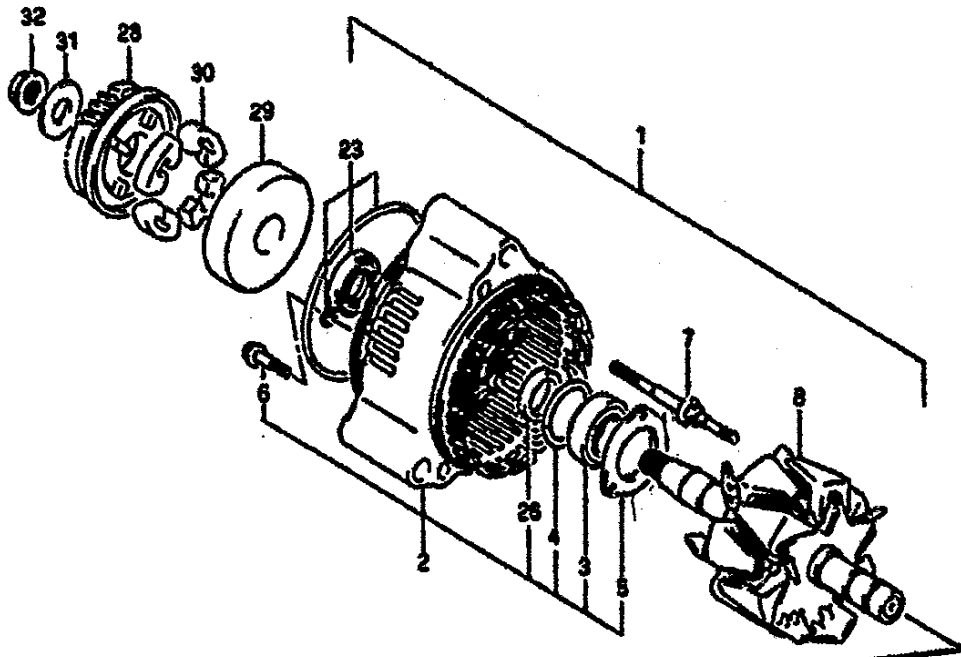  

Ref No	Part No	Description
1	31400-48B03	Alternator Assy
2	31580-48B00	• . Frame, Drive End
3	31612-06B00	•• .. Bearing
4	31613-48B00	•• .. Cover, Bearing
5	31585-48B00	•• .. Retainer, Bearing
6	31586-48B00	•• .. Screw, Bearing Retainer
7	31587-19C00	•• .. Stud Bolt
8	31710-48B03	• . Rotor Assy
9	31613-82610	• . Cover (1)
10	31612-48B00	• . Bearing
11	31613-27A10	• . Cover (2)
12	31611-48B00	• . Frame, End
13	31621-27A00	• . Holder, Rectifier
14	32500-27A00	• . Regulator
15	31656-48B00	• . Holder, Brush
16	31687-27A00	• . Cover, Rectifier
17	31480-48B00	• . Lead Wire
18	31516-85250	• . Screw
19	31688-27A00	• . Screw (5x17)
20	31688-06B00	• . Screw (5x18)
21	31614-48B00	• . Cover
22	08316-16055	• . Nut
23	31780-48B00	• . Oil Seal Set
24	31514-27A00	• . Bush
25	31615-17C00	Protector, Alternator
26	31776-06B00	Spacer
27	01517-08908	Bolt
28	22730-06B03	Gear, Generator Driven (nt:28)
29	22733-27A04	Housing, Damper
30	21231-06B00	Damper
31	08211-10283	Washer
32	08316-26106	Nut

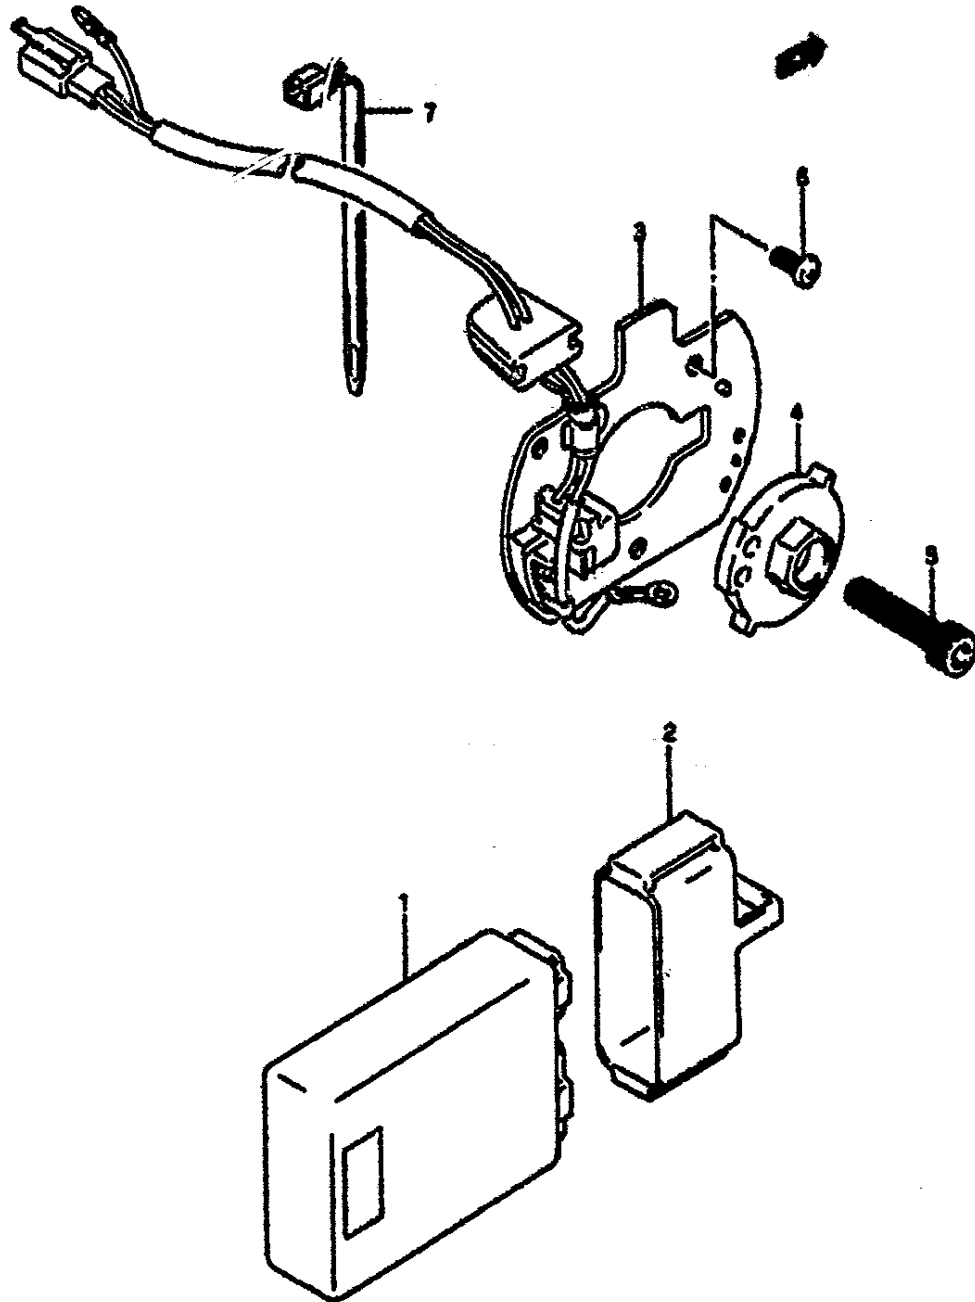 



Ref No	Part No	Description
1	32900-40C00	Igniter Unit
1	32900-40C30	Igniter Unit
2	32980-40C00	Cushion
3	33110-17C00	Signal Generator Assy
4	33120-19C00	Rotor, Signal
5	07110-08306	Bolt
6	02112-05107	Screw
7	09407-14403	Clamp

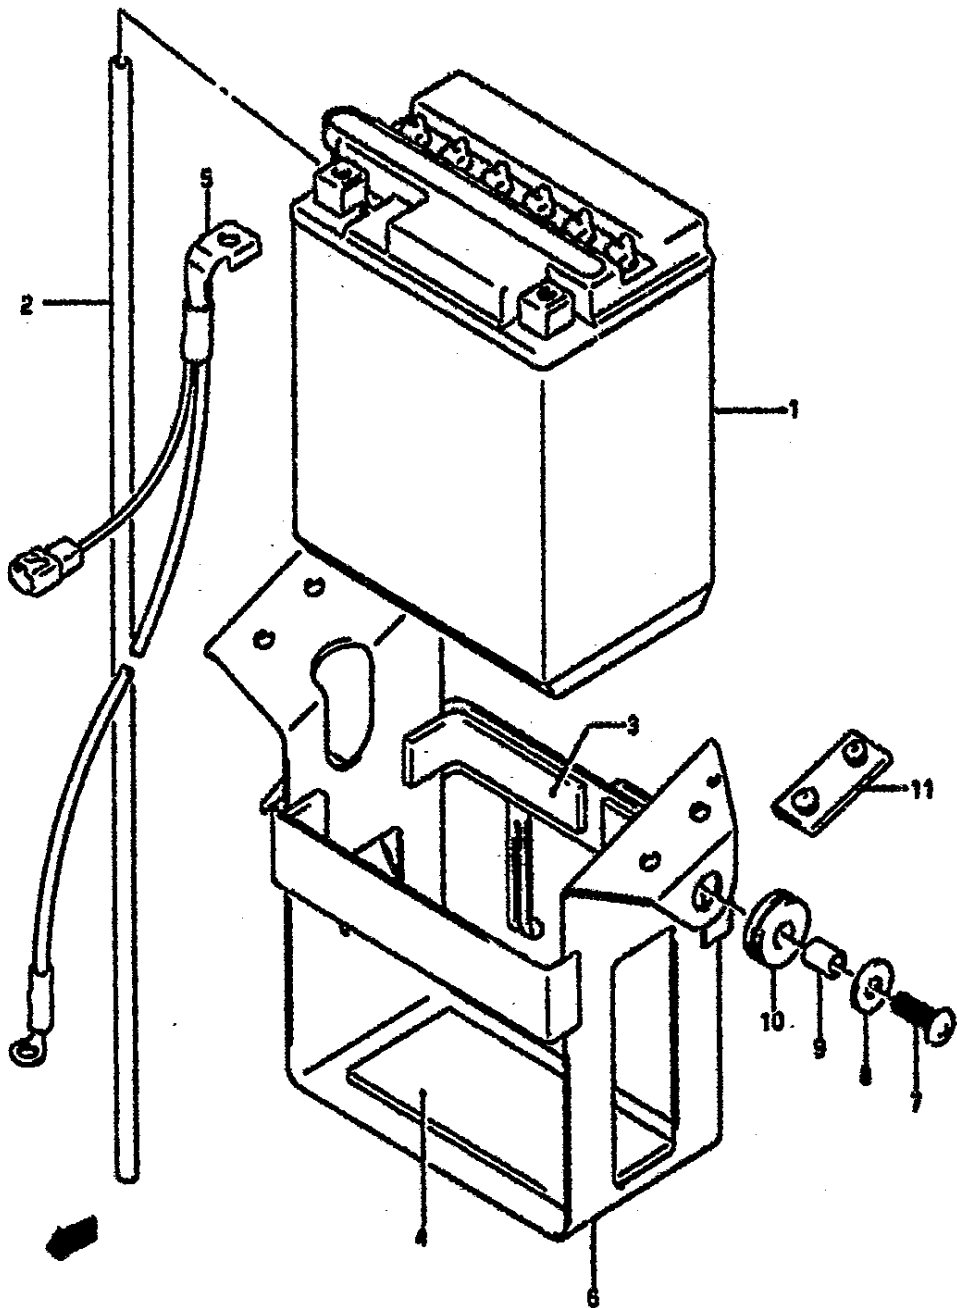 


Ref No	Part No	Description
1	33610-49210	Battery (12v,14ah)
2	33680-14A00	Hose, Battery Exhaust
3	33652-29100	Protector (20x90)
4	33651-37000	Cushion
5	33860-40C01	Lead Wire (-)
5	33860-40C02	Lead Wire (-)
6	41540-40C01	Holder, Battery
7	09125-06038	Screw (6x25)
8	09160-06006	Washer (6.5x18x1.6)
9	09180-06152	Spacer (6.4x9x8.5)
10	09320-09021	Cushion
11	09329-05005	Cushion

Ref No	Part No	Description
1	31800-49100	Relay, Starting Motor
2	09128-06013	Screw (I:8)
3	08361-35066	Nut
4	33810-41C00	Lead Wire, Starting Motor
5	31861-10D10	Cap, Terminal
6	47410-17C00	Holder, Electric Parts
7	33410-40C00	Coil, Ignition No.1
8	33420-17C00	Coil, Ignition No.2
8	33420-17C10	Coil, Ignition No.2
9	09180-06146	Spacer (6.4x10x32)
10	02112-06556	Screw
11	33510-20C02	Cap, Spark Plug
12	33541-20C00	Seal, Plug
13	33542-38B00	Seal, Hightension Cord
14	33543-48B00	Cover

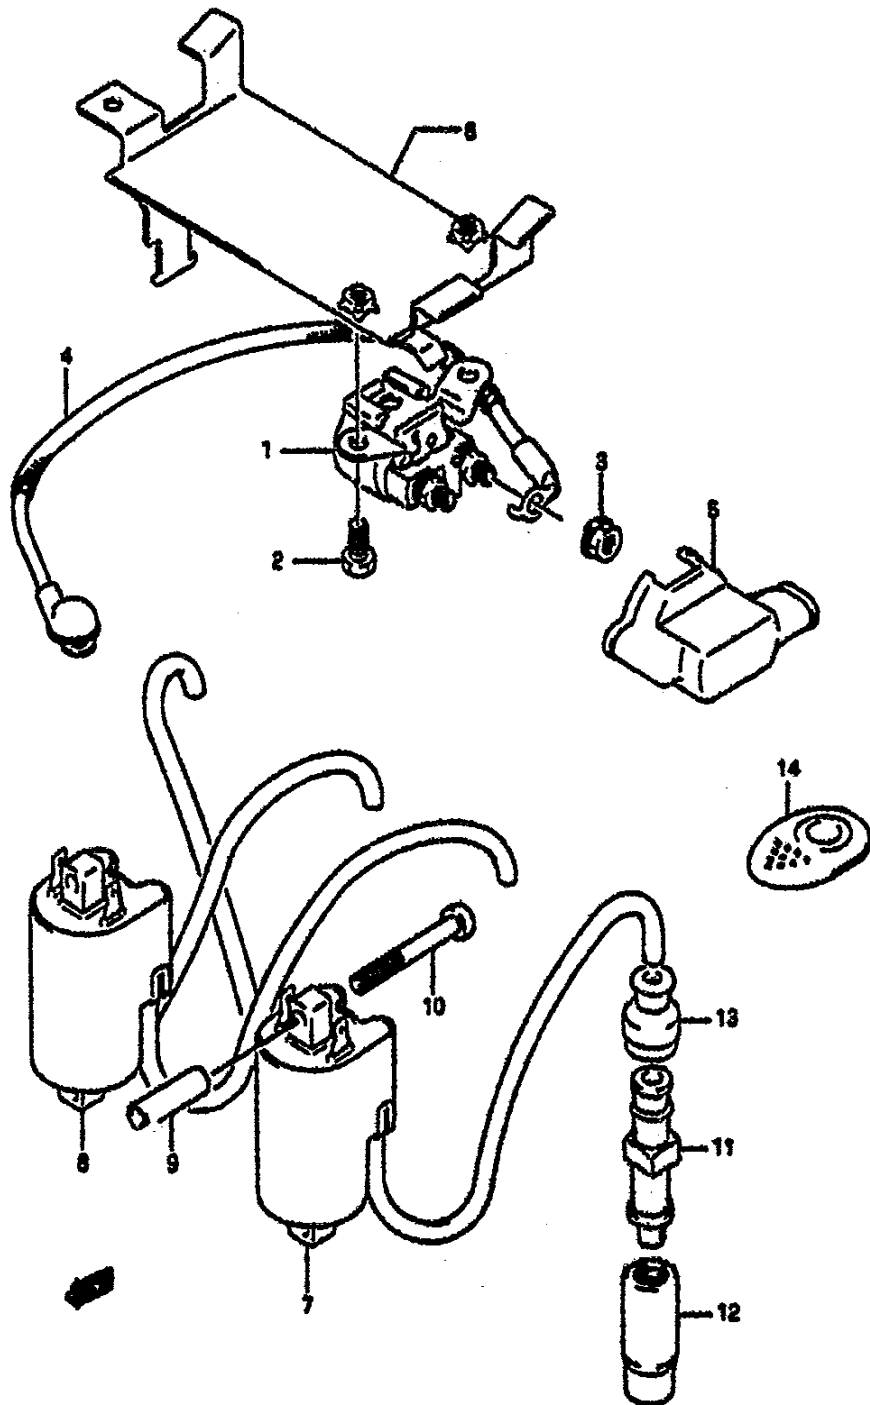 


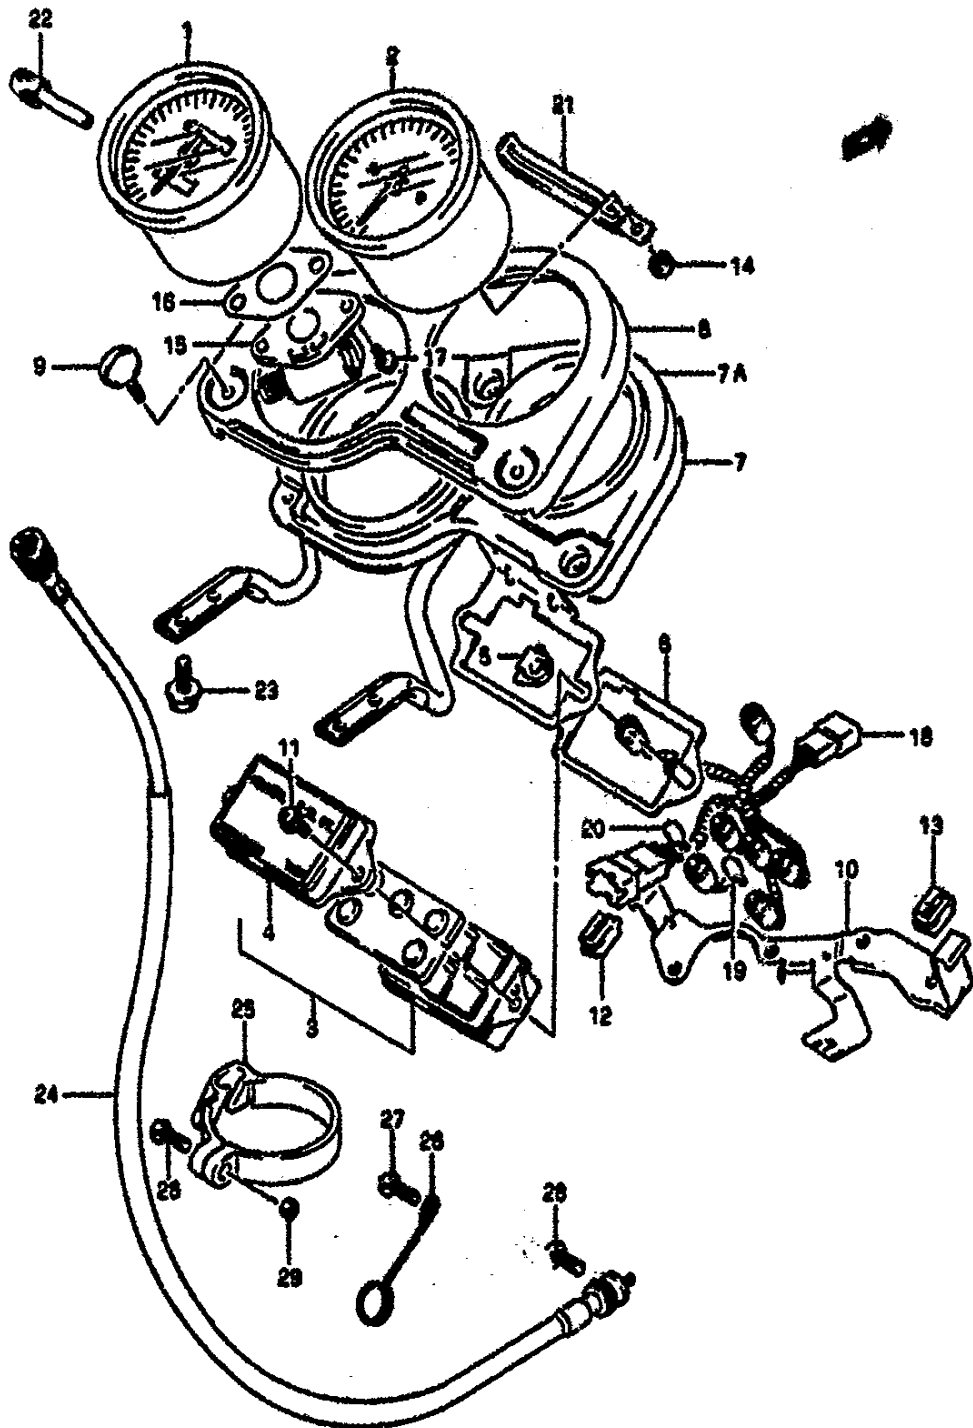 


Ref No	Part No	Description
1	34110-41C20	Speedometer (kilo)
1	34110-41C30	Speedometer (mile/kilo)
2	34210-41C20	Tachometer
3	36380-40C20	Box Assy, Pilot Lamp
3	36380-40C30	Box Assy, Pilot Lamp
4	36381-40C20	• Case, Upper
5	34716-32C00	Damper
6	34718-32C00	Plate, Pilot Box
7	34950-41C20	Plate, Setting
7a	34191-41C20	Cushion
8	34960-41C20	Panel, Meter
9	34186-41C20	Bolt, Setting
10	34111-41C20	Bracket
11	02112-74085	Screw
12	34189-17C00	Damper, Lh
13	34189-04A30	Damper, Rh
14	08310-11045	Nut
15	34131-48B10	Box, Meter Gear
16	34132-17C00	Gasket, Gear Box
17	02112-34128	Screw
18	34170-41C20	Socket
19	09471-12103	Bulb (12v,3w)
20	09471-12108	Bulb (12v,1.7w)
21	09404-04402	Clamp
22	34124-49400	Knob
23	01517-06125	Bolt
24	34910-41C00	Cable Assy, Speedometer
25	34938-40C60	Guide, Speedometer Cable No.2
26	34939-17D00	Guide, Speedometer Cable No.3
27	02142-06108	Screw
28	02112-05164	Screw
29	08310-11057	Nut

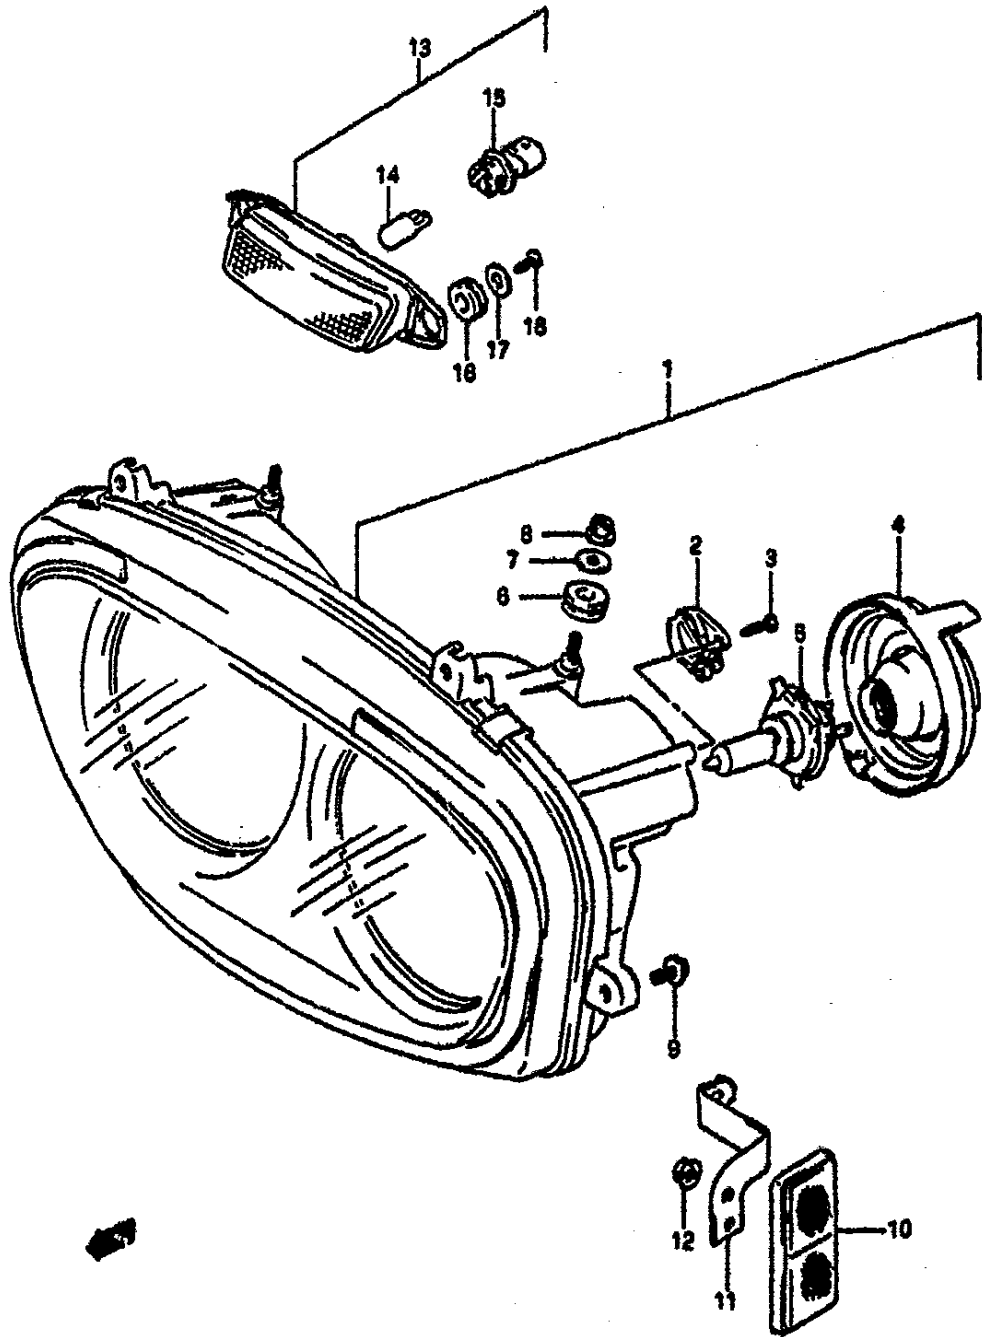 


Ref No	Part No	Description
1	35100-41C00	Headlamp Assy
1	35100-41C40	Headlamp Assy
1	35100-41C10	Headlamp Assy
1	35100-41C50	Headlamp Assy
1	35100-41C20	Headlamp Assy
1	35100-41C30	Headlamp Assy
2	35250-33C10	• . Gear Unit Assy
3	03511-04165	• . Screw
4	35173-41C00	• . Cover, Socket
5	09471-12060	• . Bulb (12v,60/55w)
5	09471-12060	• . Bulb (12v,60/55w)
5	09471-12061	• . Bulb
5	09471-12020	• . Bulb (12v,35/35w)
6	09320-09034	Cushion
7	09160-06092	Washer
8	08316-16064	Nut
9	02112-75165	Screw
10	35950-14A00	Reflex Reflector, Front Side
11	35956-17D00	Bracket, Rh
11	35957-17D00	Bracket, Lh
12	08361-15055	Nut
13	36110-41C01	Lamp Assy, Front Position
14	09471-12081	• . Bulb (12v,5w)
15	36118-41C00	• . Socket
16	09320-08051	Cushion
17	09160-04014	Washer
18	03541-04105	Screw

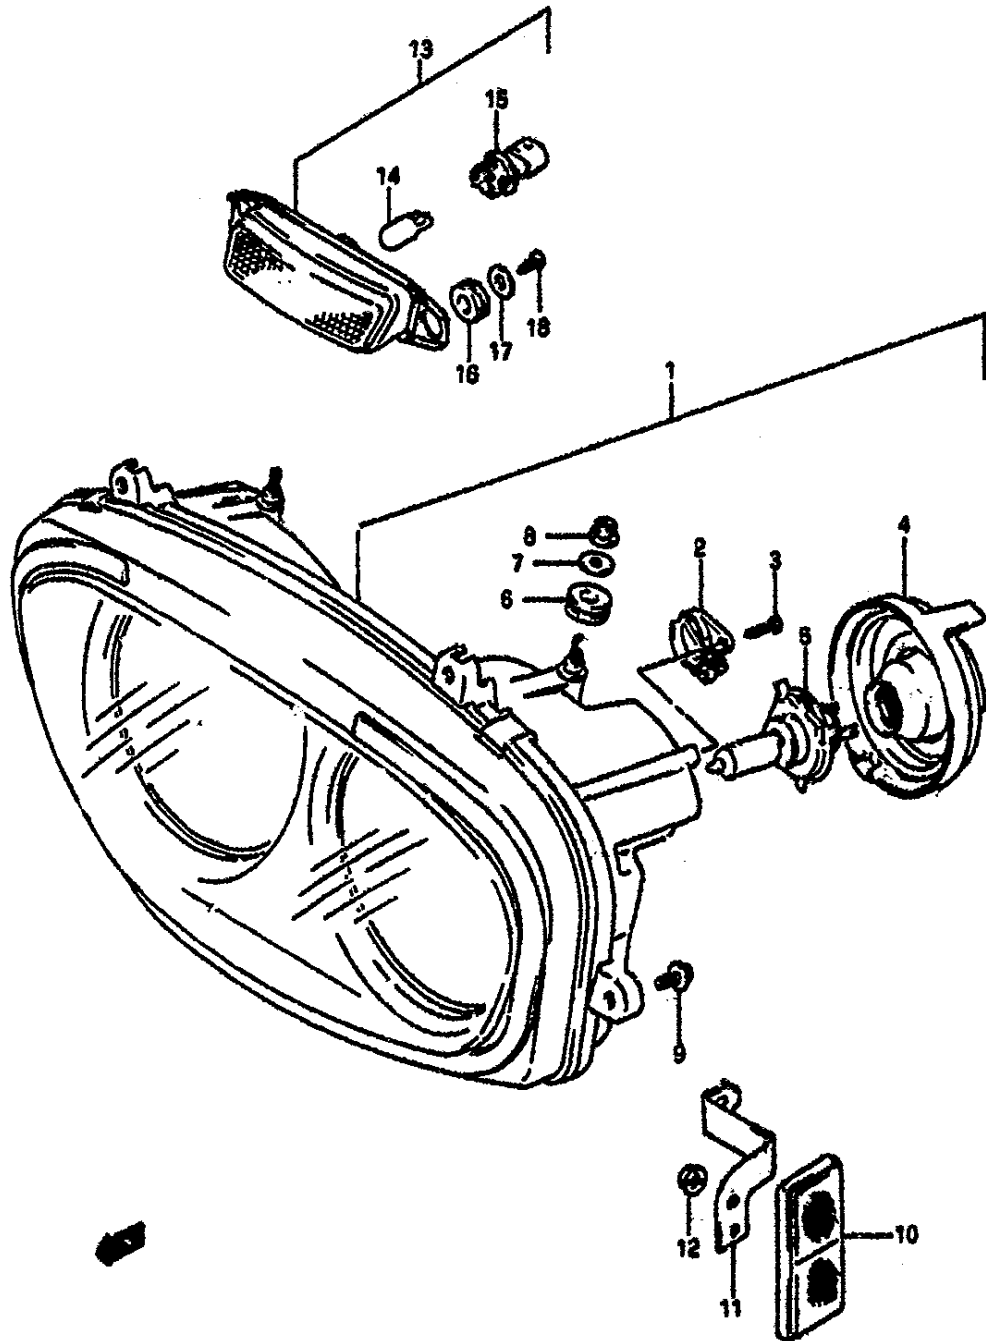 


Ref No	Part No	Description
1	35100-41C00-999	Headlamp Assy
1	35100-41C40-999	Headlamp Assy
1	35100-41C10-999	Headlamp Assy
1	35100-41C50-999	Headlamp Assy
1	35100-41C20-999	Headlamp Assy
1	35100-41C30-999	Headlamp Assy
2	35250-33C10	• Gear Unit Assy
3	03511-04165	• Screw
4	35173-41C00	• Cover, Socket
5	09471-12060	Bulb (12v,60/55w)
5	09471-12060	Bulb (12v,60/55w)
5	09471-12061	Bulb (12v,60/55w)
5	09471-12020	Bulb (12v,35/35w)
6	09320-09034	Cushion
7	09160-06092	Washer
8	08316-16064	Nut
9	02112-75165	Screw
10	35950-14A00	Reflex Reflector, Front Side
11	35956-17D00	Bracket, Rh
11	35957-17D00	Bracket, Lh
12	08361-15055	Nut
13	36110-41C01	Lamp Assy, Front Position
14	09471-12081	• Bulb (12v,5w)
15	36118-41C00	• Socket
16	09320-08051	Cushion
17	09160-04014	Washer
18	03541-04105	Screw

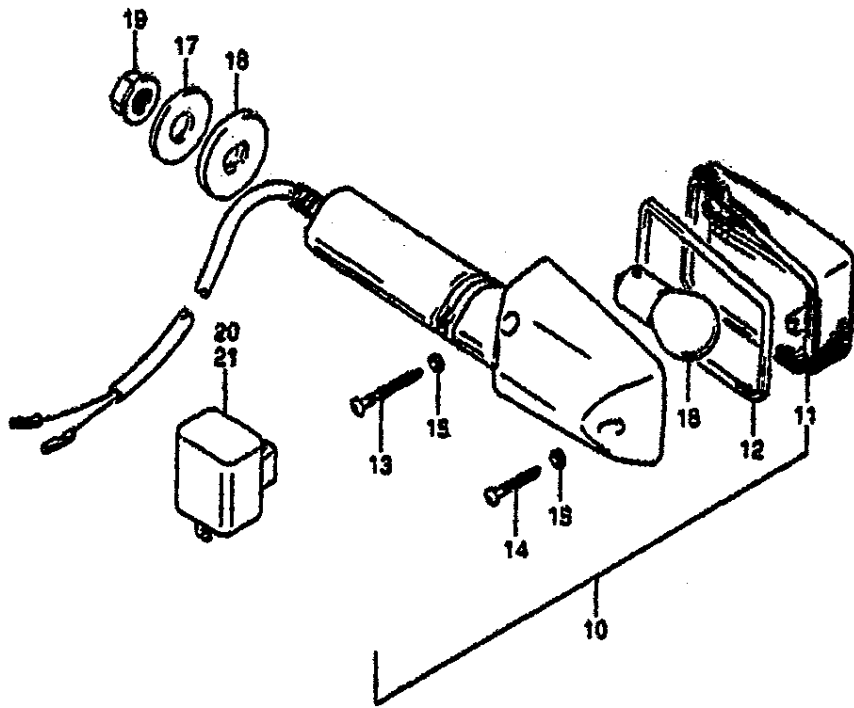 


Ref No	Part No	Description
1	35601-12C11	Lamp Assy, Front Turnsignal
1	35601-01D00	Lamp Assy, Front Turnsignal
1	35601-17C21	Lamp Assy, Front Turnsignal
1	35601-01D10	Lamp Assy, Front Turnsignal
2	35612-17C20	• Lens
3	35613-27A00	• Gasket
4	35623-27A00	• Tapping Screw
5	35725-40511	• Tapping Screw
6	35627-27A02	• Gasket
7	09471-12045	• Bulb (12v,21w)
8	35674-27A01	Grommet
9	08316-26105	Nut
10	35603-17C41-999	Lamp Assy, Rear Turnsignal
10	35603-17C51-999	Lamp Assy, Rear Turnsignal
11	35652-17C20	• Lens
12	35613-27A00	• Gasket
13	35623-27A00	• Tapping Screw
14	35725-40511	• Tapping Screw
15	35627-27A02	• Gasket
16	09471-12045	Bulb (12v,21w)
17	09160-10094	Washer
18	35695-17C00	Spacer
19	08310-12108	Nut
20	38610-31310	Relay Assy, Turnsignal
21	38610-45091	Relay Assy, Turnsignal

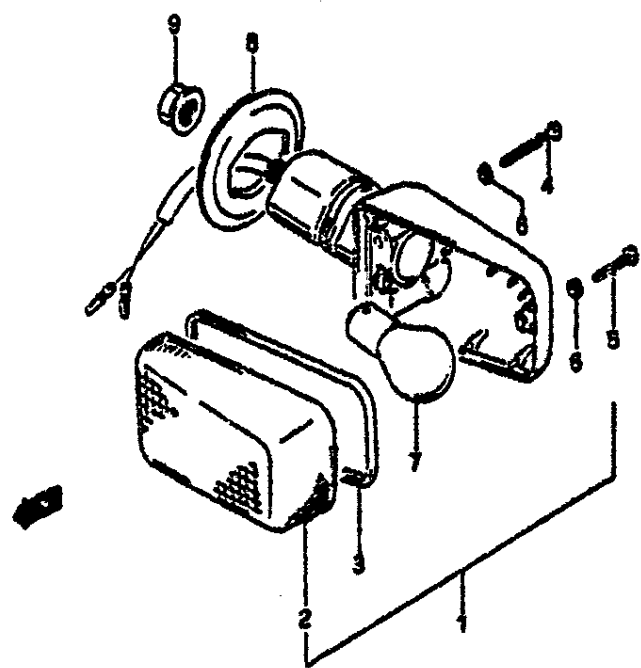 


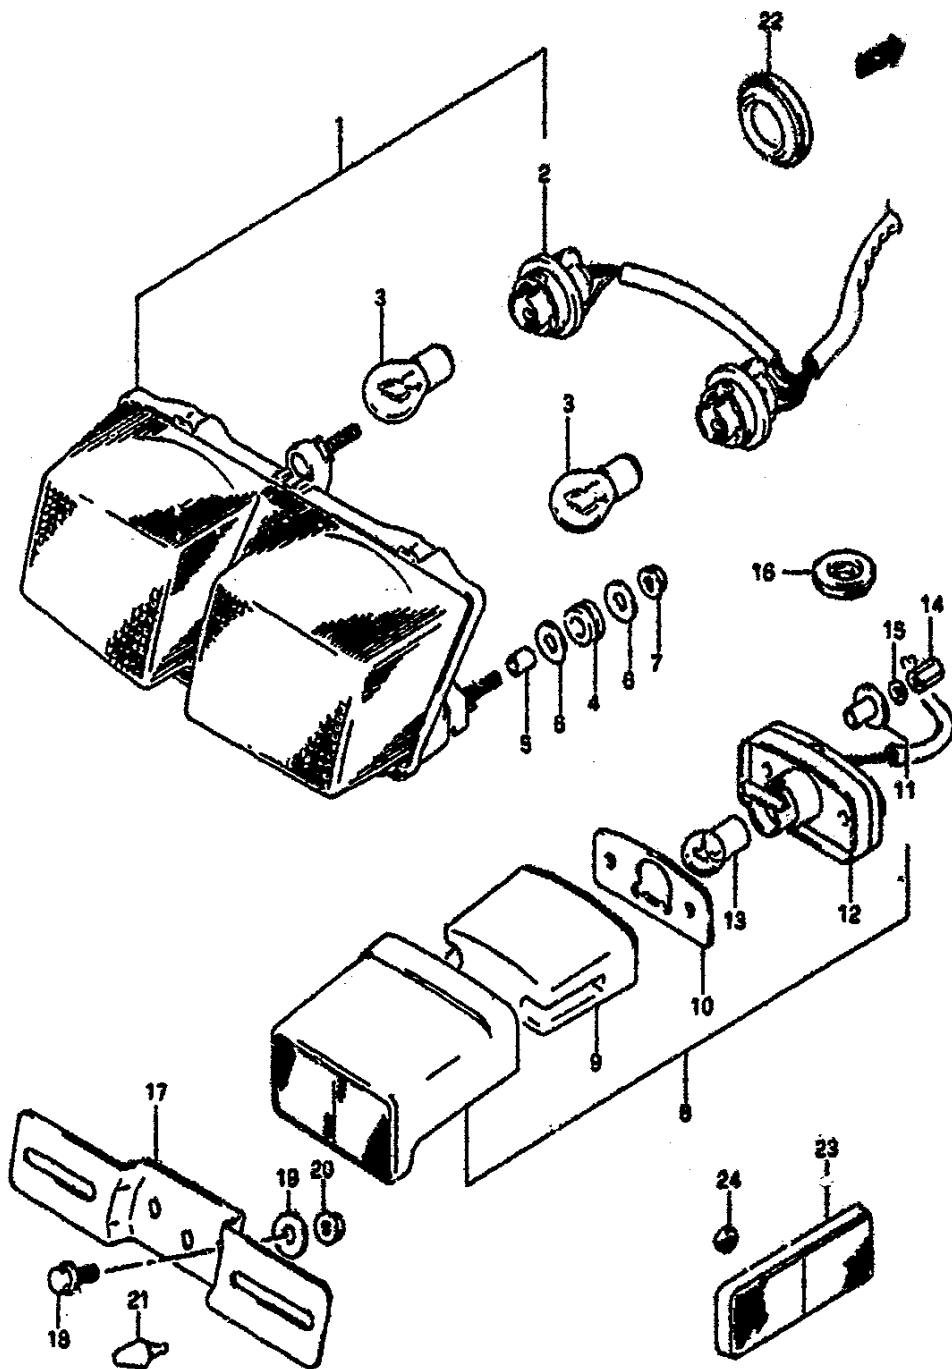 

Ref No	Part No	Description
1	35710-41C00	Lamp Assy, Rear Combination
2	35718-41C00	. Socket & Cord
3	09471-12083	. Bulb (12v,21/5w)
4	09320-08048	Cushion
5	09180-06044	Spacer
6	09160-06056	Washer
7	08316-26066	Nut
8	35910-17C10	Lamp Assy, License
9	35912-38A20	. Lens, License Lamp
10	35913-38A30	. Gasket
11	35766-17C00	. Spacer
12	35915-17C10	. Housing
13	09471-12140	. Bulb (12v,5w)
14	09140-04006	Nut
15	08321-21046	Lock Washer
16	09308-07013	Grommet
17	35927-17C00	Bracket, License Plate
18	01517-06164	Bolt
19	09160-06059	Washer
20	08316-26066	Nut
21	09321-06025	Cushion
22	09250-30010	Grommet
23	35950-43431	Reflex Reflector, Rear Side
24	08310-22055	Nut

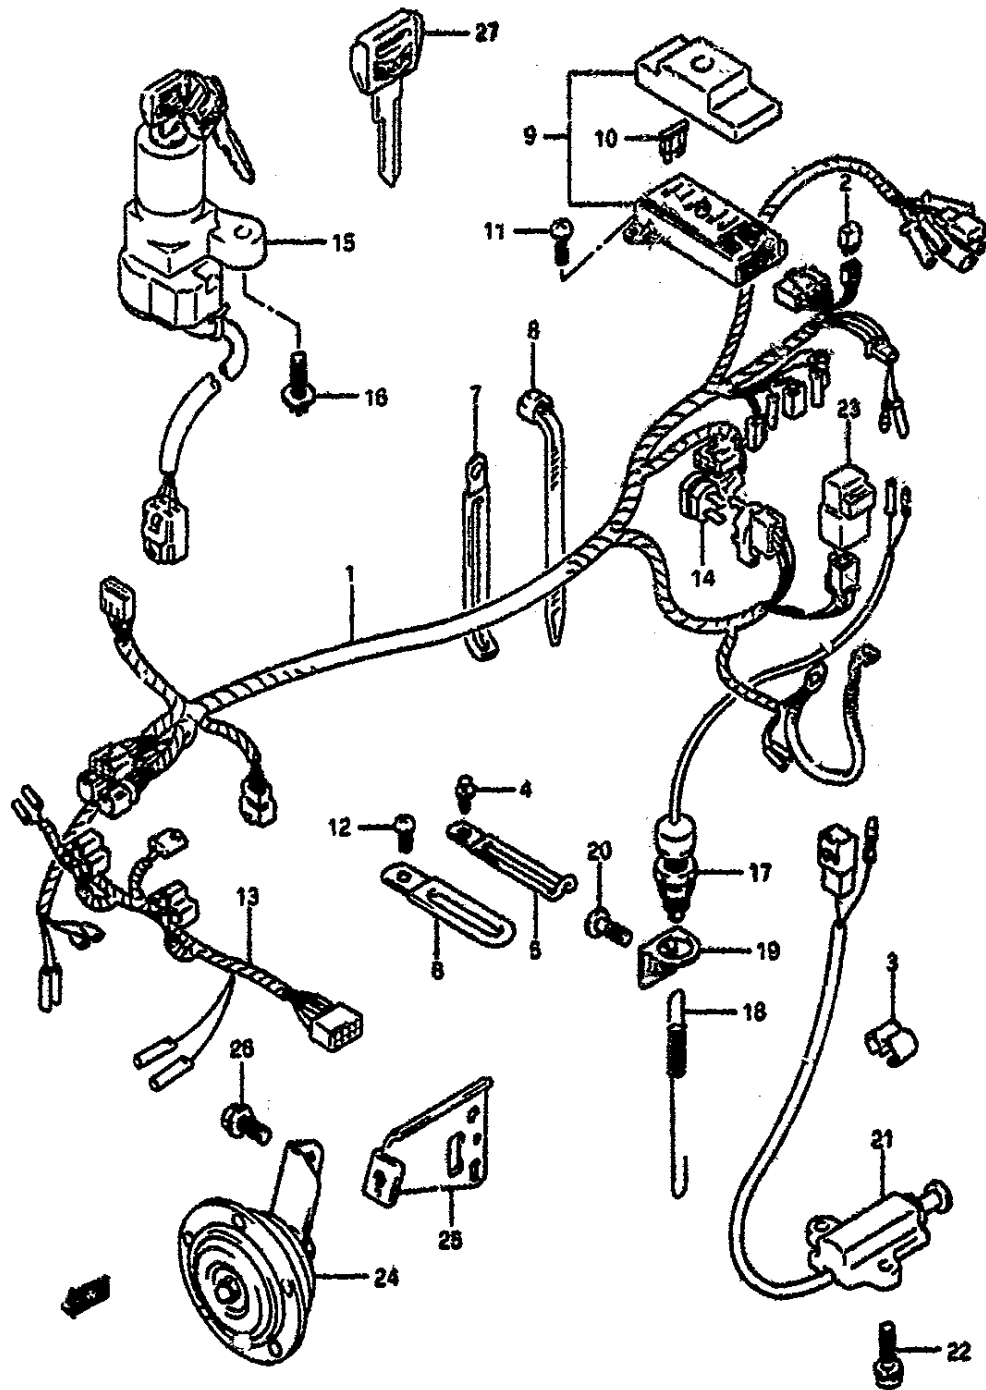 



Ref No	Part No	Description
1	36610-41C00	Harness, Wiring
1	36610-41C50	Harness, Wiring
1	36610-41C40	Harness, Wiring
1	36610-41C81	Harness, Wiring
2	36611-38A00	• . Diode
3	09408-00002	Clip
4	09409-07305	Clip
5	09404-06403	Clamp (l:55)
5	09404-06404	Clamp (l:80)
6	09404-05403	Clamp (l:67)
7	09404-06415	Clamp (l:95e)
8	09407-10404	Clamp
8	09407-11401	Clamp
8	09407-14403	Clamp (l:125)
8	09407-18402	Clamp (l:165)
8	09407-25401	Clamp
9	36740-17D00	Box Assy, Fuse
9	36740-05A01	Box Assy, Fuse
10	09481-10101	• . Fuse (10a)
10	09481-10101	• . Fuse (10a)
10	09481-20101	• . Fuse (20a)
11	02142-05164	Screw
12	02142-05128	Screw
13	36856-41C00	Wire, Headlamp Lead
13	36856-41C30	Wire, Headlamp Lead
14	36750-05A00	Breaker Assy, Circuit
15	37100-17C02	Switch Assy, Ignition
16	09139-06026	Bolt
17	37740-04A10	Switch Assy, Stop Lamp
18	09443-06012	Spring
19	43251-17C01	Bracket, Switch
20	09139-06027	Bolt
21	37840-17C01	Switch, Side Stand Warning
22	02112-36165	Screw
23	38740-24B10	Relay Assy, Side Stand
24	38500-41C00	Horn Assy
24	38500-41C30	Horn Assy
25	38590-41C30	Bracket, Horn
26	01517-06105	Bolt
26	01517-08128	Bolt
27	37146-03A80	Key, Blank

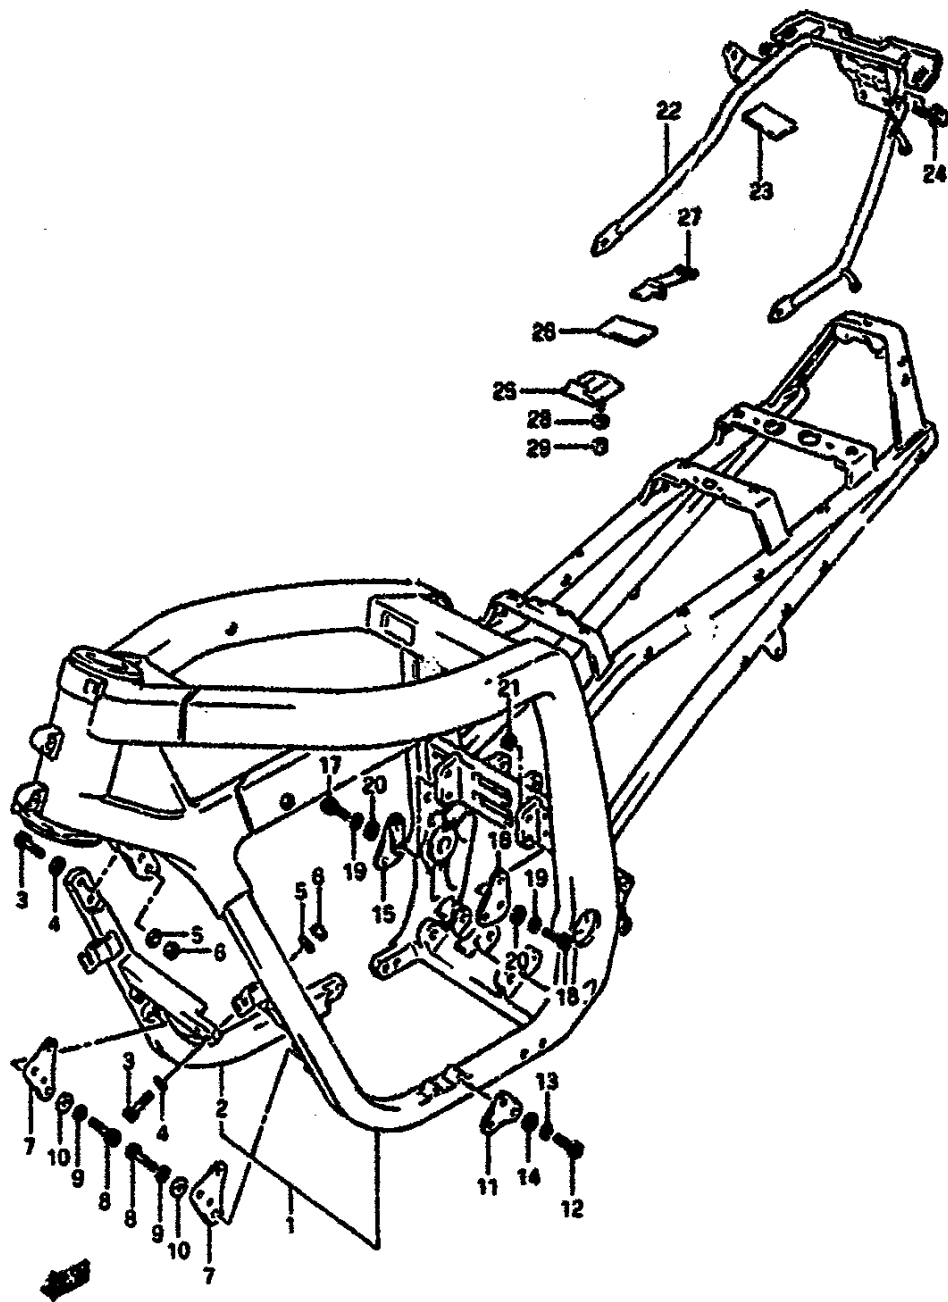 


Ref No	Part No	Description
1	41100-41810	Frame Set
1	41100-41830	Frame Set
2	41140-40C30	. Tube, Frame Down Rh
3	07110-10357	. Bolt
4	09160-10013	. Washer
5	09164-10005	. Washer
6	09159-10027	. Nut
7	41911-41C00	Plate, Engine Mount No.1
8	07110-08257	Bolt
9	08321-31087	Lock Washer
10	09160-08010	Washer (8.2x20x1.6)
11	41921-17C02	Plate, Engine Mount No.2
12	07110-08257	Bolt
13	08321-31087	Lock Washer
14	09160-08010	Washer (8.2x20x1.6)
15	41940-40C01	Plate, Engine Mount No.3 Rh
16	41950-40C01	Plate, Engine Mount No.3 Lh
17	07110-08357	Bolt, Rh
18	09106-08005	Bolt, Lh
19	08321-31087	Lock Washer
20	09160-08010	Washer
21	08319-31087	Nut, Lh
22	43980-41C00	Grip, Rear
22	43980-41C10	Grip, Rear
23	41881-06C00	Protector
24	01317-08207	Bolt
25	41550-49200	Holder, Tool
26	44885-38A00	Cushion, Tool Holder
27	09462-00093	Band, Tool
28	09160-06006	Washer
29	08319-21066	Nut

Ref No	Part No	Description
1	42310-40C30	Stand, Prop
2	09443-14058	Spring, Inner
3	09443-19011	Spring, Outer
4	09111-10036	Bolt
5	08310-22107	Nut
6	42330-40C20	Bracket, Prop Stand
7	07110-08357	Bolt
8	09164-08015	Washer
9	08316-16088	Nut
10	43110-17C03	Pedal, Brake
11	09160-18022	Washer
12	43561-17C01	Plate, Brake Pedal
13	43563-17C01	Bracket, Stop Switch Lower
14	09139-06027	Bolt
15	09443-13018	Spring
16	43261-17C00	Tube, Spring
17	01104-05206	Bolt
18	08310-11057	Nut
19	42100-17C00	Stand Assy, Rear
20	61165-27A30	Holder, Stand
21	07110-08305	Bolt

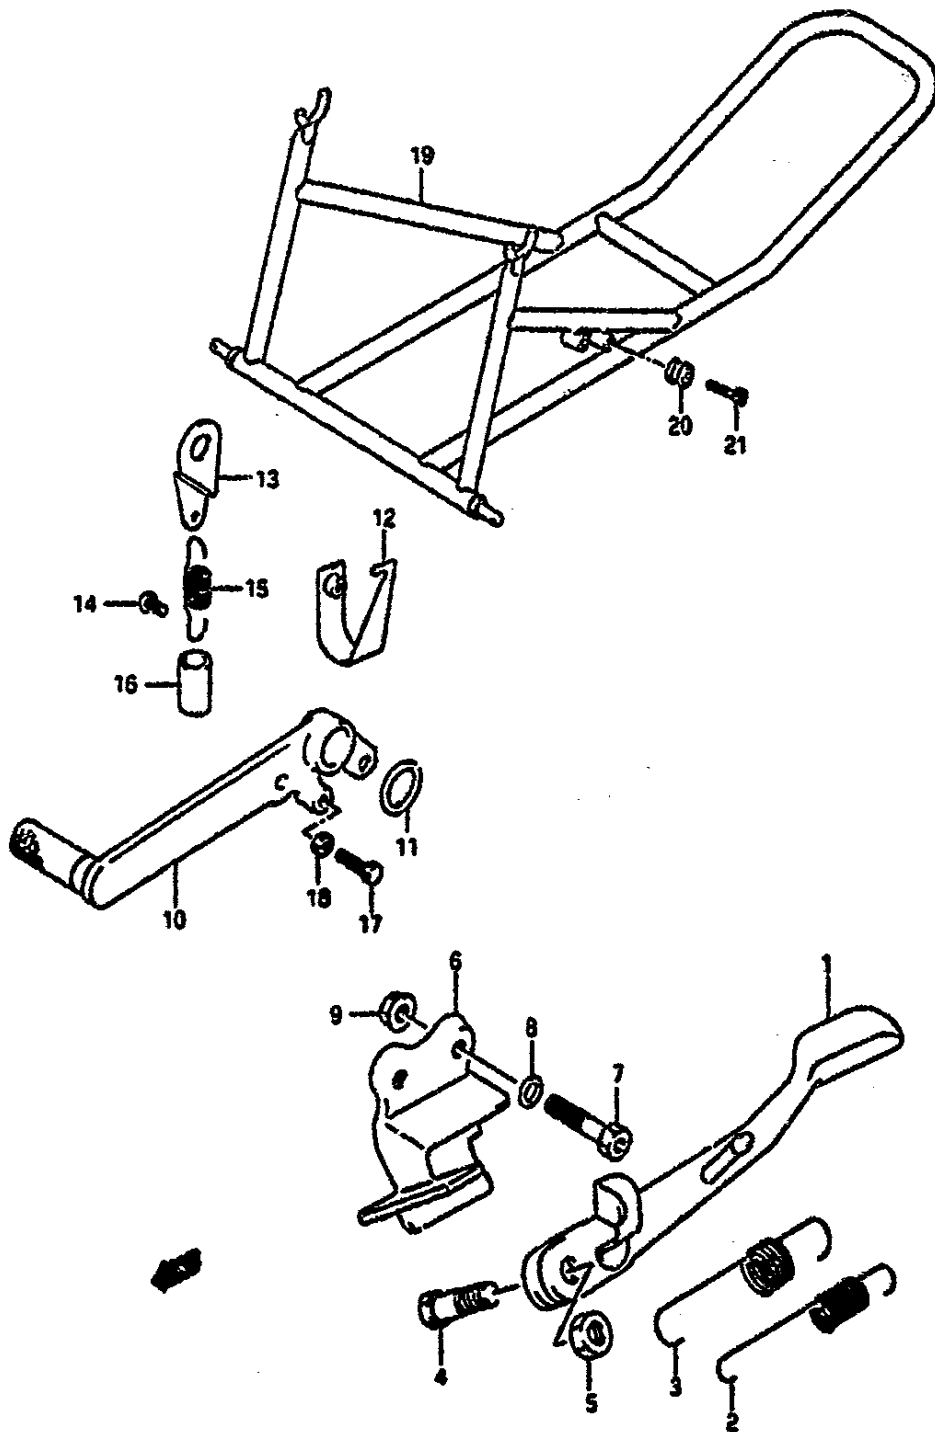 


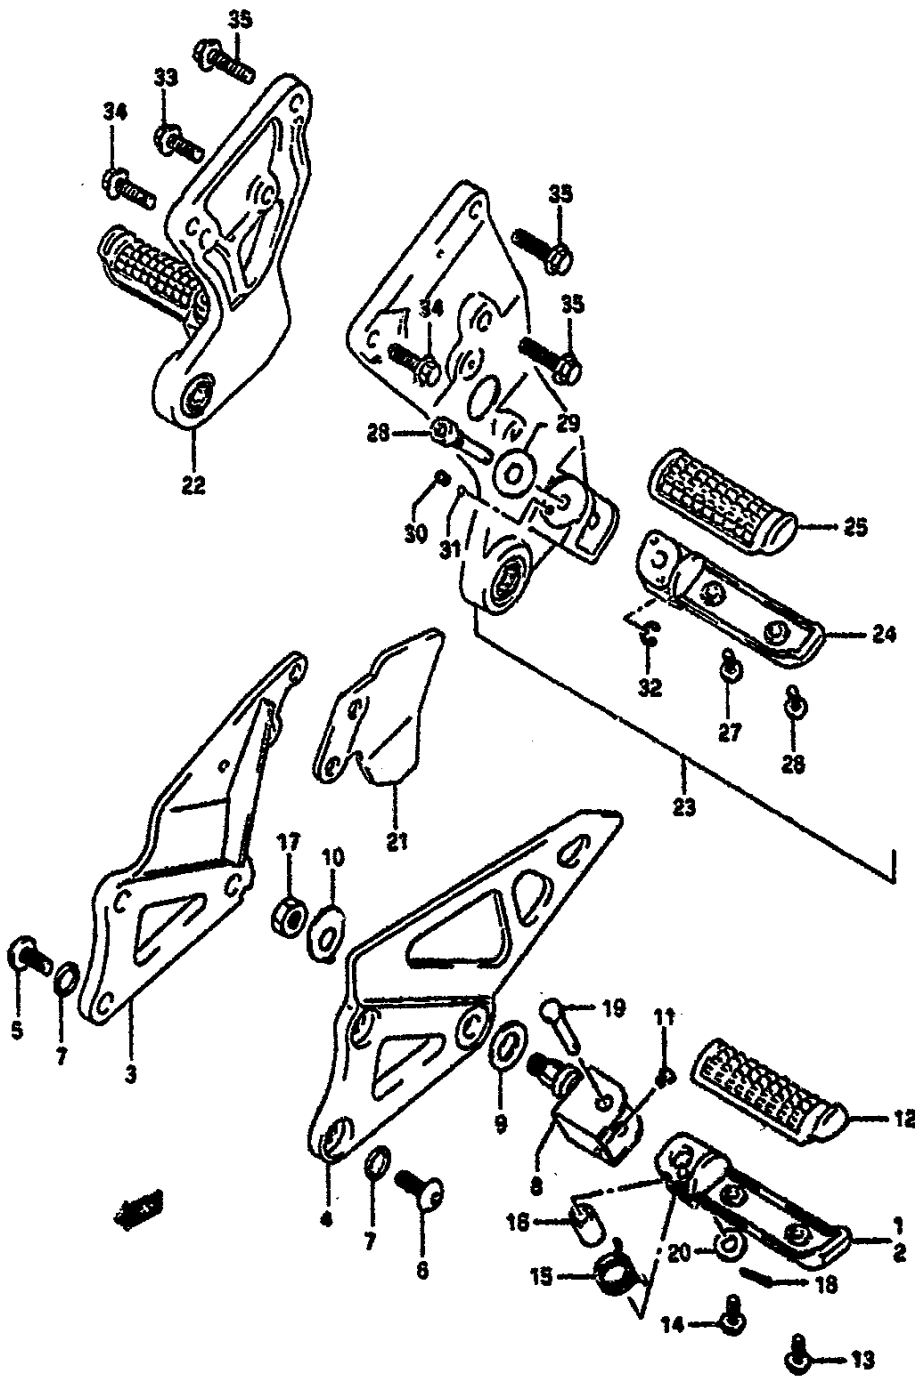 


Ref No	Part No	Description
1	43511-40C00	Bar, Front Footrest Rh
2	43521-40C00	Bar, Front Footrest Lh
3	43511-17D01	Bracket, Footrest Rh
4	43522-17D01	Bracket, Footrest Lh
5	43529-17D00	Bolt, Rh
6	43529-17D10	Bolt, Lh
7	09164-10010	Washer
8	43530-40C00	Boss, Front Footrest
9	43213-17C01	Plate, Front Footrest
10	43214-17C01	Washer, Front Footrest
11	43541-40C00	Cushion, Footrest
12	43550-40C11	Rubber, Footrest
13	02112-35168	Screw, Outer
14	02112-75208	Screw, Inner
15	09448-19020	Spring
16	09180-08149	Spacer, Front Footrest
17	08310-22127	Nut, Front Footrest
18	04111-25158	Cotter Pin
19	09200-08057	Pin
20	09160-08043	Washer
21	43586-40C01	Guard, Front Footrest Rh
22	43600-41C00	Footrest Assy, Pillion Rh
23	43700-41C00	Footrest Assy, Pillion Lh
24	43610-41C00	. Bar, Rh
24	43620-41C00	. Bar, Lh
25	43550-40C11	. Rubber
26	02112-35168	. Screw, Outer
27	02112-75208	. Screw, Inner
28	43642-40C00	. Bolt
29	09160-10031	. Plate
30	09440-05003	. Spring
31	06111-07004	. Ball
32	08332-11068	. E Ring
33	01517-08205	Bolt
34	01517-08254	Bolt
35	01517-08304	Bolt

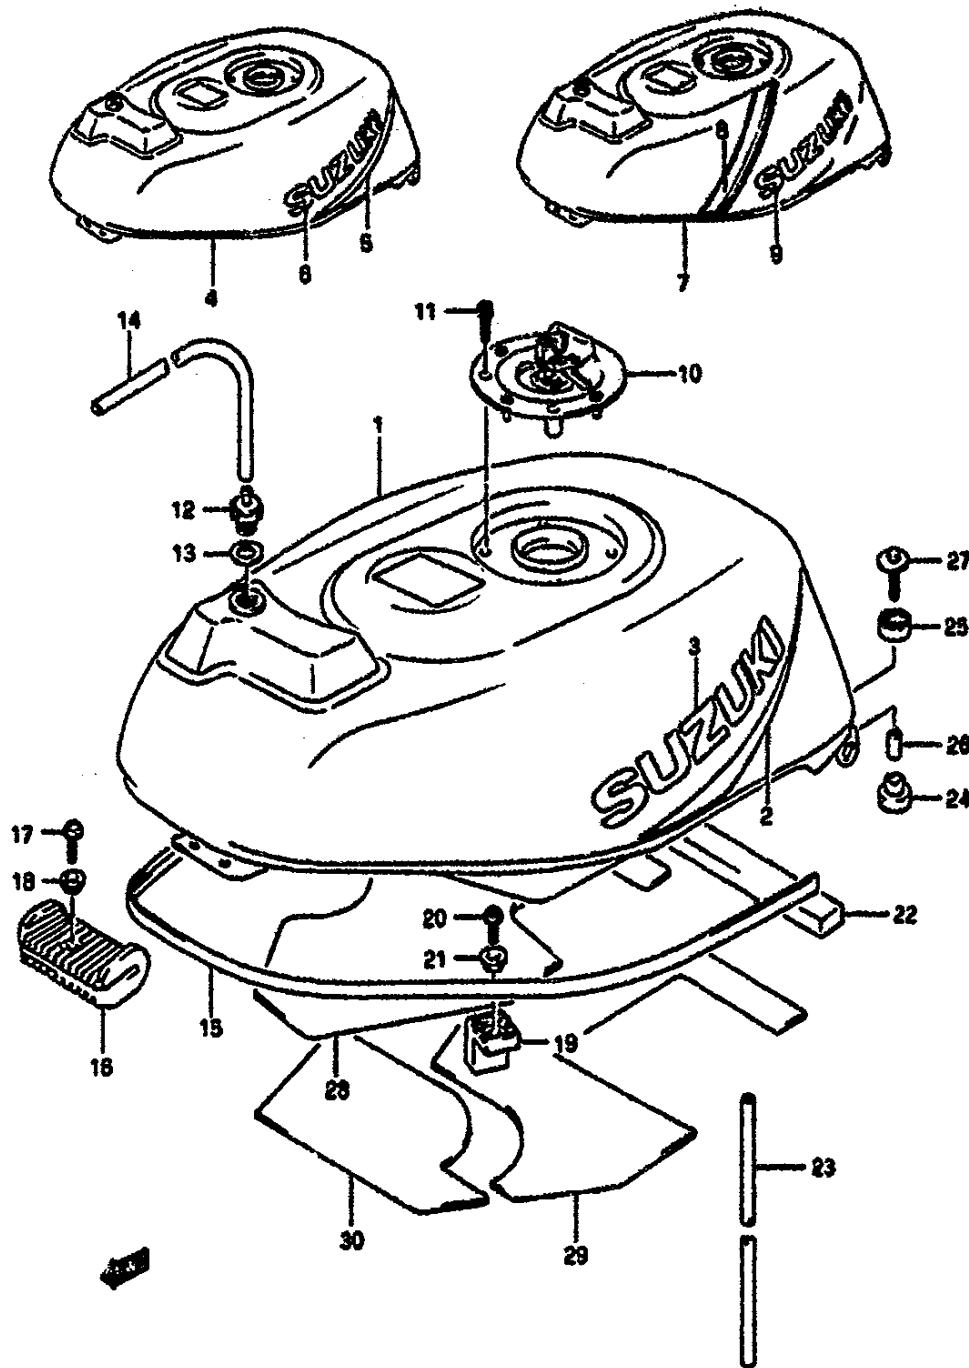 


Ref No	Part No	Description
1	44100-41C50-3SL	Tank Assy, Fuel
1	44100-41C70-3SL	Tank Assy, Fuel
1	44100-41C90-3SL	Tank Assy, Fuel
2	68110-41C00-ONE	• . Tape, Fuel Tank
3	68111-12C00-ONE	• . Emblem (blue)
4	44100-41C60-3EE	Tank Assy, Fuel
4	44100-41C80-3EE	Tank Assy, Fuel
4	44900-41C00-3EE	Tank Assy, Fuel
5	68115-41C01-28V	• . Tape, Fuel Tank
6	68111-12C00-0FP	• . Emblem (silver)
7	44900-41C30-3CG	Tank Assy, Fuel
7	44900-41C30-05X	Tank Assy, Fuel
7	44900-41C40-3CG	Tank Assy, Fuel
7	44900-41C40-05X	Tank Assy, Fuel
7	44900-41C50-3CG	Tank Assy, Fuel
8	68110-18D02-HO7	• . Tape Set, Fuel Tank
8	68110-18D02-H14	• . Tape Set, Fuel Tank
9	68111-12C00-13L	• . Emblem
10	44201-01851	Cap Assy, Fuel Tank
11	09106-05017	Bolt
12	44240-06B10	Plug, Breather
13	09168-12012	Gasket
14	09352-50823-600	Hose, Breather (I:600 370)
15	68241-27A00	Holding, Fuel Tank
16	44511-41C00	Cushion, Front
17	02142-05104	Screw
18	09169-05012	Washer
19	44545-41C00	Cushion, Side
20	02142-06207	Screw
21	09169-06051	Washer
22	44151-17C00	Cushion, Air Seal
23	09352-50823-00A	Hose, Water Drain (I:1000 730)
24	09320-10038	Cushion, Lower
25	09320-14017	Cushion, Upper
26	09180-06072	Spacer
27	09116-06097	Bolt
28	44191-41C00	Heat Shield, Fuel Tank Lh
28	44192-41C00	Heat Shield, Fuel Tank Rh
29	44191-40C00	Heat Shield, Fuel Tank No.1
30	44191-40C10	Heat Shield, Fuel Tank No. 1

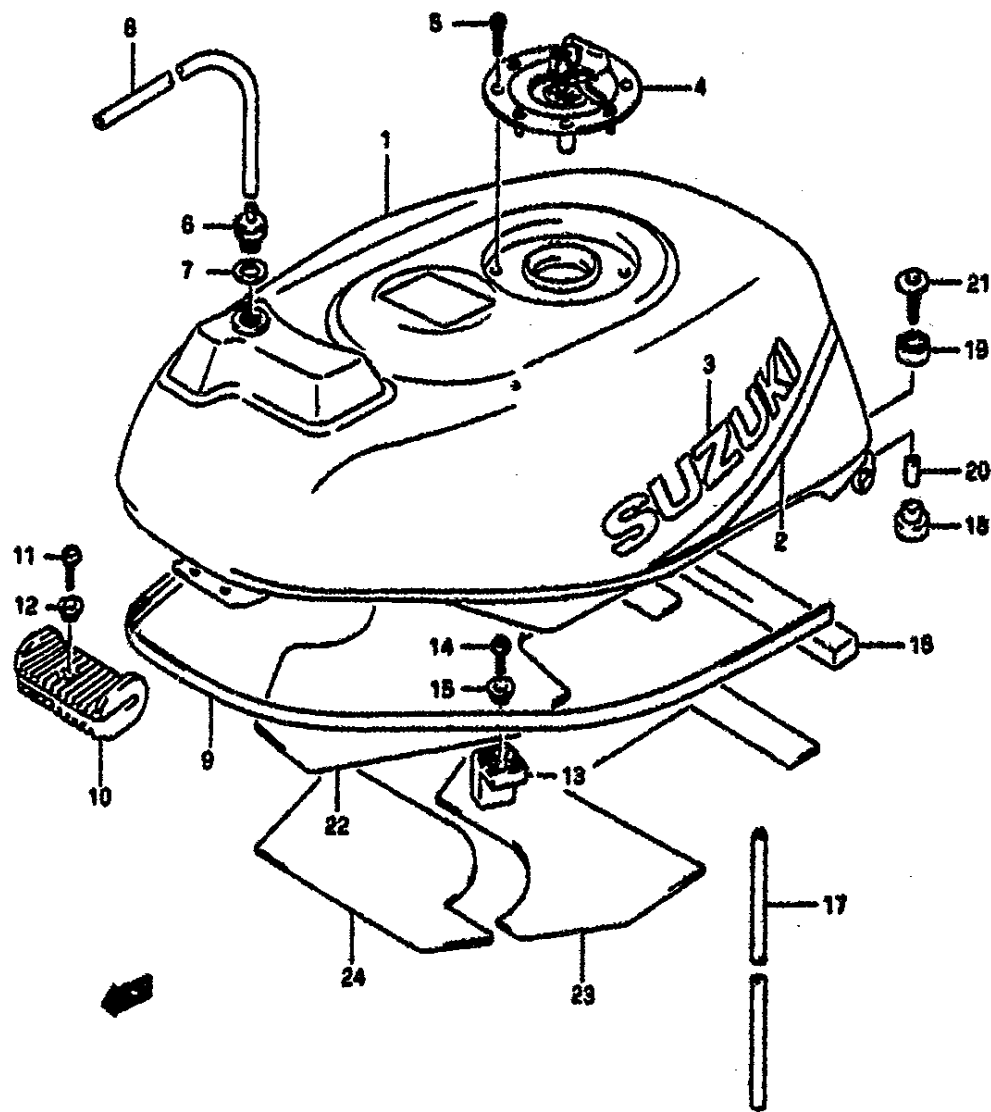 


Ref No	Part No	Description
1	44100-42C00-L99	Tank Assy, Fuel
1	44100-42C30-L99	Tank Assy, Fuel
1	44100-42C60-L99	Tank Assy, Fuel
1	44100-42C00-M01	Tank Assy, Fuel
1	44100-42C30-M01	Tank Assy, Fuel
1	44100-42C60-M01	Tank Assy, Fuel
1	44100-42C00-3WC	Tank Assy, Fuel
1	44100-42C30-3WC	Tank Assy, Fuel
1	44100-42C60-3WC	Tank Assy, Fuel
2	68115-41C10-M07	. . Tape, Fuel Tank
2	68115-41C10-M08	. . Tape, Fuel Tank
2	68115-41C10-M09	. . Tape, Fuel Tank
3	68111-12C00-0FP	. . Emblem (silver)
3	68111-12C00-33J	. . Emblem (black)
4	44201-01851	Cap Assy, Fuel Tank
5	09106-05017	Bolt
6	44240-06B10	Plug, Breather
7	09168-12012	Gasket
8	09352-50823-600	Hose, Breather (l:600 370)
9	68241-27A00	Holding, Fuel Tank
10	44511-41C00	Cushion, Front
11	02142-05104	Screw
12	09169-05012	Washer
13	44545-41C00	Cushion, Side
14	02142-06207	Screw
15	09169-06051	Washer
16	44151-17C00	Cushion, Air Seal
17	09352-50823-00A	Hose, Water Drain (l:1000 730)
18	09320-10038	Cushion, Lower
19	09320-14017	Cushion, Upper
20	09180-06072	Spacer
21	09116-06097	Bolt
22	44191-41C00	Heat Shield, Fuel Tank Lh
22	44192-41C00	Heat Shield, Fuel Tank Rh
23	44191-40C00	Heat Shield, Fuel Tank No.1
24	44191-40C10	Heat Shield, Fuel Tank No.1

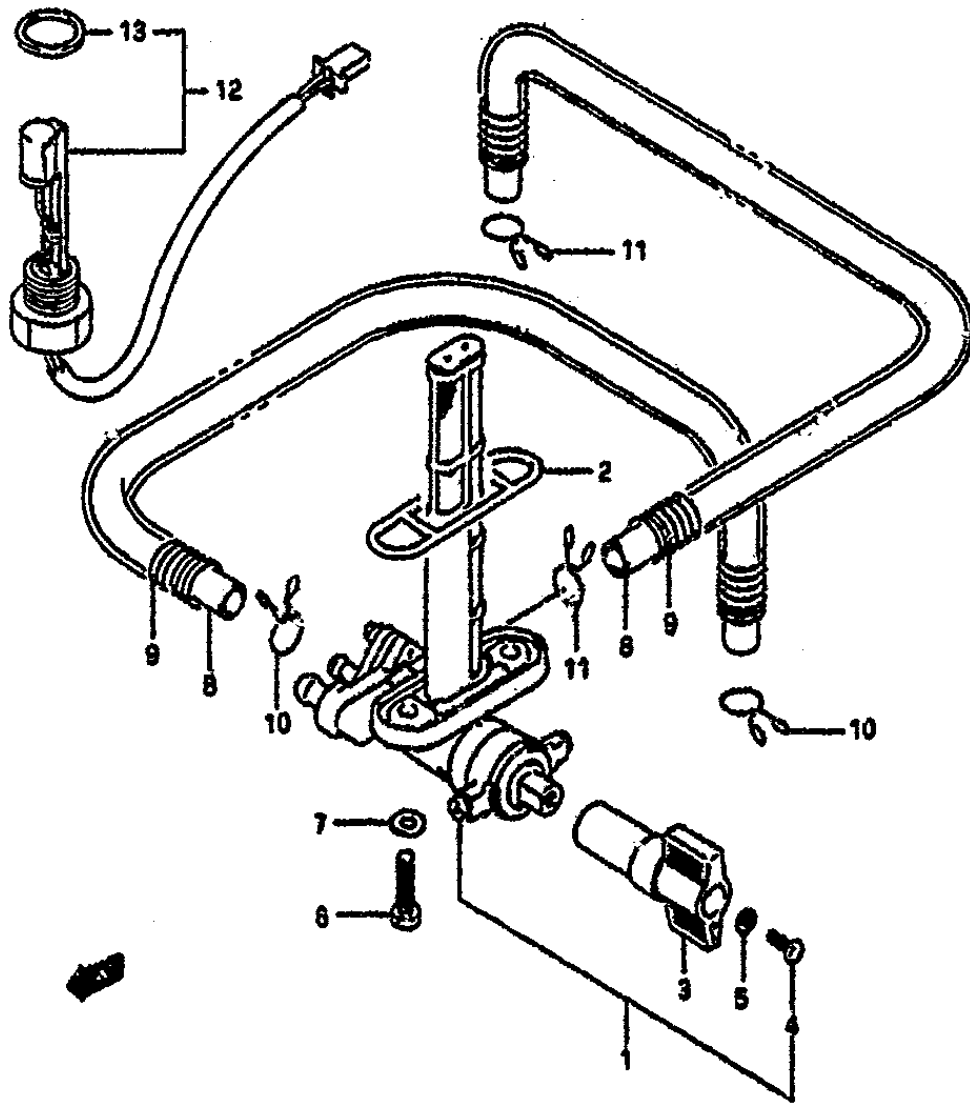 


Ref No	Part No	Description
1	44300-41C00	Cock Assy, Fuel
1	44300-41C01	Cock Assy, Fuel
1	44300-17C01	Cock Assy, Fuel
1	44300-17C02	Cock Assy, Fuel
2	44305-17C00	• O Ring
3	44306-17C00	• Lever
4	02112-04126	• Screw, Lever
5	08321-21046	• Lock Washer
6	09128-06006	Bolt
7	09168-06026	Gasket
8	09352-70103-300	Hose, Fuel (l:300 270)
9	09440-13047	Spring
10	09401-10403	Clip
11	09401-10201	Clip
11	09401-11411	Clip
12	34810-40C00	Gauge Assy, Fuel Level
13	34825-40C00	• Gasket

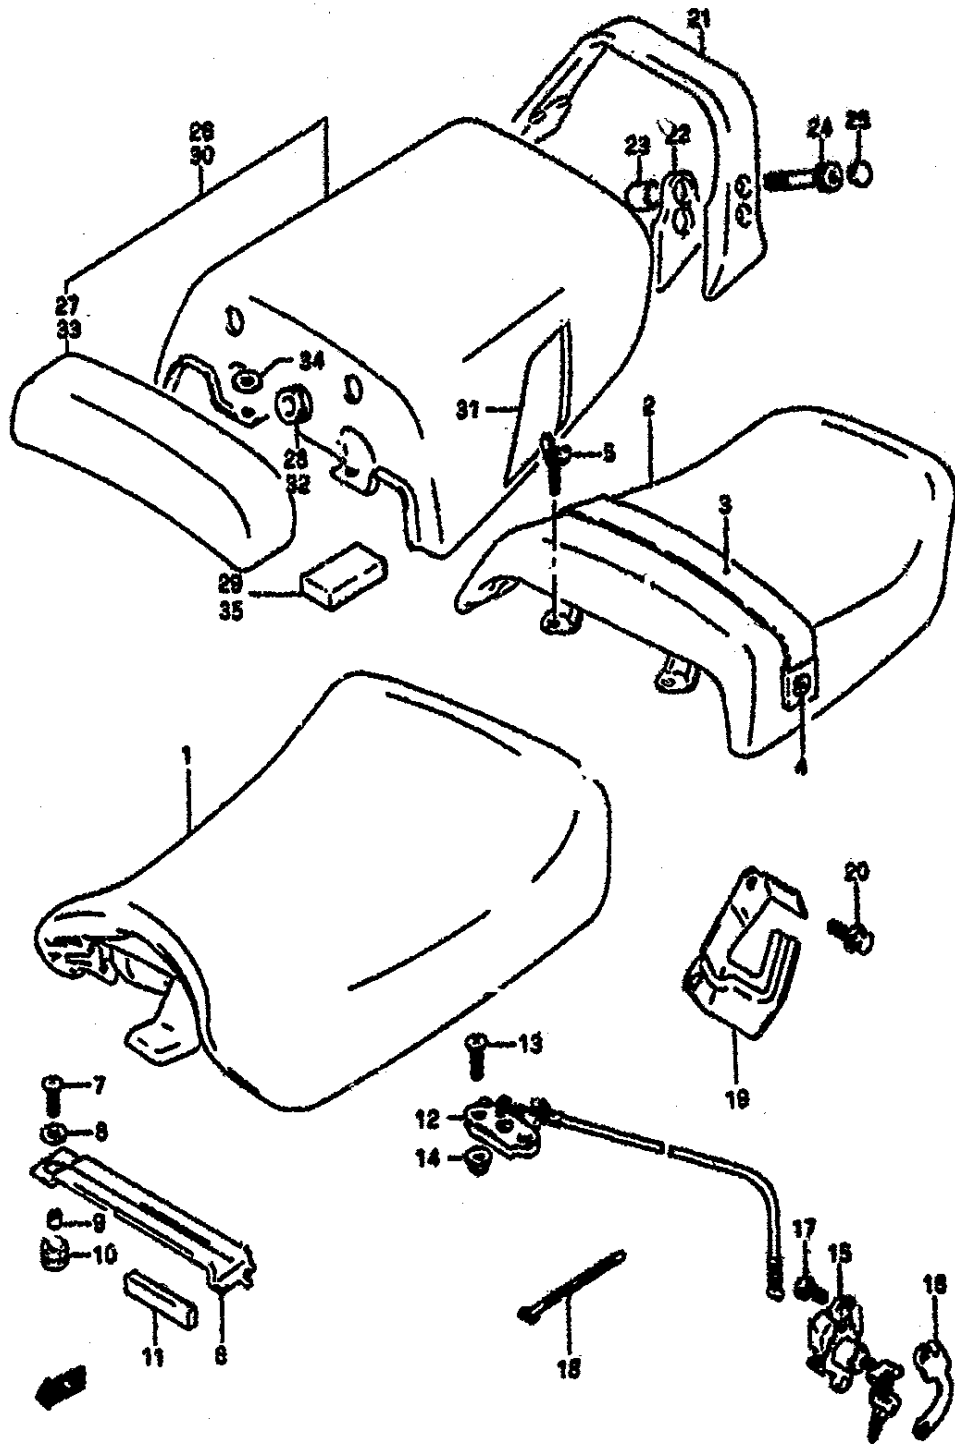 


Ref No	Part No	Description
1	45100-41C00-58R	Seat Assy (black)
2	45300-41C10-58R	Seat Assy, Pillion (black)
3	45180-41C00-58R	• Band, Seat (black)
4	45186-06B00	• Bolt
5	09139-06056	Bolt, Pillion Seat
6	45271-40C00	Plate, Seat Support Rear
7	02142-06205	Screw
8	09160-06069	Washer
9	09180-06044	Spacer
10	09320-08048	Cushion
11	45272-17C02	Cushion, Seat Support Plate
12	45220-17C00	Bracket, Seat Support Rear
13	02122-06255	Screw
14	08319-31067	Nut
15	45700-19840	Lock Set, Seat
16	45123-17C00	Plate, Seat Lock
17	09139-06075	Bolt
18	09407-09402	Clamp, Seat Lock Cable
19	45290-41C01	Plate, Seat Lock Cable
20	01117-06165	Screw
21	46211-41C00-0NG	Handle, Pillion Rider (blue)
21	46211-41C00-0JW	Handle, Pillion Rider (white)
21	46211-41C00-019	Handle, Pillion Rider (black)
22	46238-41C00	Cushion
23	09180-08163	Spacer
24	07110-08655	Bolt
25	09250-06004	Cap
26	45500-41810-0NG	Box Set, Seat Tail
26	45500-41810-28V	Box Set, Seat Tail
26	45500-41810-33J	Box Set, Seat Tail
27	46220-41C00-58R	• Backrest, Seat
28	09320-12031	• Cushion
29	63411-35B00	• Cushion
30	45550-41C10-0JW	Box, Seat Tail (white)
30	45550-41C10-33J	Box, Seat Tail (black)
30	45550-41C10-36X	Box, Seat Tail (black)
31	68160-41C00-M13	• Tape Set, Tail Box
31	68160-41C00-M14	• Tape Set, Tail Box
31	68160-41C00-M15	• Tape Set, Tail Box
32	09320-12031	• Cushion
33	46220-41C00-58R	Backrest, Seat (black)
34	09160-06006	Washer, Front
35	63411-35B00	Cushion

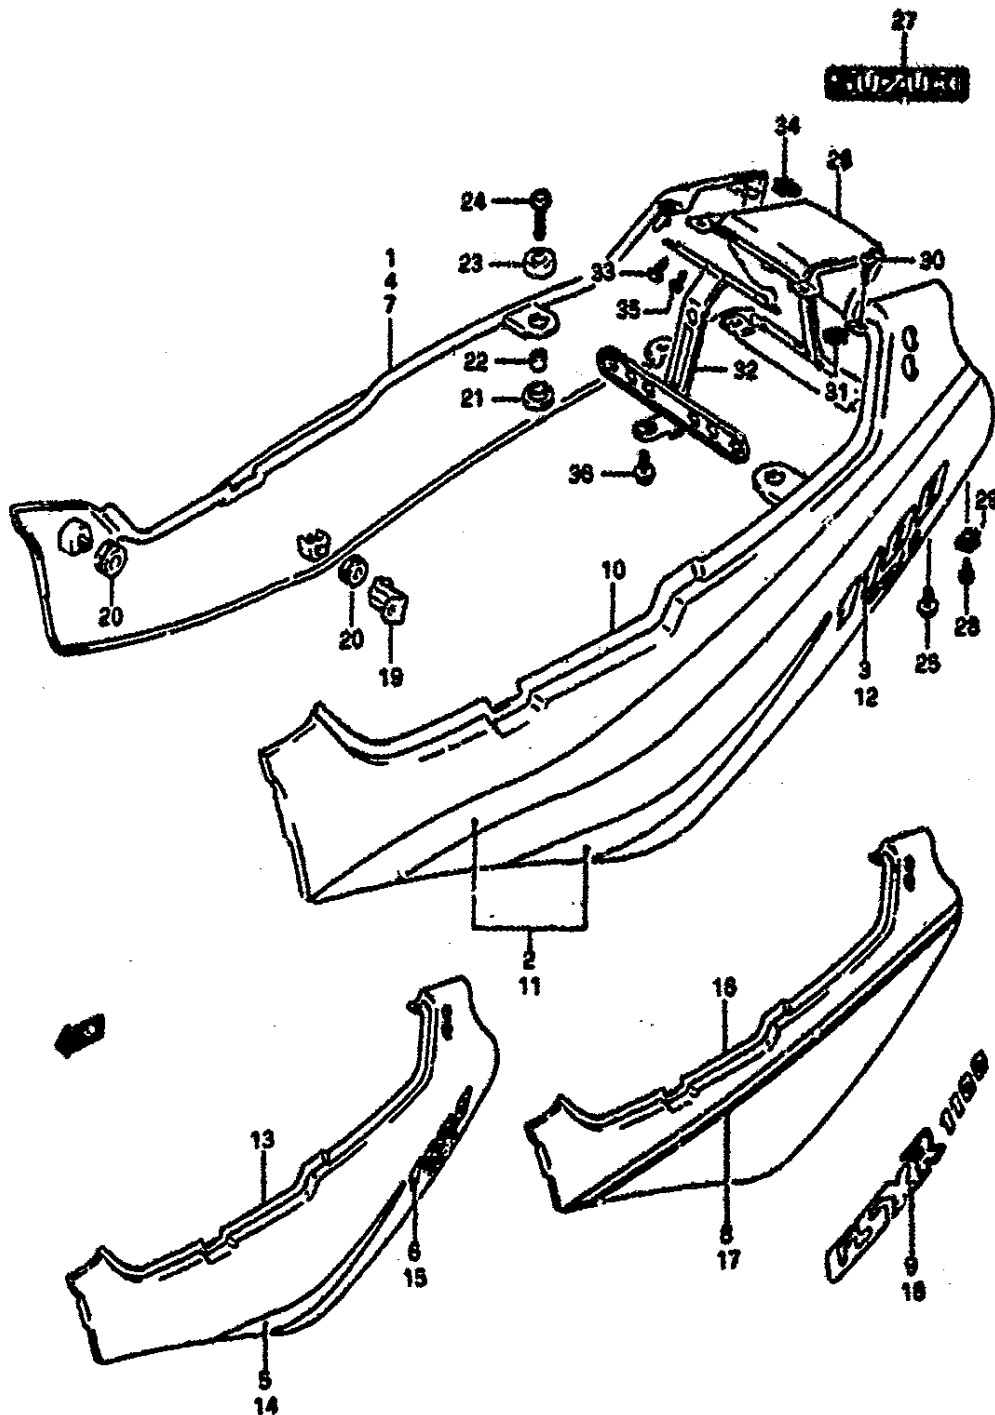 


Ref No	Part No	Description
1	47110-41C00-3SL	Cover, Frame Rh
2	68130-41C01-3SR	. Tape, Frame Cover Rh
3	68131-41C00-E95	. Emblem, Rh
4	47110-41C10-3EE	Cover, Frame Rh
5	68135-41C01-0FP	. Tape, Frame Cover Rh (silver)
6	68131-41C00-H03	. Emblem, Rh
7	47110-41C20-3CH	Cover, Frame Rh
7	47110-41C20-05X	Cover, Frame Rh
8	68135-18D11-H13	. Tape, Rh
8	68135-18D11-H17	. Tape, Rh
9	68131-41C10-H08	. Emblem
9	68131-41C10-H15	. Emblem
10	47210-41C00-3SL	Cover, Frame Lh
11	68140-41C01-3SR	. Tape, Frame Cover Lh
12	68131-41C00-E95	. Emblem, Lh
13	47210-41C10-3EE	Cover, Frame Lh
14	68145-41C01-0FP	. Tape, Frame Cover Lh (silver)
15	68131-41C00-H03	. Emblem, Lh
16	47210-41C20-3CH	Cover, Frame Lh
16	47210-41C20-05X	Cover, Frame Lh
17	68145-18D11-H13	. Tape, Lh
17	68145-18D11-H17	. Tape, Lh
18	68131-41C10-H08	. Emblem
18	68131-41C10-H15	. Emblem
19	43815-41C00	Bracket, Frame Cover
20	09320-08013	Cushion
21	45326-17C00	Cushion, Lower
22	09180-06143	Spacer
23	45149-04A00	Cushion, Upper
24	09136-06083	Screw
25	09136-06062	Screw, Rear
26	47310-41C00-0NG	Cover, Frame Center (blue)
26	47310-41C00-28V	Cover, Frame Center (red)
26	47310-41C00-33J	Cover, Frame Center (black)
27	68166-31300-0JW	. Emblem (white)
27	68166-31300-13L	. Emblem (silver)
28	03141-14125	Screw
29	09148-04024	Nut
30	03241-15125	Screw
31	09148-05019	Nut
32	47410-41C00	Bracket, Rear
33	03241-15125	Screw, Bracket
34	09148-05038	Nut
35	03541-04125	Screw, Inner
36	09116-06064	Bolt, Rear Fender

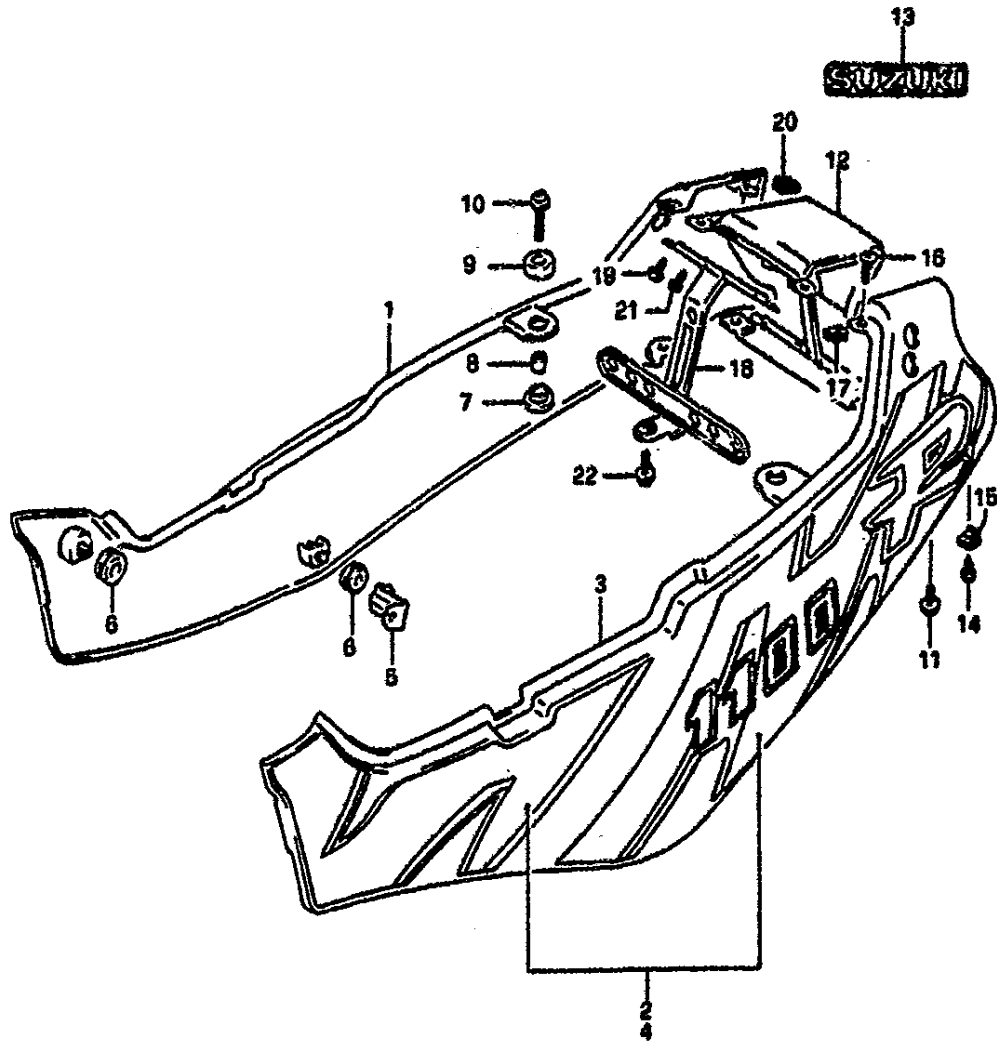 


Ref No	Part No	Description
1	47110-41C30-0JW	Cover, Frame Rh (white)
1	47110-41C30-33J	Cover, Frame Rh (black)
1	47110-41C30-36X	Cover, Frame Rh (black)
2	68130-41C10-1MF	• . Tape, Rh
2	68130-41C10-1MG	• . Tape, Rh
2	68130-41C10-1MA	• . Tape, Rh
3	47210-41C30-0JW	Cover, Frame Lh (white)
3	47210-41C30-33J	Cover, Frame Lh (black)
3	47210-41C30-36X	Cover, Frame Lh (black)
4	68140-41C10-1MF	• . Tape, Lh
4	68140-41C10-1MG	• . Tape, Lh
4	68140-41C10-1MA	• . Tape, Lh
5	43815-41C00	Bracket, Frame Cover
6	09320-08018	Cushion
7	45326-17C00	Cushion, Lower
8	09180-06143	Spacer
9	45149-04A00	Cushion, Upper
10	09136-06083	Screw
11	09136-06062	Screw, Rear
12	47310-41C20-0YX	Cover, Frame Center (white)
12	47310-41C20-36X	Cover, Frame Center (black)
13	68166-31300-0FP	• . Emblem (silver)
14	03141-14125	Screw
15	09148-04024	Nut
16	03241-15125	Screw
17	09148-05019	Nut
18	47410-41C00	Bracket, Rear
19	03241-15125	Screw, Bracket
20	09148-05038	Nut
21	03541-04125	Screw, Inner
22	09116-06064	Bolt, Rear Fender

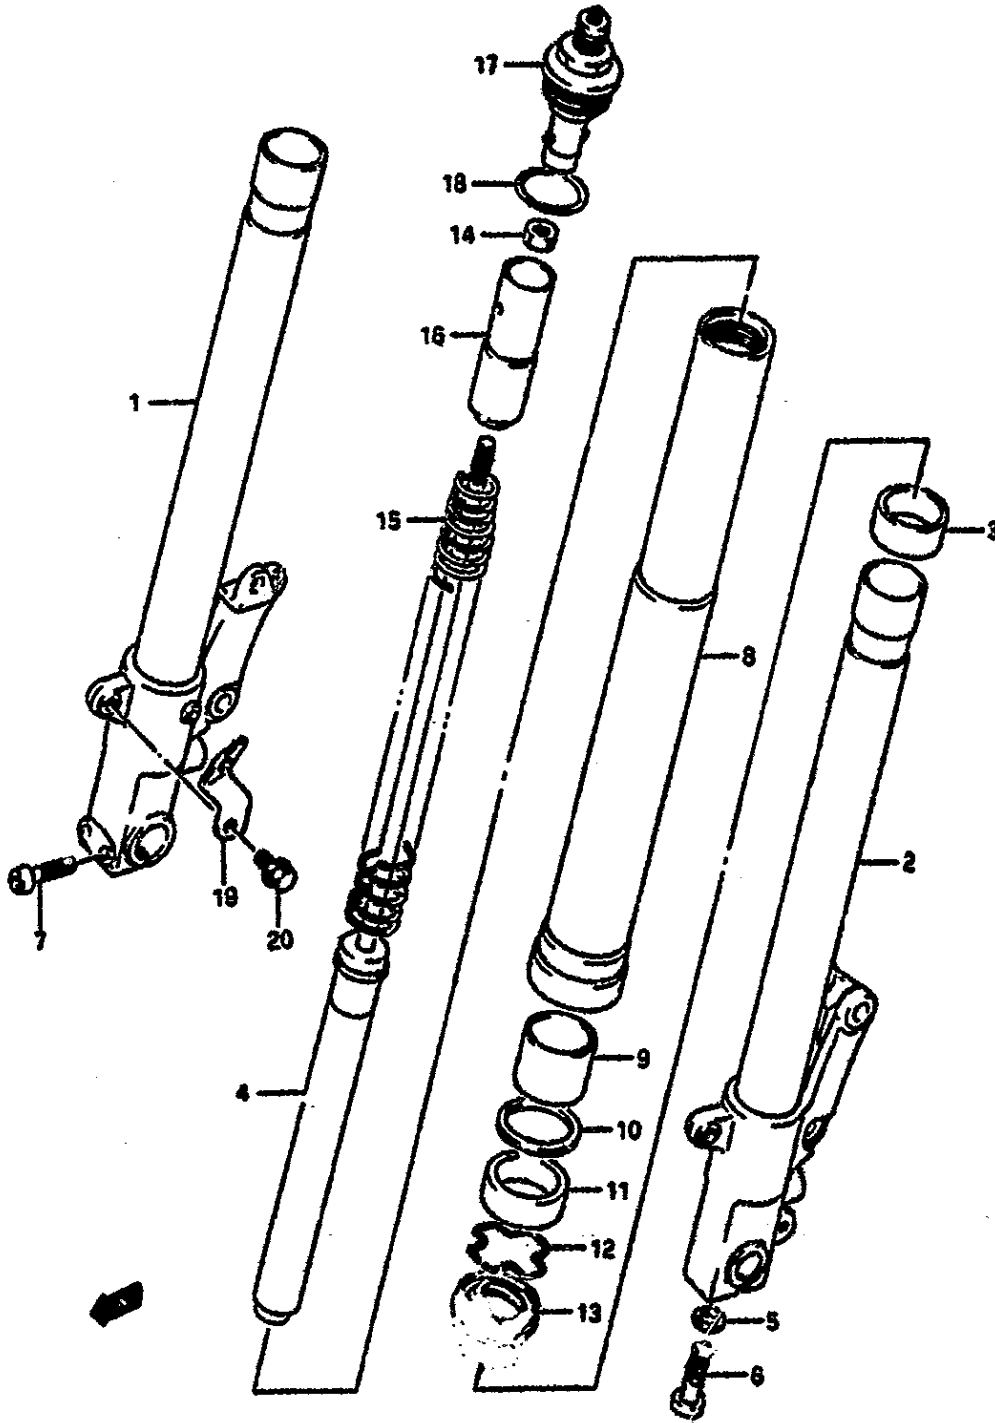 


Ref No	Part No	Description
22	51103-41C00	Damper Assy, Rh
22	51104-41C00	Damper Assy, Lh
1	51110-40C40	. Tube, Inner Rh
2	51120-40C40	. Tube, Inner Lh
3	51121-28C00	. Piston
4	51146-41C00	. Cylinder Assy
5	51148-40300	. Gasket
6	51147-40C00	. Bolt
7	51766-40C40	. Bolt, Inner Tube Rh
8	51130-40C40	. Tube, Outer
9	51167-40C40	. Metal, Slide
10	51158-05A00	. Washer
11	51153-06C00	. Seal, Oil
12	51156-49440	. Ring, Snap
13	51173-40C40	. Seal, Dust
14	51352-13A60	. Nut, Lod
15	51171-40C40	. Spring, Main
16	51176-40C40	. Spacer, Spring
17	51351-40C40	. Cap Assy
18	51117-28C00	. O Ring
19	51590-17D10	Plate, Front Fender Rh
19	51580-17D10	Plate, Front Fender Lh
20	01517-08128	Bolt

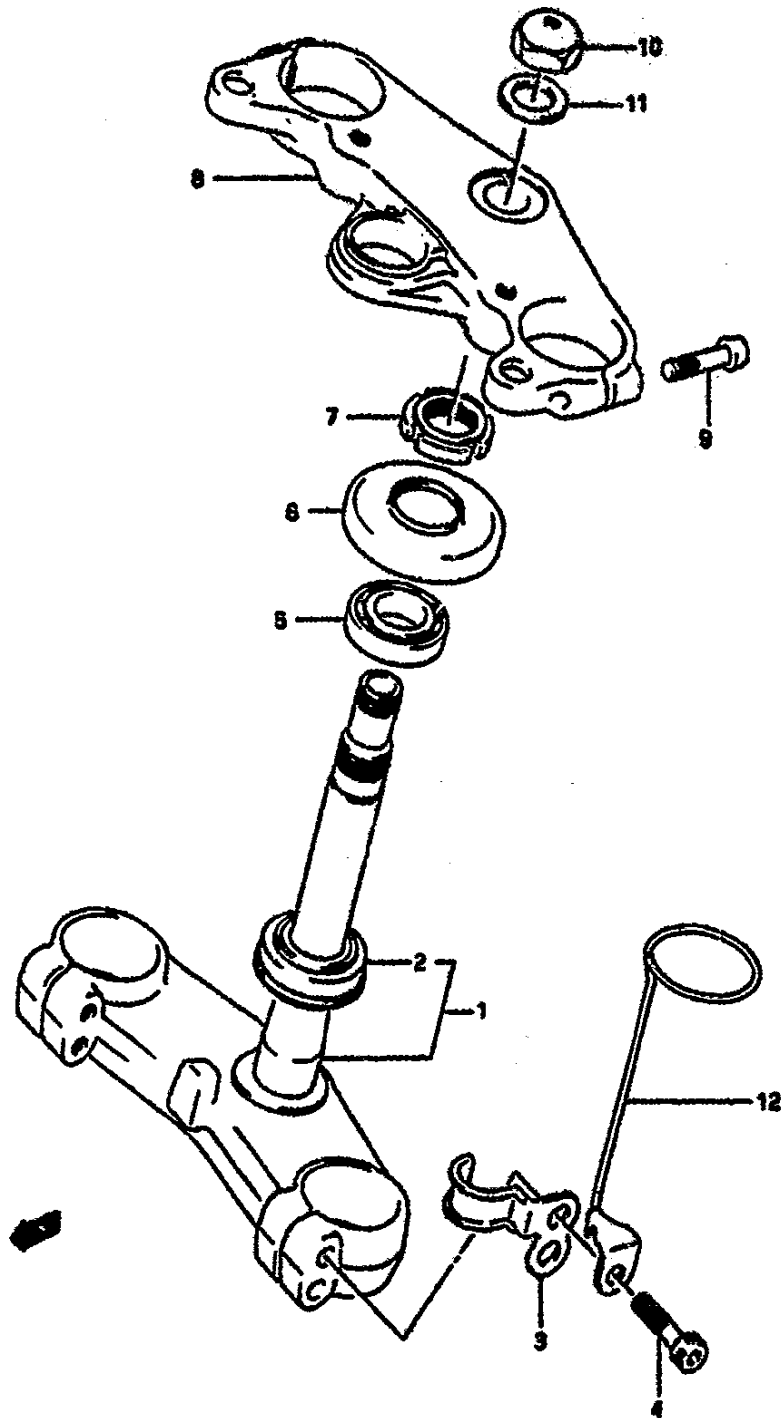 

Ref No	Part No	Description
1	51410-40C40	Stem, Steering
2	09265-30009	• . Bearing
3	34938-41C00	Guide, Meter Cable
4	09106-10022	Bolt
5	09265-25008	Bearing
6	09285-34007	Dust Seal
7	51631-28000	Nut
8	51311-40C40	Head, Steering Stem
9	51451-41C00	Bolt, Upper
10	51353-28A10	Nut
11	51356-24B01	Washer
12	51740-40C10	Holder, Steering Damper

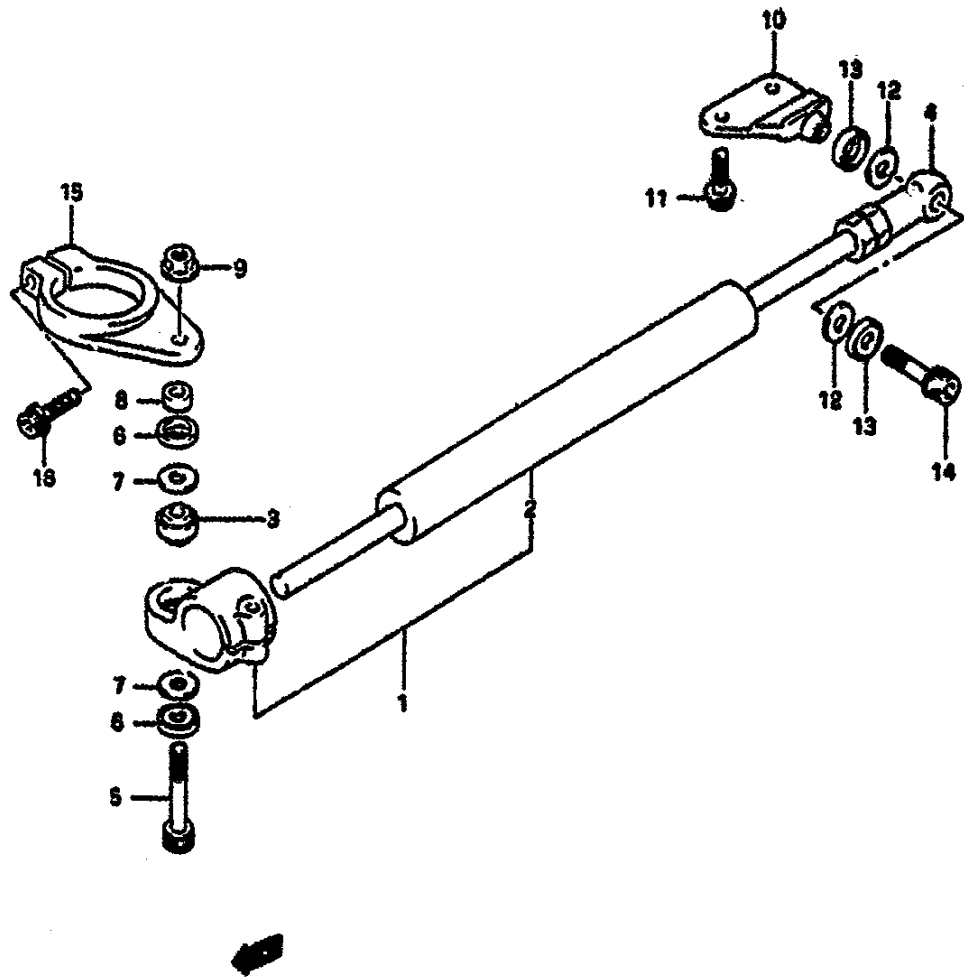 



Ref No	Part No	Description
1	51750-40C21	Damper Assy, Steering
2	51759-40C21	. Damper
3	09269-08003	. Bearing
4	51760-40C01	. End, Lod
5	07110-08407	Bolt
6	64339-40410	Dust Seal
7	08221-08126	Shim
8	09180-08130	Spacer
9	08319-31087	Nut
10	41684-40C00	Boss, Steering Damper
11	07120-06208	Bolt
12	08221-08126	Shim
13	64339-40410	Dust Seal
14	07110-08357	Bolt
15	51781-40C41	Bracket, Fork
16	07120-06358	Bolt

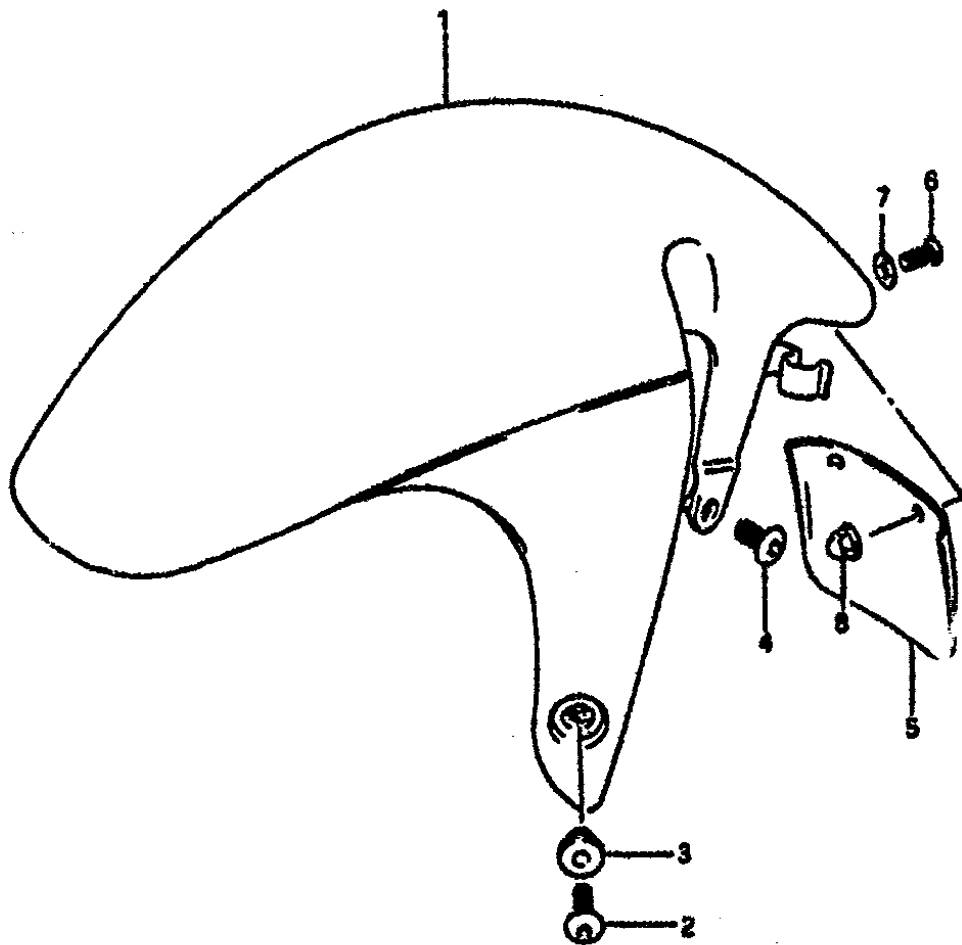 

Ref No	Part No	Description
1	53110-17D20-0NE	Fender, Front (blue)
1	53110-17D20-28V	Fender, Front (red)
1	53110-17D20-17U	Fender, Front (gray)
1	53110-17D20-1LE	Fender, Front (blue)
1	53110-17D20-33J	Fender, Front (black)
1	53110-17D10-0NE	Fender, Front (blue)
1	53110-17D10-28V	Fender, Front (red)
1	53110-17D10-17U	Fender, Front (gray)
1	53110-17D10-1LE	Fender, Front (blue)
1	53110-17D10-33J	Fender, Front (black)
2	09139-06030	Screw, Front
3	09161-06021	Washer, Front
4	09139-08007	Screw, Rear
5	53332-17C00	Mud Guard, Front Fender
6	02142-05125	Screw
7	09160-05030	Washer
8	08313-21055	Nut


Ref No	Part No	Description
1	54111-17C00-28W	Wheel, Front (mt3.50x17) (white)
1	54111-17C00-12R	Wheel, Front (mt3.50x17) (silver)
1	54111-17C00-1DR	Wheel, Front (mt3.50x17) (purple)
1	54111-17C00-1DR	Wheel, Front (mt3.50x17) (purple)
1	54111-17C00-1MJ	Wheel, Front (mt3.50x17) (blue)
2	08123-62047	Bearing
3	09180-20103	Spacer
4	54711-17D00	Axle, Front
5	54740-17C00	Spacer, Bearing Rh
6	54600-17C00	Box Assy, Speedometer Gear
7	59210-40C02	Disc, Front Brake Rh
8	59220-40C02	Disc, Front Brake Lh
9	09106-08062	Bolt
10	55110-41C00	Tire, Front (120/70 Zr17) (dunlop) (michelin) (michelin)
10	55110-41C00	Tire, Front (120/70 Zr17) (dunlop) (michelin)
11	43130-24A00	Valve
12	55411-00A00	Balancer (10g)
12	55412-00A00	Balancer (20g)
12	55413-00A00	Balancer (30g)

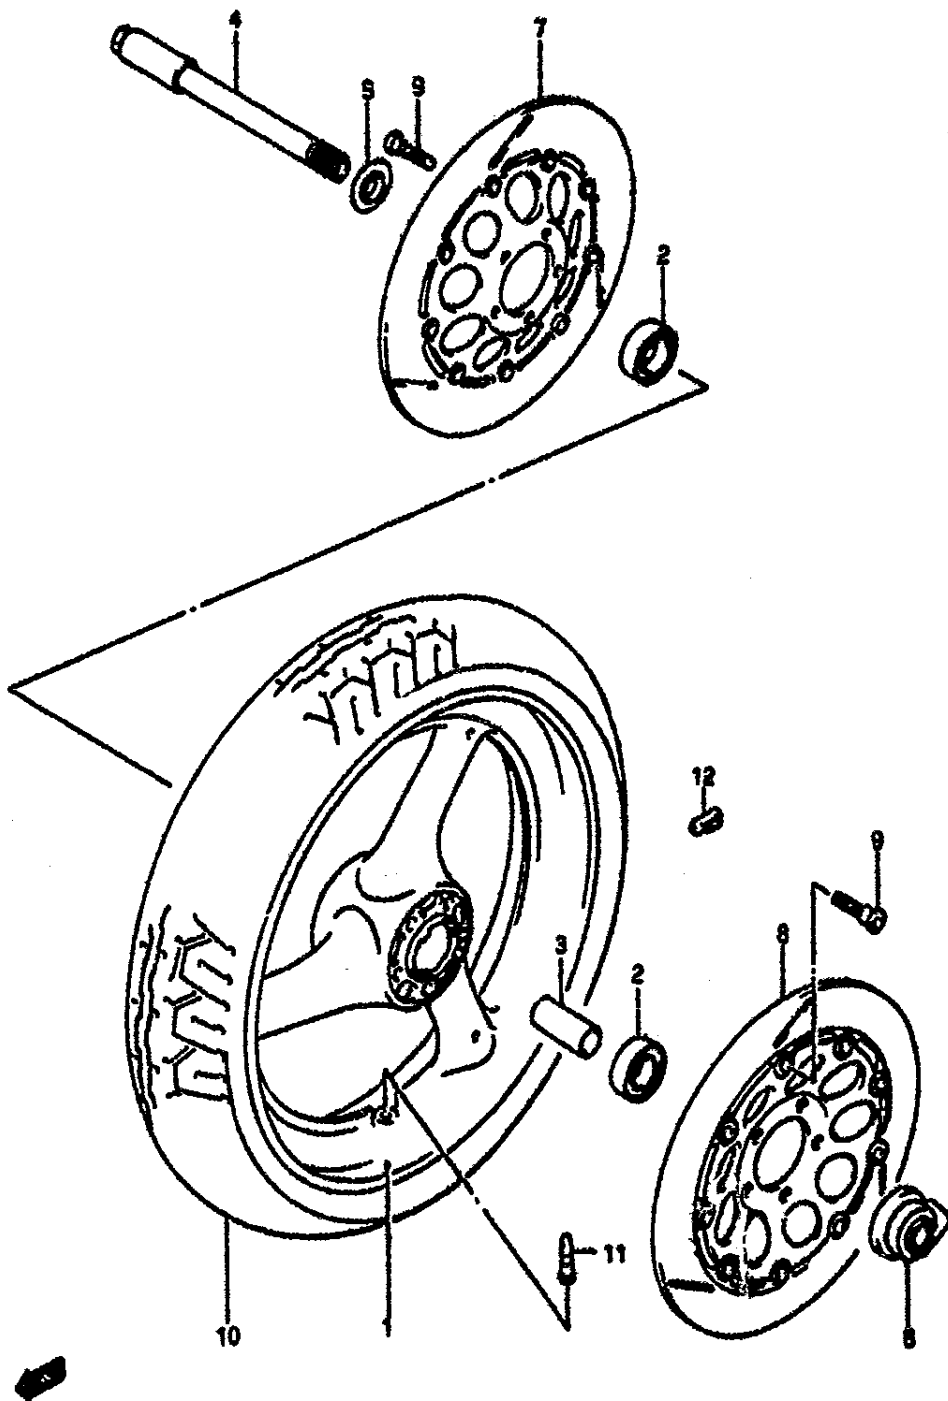 


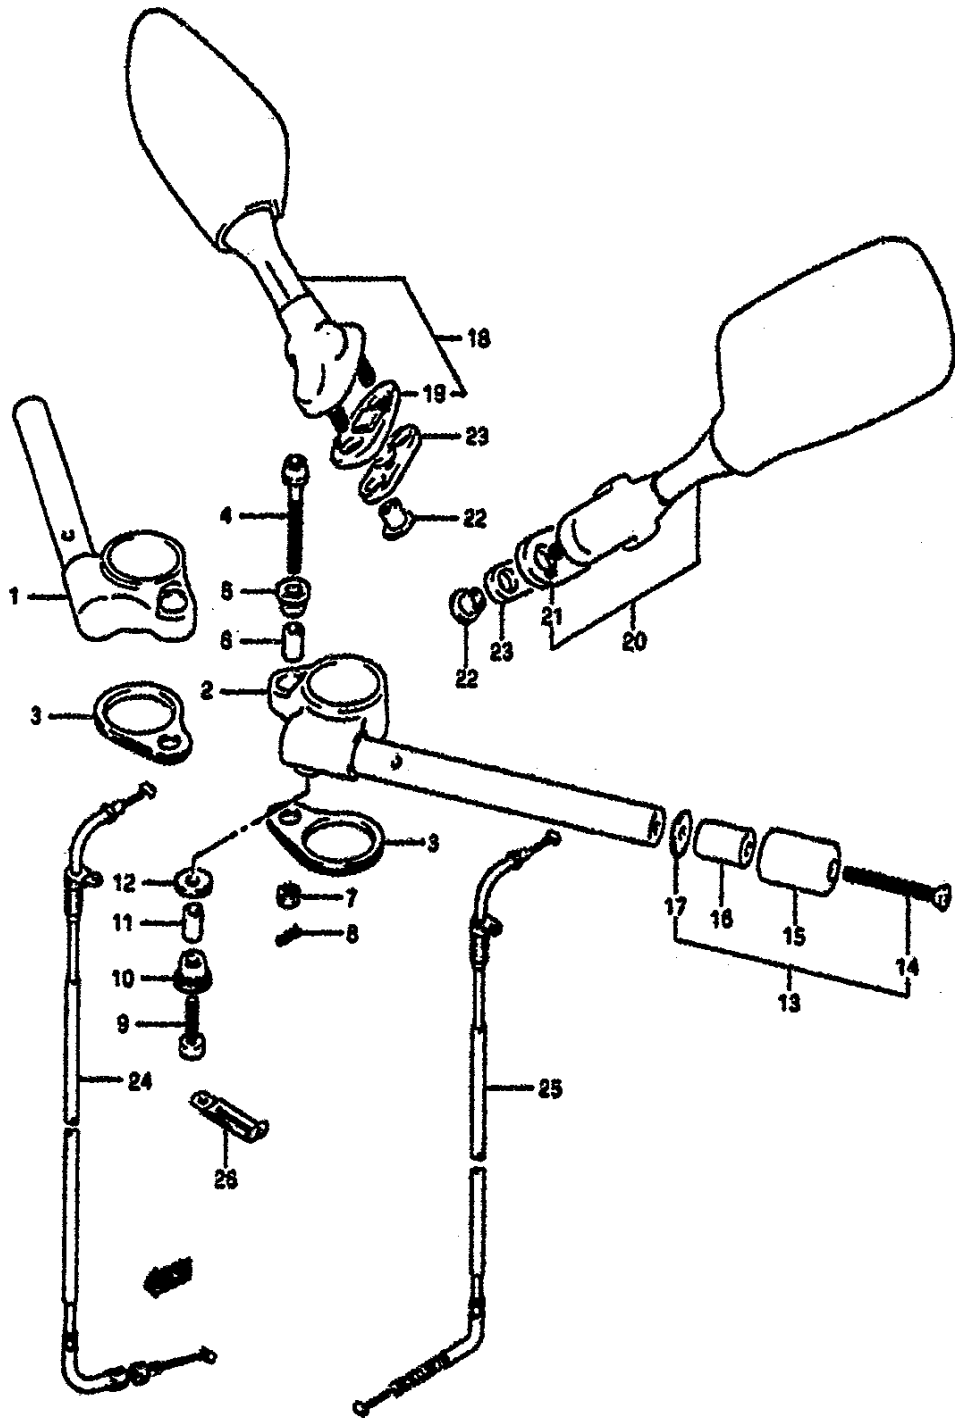 


Ref No	Part No	Description
1	56111-40C20	Handlebar, Rh
2	56151-40C20	Handlebar, Lh
3	56240-41C00	Cushion, Handlebar
4	56231-40C10	Bolt, Handlbar
5	56190-40C10	Cushion
6	56243-40C11	Spacer
7	08310-22088	Nut
8	09385-08005	Clip
9	07110-08307	Bolt
10	56190-40C10	Cushion
11	56243-40C11	Spacer
12	56244-40C00	Cushion, Spacer
13	56200-40811	Balancer Set, Handlebar
14	09127-06015	• . Screw
15	56274-40C10	• . Cap
16	56271-40C10	• . Balancer
17	56275-34400	• . Spacer
18	56500-41C01-H38	Mirror Assy, Rear View Rh (white)
18	56500-41C01-84N	Mirror Assy, Rear View Rh (black)
19	56528-41C00	• . Gasket, Mirror Rh
20	56600-41C01-H38	Mirror Assy, Rear View Lh (white)
20	56600-41C01-84N	Mirror Assy, Rear View Lh (black)
21	56628-41C00	• . Gasket, Mirror Lh
22	56619-12C00	Nut, View Mirror
23	94576-41C00	Cushion, View Mirror
24	58300-41C00	Cable Assy, Throttle
24	58300-41C10	Cable Assy, Throttle
25	58410-41C00	Cable, Starter
26	09404-06402	Clamp, Cable

Ref No	Part No	Description
1	57110-49501	Grip, Throttle
2	57420-32C00	Lever, Adjust
3	57430-40C00	Knocker
4	57438-32C00	• . Spring
5	57437-32C00	Bolt
6	08319-31065	Nut
7	57431-17C00	Bolt, Lever
8	08316-16064	Nut
9	37200-41C00	Switch Assy, Handle Rh
9	37200-41C30	Switch Assy, Handle Rh
10	02112-05455	• . Screw
11	57460-17C00	Switch Assy, Stop
12	57465-17C00	• . Screw
13	57211-49500	Grip, Lh
14	57620-40C00	Lever, Clutch
15	57431-05A00	Bolt
16	08319-21065	Nut
17	37400-41C00	Switch Assy, Handle Lh
17	37400-41C40	Switch Assy, Handle Lh
18	02112-05455	• . Screw

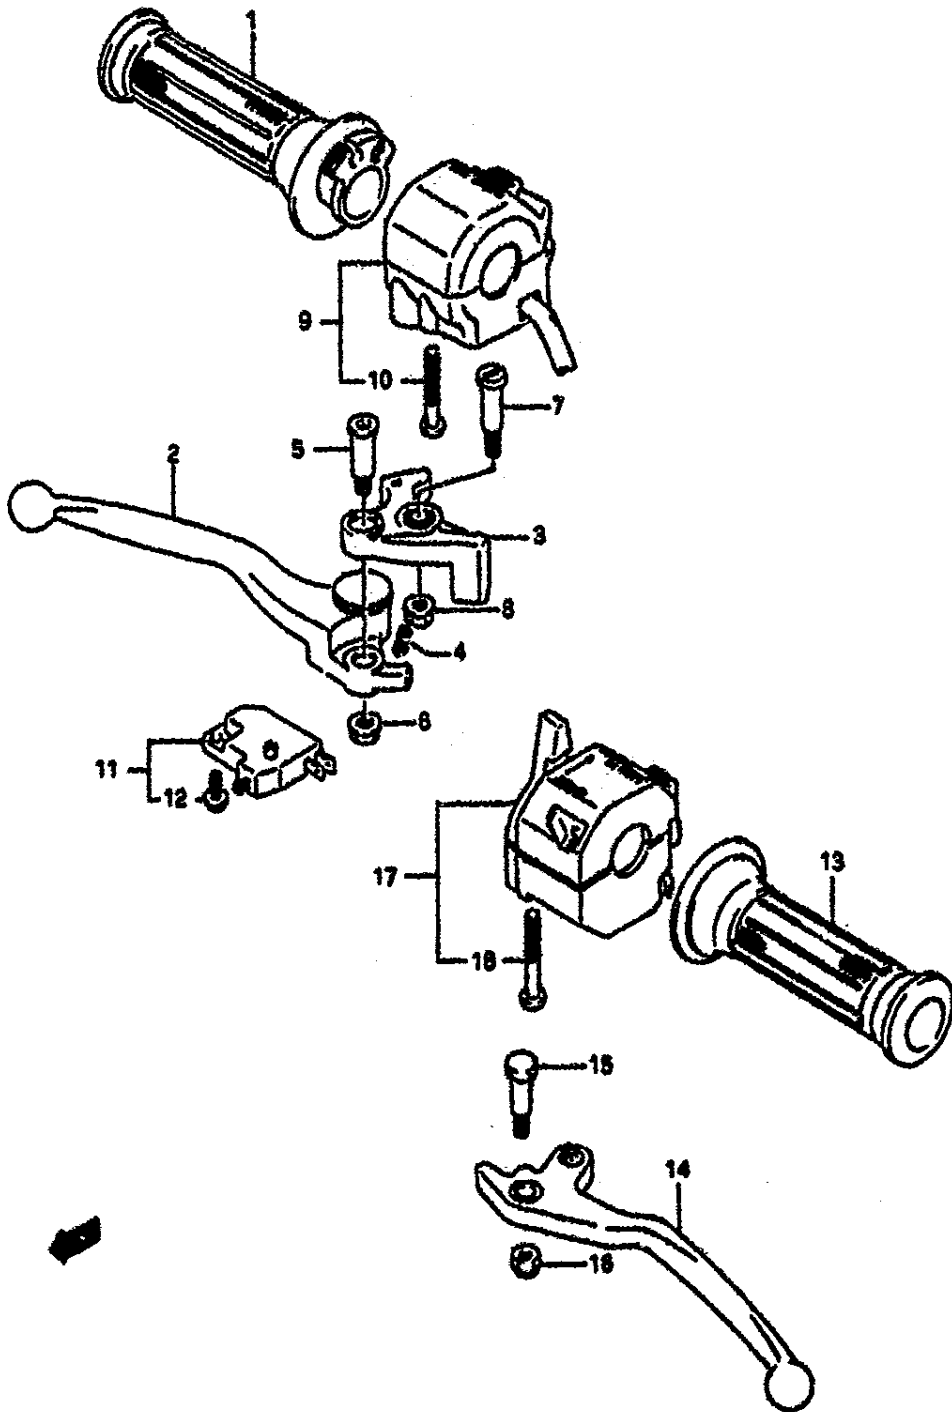 

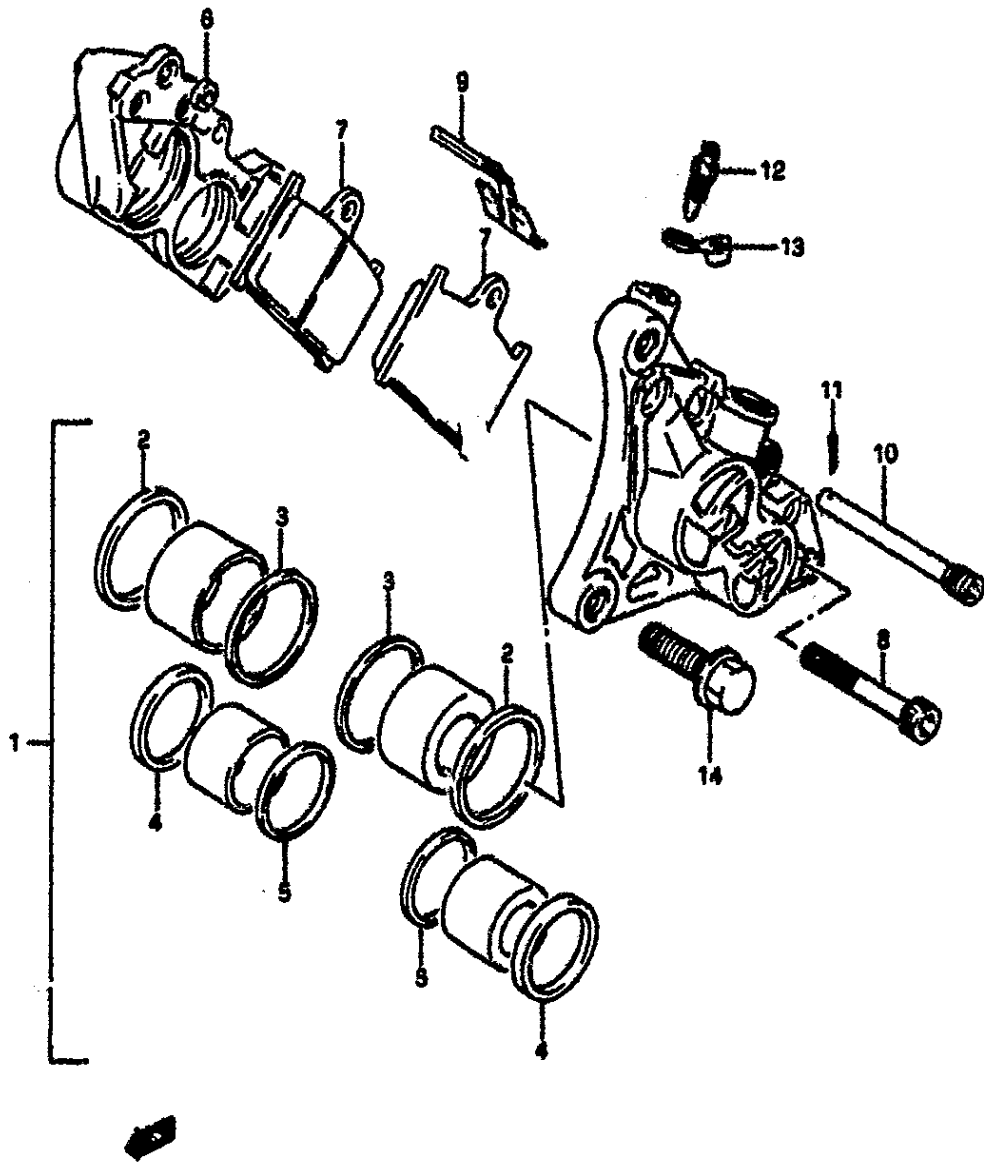 



Ref No	Part No	Description
18	59100-40C01	Caliper Assy, Rh
18	59300-40C01	Caliper Assy, Lh
1	59100-17830	• . Piston Set
2	59107-13A00	•• .. Seal, Piston
3	59108-13A00	•• .. Boot
4	59107-17C00	•• .. Seal, Piston
5	59108-17C00	•• .. Boot
6	69107-17C00	•• .. Seal
7	59130-40C00	• . Pad
8	59145-33C00	• . Bolt, Housing
9	59315-17C00	• . Spring
10	59345-33C00	• . Pin
11	04111-16158	• . Pin, Cotter
12	59121-01A00	• . Bleeder
13	59122-01A00	• . Cap
14	01517-10305	Bolt

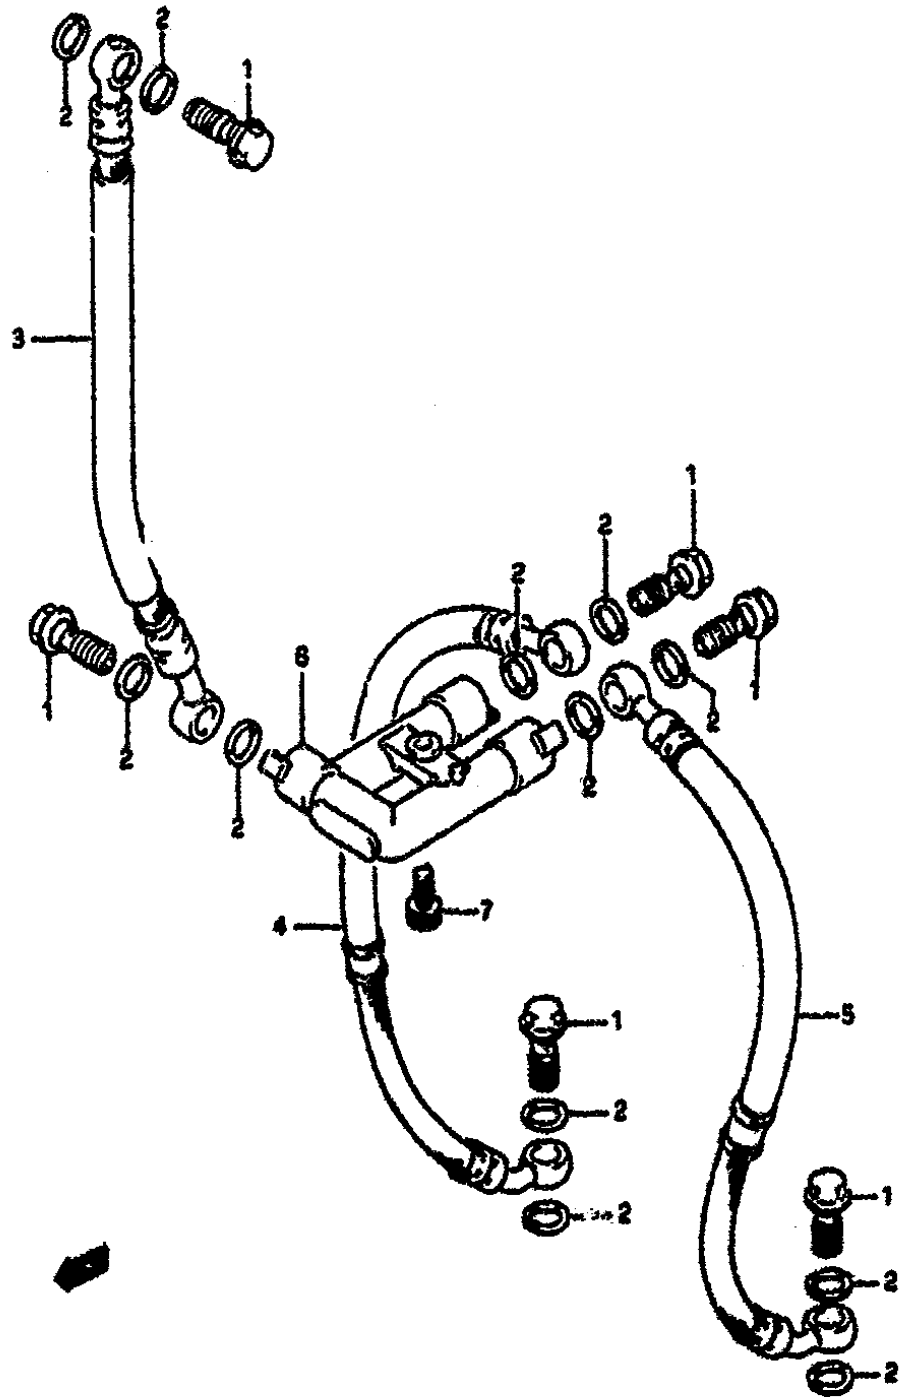 


Ref No	Part No	Description
1	09360-10017	Bolt
2	09161-10009	Washer
3	59480-41C00	Hose, Front Brake No.1
3	59480-41C10	Hose, Front Brake No.1
4	59240-40C20	Hose, Front Brake No.2, Rh
5	59440-40C20	Hose, Front Brake No.2, Lh
6	59491-40C01	Joint, Brake Hose
7	07110-06165	Bolt

Ref No	Part No	Description
7	59600-41C00	Cylinder Assy, Front Master
1	59600-45850	• Piston & Cup Set
2	59667-49460	• Diaphragm
3	59669-41C00	• Cap
4	69689-49300	• Screw
5	59671-19B00	• Holder
6	59675-17C00	• Bolt
7	59664-48B00	• Protector
8	59668-41C00	• Plate

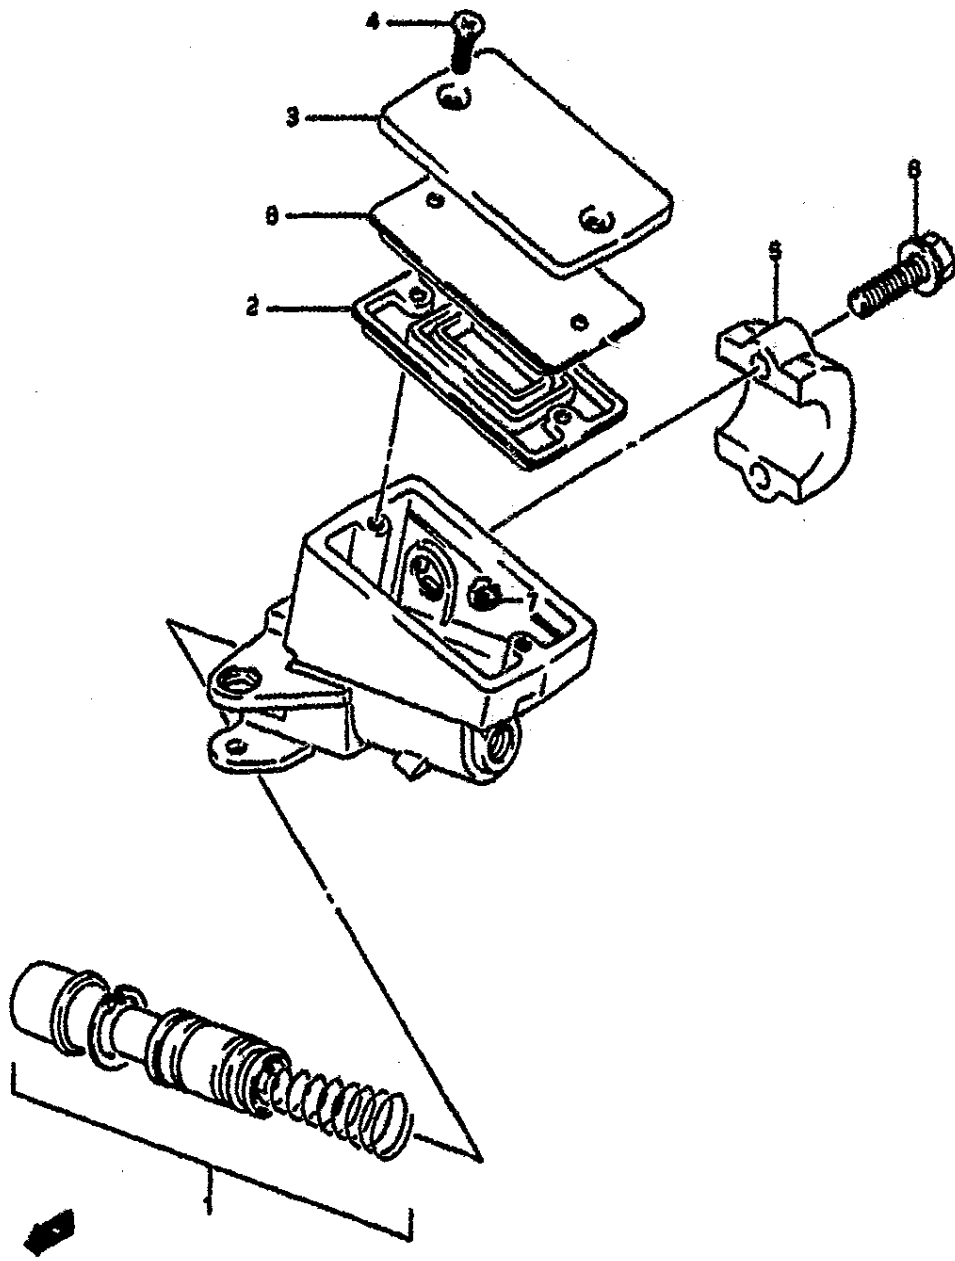 


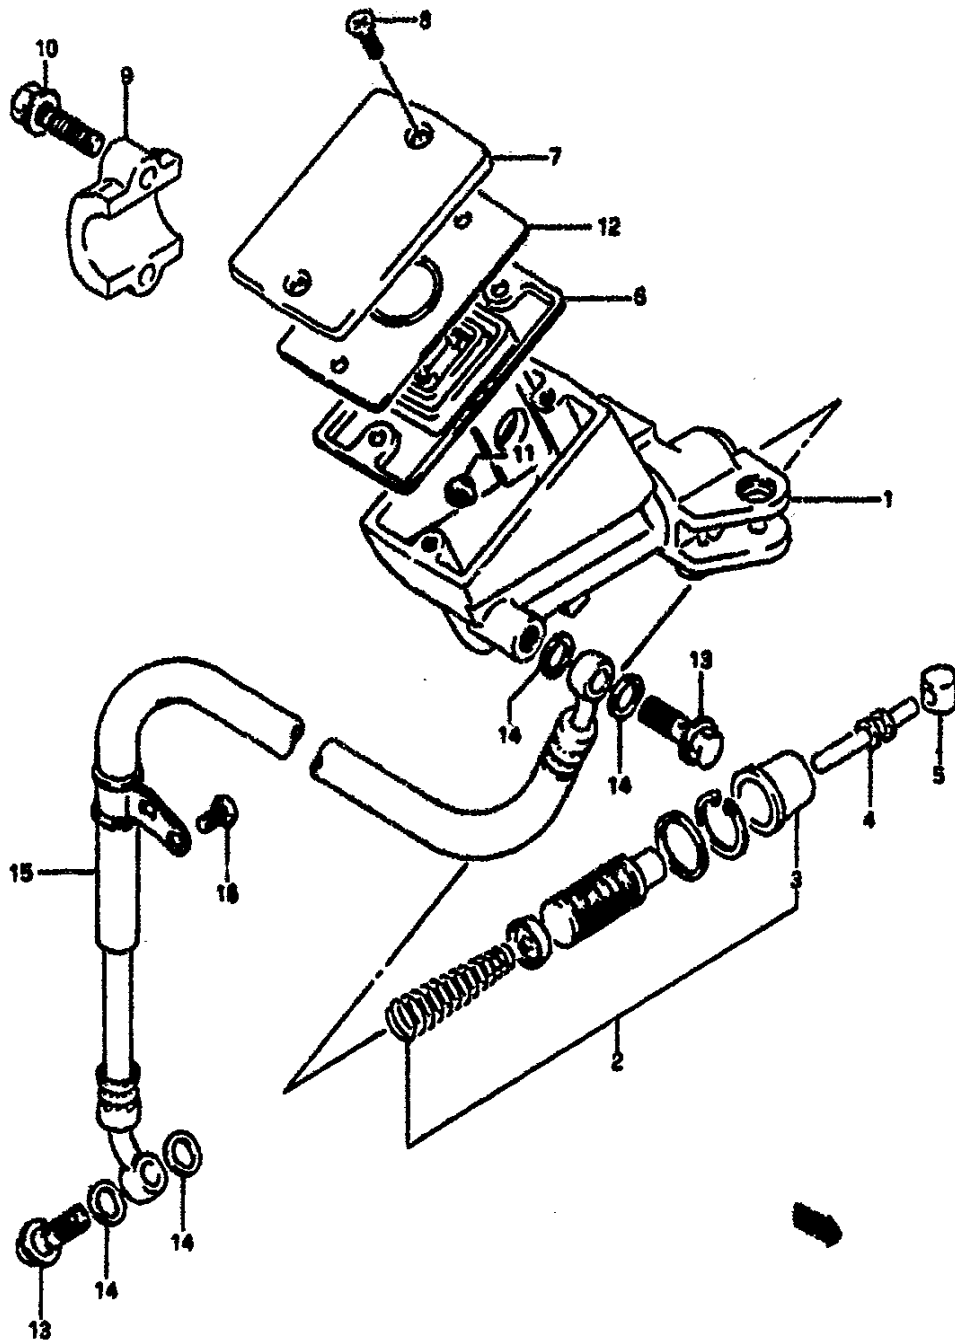 


Ref No	Part No	Description
1	59800-41C00	Cylinder Assy, Clutch Master
2	59800-08810	• . Piston & Cup Set
3	59666-44300	•• . Boot
4	59871-08A00	• . Push Rod
5	59892-08A00	• . Bush
6	59667-49460	• . Diaphragm
7	59669-41C00	• . Cap
8	69689-49300	• . Screw
9	59671-19B00	• . Holder
10	59675-17C00	• . Bolt
11	59664-48B00	• . Protector
12	59668-41C00	• . Plate
13	09360-10017	Bolt
14	09161-10009	Washer
15	59910-41C00	Hose, Clutch
16	02112-05105	Screw

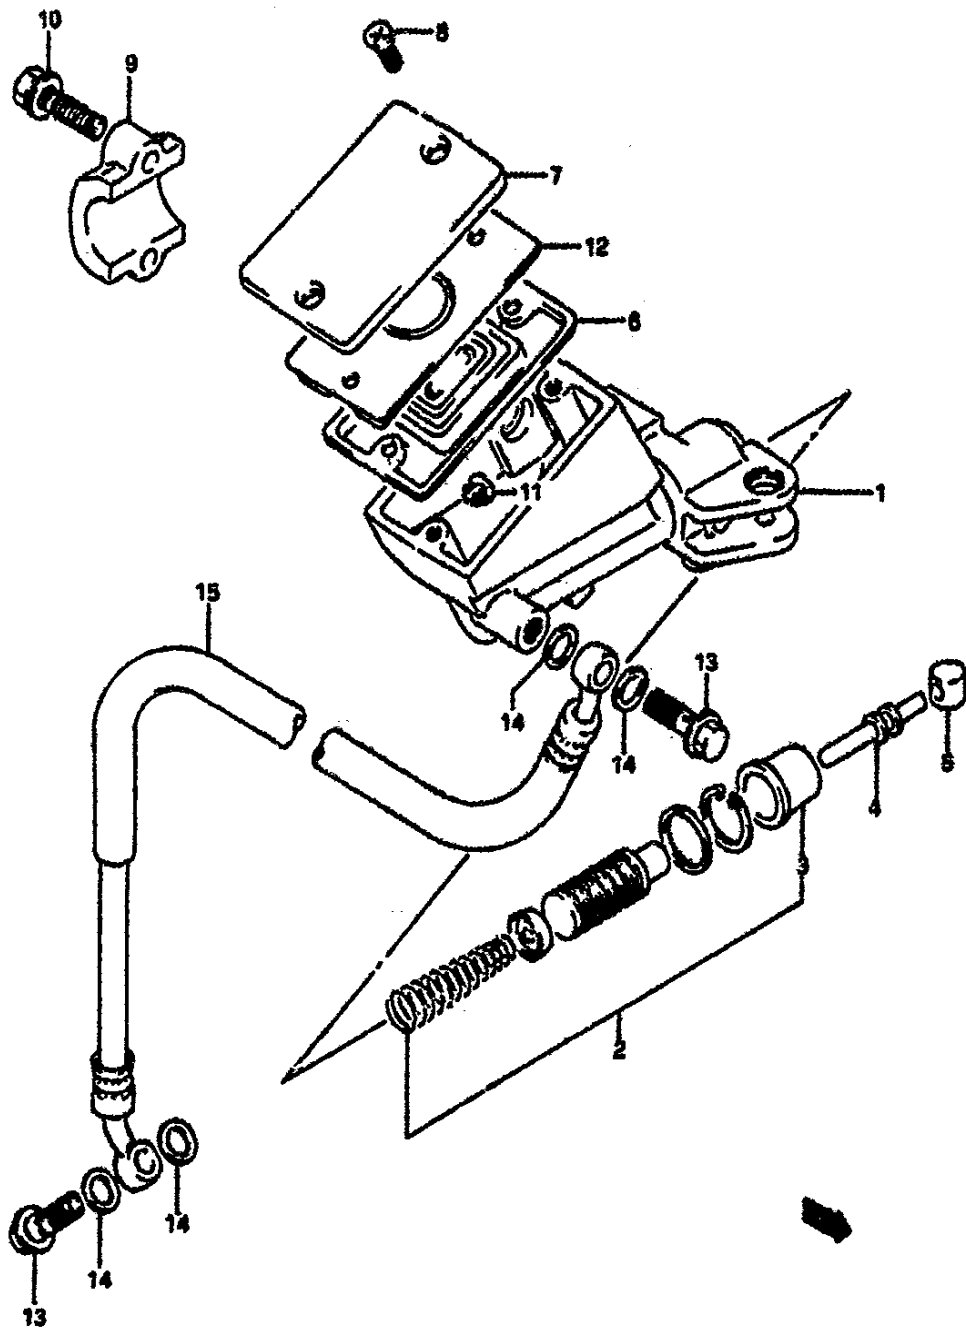 


Ref No	Part No	Description
1	59800-41C00	Cylinder Assy, Clutch Master
2	59800-08810	• Piston & Cup Set
3	59666-44300	•• Boot
4	59871-08A00	• Push Rod
5	59892-08A00	• Bush
6	59667-49460	• Diaphragm
7	59669-41C00	• Cap
8	69689-49300	• Screw
9	59671-19B00	• Holder
10	59675-17C00	• Bolt
11	59664-48B00	• Protector
12	59668-41C00	• Plate
13	09360-10017	Bolt
14	09161-10009	Washer
15	59910-41C10	Hose, Clutch

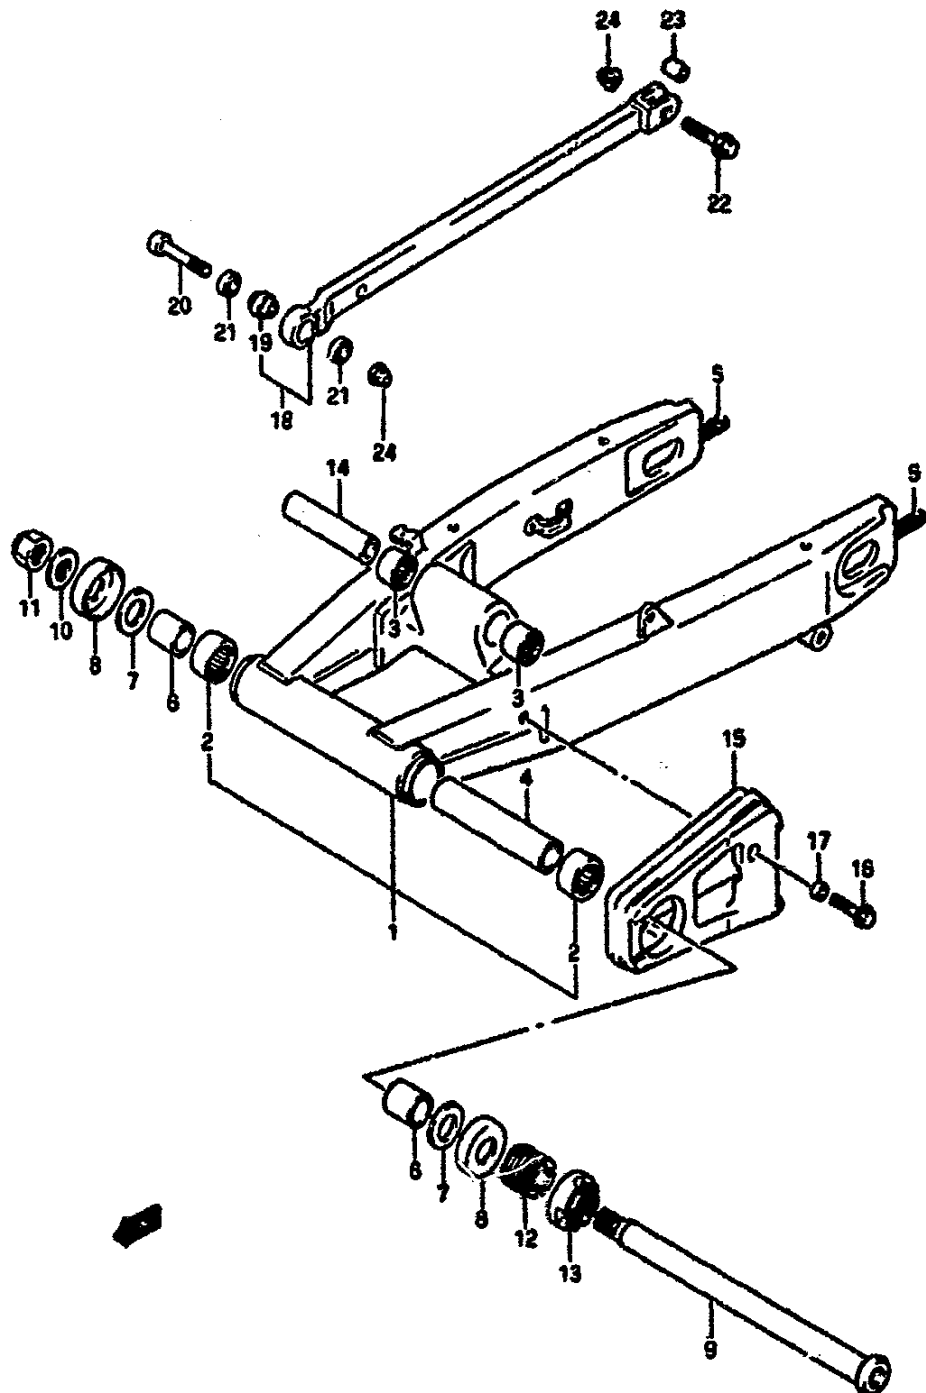 


Ref No	Part No	Description
1	61000-40C10	Swinging Arm Assy, Rear
2	09263-25024	. Bearing, Pivot
3	09263-20071	. Bearing
4	61282-17C00	. Spacer, Center
5	61431-40C00	. Stud Bolt, Chain Adjuster
6	61251-17C00	Spacer, Bearing
7	08211-20381	Washer, Thrust (t:1)
7	08211-20382	Washer, Thrust (t:1.5)
8	61262-17C00	Seal, Dust
9	61211-40C00	Shaft, Pivot
10	08322-11188	Washer
11	09159-18007	Nut
12	61213-40C30	Bolt, Pivot
13	61214-40C30	Nut, Pivot
14	62317-40C10	Spacer, Lever
15	61273-40C00	Buffer, Chain Touch Defence
16	09116-06111	Bolt
17	09180-06002	Spacer
18	64300-40820	Torquelink Set, Rear
19	64352-40411	. Bearing
20	09106-08048	Bolt, Front
21	64339-40410	Seal, Dust
22	09103-08178	Bolt, Rear
23	64336-20A00	Spacer, Rear
24	08319-31087	Nut

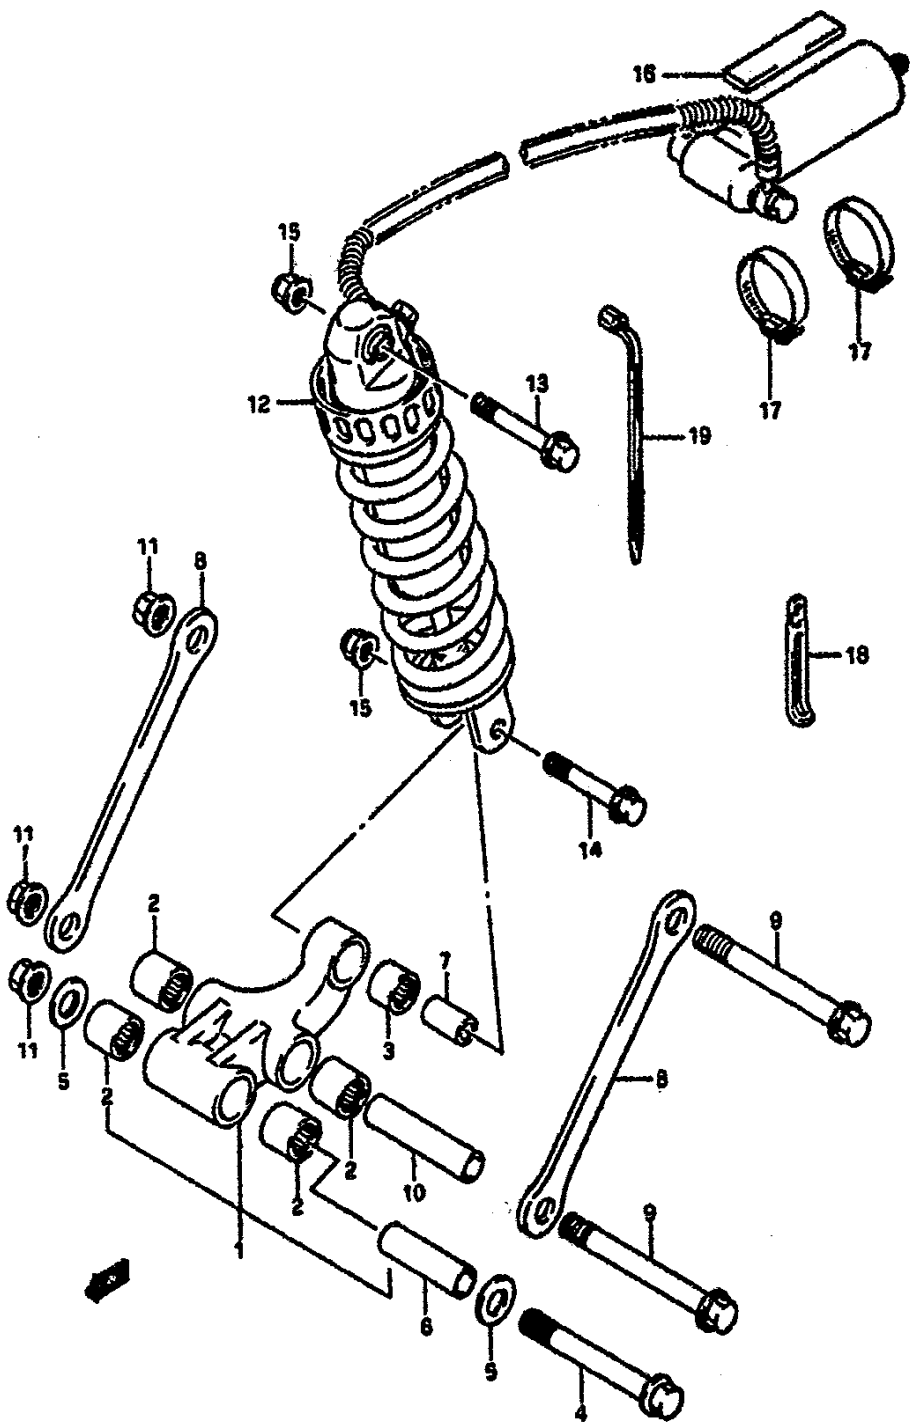 

Ref No	Part No	Description
1	62600-40830	Lever Set, Rear Cushion
2	09263-20071	• Bearing
3	09263-17034	• Bearing
4	62621-17C00	Shaft, Front
5	08211-14323	Washer
6	62317-17C00	Spacer, Front
7	62684-40A10	Spacer, Rear
8	62641-40C10	Rod, Rear Cushion
9	62658-40C10	Shaft, Red
10	62317-40C10	Spacer, Red
11	08319-31148	Nut
12	62100-41C00	Absorber Assy, Rear Shock
13	62311-08300	Bolt, Upper
14	09103-10050	Bolt, Lower
15	08319-31107	Nut
16	62331-07D00	Cushion, Tank
17	09402-43501	Clamp, Tank
18	09404-06404	Clamp, Hose
19	09407-18402	Clamp

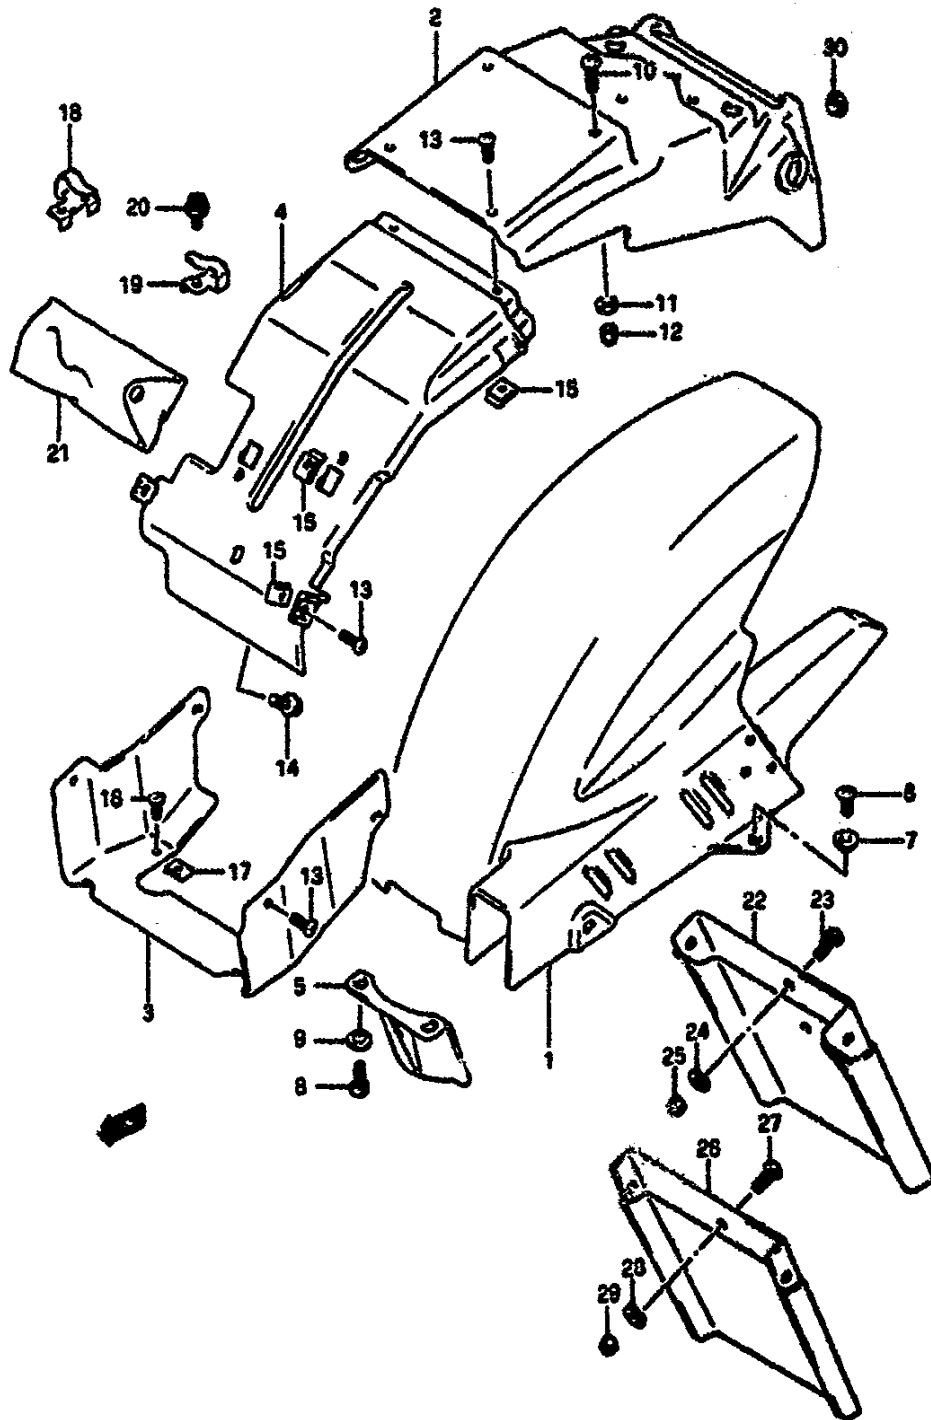 



Ref No	Part No	Description
1	63110-40C00	Fender, Rear Lower
2	63112-40C00	Fender, Rear Upper
2	63112-40C10	Fender, Rear Upper
2	63112-40C20	Fender, Rear Upper
3	63113-40C00	Fender, Rear Upper Front
4	63114-17C00	Fender, Rear Upper Front
5	63411-42A00	Mud Guard, Rear Unit
6	02142-06104	Screw, Lower
7	09169-06060	Washer
8	02142-06167	Screw, Mud Guard
9	09169-06025	Washer
10	02142-06164	Screw, Upper
11	09160-06006	Washer
12	08319-21066	Nut
13	02142-05124	Screw, Upper Front
14	01517-06105	Bolt
15	94484-32B00	Nut
16	02142-05124	Screw, Electric
17	94484-32B00	Nut
18	95721-18D00	Holder, Helmet Rh
19	95731-18D00	Holder, Helmet Lh
20	07120-06125	Bolt
20	01107-06125	Bolt
21	09800-20032	Tool Assy
22	63311-17C00	Extension, Rear Fender
22	63311-17C20	Extension, Rear Fender
23	02142-06164	Screw
24	09160-06006	Washer
25	08319-21066	Nut
26	63331-48B02	Mud Guard, Rear Fender
26	63331-48B12	Mud Guard, Rear Fender
27	02142-06164	Screw
28	09160-06006	Washer
29	08319-21066	Nut
30	09250-08007	Cap

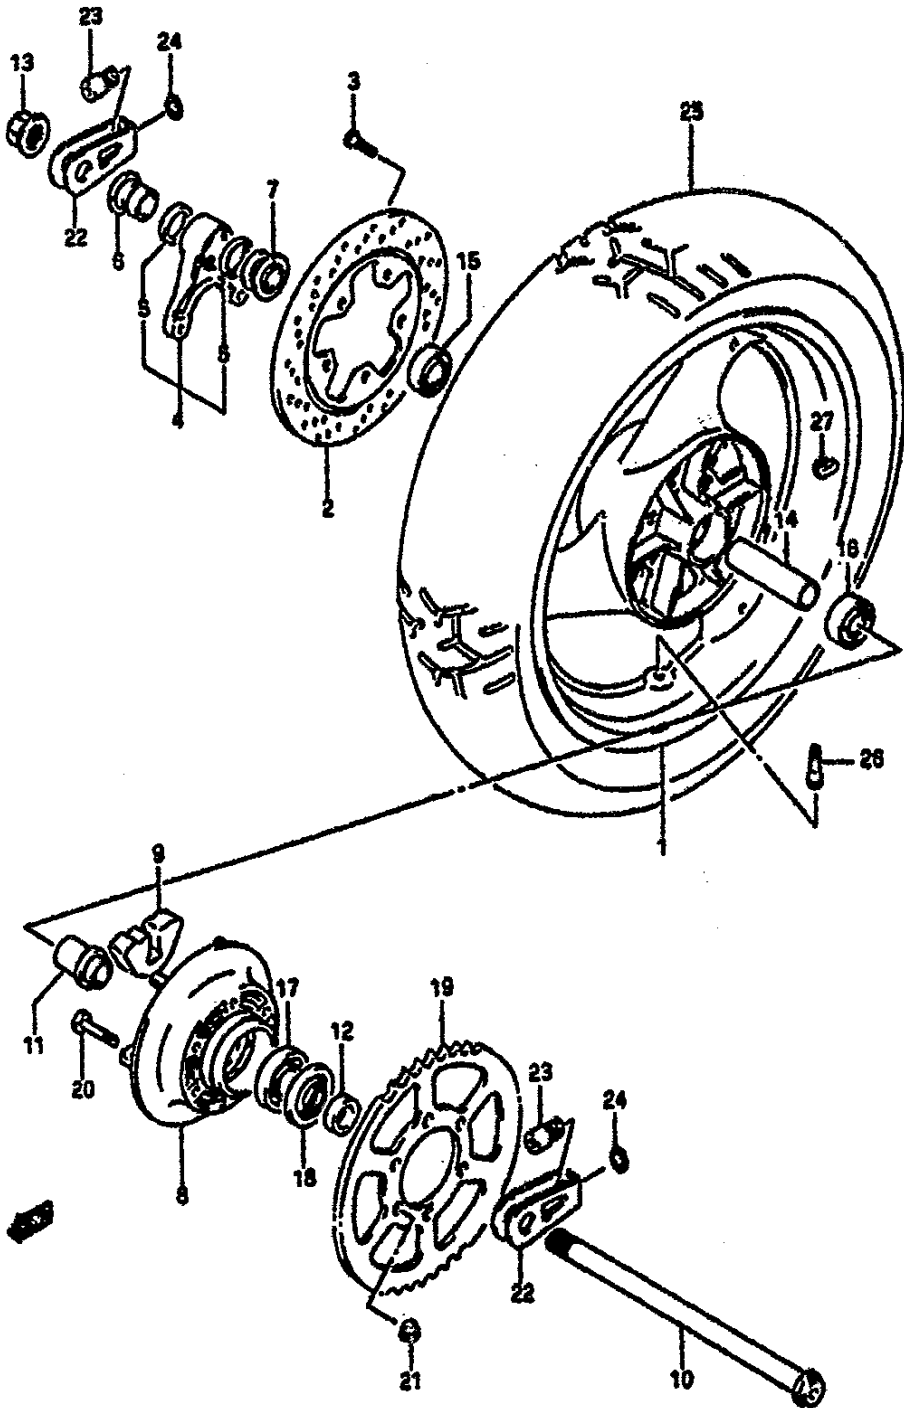 


Ref No	Part No	Description
1	64111-07D00-28W	Wheel, Rear (17xmt5.50) White
1	64111-07D00-12R	Wheel, Rear (17xmt5.50) Silver
1	64111-07D00-1DR	Wheel, Rear (17xmt5.50) Purple
1	64111-07D00-1DR	Wheel, Rear (17xmt5.50) Purple
1	64111-07D00-1MJ	Wheel, Rear (17xmt5.50) Blue
2	69211-17C00	Disc, Rear Brake
3	09106-08062	Bolt
4	69720-17C00	Bracket, Rear Calipers
5	09285-28002	• Oil Seal
6	69412-27A00	Spacer, Caliper Bracket
7	64740-48B00	Spacer, Rh
8	64611-40C00	Drum, Sprocket
9	64651-31001	Shock Absorber, Drum
10	64711-40C00	Axle, Rear
11	64733-48B00	Retainer, Drum
12	64751-40C00	Spacer, Lh
13	09159-20005	Nut
14	64731-40C00	Spacer, Bearing
15	09262-20114	Bearing, Rh
16	09262-20042	Bearing, Lh
17	09262-25073	Bearing, Drum
18	09285-35001	Oil Seal
19	64511-40C01	Sprocket, Rear (nt:48)
20	09119-10060	Bolt
21	08319-31107	Nut
22	61411-40C00	Adjuster, Chain
23	61415-40C00	Nut, Adjuster
24	08331-31136	Circlip
25	65210-41C00	Tire, Rear (180/55 Zr17) (dunlop) (michelin) (michelin)
25	65110-41C00	Tire, Rear (180/55 Zr17) (dunlop) (michelin)
26	43130-24A00	Valve
27	55411-00A00	Balancer (10g)
27	55412-00A00	Balancer (20g)
27	55413-00A00	Balancer (30g)

Ref No	Part No	Description
27	69100-17C00	Caliper Assy, Rear
1	69100-17830	. Piston Set
2	59107-18410	•• .. Seal
3	59108-16700	•• .. Boot
4	69107-34200	•• .. Seal
5	69130-06B00	. Pad
6	59145-17C00	. Bolt
7	59143-16700	. Spring
8	69141-45000	. Pin
9	69142-45000	. Clip
10	59151-16701	. Cover
11	59121-18410	. Bleeder
12	59122-18410	. Cap
13	62647-04A00	. Dust Seal
14	59371-33410	. Shim
15	01517-08304	Bolt

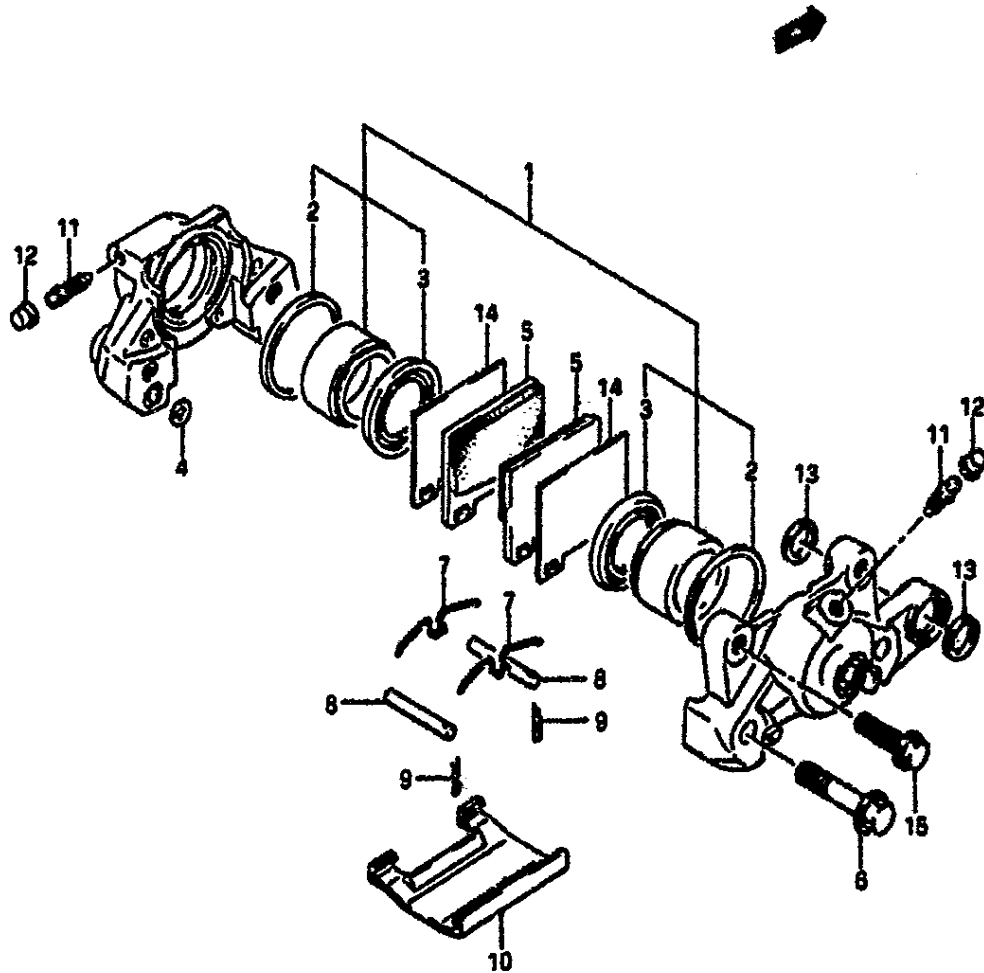 

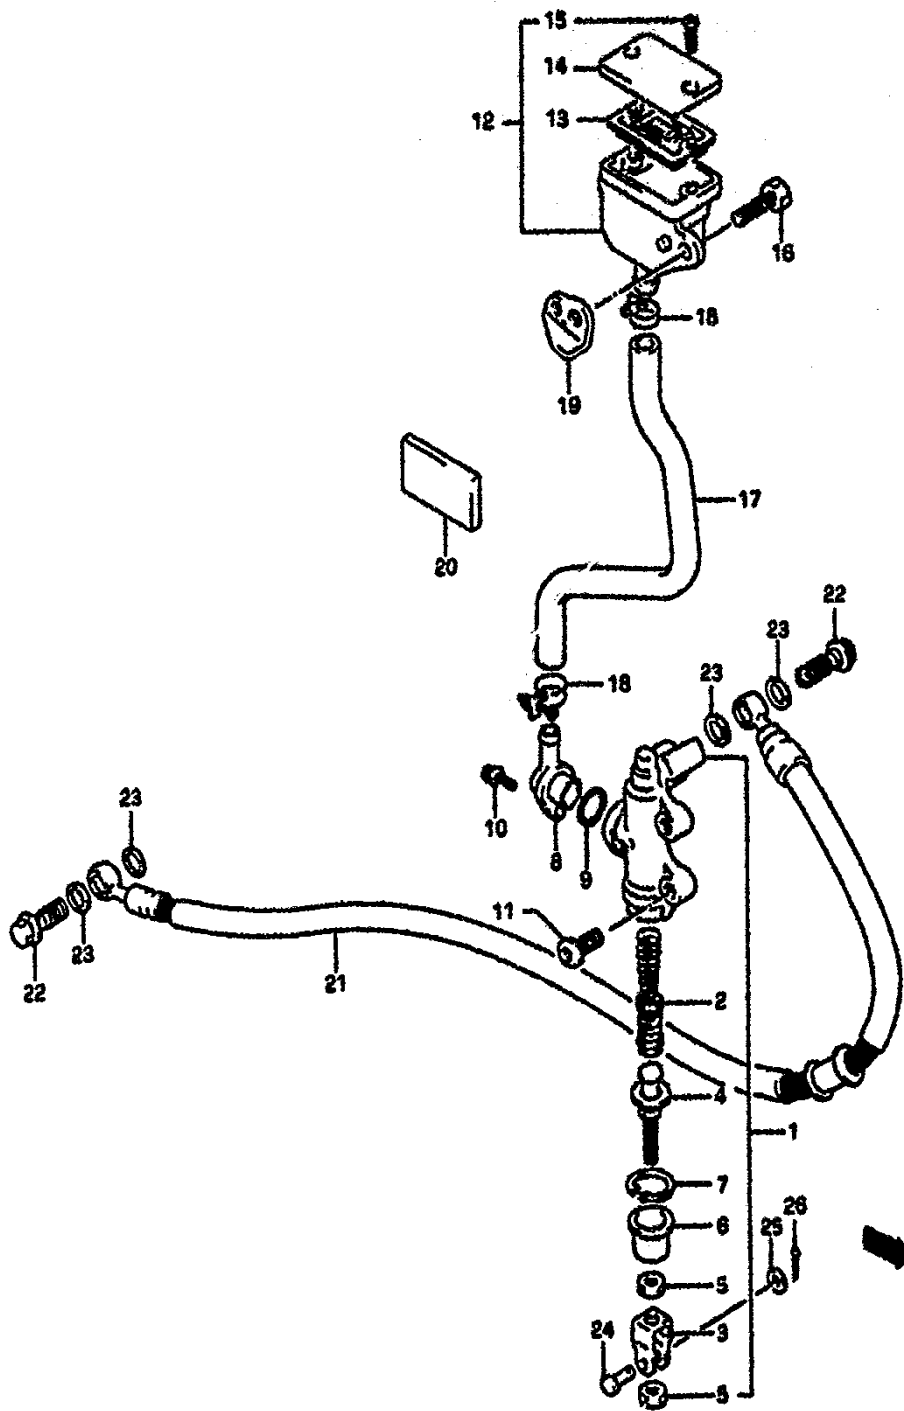 



Ref No	Part No	Description
1	69600-17C01	Cylinder Assy, Rear Master (white)
2	69600-16820	• Piston / Cap Set
3	69692-27A30	• Yoke
4	69670-48B00	• Rod, Push
5	69693-05A00	• Nut
6	69691-00A00	• Boot
7	51162-70040	• Circlip
8	69672-05A00	• Connector
9	69686-34200	• O Ring
10	02112-74125	• Screw
11	09139-08009	Bolt (8x22)
12	69740-38B20	Tank Assy, Rear Reservoir
13	59667-04700	• Diaphragm
14	69669-24A01	• Cap
15	69689-04A00	• Screw
16	01107-06257	Bolt
17	69731-17C10	Hose, Reservoir
18	09400-16302	Clamp
19	69751-17C00	Bracket, Tank Rear
20	69732-17C01	Cushion, Hose Side
21	69480-41C10	Hose, Rear Brake
22	09360-10017	Bolt
23	09161-10009	Washer (10x15x1.5)
24	09200-06037	Pin
25	08322-21067	Washer
26	04111-20158	Pin, Cotter

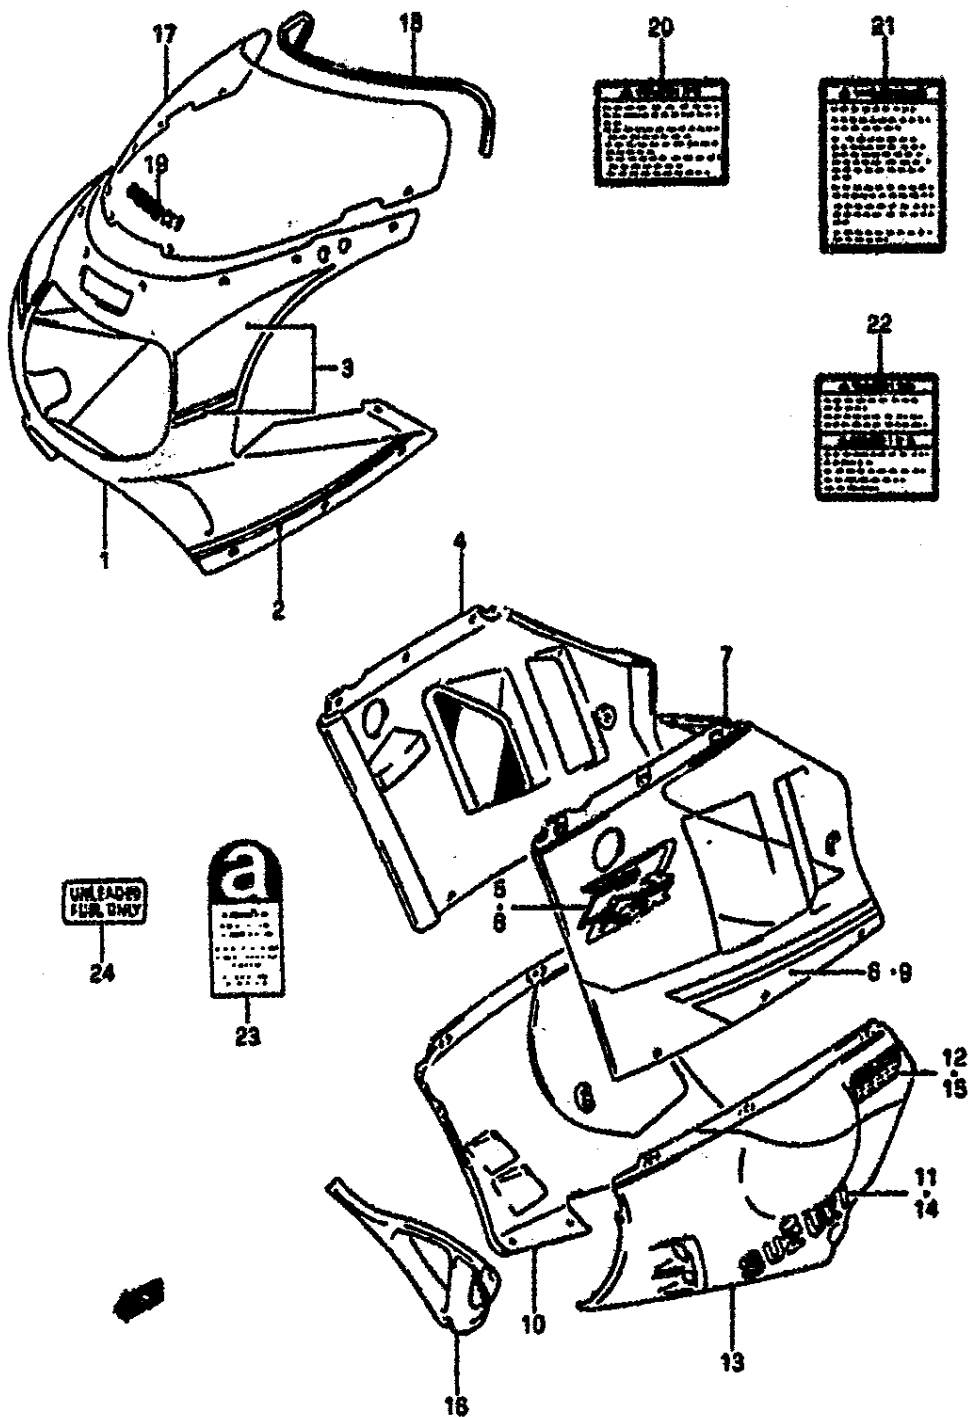 


Ref No	Part No	Description
1	94400-41C50-33J	Body Assy, Cowling (black)
1	94400-41C50-36X	Body Assy, Cowling (black)
2	68270-41C20-H09	• . Tape Set, Side
2	68270-41C20-H16	• . Tape Set, Side
3	68280-41C10-H09	• . Tape Set, Front
3	68280-41C10-H16	• . Tape Set, Front
4	94430-41C40-3CG	Cover, Cowling Side Rh (black/gray)
4	94430-41C60-05X	Cover, Cowling Side Rh (black/gray)
5	68681-18D00-H11	• . Emblem, Side
5	68681-18D10-H61	• . Emblem, Side
6	68685-41C00-H19	• . Tape, Side Rh
6	68685-41C00-H21	• . Tape, Side Rh
7	94440-41C40-3CG	Cover, Cowling Side Lh (black/gray)
7	94440-41C60-05X	Cover, Cowling Side Lh (black/gray)
8	68681-18D00-H11	• . Emblem, Side
8	68681-18D10-H61	• . Emblem, Side
9	68695-41C00-H19	• . Tape, Side Lh
9	68695-41C00-H21	• . Tape, Side Lh
10	94470-41C60-3CH	Cowling, Under Rh (black/silver)
11	68111-34330-13L	• . Emblem, Suzuki
12	68681-27B30-H12	• . Emblem
13	94480-41C60-3CH	Cowling, Under Lh (black/silver)
14	68181-36A00-13L	• . Emblem, Suzuki
15	68681-27B30-H12	• . Emblem
16	94498-17D01-33J	Cowling, Under Center (black)
17	94610-41C00-0JW	Screen Set, Wind
17	94610-41C10-0JW	Screen Set, Wind
18	94631-41C00	• . Molding, Screen
18	94631-41C10	• . Molding, Screen
19	68182-12C00-0JW	• . Emblem, Suzuki
20	68319-40C00	Label, Warning Safety
20	68319-40C20	Label, Warning Safety
20	68319-40C30	Label, Warning Safety
20	68319-40C40	Label, Warning Safety
20	68319-40C51	Label, Warning Safety
21	68612-48B00	Label, Warning Screen
21	68612-48B10	Label, Warning Screen
22	68613-40C11	Label, Warning Steering
22	68613-40C00	Label, Warning Steering
23	11967-82000	Label, Warning Asbestos
24	86932-73060	Label, Warning Fuel

Ref No	Part No	Description
1	94400-41C30-0JW	Body Assy, Cowling (white)
2	68270-41C00-0NE	. Tape Set, Side
3	68280-41C00-3SR	. Tape Set, Front
4	68681-27B10-3SU	. Emblem
5	94430-41C00-3SR	Cover, Cowl Side Rh (blue/blue)
6	68680-41C00-0JW	. Tape Set, Side Rh
7	68681-33C10-C11	. Emblem, Side
8	94440-41C00-3SR	Cover, Cowl Side Lh (blue/blue)
9	68690-41C00-0JW	. Tape Set, Side Lh
10	68681-33C10-C11	. Emblem, Side
11	94470-41C20-3SL	Cowling, Uner Rh (white/blue)
12	68185-41C00-0NE	. Tape, Under Rh
13	68111-34320-0JW	. Emblem, Suzuki
14	94480-41C20-3SL	Cowling, Under Lh (white/blue)
15	68195-41C00-0NE	. Tape, Under Lh
16	68111-34320-0JW	. Emblem, Suzuki
17	94498-17D01-0NG	Cowling, Under Center (blue)
18	94610-41C00-0JW	Screen Set, Wind
18	94610-41C10-0JW	Screen Set, Wind
19	94631-41C00	. Molding, Screen
19	94631-41C10	. Molding, Screen
20	68182-12C00-0JW	. Emblem, Suzuki
21	68319-40C00	Label, Warning Safety
21	68319-40C20	Label, Warning Safety
21	68319-40C30	Label, Warning Safety
21	68319-40C40	Label, Warning Safety
21	68319-40C51	Label, Warning Safety
22	68612-48B00	Label, Warning Screen
22	68612-48B10	Label, Warning Screen
23	68613-40C11	Label, Warning Steering
23	68613-40C00	Label, Warning Steering
24	11967-82000	Label, Warning Asbestos
25	86932-73060	Label, Warning Fuel

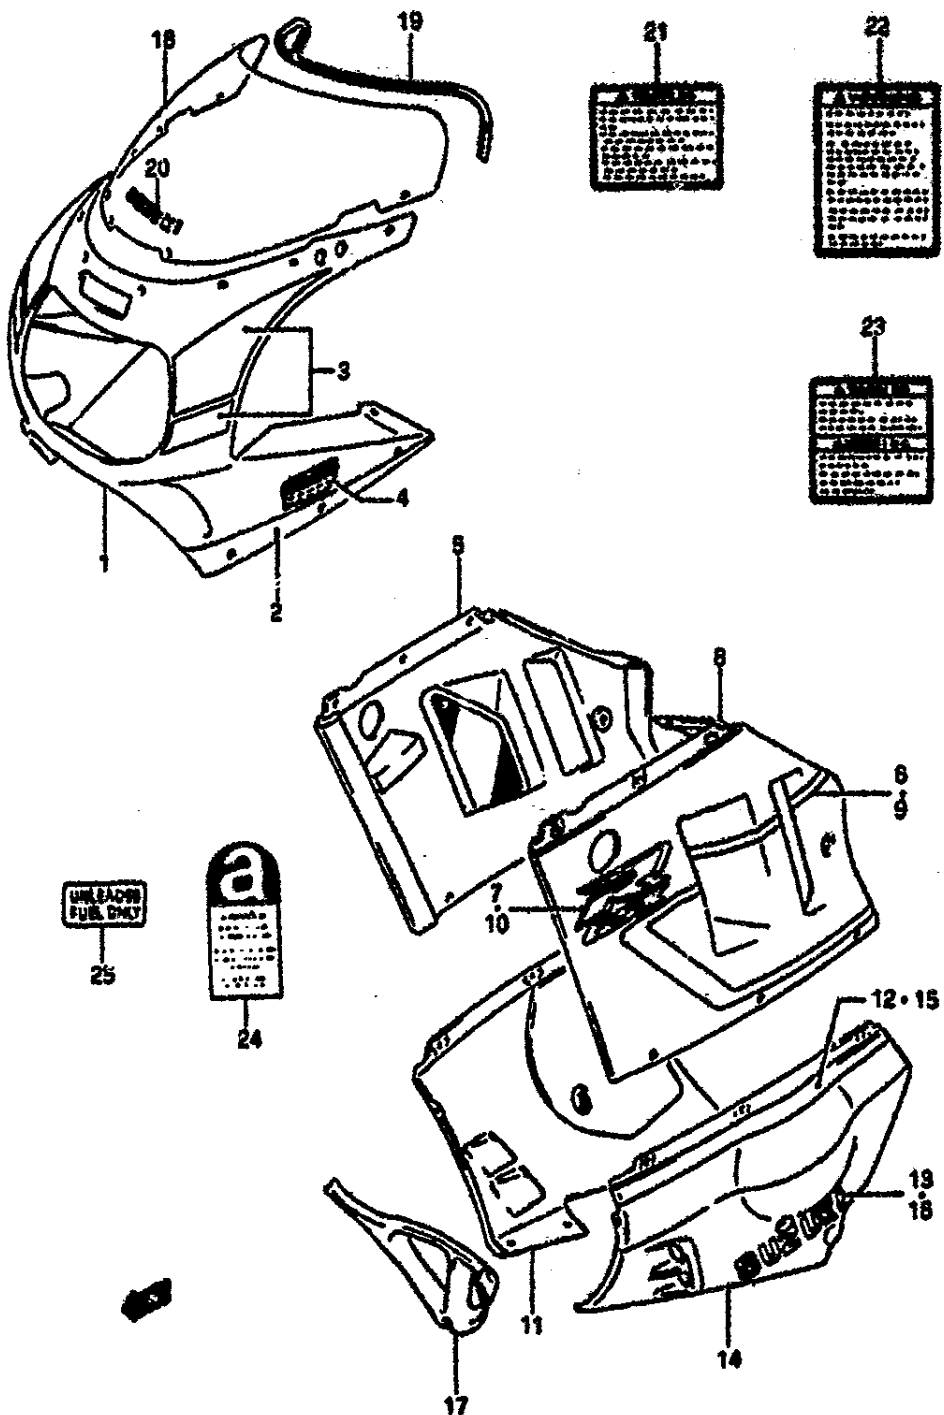 


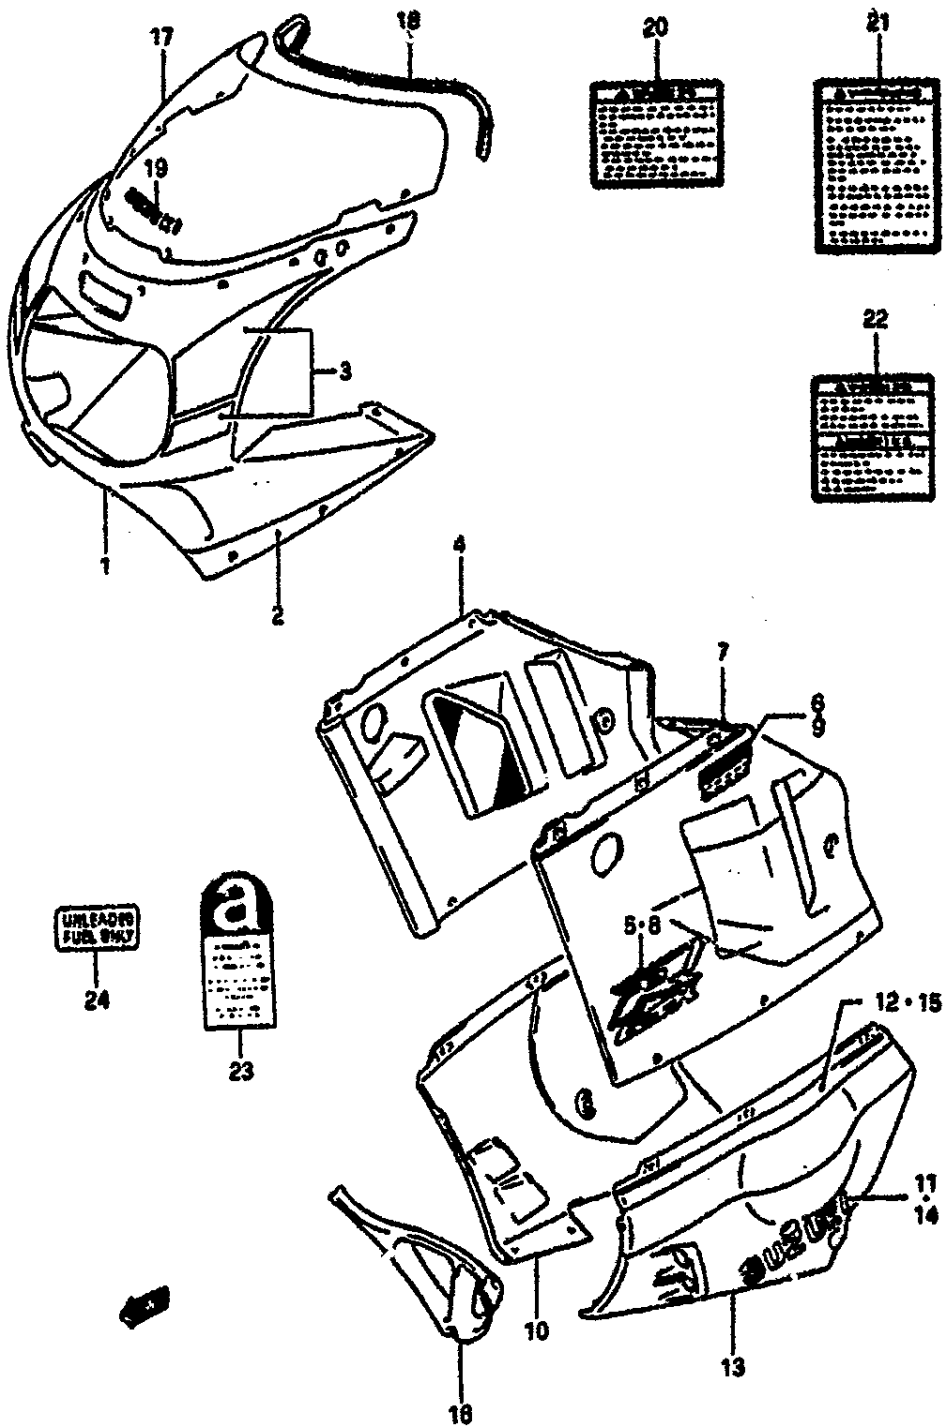 

Ref No	Part No	Description
1	94400-41C40-33J	Body Assy, Cowling (black)
2	68270-41C10-28V	• . Tape Set, Side
3	68280-41C00-F75	• . Tape Set, Front
4	94430-41C10-3EE	Cover, Cowl Side Rh (black/red)
5	68681-33C10-C69	• . Emblem, Side
6	68681-27B20-H03	• . Emblem, Sacs
7	94440-41C10-3EE	Cover, Cowl Side Lh (black/red)
8	68681-33C10-C69	• . Emblem, Side
9	68681-27B20-H03	• . Emblem, Sacs
10	94470-41C30-F75	Cowling, Under Rh (silver/red)
11	68111-34320-33J	• . Emblem, Suzuki
12	68185-41C10-33J	• . Tape, Under Rh
13	94480-41C30-F75	Cowling, Under Lh (silver/red)
14	68111-34320-33J	• . Emblem, Suzuki
15	68195-41C10-33J	• . Tape, Under Lh
16	94498-17D01-0FP	Cowling, Under Center (silver)
17	94610-41C00-0JW	Screen Set, Wind
17	94610-41C10-0JW	Screen Set, Wind
18	94631-41C00	• . Molding, Screen
18	94631-41C10	• . Molding, Screen
19	68182-12C00-0JW	• . Emblem, Suzuki
20	68319-40C00	Label, Warning Safety
20	68319-40C20	Label, Warning Safety
20	68319-40C30	Label, Warning Safety
20	68319-40C40	Label, Warning Safety
20	68319-40C51	Label, Warning Safety
21	68612-48B00	Label, Warning Screen
21	68612-48B10	Label, Warning Screen
22	68613-40C11	Label, Warning Steering
22	68613-40C00	Label, Warning Steering
23	11967-82000	Label, Warning Asbestos
24	86932-73060	Label, Warning Fuel

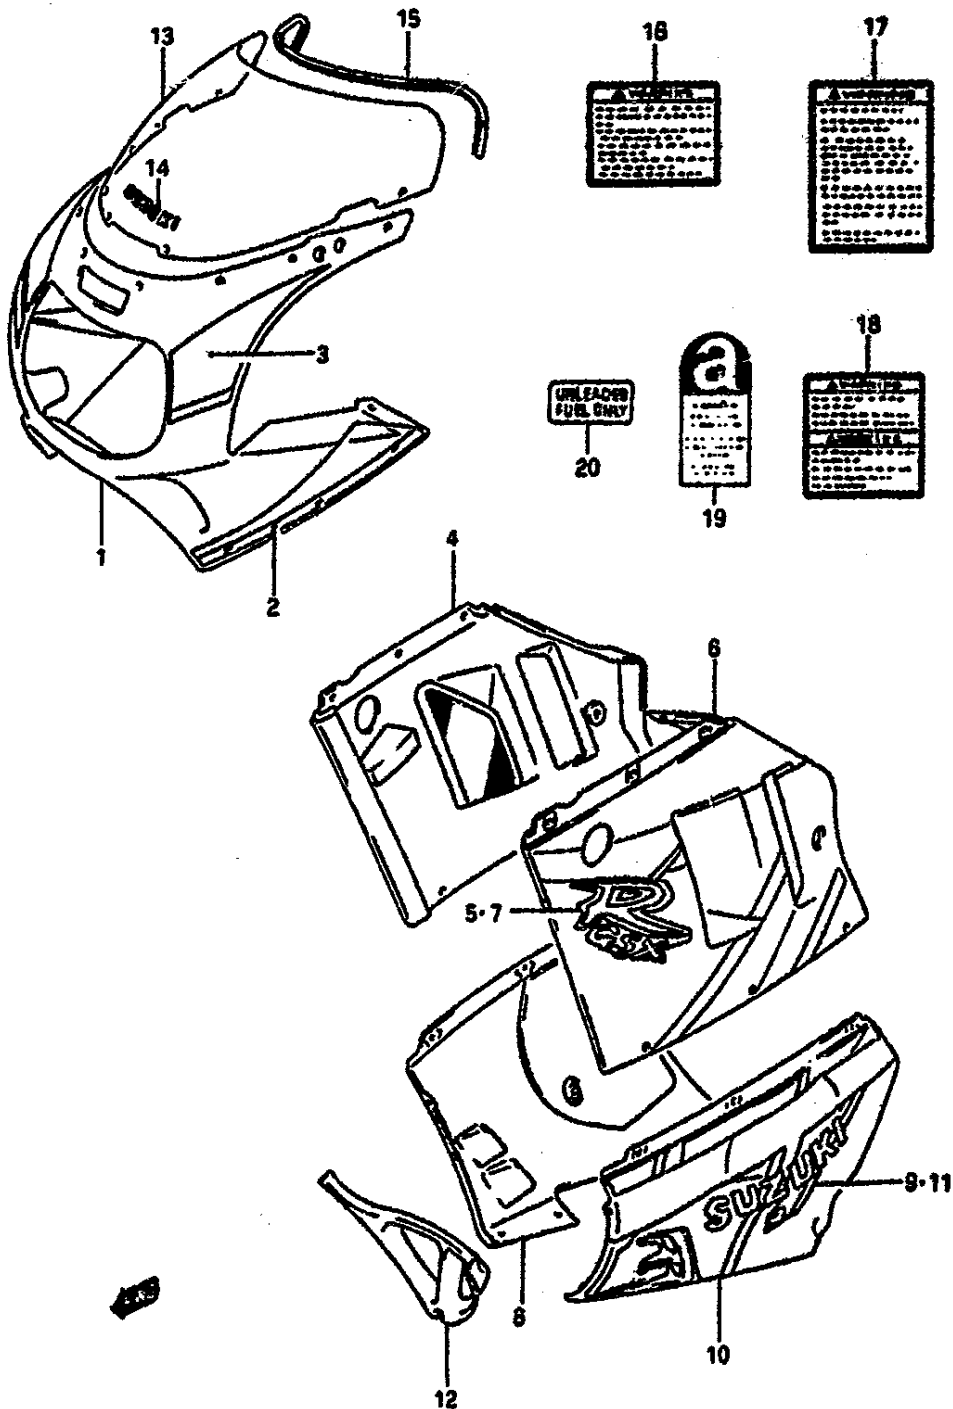 

Ref No	Part No	Description
1	94400-41C80-L99	Body Assy, Cowling (blue/white)
1	94400-41C80-E88	Body Assy, Cowling (charcoal/black)
1	94400-41C80-3WC	Body Assy, Cowling (silver/black)
2	68270-41C30-N48	. . Tape Set, Side
2	68270-41C30-M14	. . Tape Set, Side
2	68270-41C30-M15	. . Tape Set, Side
3	68280-41C30-M11	. . Tape Set, Front
3	68280-41C30-M12	. . Tape Set, Front
3	68280-41C30-M05	. . Tape Set, Front
4	94430-41C80-OJW	Cover, Cowling Side Rh (white)
4	94430-41C80-33J	Cover, Cowling Side Rh (black)
4	94430-41C80-36X	Cover, Cowling Side Rh (black)
5	68680-41C30-1MM	. . Tape Set, Side Rh
5	68680-41C30-1MN	. . Tape Set, Side Rh
5	68680-41C30-1MP	. . Tape Set, Side Rh
6	94440-41C80-OJW	Cover, Cowling Side Lh (white)
6	94440-41C80-33J	Cover, Cowling Side Lh (black)
6	94440-41C80-36X	Cover, Cowling Side Lh (black)
7	68690-41C30-1MM	. . Tape Set, Side Lh
7	68690-41C30-1MN	. . Tape Set, Side Lh
7	68690-41C30-1MP	. . Tape Set, Side Lh
8	94470-41C80-OJW	Cowling, Under Rh (white)
8	94470-41C80-33J	Cowling, Under Rh (black)
8	94470-41C80-36X	Cowling, Under Rh (black)
9	68185-41C30-1MH	. . Tape, Under Rh
9	68185-41C30-1MG	. . Tape, Under Rh
9	68185-41C30-1MD	. . Tape, Under Rh
10	94480-41C80-OJW	Cowling, Under Lh (white)
10	94480-41C80-33J	Cowling, Under Lh (black)
10	94480-41C80-36X	Cowling, Under Lh (black)
11	68195-41C30-1MH	. . Tape, Under Lh
11	68195-41C30-1MG	. . Tape, Under Lh
11	68195-41C30-1MD	. . Tape, Under Lh
12	94498-17D01-OJW	Cowling, Under Center (white)
12	94498-17D01-33J	Cowling, Under Center (black)
13	94610-41C00-0FP	Screen Set, Window
13	94610-41C10-0FP	Screen Set, Window
14	68182-12C00-0FP	. . Emblem, Suzuki
15	94631-18D00	. . Molding
15	94631-49310	. . Molding
16	68319-40C00	Label, Warning Safety
16	68319-40C20	Label, Warning Safety
16	68319-40C30	Label, Warning Safety
16	68319-40C40	Label, Warning Safety
16	68319-40C51	Label, Warning Safety
17	68612-48B00	Label, Warning Screen
17	68612-48B10	Label, Warning Screen
18	68613-40C11	Label, Warning Steering
18	68613-40C00	Label, Warning Steering
19	11967-82000	Label, Warning Asbestos
20	86932-73060	Label, Warning Fuel
20	68623-17D00	Label, Warning Fuel

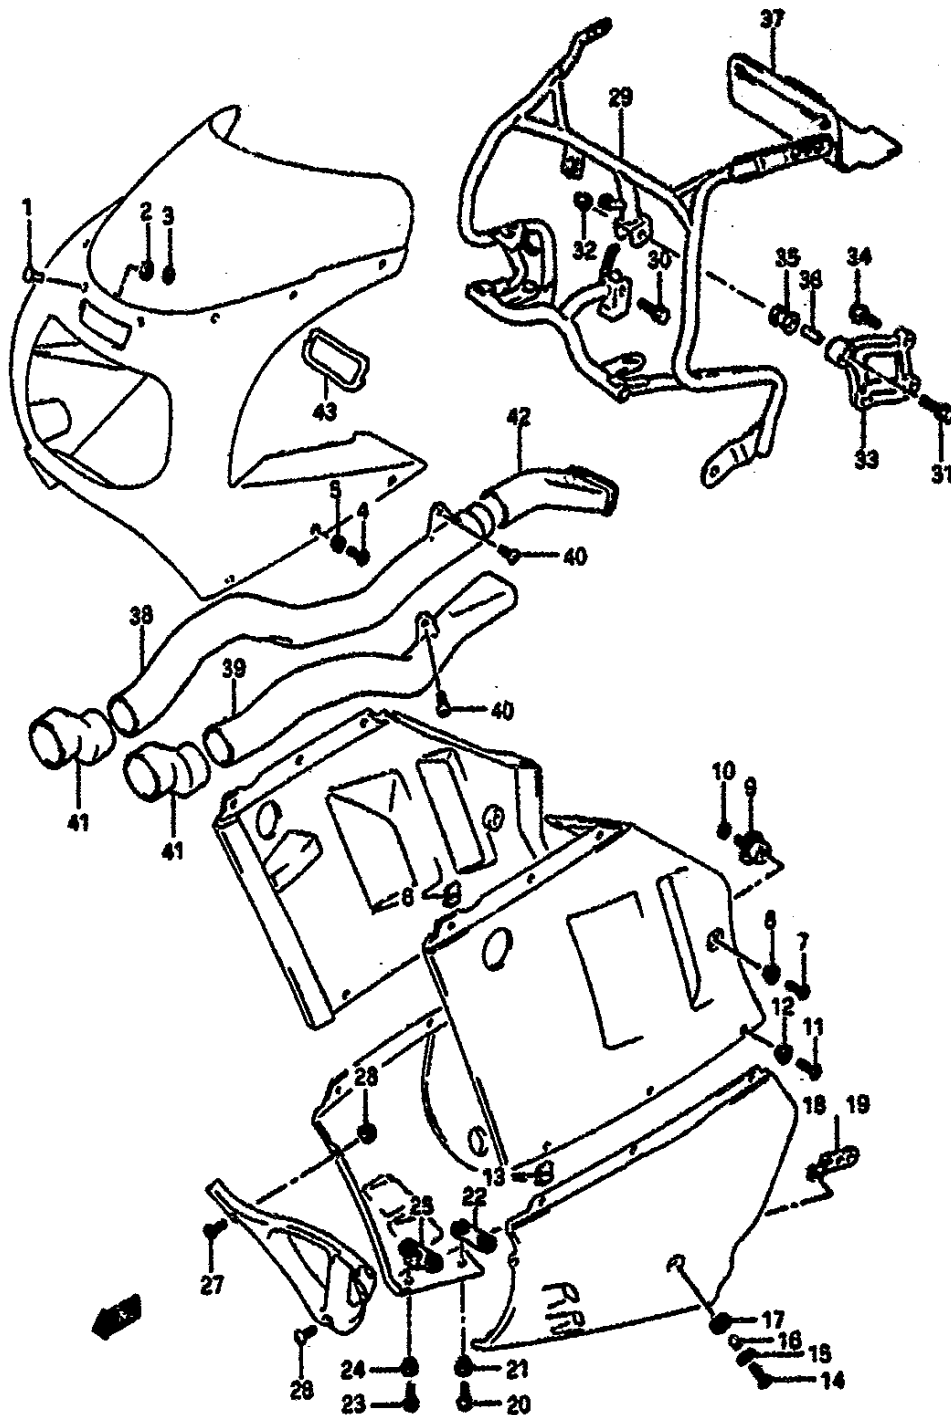 

Ref No	Part No	Description
1	94616-10D00	Pin, Wind Screen (4x13)
2	09320-04007	Cushion
3	09148-04032	Nut
4	09139-05032	Screw, Side Cover Upper (5x18)
5	09161-05017	Washer
6	94484-32B00	Nut, Side Cover Upper
7	09139-06027	Screw, Side Cover Lower (6x12)
8	09161-06021	Washer
9	94570-04A00	Cushion, Side Cover
10	08321-21064	Lock Washer
11	09139-05032	Screw, Under Cowl Upper (5x18)
12	09161-05017	Washer
13	94484-32B00	Nut, Under Cowl Upper
14	09139-06028	Screw, Under Cowl Rear (6x20)
15	09160-06056	Washer
16	09180-06152	Spacer
17	09320-09016	Cushion
18	94580-40C00	Brace, Under Cowl Rh
19	94590-40C00	Brace, Under Cowl Lh
20	09139-06039	Screw, Under Cowl Lower (6x16)
21	09161-06021	Washer
22	94493-06B00	Brace, Under Cowl Lower
23	09139-06039	Screw, Under Cowl Lower (6x16)
24	09161-06021	Washer
25	94490-06B00	Brace, Under Cowl Lower, Front
26	09139-06030	Screw, Under Cowl Center (6x16)
27	09139-05025	Screw, Under Cowl Front (5x14)
28	08316-26055	Nut
29	94510-41C00	Brace, Cowling
30	01137-08305	Bolt, Brace (8x30)
31	01137-08405	Bolt, Brace Upper (8x40)
32	08313-21085	Nut
33	94531-41C10	Brace, Cowling Center
34	01187-08405	Bolt, Brace Center (8x40)
35	94541-41C00	Cushion, Cowling Brace
36	09180-08166	Spacer, Cowling Brace
37	94533-41C00	Sheet, Cowl Heat Guard
38	94451-41C00	Pipe, Air Intake Front Rh
39	94452-41C00	Pipe, Air Intake Front Lh
40	02142-06205	Screw, Pipe
41	94454-41C00	Joint, Air Intake
42	94453-17C00	Pipe, Air Intake Rear Rh
43	94415-41C00	Cushion, Front Position Lamp