 
 




Ref No	Part No	Description
1	11171-43C01	Cover, Cylinder Head
2	11173-27A02	Gasket, Head Cover No.1
3	11178-27A01	Gasket, Head Cover No.2
4	11179-27A02	Gasket, Head Cover No.3
5	09106-07009	Bolt (7x17.5)
6	09106-07010	Bolt (7x31)
7	09161-11008	Washer
8	09360-08009	Bolt, Union
9	09168-08008	Gasket
10	09248-12004	Plug, Head Cover
11	09168-12002	Gasket
12	04221-08129	Pin
13	11176-31301	Cover, Breather
14	11177-27A00-H17	Gasket, Breather Cover
15	01550-06203	Bolt
16	11401-19852	Gasket Set

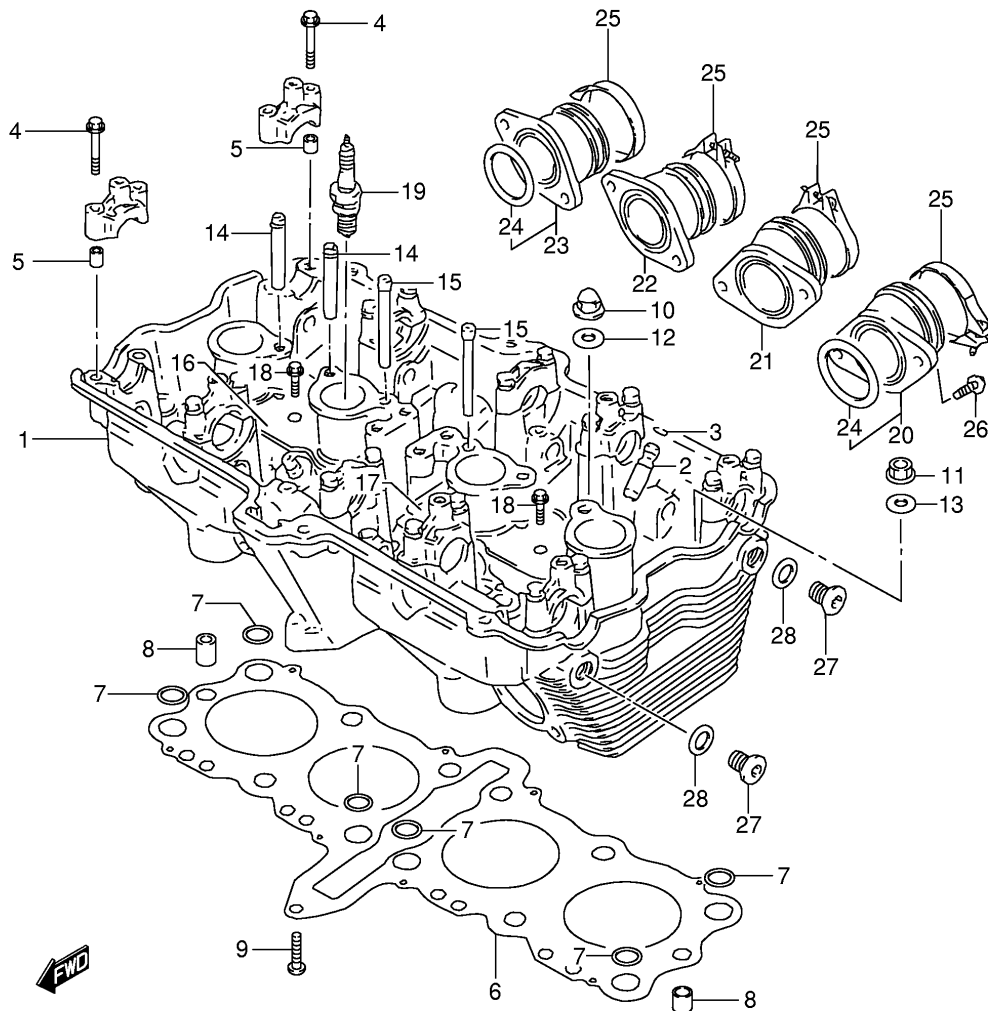

Ref No	Part No	Description
1	11100-19E20	Head Assy, Cylinder
2	11116-18D70	• . Guide, Valve
3	09381-10004	• . Ring, Valve Guide
4	09103-06026	• . Bolt (6x39)
5	09206-08001	• . Pin
6	11141-19C03	Gasket, Cylinder Head
7	09280-12013	O Ring (d:2.6,id:12.1)
8	04211-11189	Pin
9	01550-06303	Bolt
10	09159-10054	Nut
11	08316-10103	Nut
12	09168-10031	Gasket
13	09160-10060	Washer (10.5x22x2.3)
14	11131-27A00	Pipe, Oil No.1,2
15	11133-27A00	Pipe, Oil No.3
16	11135-27A02	Plate, Oil Pipe Rh
17	11136-27A02	Plate, Oil Pipe Lh
18	01550-06123	Bolt
19	09482-00410	Spark Plug (ngk,cr9ek)
19	09482-00411	Spark Plug (nd,u27etr)
19	09482-00412	Spark Plug (ngk,cr8ek)
19	09482-00413	Spark Plug (nd,u24etr)
19	09482-00462	Spark Plug (ngk,cr10ek)
19	09482-00463	Spark Plug (nd,u31etr)
20	13101-19C12	Pipe, Intake Lh
21	13102-19C12	Pipe, Intake Ml
22	13103-19C12	Pipe, Intake Mr
23	13104-19C12	Pipe, Intake Rh
24	09280-40010	• . O Ring (d:2.4,id:39.7)
25	09402-52208	Clamp
26	02112-16163	Screw
27	09248-14010	Plug, Cylinder Head
28	09168-14002	Gasket

Ref No	Part No	Description
1	11210-43C00	Cylinder
2	09108-10109	Stud Bolt (10x150)
3	09108-10073	Stud Bolt (10x143)
4	11241-27A03	Gasket, Cylinder
5	01421-06203	Stud Bolt
6	08316-10063	Nut
7	09206-13017	Pin
8	11328-27A04	Hose, Oil Head Cooler
9	09280-14011	O Ring (d:2.5,id:13.8)
10	09280-15007	O Ring (d:2.4,id:15.8)
11	07130-06163	Bolt


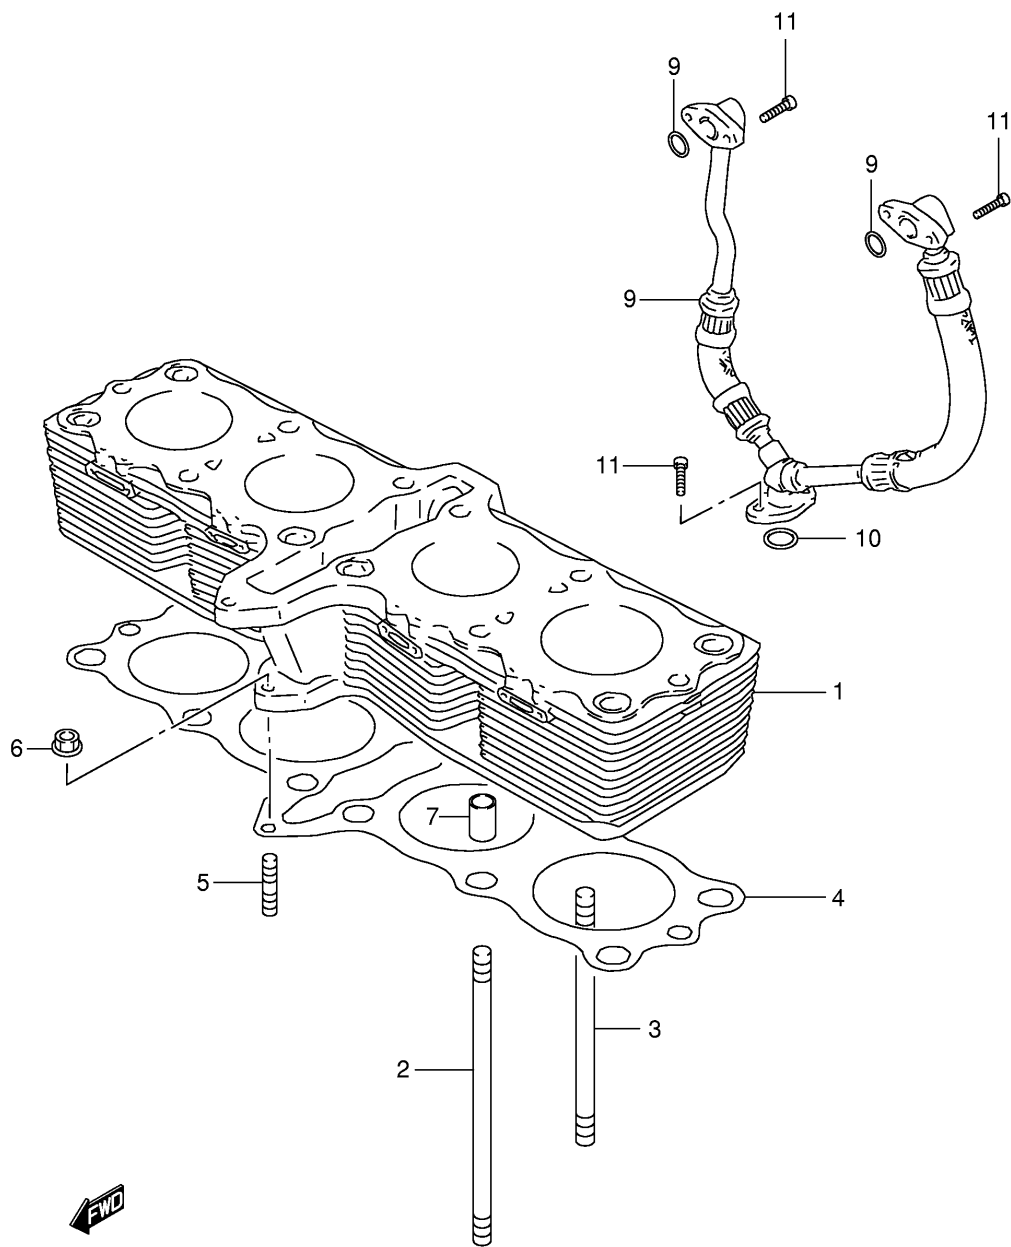


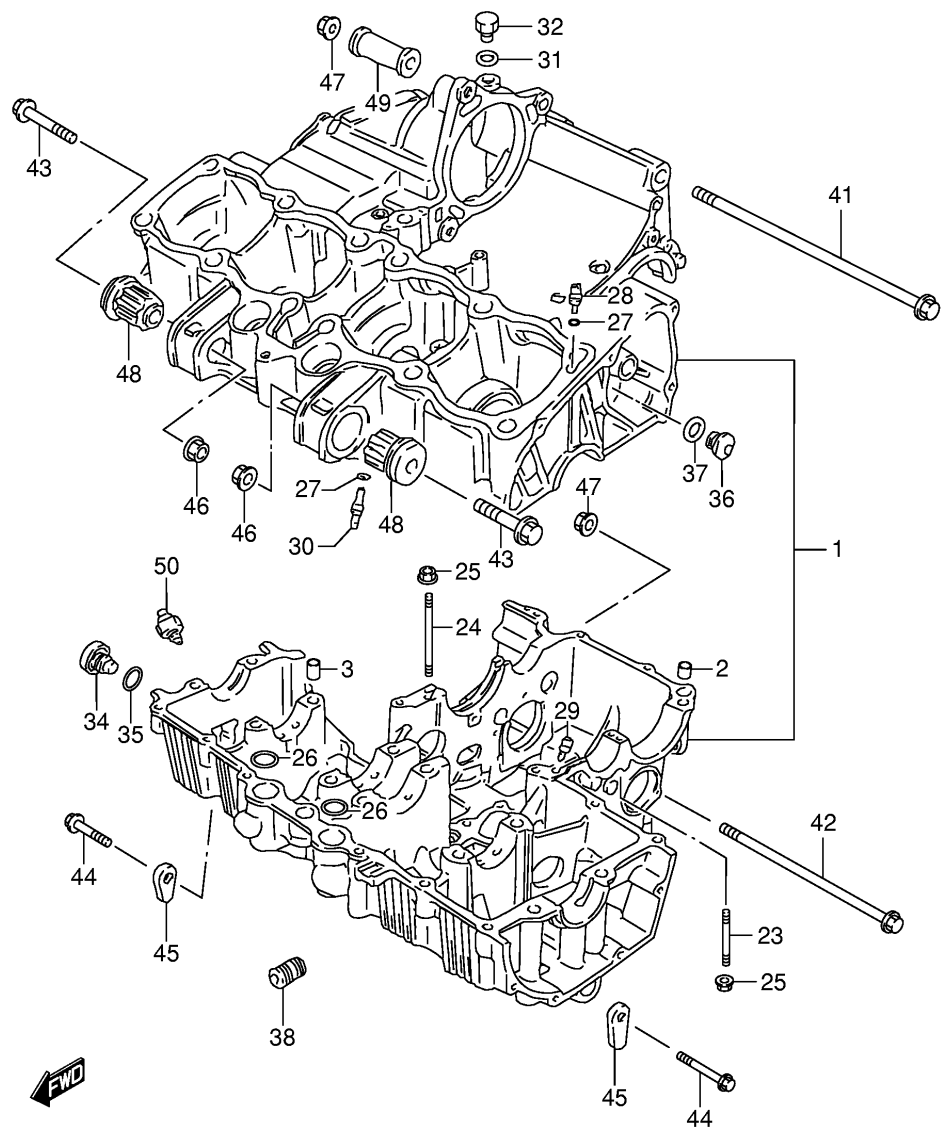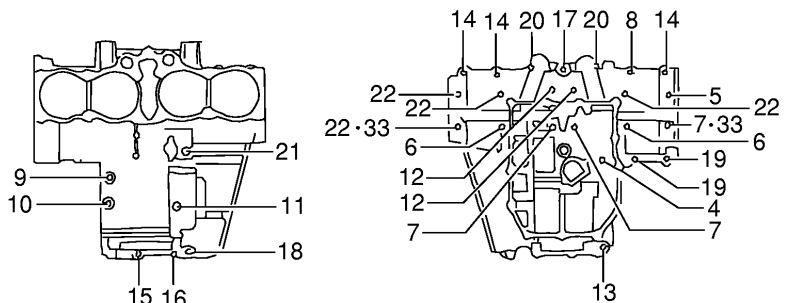  


Ref No	Part No	Description
1	11300-43854	Crankcase Set
2	09206-13004	. Pin
3	09206-11017	. Pin
4	09103-06163	. Bolt (6x105)
5	09103-08097	. Bolt (8x105)
6	09103-08182	. Bolt (8x125)
7	09103-08098	. Bolt (8x115)
8	01550-06353	. Bolt
9	07130-06403	. Bolt
10	07130-06503	. Bolt
11	07130-06653	. Bolt
12	07130-08653	. Bolt
13	01550-08603	. Bolt
14	01550-06353	. Bolt
15	01550-06403	. Bolt
16	01550-06407	. Bolt
17	01550-06503	. Bolt
18	01550-06603	. Bolt
19	01550-06553	. Bolt
20	01550-06703	. Bolt
21	01550-06803	. Bolt
22	09103-08105	. Bolt (8x95)
23	01421-06408	. Stud Bolt
24	01421-06608	. Stud Bolt
25	08316-10063	. Nut
26	09280-21008	. O Ring (d:2.5,id:21.0)
27	09280-04004	. O Ring (d:1.2,id:4.0)
28	09493-14002	. Jet, Oil Galy Head
29	09493-24010	. Jet, Oil Galy Gear Shift
30	09493-80008	. Jet, Oil Galy Piston
31	09168-12002	. Gasket, Hole Plug
32	09247-12103	. Plug, Hole
33	09168-08021	. Gasket
34	09248-16003	. Plug, Oil Gallery
35	09280-17002	. O Ring (d:2.4,id:16.8)
36	09248-14010	. Plug, Oil Gallery
37	09168-14002	. Gasket
38	16591-06B00	. Union, Oil Filter Stand
39	12228-19C00	. Bearing, Thrust Rh (brown)
40	12228-43411	. Bearing, Thrust Lh (red)
40	12228-43412	. Bearing, Thrust Lh (black)
40	12228-43413	. Bearing, Thrust Lh (blue)
40	12228-43414	. Bearing, Thrust Lh (green)
40	12228-43415	. Bearing, Thrust Lh (yellow)
40	12228-43416	. Bearing, Thrust Lh (white)
41	09103-10151	Bolt (10x175)
42	09103-10122	Bolt (10x130)
43	01580-10553	Bolt
44	01550-10553	Bolt
45	09159-10020	Nut
46	08316-10103	Nut
47	09159-10058	Nut
48	11681-06B00	Bush
49	11610-20C00	Spacer (l:27)

CRANKCASE


Ref No	Part No	Description
50	37820-33D00	Switch, Oil Pressure

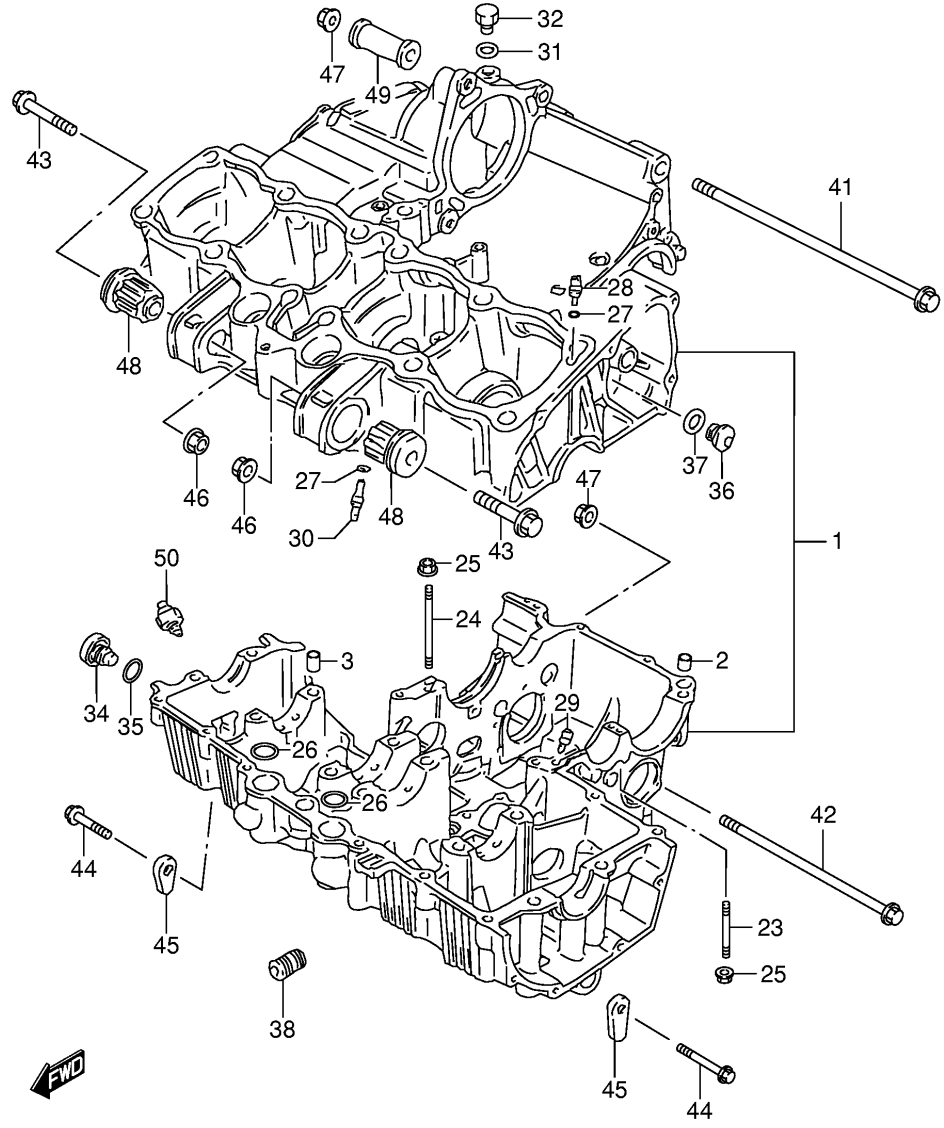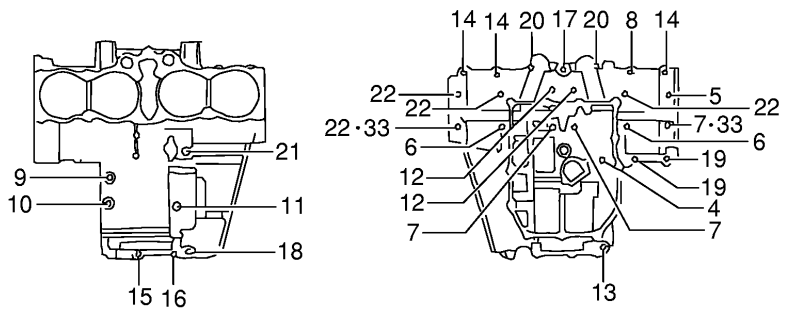  


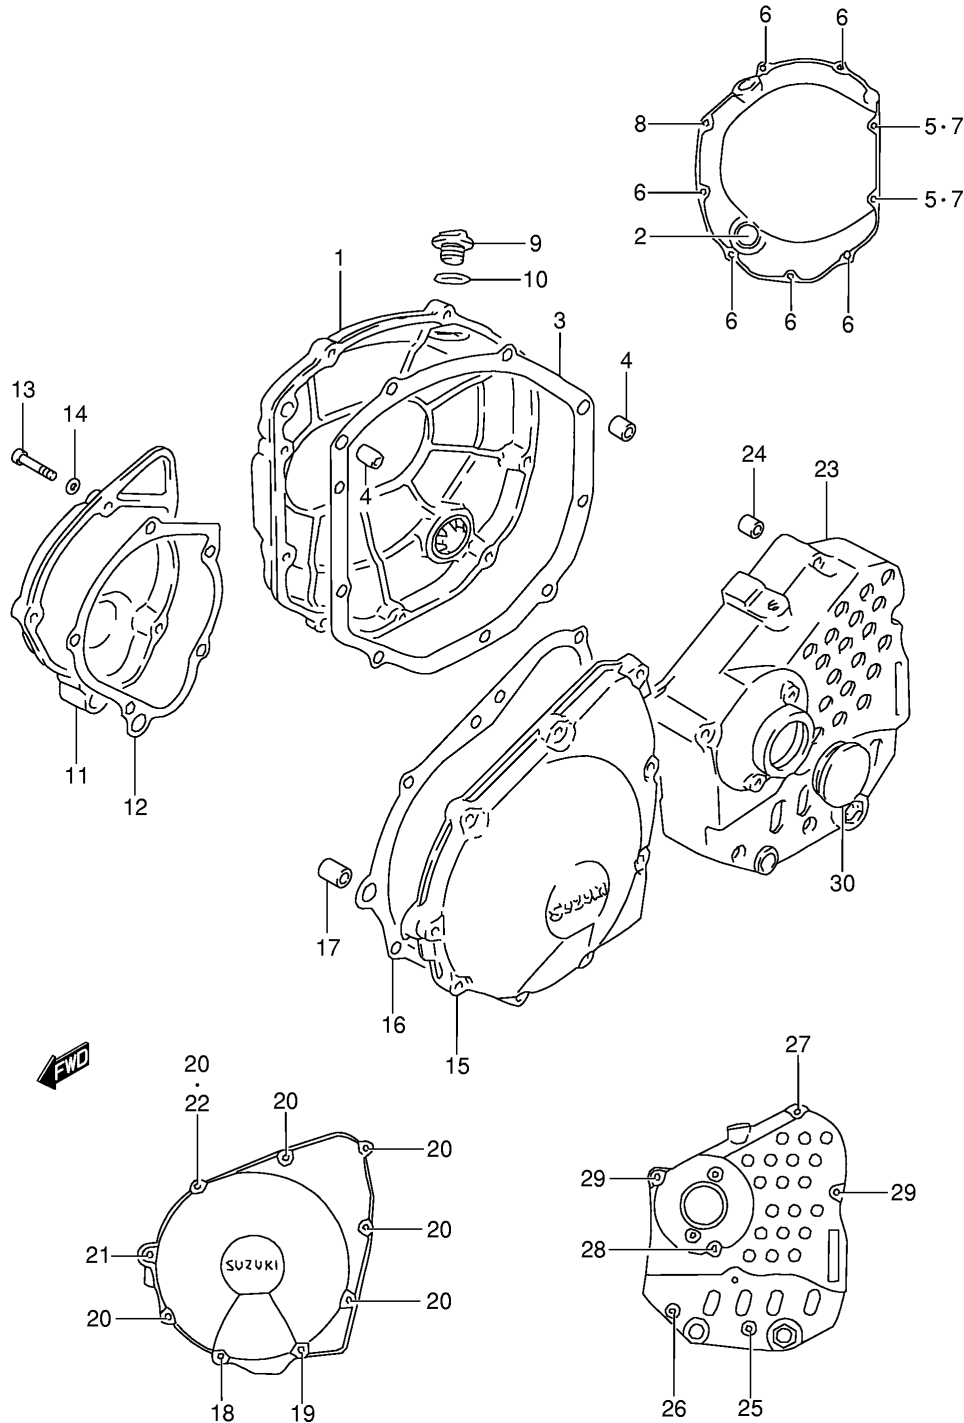 


Ref No	Part No	Description
1	11340-20C00	Cover, Clutch
2	11971-33210	• Lens, Oil Level
3	11482-27A20	Gasket, Clutch Cover
4	04211-09189	Pin
5	09168-06024	Gasket
6	07130-06253	Bolt
7	07130-06303	Bolt
8	07130-06353	Bolt
9	09259-20008	Plug, Engine Oil Filler
10	09280-17003	O Ring (d:3.1,id:16.8)
11	11381-48B01	Cover, Signal Generator
12	11491-27A30	Gasket
13	09106-06082	Bolt (6x23)
14	09168-06024	Gasket
15	11351-20C00	Cover, Starter Gear
16	11483-27A20	Gasket, Gear Cover
17	09206-11017	Pin
18	07130-06163	Bolt
19	07130-06203	Bolt
20	07130-06253	Bolt
21	07130-06403	Bolt
22	09168-06024	Gasket
23	11361-20C02	Cover, Engine Sprocket (black)
24	04211-09129	Pin
25	07130-06403	Bolt
26	07130-06303	Bolt
27	07130-06503	Bolt
28	07130-06653	Bolt
29	07130-06703	Bolt
30	09250-30003	Cap, Clutch Release

Ref No	Part No	Description
1	11511-19C00	Pan, Oil
2	11489-27A20	Gasket, Oil Pan
3	07130-06253	Bolt
4	07130-06353	Bolt
5	07130-06403	Bolt
6	07130-06453	Bolt
7	09168-06024	Gasket
8	09247-14001	Plug, Oil Drain
9	09168-14002	Gasket
10	09248-16010	Plug, Oil Gallery
11	09168-16002	Gasket
12	16520-06B01	Strainer, Engine Oil
13	01570-06123	Bolt
14	16525-48B01	Protector, Strainer
15	16528-27A20	Gasket, Protector
16	16529-27A01	Gasket, Oil Outlet
17	09280-18009	O Ring (d:3.2,id:17.8)
18	01550-06253	Bolt
19	16440-27A01	Regulator, Engine Oil
20	09168-16002	Washer
21	09440-09023	Spring
22	16442-34301	Plunger, Oil Control

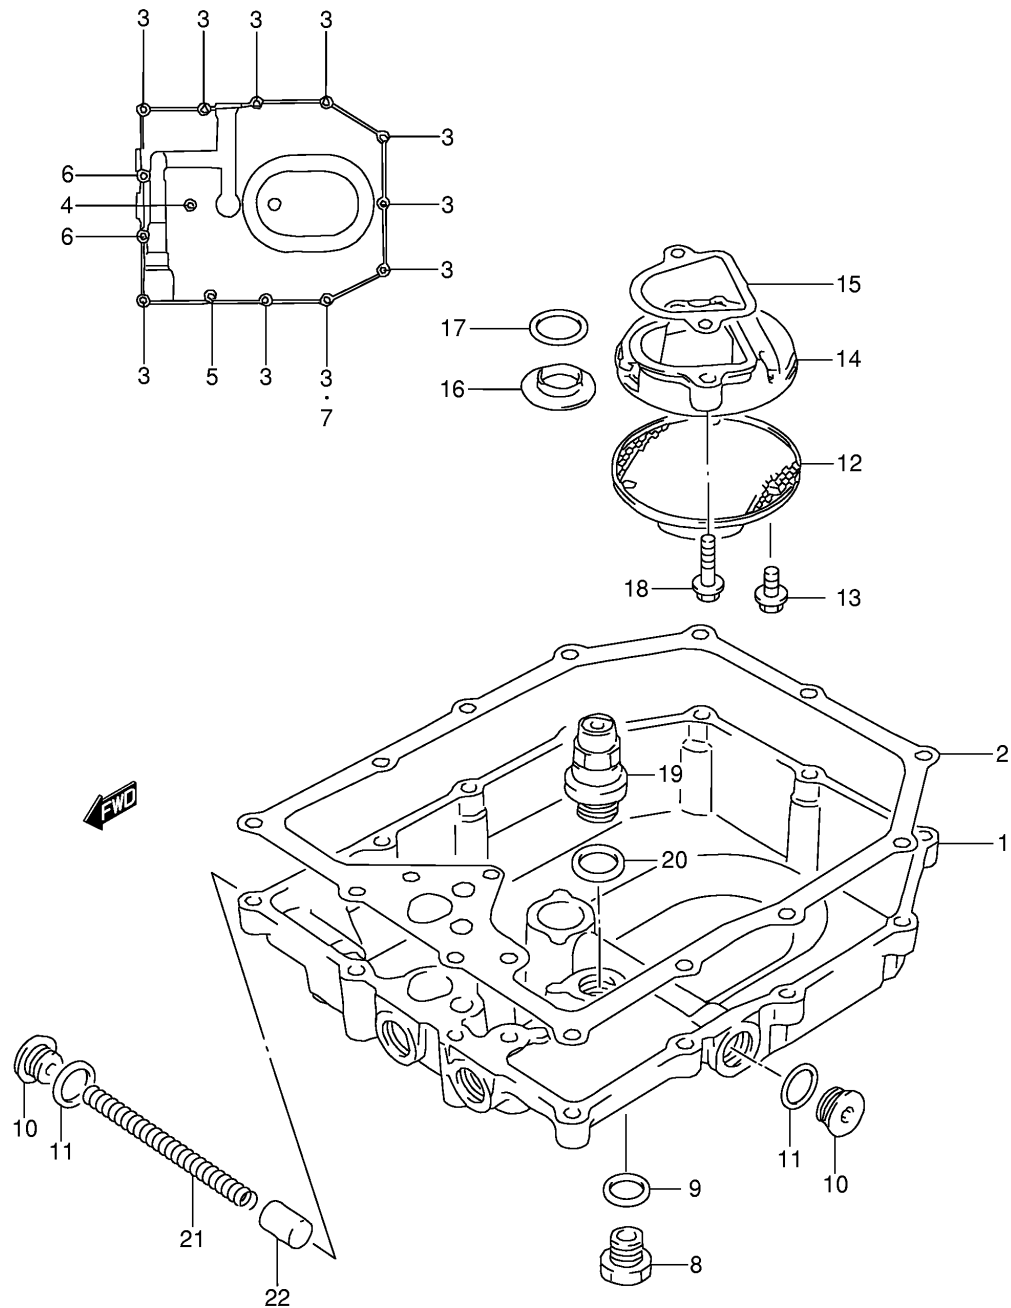 

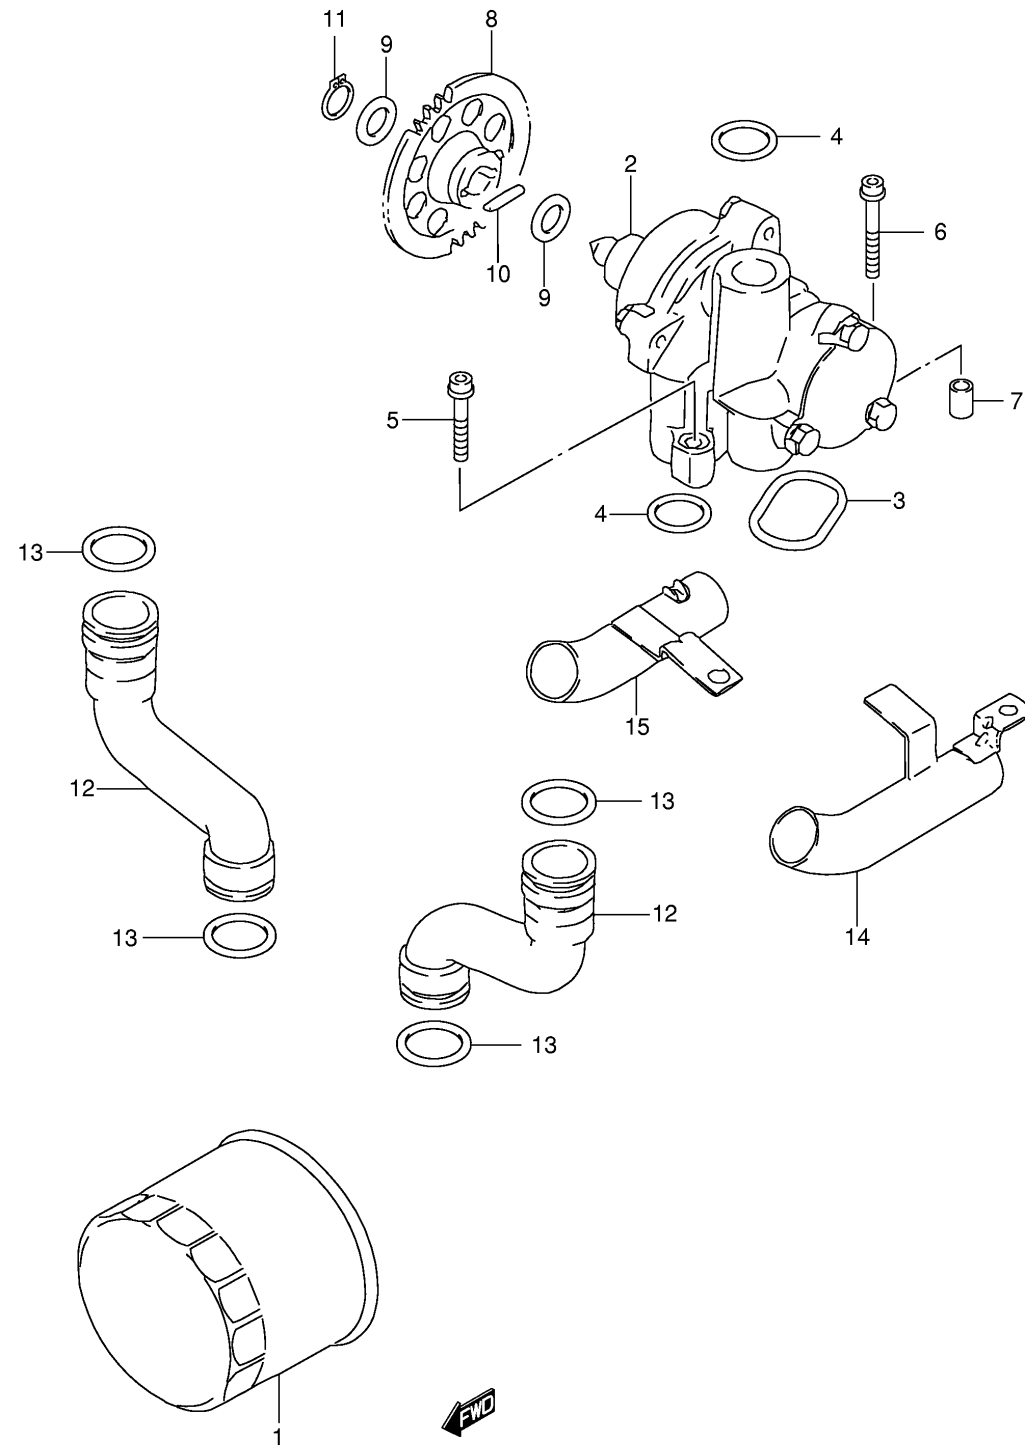 


Ref No	Part No	Description
1	16510-06B01	Filter, Engine Oil
2	16400-06B01	Pump Assy, Engine Oil
3	16491-27A01	O Ring, Oil Pump
4	09280-18009	O Ring (d:3.2,id:17.8)
5	07130-06303	Bolt
6	07130-06353	Bolt
7	04211-09129	Pin
8	16332-19C00	Gear, Oil Pump Driven
9	08221-12205	Washer
10	09261-05006	Pin
11	08331-31126	Circlip
12	16481-17D00	Pipe, Outlet
13	09280-22016	O Ring (d:3.7,id:21.7)
14	16530-27A02	Pipe, Oil Under,lh
15	16540-27A02	Pipe, Oil Under,rh

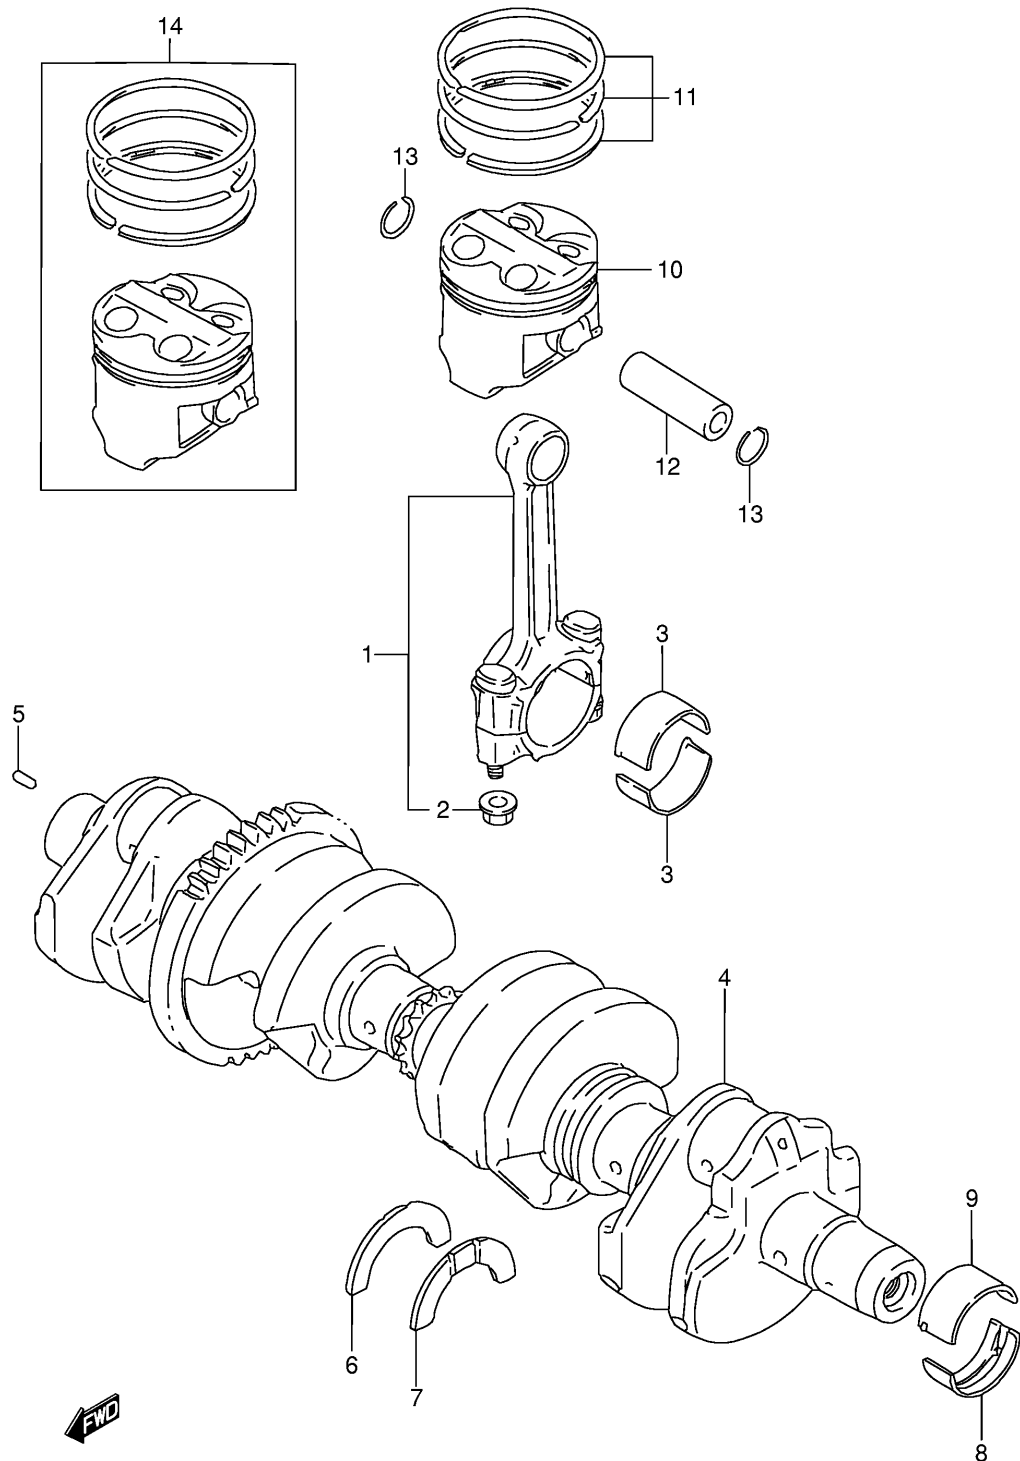 


Ref No	Part No	Description
1	12160-27A13	Rod Assy, Connecting
2	09159-08033	. . Nut
3	12164-26E00-0A0	Bearing, Crank Pin (green)
3	12164-26E00-0B0	Bearing, Crank Pin (black)
3	12164-26E00-0C0	Bearing, Crank Pin (brown)
3	12164-26E00-0D0	Bearing, Crank Pin (yellow)
4	12000-26830	Crankshaft Set
5	04221-04089	. . Pin
6	12228-19C00	. . Bearing, Thrust Rh (brown)
7	12228-43411	. . Bearing, Thrust Lh (red)
7	12228-43412	. . Bearing, Thrust Lh (black)
7	12228-43413	. . Bearing, Thrust Lh (blue)
7	12228-43414	. . Bearing, Thrust Lh (green)
7	12228-43415	. . Bearing, Thrust Lh (yellow)
7	12228-43416	. . Bearing, Thrust Lh (white)
8	12229-27A00-0A0	Bearing, Crankshaft (green)
8	12229-27A00-0B0	Bearing, Crankshaft (black)
8	12229-27A00-0C0	Bearing, Crankshaft (brown)
8	12229-27A00-0D0	Bearing, Crankshaft (yellow)
9	12229-27A10-0A0	Bearing, Crankshaft (green)
9	12229-27A10-0B0	Bearing, Crankshaft (black)
9	12229-27A10-0C0	Bearing, Crankshaft (brown)
9	12229-27A10-0D0	Bearing, Crankshaft (yellow)
10	12111-19C20-0F0	Piston
11	12140-19C10	Ring Set, Piston
12	12151-19C02	Pin, Piston
13	09381-18003	Circlip
14	12100-19C20-050	Piston Set (os:0.5)
14	12100-19C20-100	Piston Set (os:1.0)




Ref No	Part No	Description
1	12611-06B00	Gear, Starter Idle (nt:12/53)
2	09206-11014	Pin
3	12600-48811	Clutch Set, Starter
4	09103-14005	Bolt (14x21)

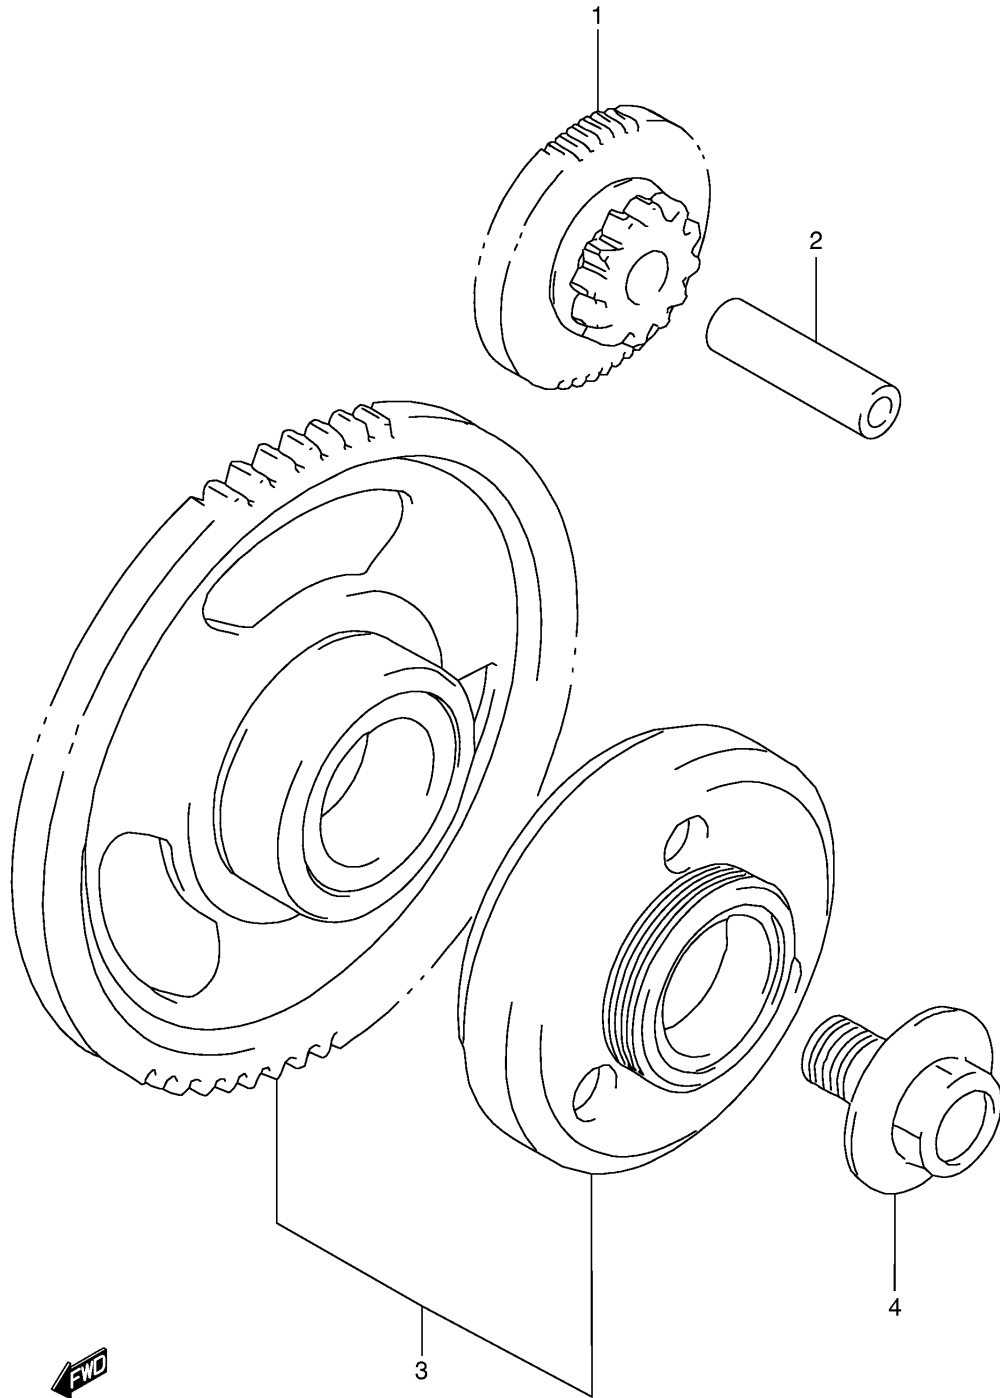 


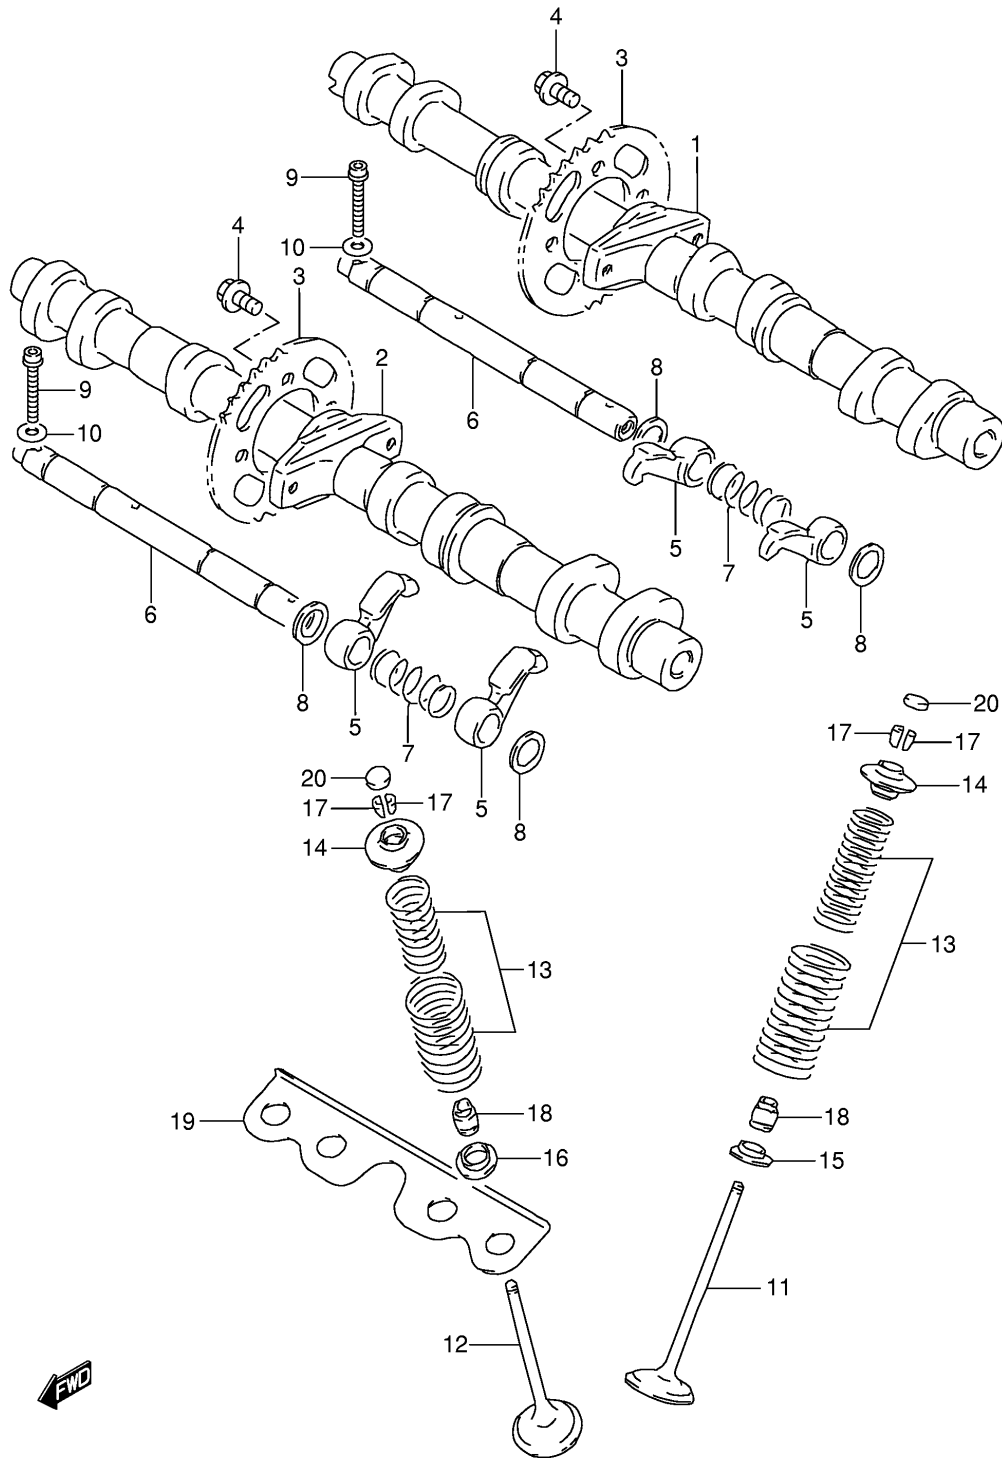 


Ref No	Part No	Description
1	12711-19E00	Cam Shaft, Intake
2	12721-19E00	Cam Shaft, Exhaust
3	12741-26E00	Sprocket, Cam Shaft
4	09103-07001	Bolt (7x11.5)
5	12841-33C02	Arm, Valve Rocker
6	12861-19E00	Shaft, Valve Rocker Arm
7	09440-14044	Spring
8	08212-12183	Washer
9	07120-06253	Bolt
10	08322-01063	Washer
11	12911-19E00	Valve, Intake
12	12912-19E00	Valve, Exhaust
13	12920-41C00	Spring Set, Valve
14	12931-41C01	Retainer, Valve Spring
15	12933-81400	Seat, Spring Intake
16	12934-27A01	Seat, Spring Exhaust
17	12932-27A00	Cotter, Valve
18	09289-05011	Oil Seal (5x10x8.7)
19	11137-19C01	Plate, Valve Seat
20	12892-41C00-230	Shim, Tappet (t:2.30)
20	12892-41C00-235	Shim, Tappet (t:2.35)
20	12892-41C00-240	Shim, Tappet (t:2.40)
20	12892-41C00-245	Shim, Tappet (t:2.45)
20	12892-41C00-250	Shim, Tappet (t:2.50)
20	12892-41C00-255	Shim, Tappet (t:2.55)
20	12892-41C00-260	Shim, Tappet (t:2.60)
20	12892-41C00-265	Shim, Tappet (t:2.65)
20	12892-41C00-270	Shim, Tappet (t:2.70)
20	12892-41C00-275	Shim, Tappet (t:2.75)
20	12892-41C00-280	Shim, Tappet (t:2.80)
20	12892-41C00-285	Shim, Tappet (t:2.85)
20	12892-41C00-290	Shim, Tappet (t:2.90)
20	12892-41C00-295	Shim, Tappet (t:2.95)
20	12892-41C00-300	Shim, Tappet (t:3.00)
20	12892-41C00-305	Shim, Tappet (t:3.05)
20	12892-41C00-310	Shim, Tappet (t:3.10)
20	12892-41C00-315	Shim, Tappet (t:3.15)
20	12892-41C00-320	Shim, Tappet (t:3.20)
20	12892-41C00-325	Shim, Tappet (t:3.25)
20	12892-41C00-330	Shim, Tappet (t:3.30)
20	12892-41C00-335	Shim, Tappet (t:3.35)
20	12892-41C00-340	Shim, Tappet (t:3.40)
20	12892-41C00-345	Shim, Tappet (t:3.45)
20	12892-41C00-350	Shim, Tappet (t:3.50)
21	12800-41810	Shim Set, Tappet 0inc.ref.no.20-5~20-25 (5pcs.each) & No.22
22	99000-69471	• . Case, Tappet Shim

Ref No	Part No	Description
1	12760-26E00	Chain, Cam Shaft Drive
2	12771-26E00	Guide, Cam Chain No.1
3	12810-26E00	Tensioner, Cam Chain
4	12814-34200	Cushion
5	12782-26E00	Guide, Cam Chain No.2
6	01550-06163	Bolt
7	12830-46E10	Adjuster Assy, Tensioner
8	12834-27A00	• Plug
9	12832-27A00	• Gasket
10	12833-26D10	• Spring
11	12837-27A10	Gasket, Adjuster
12	07130-06253	Bolt

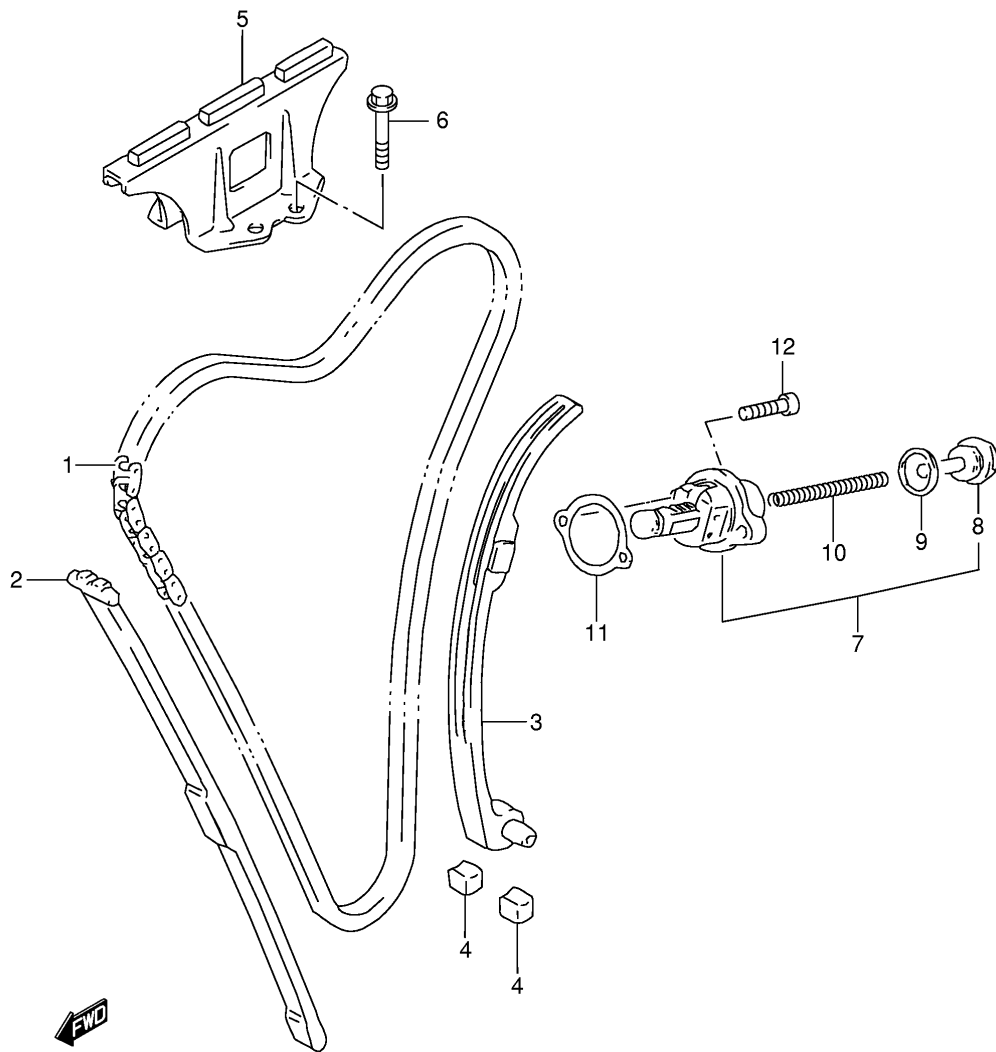 


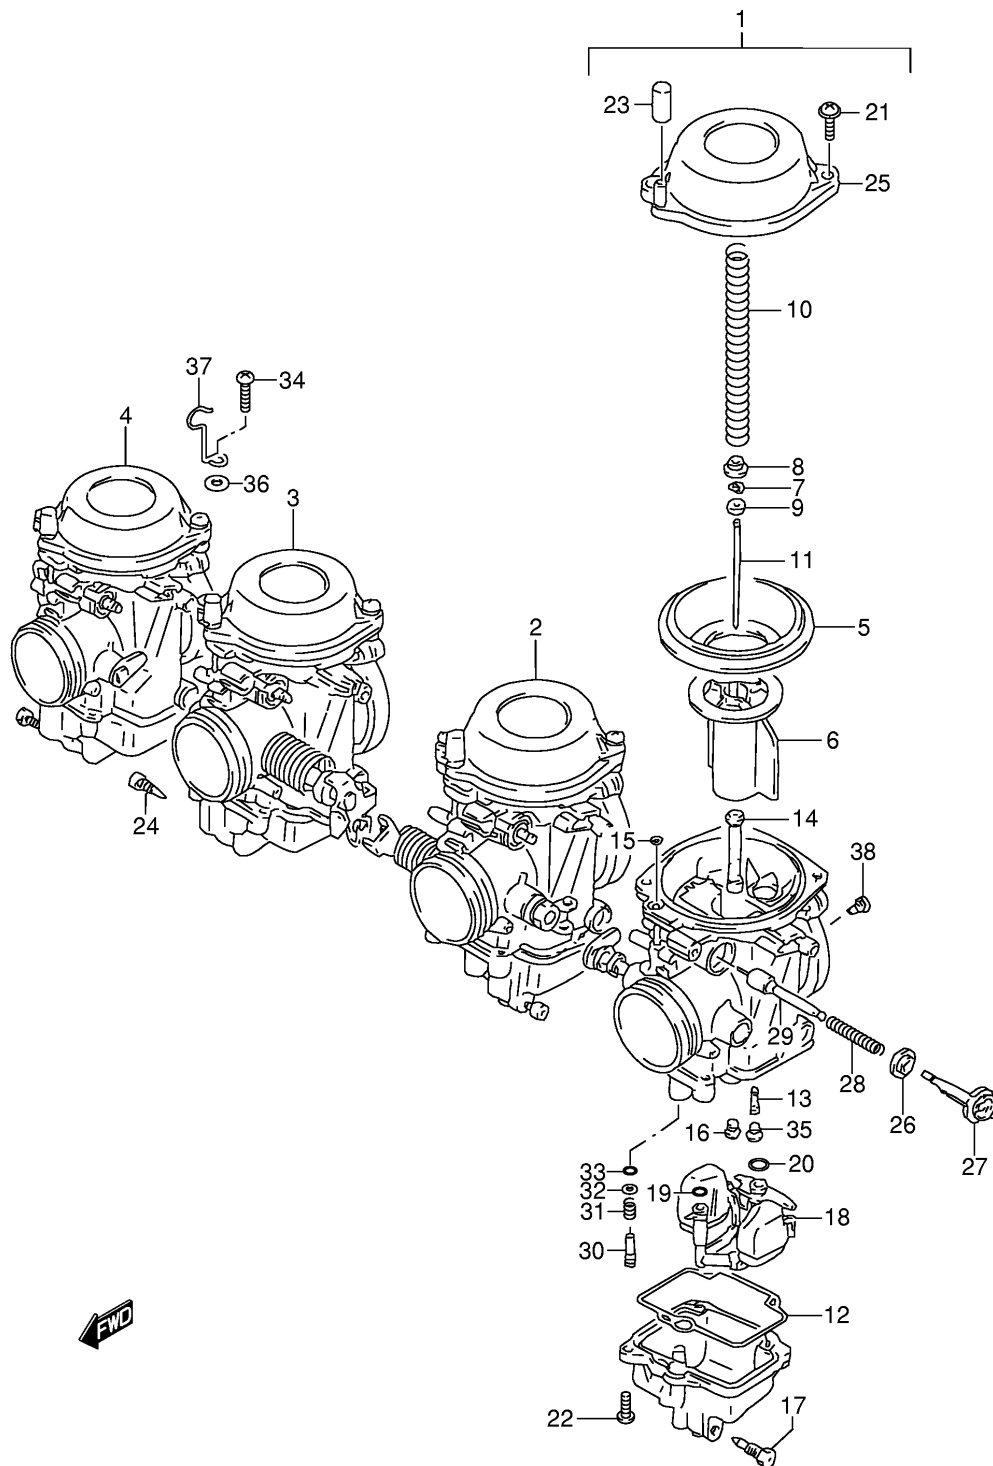 

Ref No	Part No	Description
1	13201-44CC0	Carburetor Assy, Lh
1	13201-44CD0	Carburetor Assy, Lh
2	13202-44CC0	Carburetor Assy, Ml
2	13202-44CD0	Carburetor Assy, Ml
3	13203-44CC0	Carburetor Assy, Mr
3	13203-44CD0	Carburetor Assy, Mr
4	13204-44CC0	Carburetor Assy, Rh
4	13204-44CD0	Carburetor Assy, Rh
5	13507-17C01	. Diaphragm
6	13501-01D00	. Valve, Piston
7	13394-40D20	. E Ring
8	13382-42A00	. Ring
9	13387-47010	. Ring
10	13417-07C30	. Spring
11	13383-44C20	. Needle, Jet (5fz102-3)
12	13258-44B00	. Gasket, Float Chamber
13	09492-32006	. Jet, Pilot (32.5)
14	09494-00763	. Jet, Needle (p-3)
15	13509-17C00	. O Ring
16	09491-22015	. Jet, Main (112.5)
16	09491-22016	. Jet, Main (110)
17	13247-24500	. Screw, Drain
18	13250-44C00	. Float/needle Valve Assy
19	13374-46710	. O Ring
20	13374-44080	. O Ring
21	02112-75163	. Screw
22	02112-05127	. Screw
23	13508-17C00	. Cap
24	13247-13A00	. Screw, Drain
25	13502-01D00	. Cover, Diaphragm
26	13418-17C00	. Cap, Starter
27	13418-17C10	. Holder
28	13417-09110	. Spring
29	13411-01D00	. Plunger Assy
30	13279-47070	. Screw, Air (1 1/2)
31	13268-47070	. Spring
32	13291-29900	. Washer
33	13295-29900	. O Ring
34	02112-05164	. Screw
35	13357-34C00	. Plug
36	08322-01053	. Washer
37	13671-20C20	. Clip
38	09493-26004	. Jet, Air (1.3)

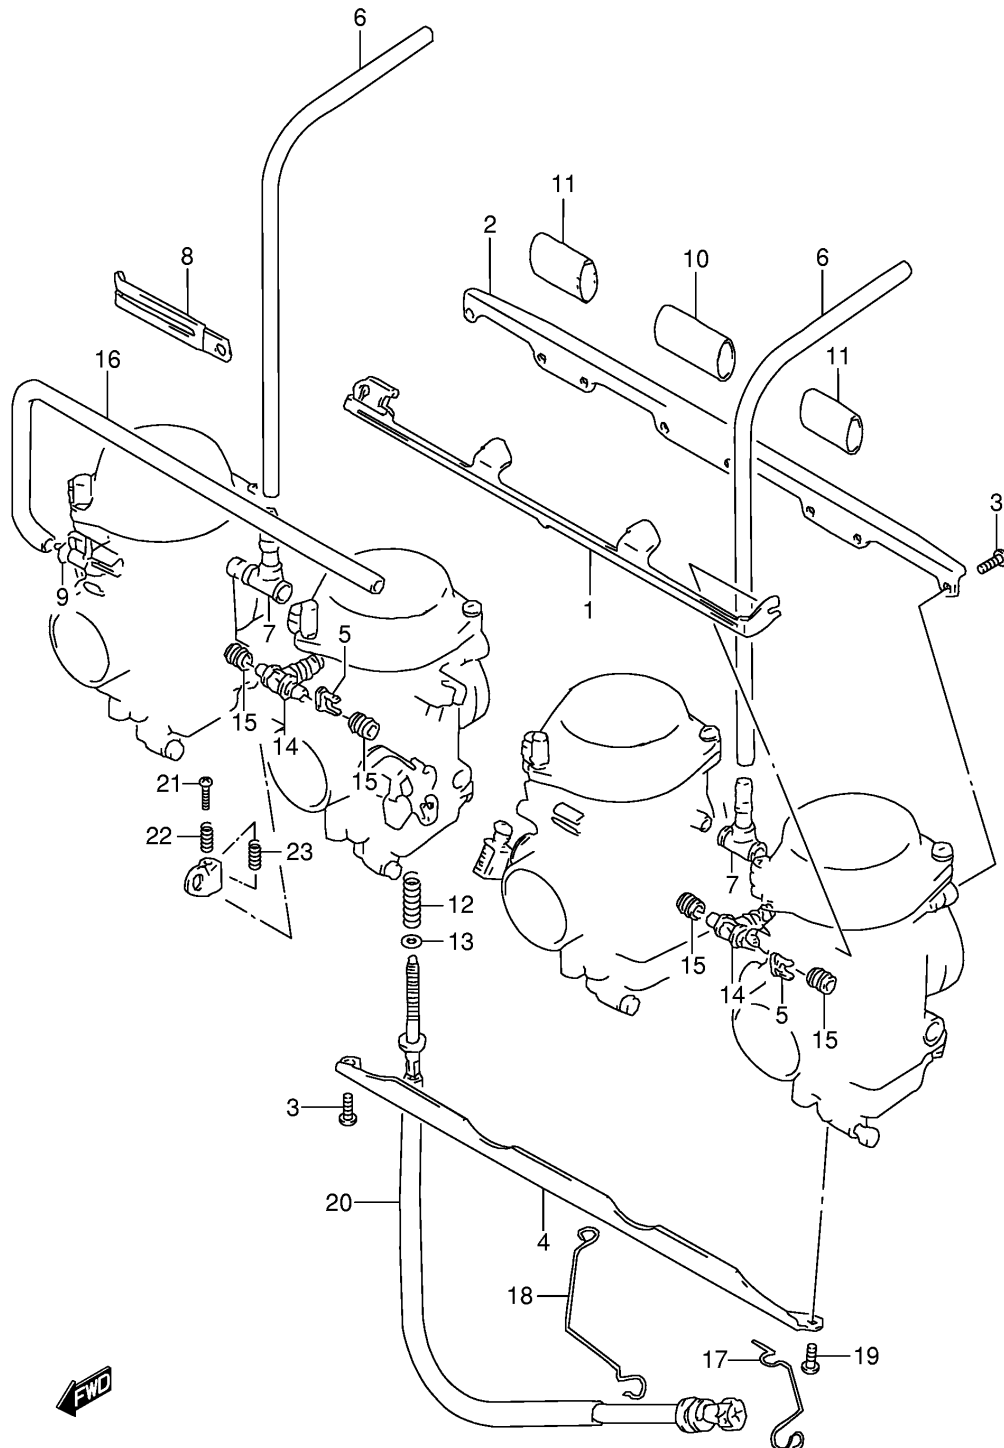 



Ref No	Part No	Description
1	13413-20C00	Lever
2	13628-17C10	Plate
3	02112-05127	Screw
4	13628-17C00	Plate
5	13439-17C00	Holder
6	09352-70103-600	Hose (7x10.2x600)
7	13684-20C10	Hose
8	09404-06431	Plate
9	09401-08410	Clip
10	13684-43440	Hose
11	13684-43440	Hose
12	13375-14D10	Spring
13	13427-38300	Washer
14	13685-44B00	Nipple
15	13673-44B00	Seal
16	13684-20C00	Hose (l:380)
17	13671-20C00	Clip
18	13671-20C10	Clip
19	13601-05148	Screw
20	13279-20C00	Adjuster
21	13267-44B00	Screw
22	13271-44B00	Spring
23	13268-17C10	Spring

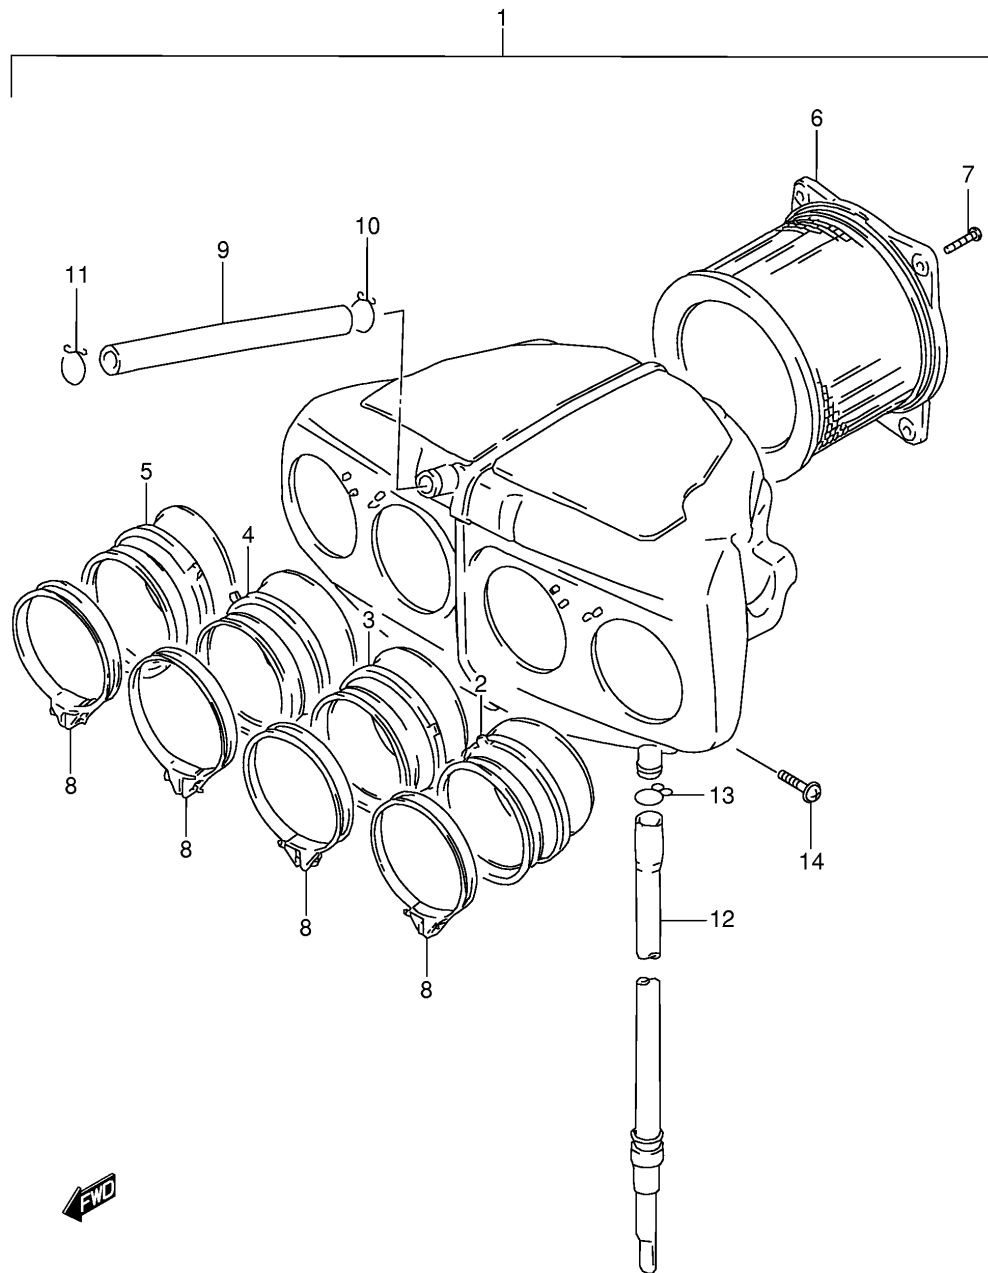 


Ref No	Part No	Description
1	13700-20C23	Cleaner Assy, Air
2	13881-20C01	. Tube, Outlet Lh
3	13882-20C01	. Tube, Outlet Ml
4	13883-20C01	. Tube, Outlet Mr
5	13884-20C01	. Tube, Outlet Rh
6	13780-20C00	. Filter
7	02142-05123	. Screw
8	09402-66208	. Clamp
9	13853-19C00	. Tube, Breather
10	09401-16401	. Clip
11	09401-14301	. Clip
12	13870-11458	. Tube, Drain
13	09401-13409	. Clip
14	02112-76163	Screw

Ref No	Part No	Description
1	14181-18C00	Gasket, Exhaust Pipe
2	07120-08253	Bolt
3	14772-19C00	Clamp
4	01550-06253	Bolt
5	14305-44C61	Muffler Assy, Rh
6	14306-44C61	Muffler Assy, Lh
7	09103-08256	Bolt (8x40)
8	09160-08106	Washer
9	09180-08156	Spacer
10	09320-12049	Cushion
11	08316-20083	Nut

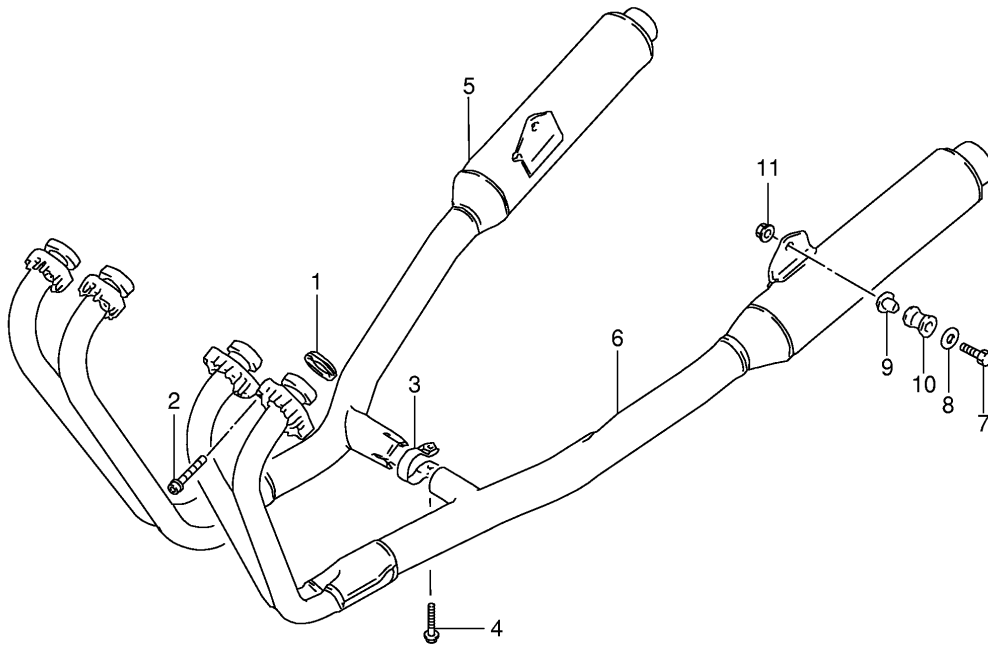 


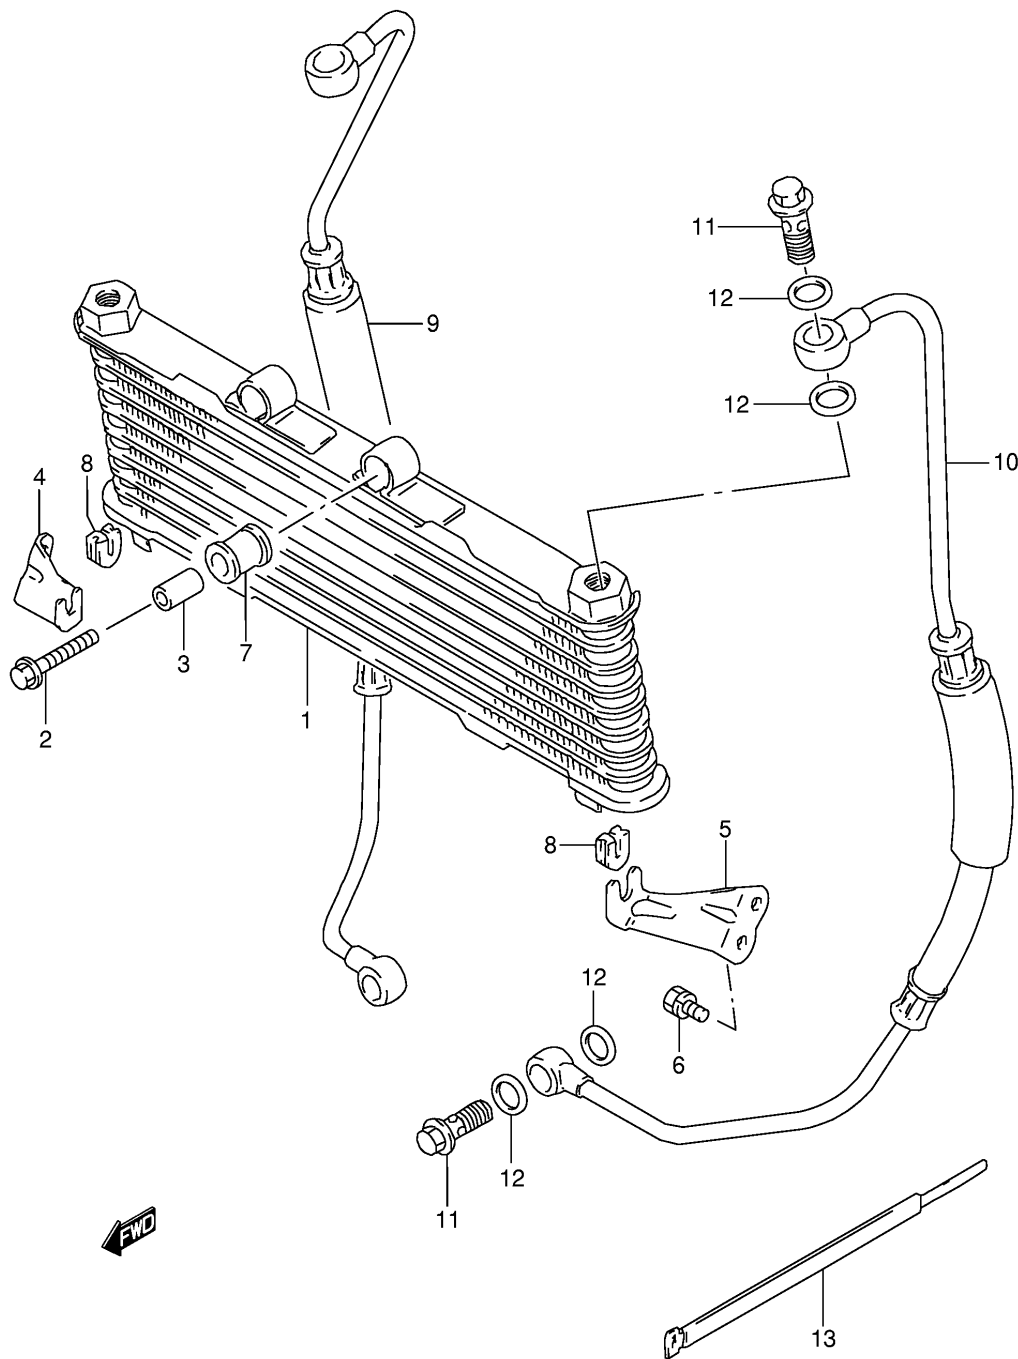 

Ref No	Part No	Description
1	16600-19C01	Cooler Assy, Oil
2	09118-08131	Bolt (8x40)
3	09180-08304	Spacer
4	16621-19C00	Bracket, Oil Cooler,rh
5	16622-19C00	Bracket, Oil Cooler,lh
6	01570-06163	Bolt
7	16629-27A01	Cushion, No.1
8	16628-27A00	Cushion, No.2
9	16460-19C02	Hose, Oil Cooler,rh
10	16470-19C02	Hose, Oil Cooler,lh
11	09360-16002	Bolt, Union (16x32)
12	09168-16002	Gasket
13	09407-25401	Clamp, Oil Hose

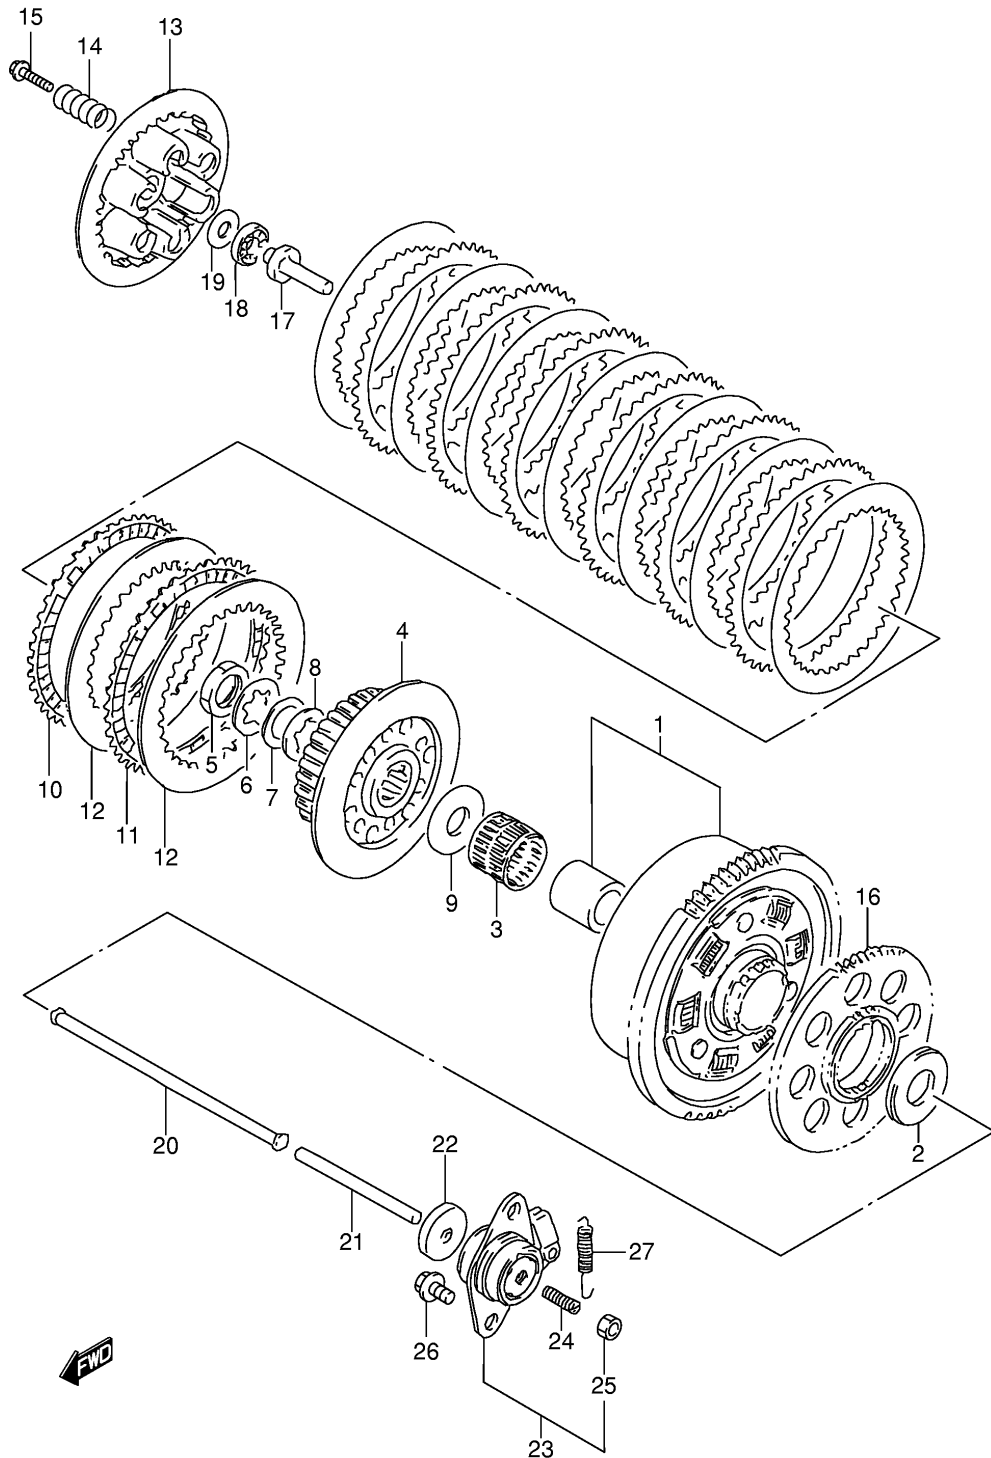 


Ref No	Part No	Description
1	21200-07866	Gear, Primary Driven (nt:75)
2	09160-25037	Washer (25.1x54x2.5)
3	09263-35017	Bearing
4	21410-17D01	Hub, Sleeve
5	09140-24012	Nut
6	09167-25007	Washer
7	09164-24006	Washer, Wave
8	09167-25024	Washer (25.5x36x0.5)
9	09160-25056	Washer (25x50x2.5)
10	21441-20C00	Plate, Drive (t:2.2)
11	21442-17C00	Plate, Drive,no.2
12	21451-17C00	Plate, Driven (t:1.6)
13	21462-17E01	Disc, Pressure
14	09440-20020	Spring
15	09116-06150	Bolt (6x25)
16	22721-17D01	Gear, Generator (nt:34/64)
17	23121-07A00	Piece, Push
18	09263-15003	Bearing (15x28x2)
19	09160-15045	Washer (15.5x28x1)
20	23110-20C00	Rod, Push Rh
21	23111-31301	Rod, Push Lh
22	09285-06015	Oil Seal
23	23200-31300	Screw Assy, Release
24	09134-06010	• . Screw
25	08310-00067	• . Nut
26	01550-06163	Bolt
27	09443-07038	Spring

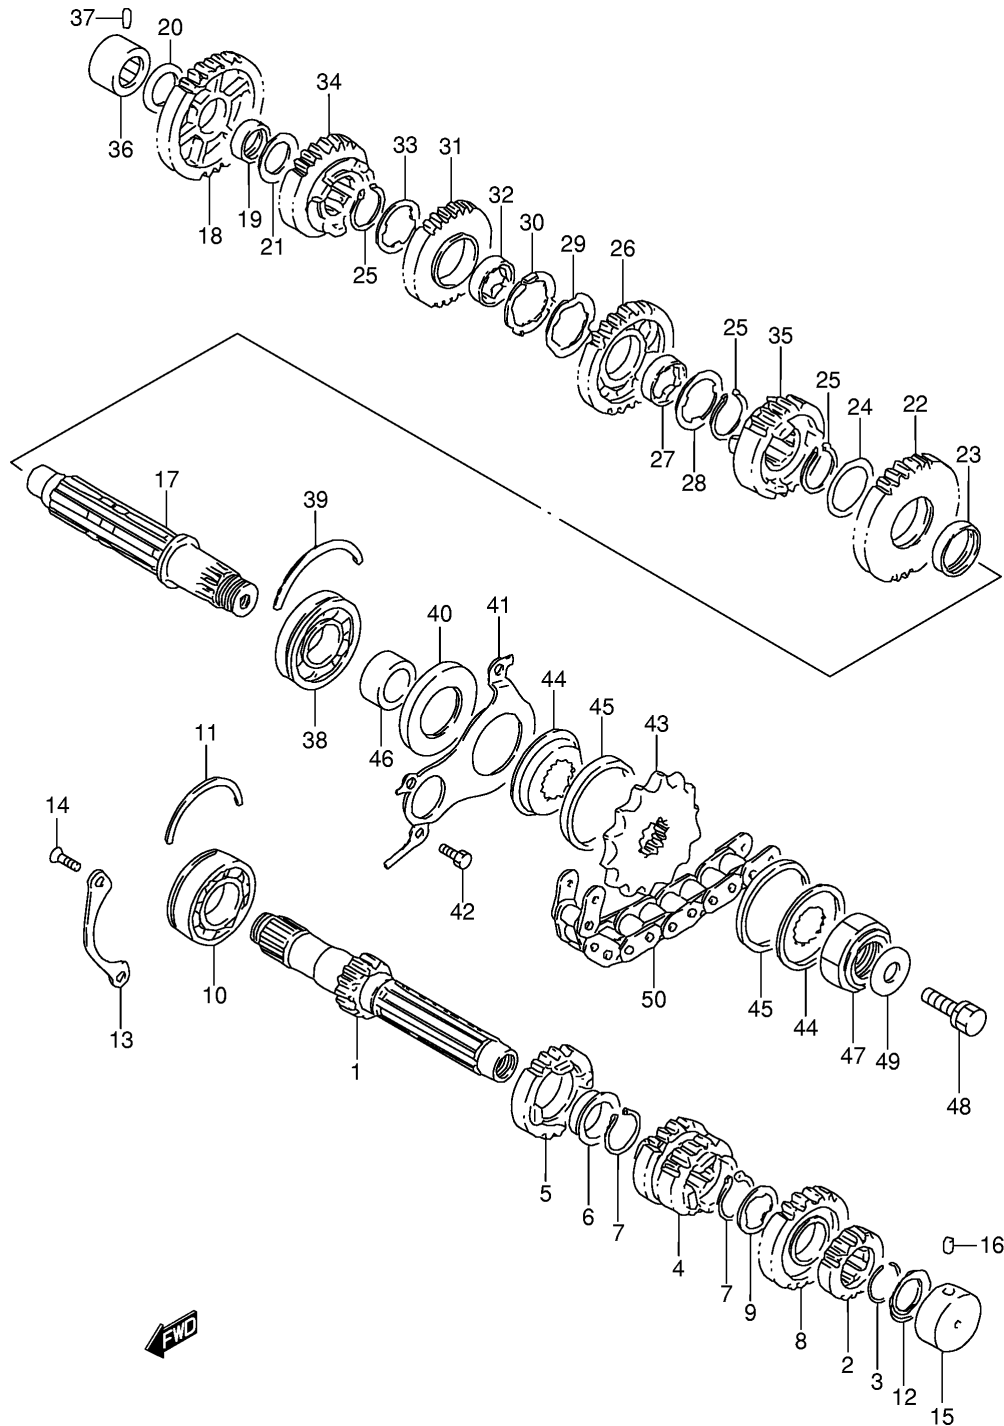 


TRANSMISSION


Ref No	Part No	Description
1	24121-20C10	Countershaft (nt:12)
2	24221-27A01	Gear, 2nd Drive (nt:16)
3	09380-25013	Circlip
4	24231-27A00	Gear, 3/4th Drive (nt:17/20)
5	24251-27A01	Gear, 5th Drive (nt:22)
6	09301-25001	Bush
7	09380-25003	Circlip
8	24261-17C01	Gear, 6th Drive (nt:21)
9	09167-25012	Washer
10	09262-25105	Bearing, Rh
11	09390-62012	C Ring
12	09285-20006	Oil Seal
13	24741-27A00	Holder, Bearing
14	02122-06163	Screw
15	09263-20049	Bearing, Lh
16	04221-07129	Pin
17	24131-20C00	Drivershaft
18	24311-19C10	Gear, 1st Driven (nt:37)
19	09300-22008	Bush
20	09181-20251	Washer, Rh
21	09181-22223	Washer, Lh
22	24321-20C00	Gear, 2nd Driven (nt:33)
23	09300-28003	Bush (28x32x9.5)
24	09181-28195	Washer
25	08331-31286	Circlip
26	24331-27A00	Gear, 3rd Driven (nt:28)
27	24332-27A00	Bush
28	09167-28001	Washer, Lh
29	09167-28002	Washer, Rh (t:1.5)
30	09169-28001	Washer, Rh (t:1.0)
31	24341-27A01	Gear, 4th Driven (nt:28)
32	24332-27A00	Bush
33	09167-28001	Washer, Rh
34	24351-27A00	Gear, 5th Driven (nt:27)
35	24361-20C00	Gear, 6th Driven (nt:23)
36	09263-20040	Bearing, Rh
37	04221-07209	Pin (l:20)
38	09262-25115	Bearing, Lh
39	09390-62012	C Ring
40	09283-34005	Oil Seal
41	24751-27A01	Plate
42	01500-06123	Bolt
43	27511-27A11	Sprocket, Engine (nt:14)
44	27516-19C00	Holder, Damper
45	27517-31300	Damper, Engine Sprocket
46	09180-25090	Spacer (25x34x16.1)
47	09159-20004	Nut
48	01570-06163	Bolt
49	08212-06222	Washer
50	27600-19C00-112	Chain, Drive (did50va2)

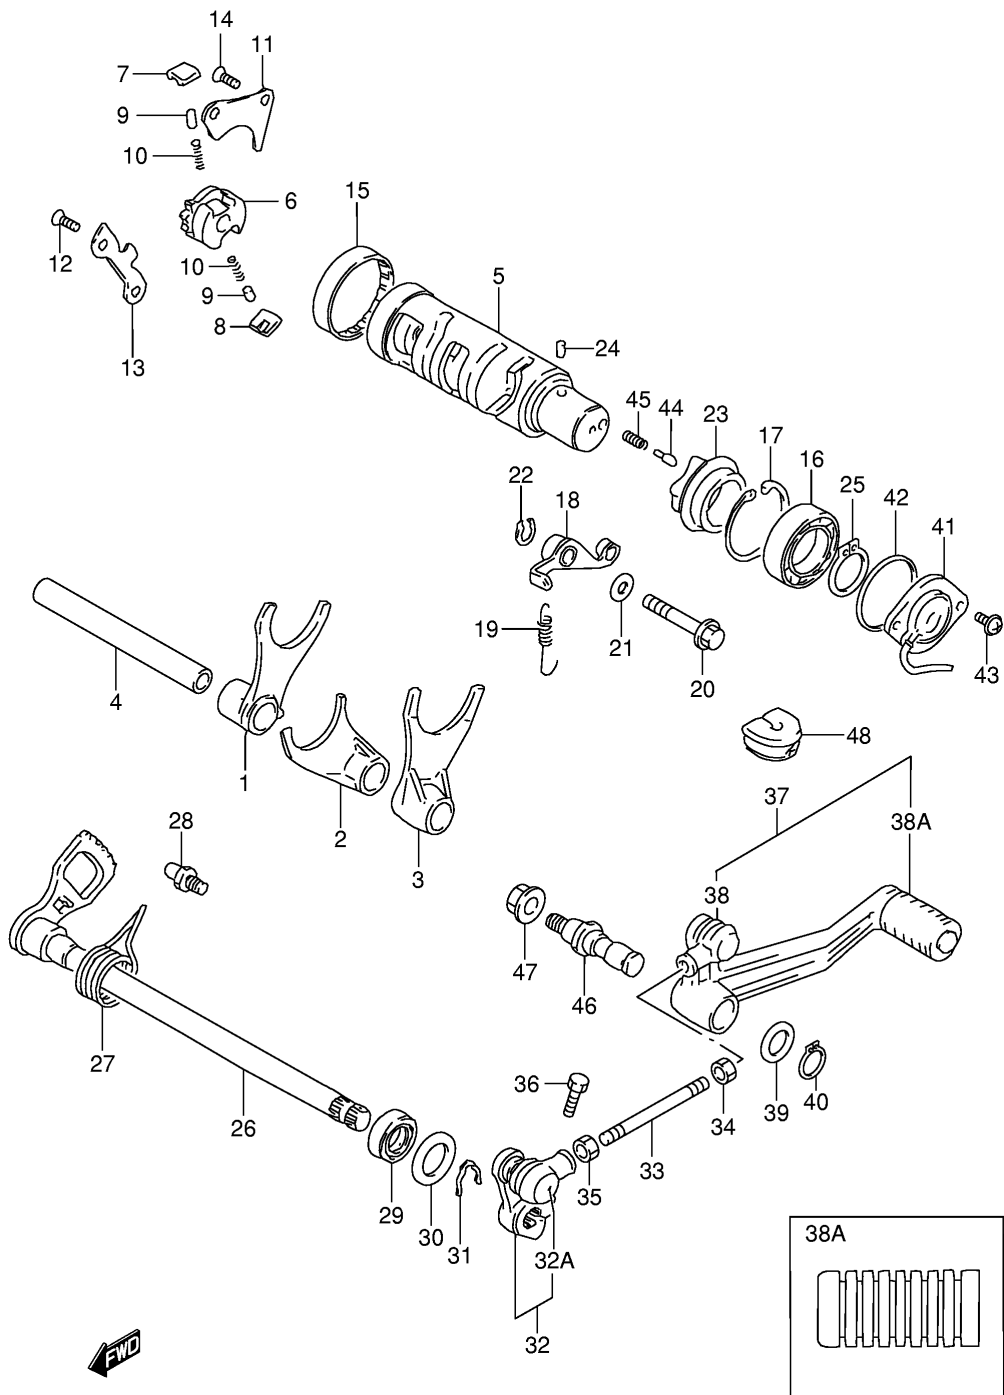 


Ref No	Part No	Description
1	25211-27A00	Fork, Gear Shifting No.1
2	25221-27A01	Fork, Gear Shifting No.2
3	25231-27A00	Fork, Gear Shifting No.3
4	25411-27A00	Shaft, Gear Shifting Fork
5	25310-27A02	Cam, Gear Shifting
6	25322-31302	Gear, Cam Driven
7	25323-34201	Pawl, No.1
8	25324-34201	Pawl, No.2
9	09261-05003	Pin
10	09440-04003	Spring
11	25331-31301	Lifter, Pawl
12	02122-06123	Screw
13	25341-27A00	Guide, Cam
14	02122-06123	Screw
15	09263-43001	Bearing, Rh
16	08113-69050	Bearing, Lh
17	08331-41426	Circlip
18	25350-27A00	Stopper, Cam
19	09443-09031	Spring
20	25353-27A00	Shaft, Stopper
21	09168-10002	Gasket
22	08331-31086	Circlip
23	25381-38400	Plate, Stopper
24	04221-04069	Pin
25	08331-31256	Circlip
26	25510-19C01	Shaft, Gear Shifting
27	09444-26017	Spring
28	25671-01000	Stopper, Arm
29	09285-12002	Oil Seal (12x22x9)
30	09160-12020	Washer (12.5x27x1.6)
31	08331-31126	Circlip
32	25520-19C02	Arm, Gear Shift Link
32a	25526-47000	• Cover, Dust
33	25525-27A30	Rod, Gear Shift Link
34	09140-06011	Nut
35	08310-00067	Nut
36	01500-06257	Bolt
37	25600-19C04	Lever Assy, Gear Shifting
38	25526-47000	• Cover, Dust
38a	25652-20C00	• Rubber
39	09160-12011	Washer (12.5x20x1)
40	08331-31126	Circlip
41	37720-20C00	Base Assy, Gear Shift
42	09280-35006	O Ring (d:2.4,id:35.5)
43	02112-75163	Screw
44	09209-05011	Contact
45	09440-04010	Spring
46	25617-20A00	Shaft, Lever
47	08316-10103	Nut
48	33885-27A01	Grommet

Ref No	Part No	Description
	31100-19C02	Motor Assy, Starting
1	31132-19B10	. Holder Set, Brush (-)
2	31130-19B10	. Terminal Set, Brush (+)
3	31143-49040	•• .. O Ring
4	31170-19B10	. Washer Set
5	31135-31300	. Spring, Brush
6	31150-19B10	. Bracket Assy, Front
7	31280-19B10	. Bolt Set
8	31143-49040	•• .. O Ring
9	31264-31300	. O Ring
10	09280-24003	O Ring
11	08361-35068	Nut
12	09128-06024	Bolt (I:25)


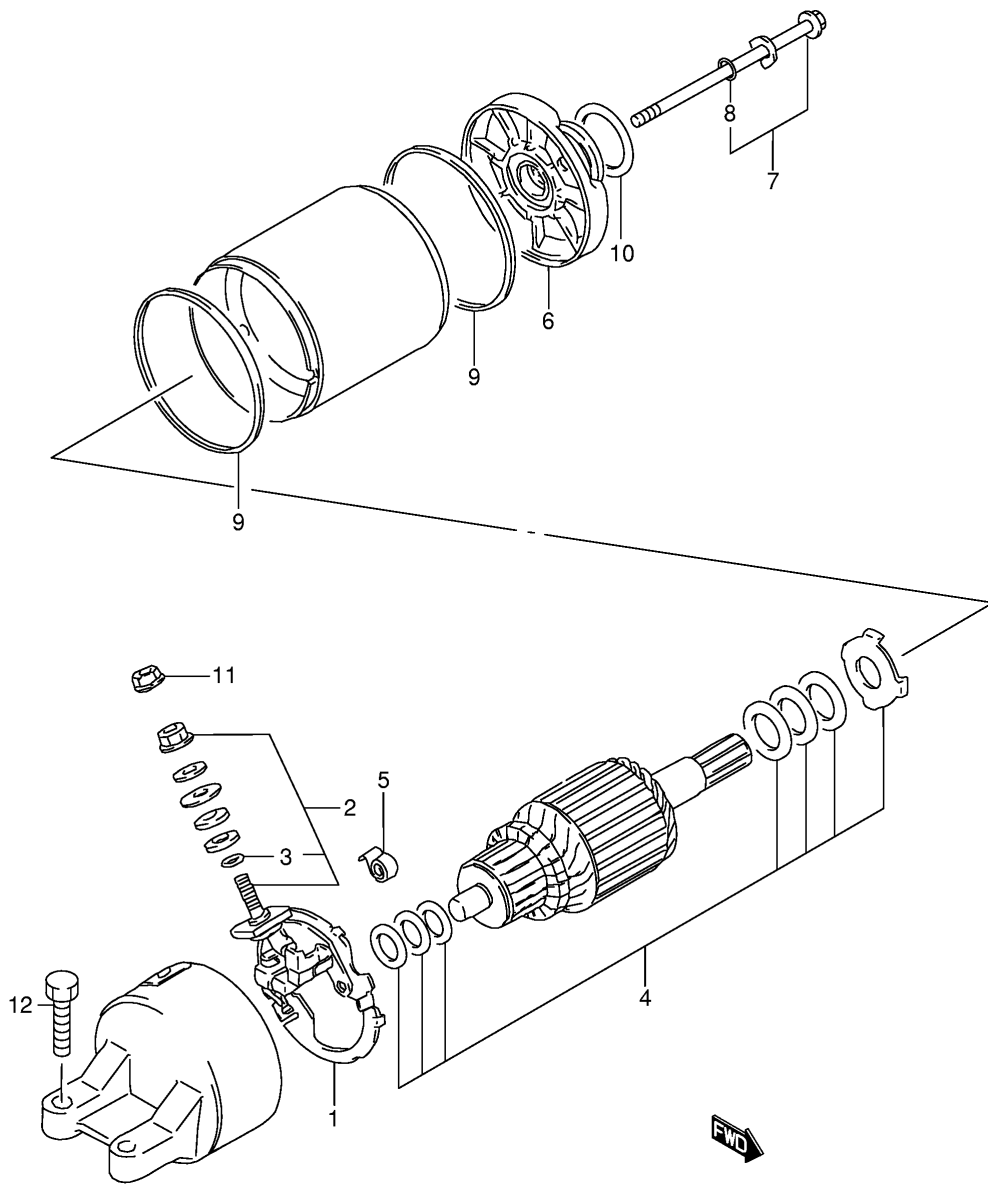 


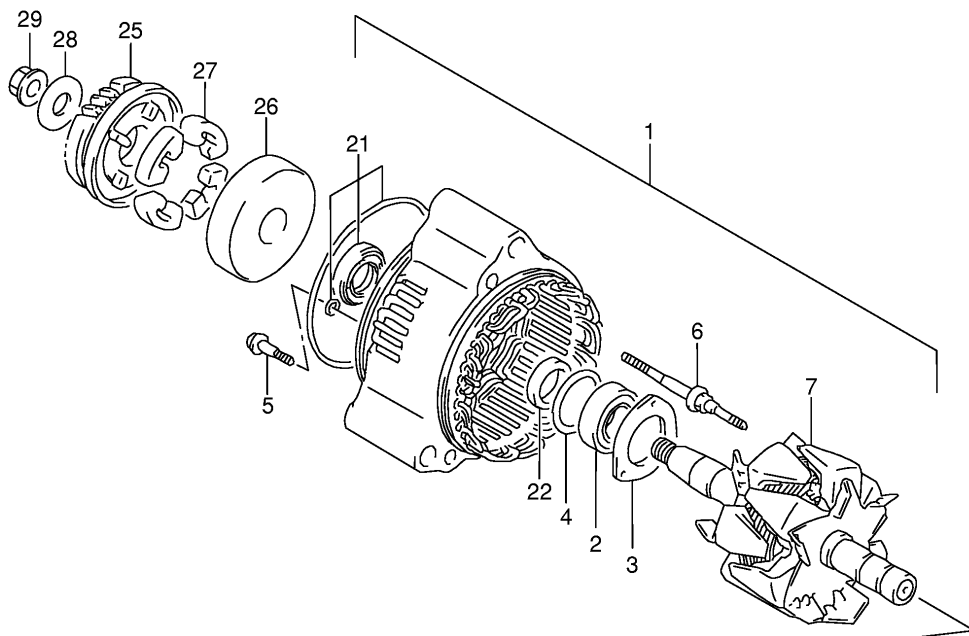 


Ref No	Part No	Description
1	31400-17C04	Alternator Assy
2	31612-06B00	. Bearing
3	31585-48B00	. Retainer
4	31613-48B00	. Cover, Bearing
5	31586-48B00	. Screw
6	31587-85250	. Stud Bolt
7	31710-48B04	. Rotor Assy
8	31613-82610	. Cover (1)
9	31612-48B00	. Bearing
10	31613-27A10	. Cover (2)
11	31611-48B00	. Frame, End
12	31621-27A00	. Holder, Rectifier
13	32500-27A00	. Regulator
14	31656-48B00	. Holder, Brush
15	31687-17E00	. Cover, Rectifier
16	31480-48B00	. Lead Wire
17	02112-04063	. Screw
18	31688-27A00	. Screw (5x17)
19	31614-48B00	. Cover
20	08316-10053	. Nut
21	31780-27X50	. Oil Seal Set
22	31776-06B00	. Spacer
23	31615-27E00	. Protector, Alternator
24	01550-08903	Bolt
25	22730-19C01	Gear, Generator Driven (nt:30)
26	22733-27A04	Housing, Damper
27	21231-06B00	Damper
28	08211-10283	Washer
29	08316-20103	Nut

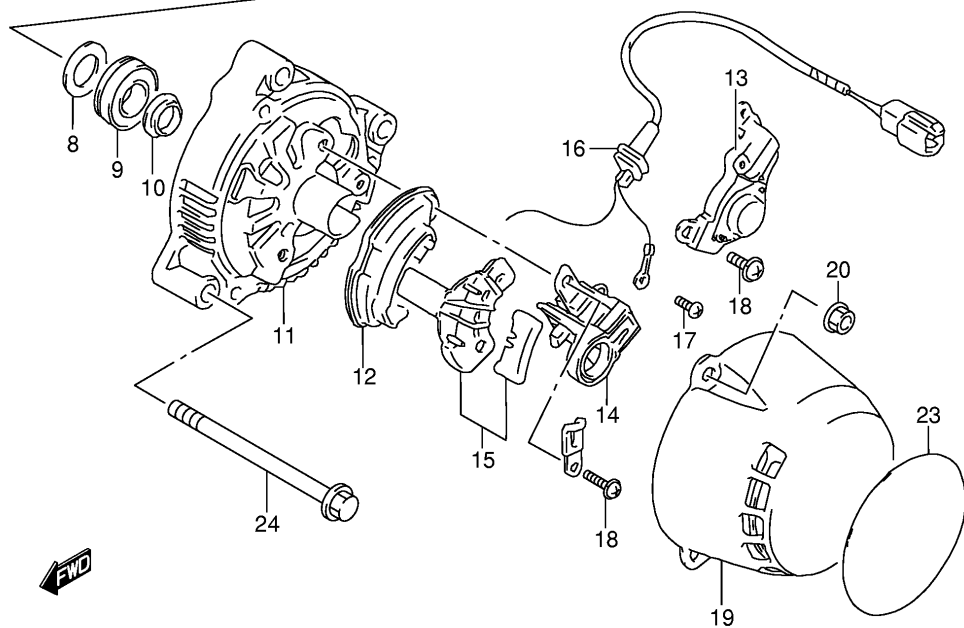 


Ref No	Part No	Description
1	32900-19C60	Igniter Assy
2	02142-06123	Screw
3	33110-17C00	Signal Generator Assy
4	33120-19C20	Rotor, Signal
5	07130-08303	Bolt
6	02112-05103	Screw
7	09407-11401	Clamp (1:95)

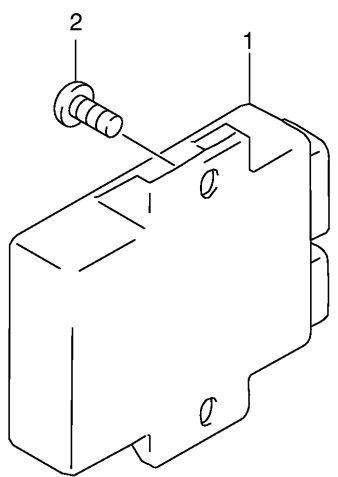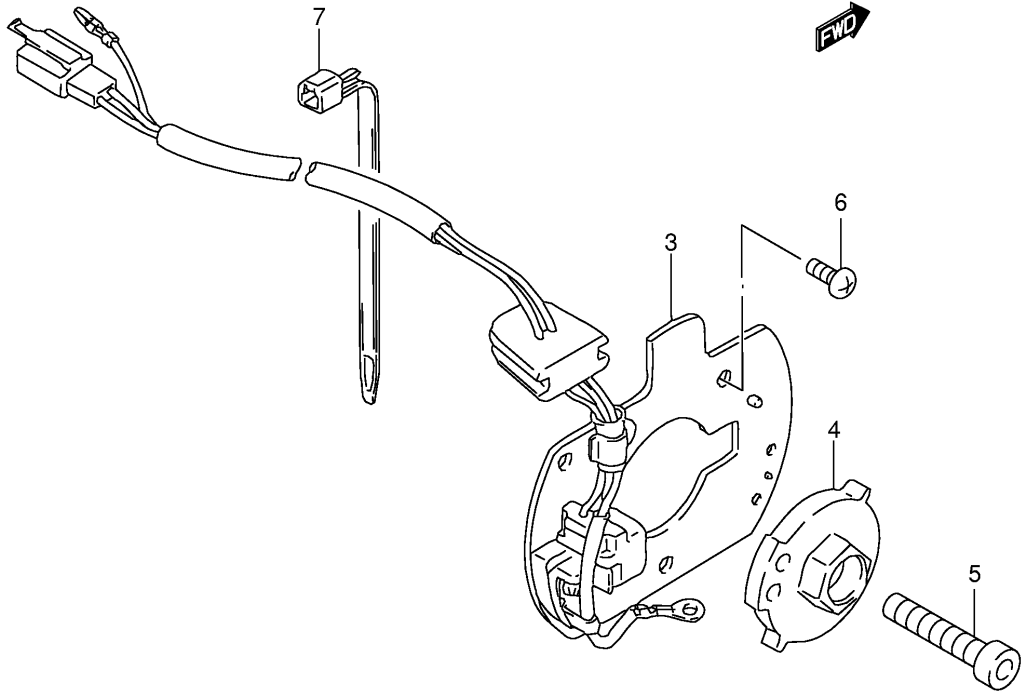  

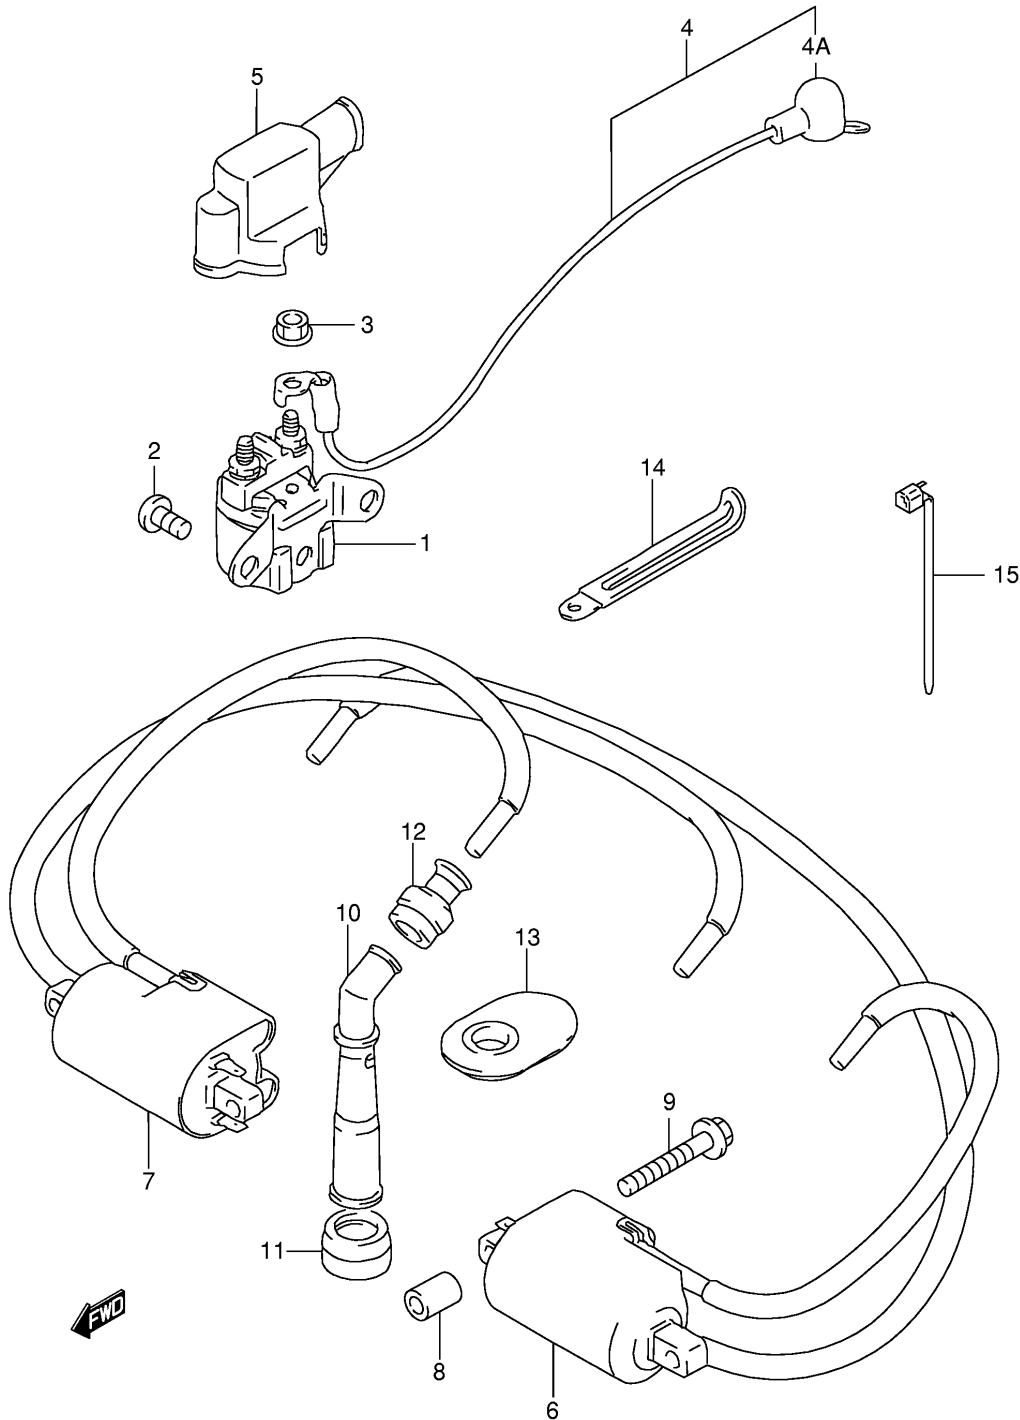 



Ref No	Part No	Description
1	31800-49100	Relay, Starting Motor
2	02112-06103	Screw
3	08361-35068	Nut
4	33810-41C00	Lead Wire, Starting Motor
4a	31861-48B10	Cap, Starter Motor
5	31861-10D10	Cap, Terminal
6	33410-19C00	Coil, Ignition,1-4
7	33420-19C00	Coil, Ignition,2-3
8	09180-06198	Spacer
9	01550-06453	Bolt
10	33510-48B10	Cap, Spark Plug
11	33541-23E01	Seal, Plug
12	33542-38B00	Seal, Hightension Cord
13	33543-48B00	Cover
14	09404-06431	Clamp
15	09407-18403	Clamp (l:165)

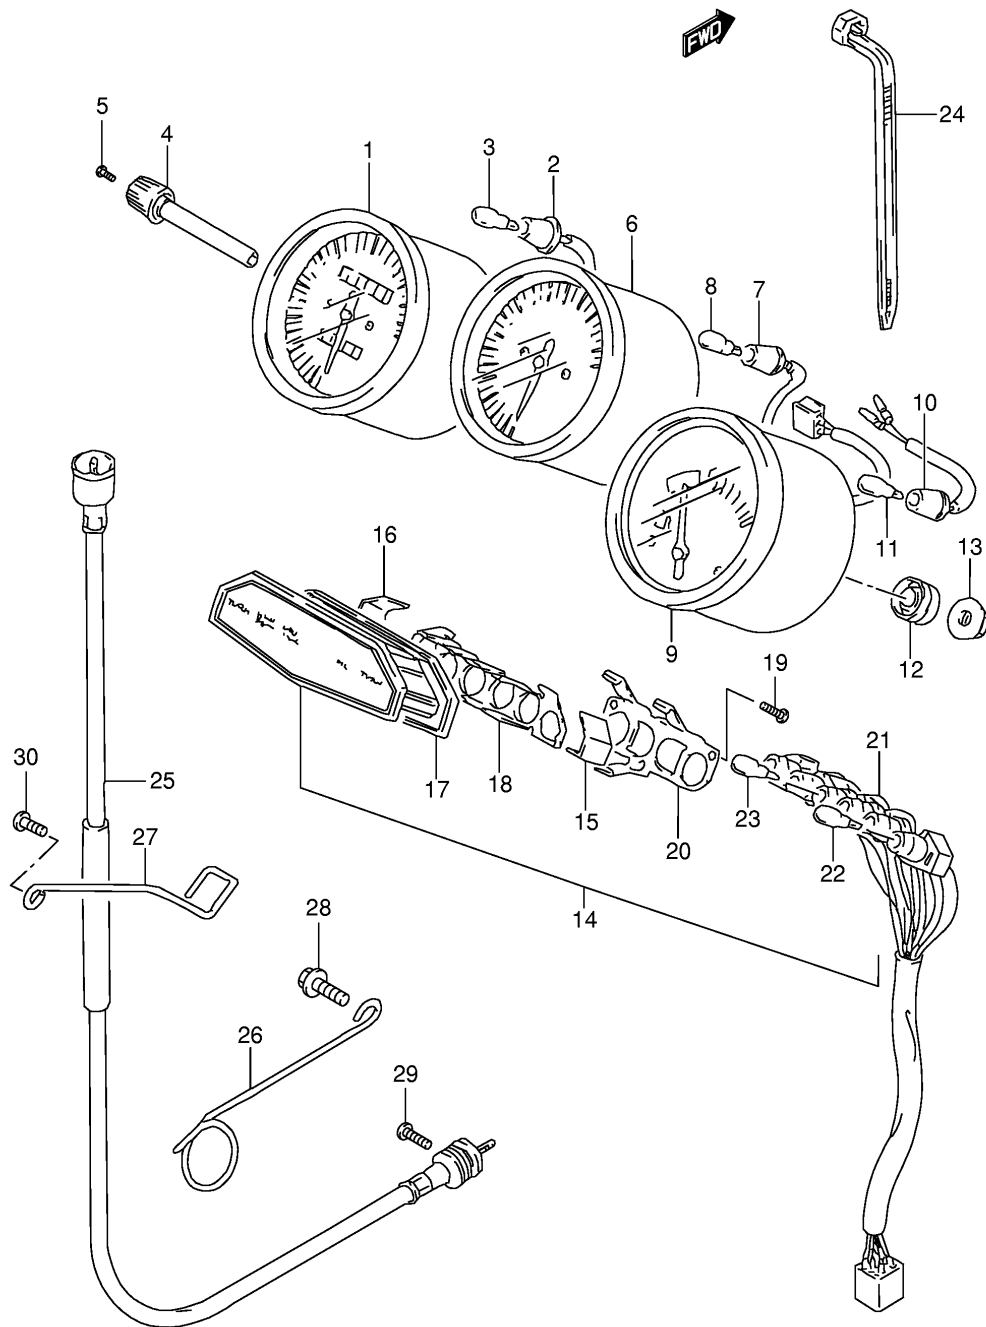 


Ref No	Part No	Description
1	34100-19C40	Speedometer (kilo)
1	34100-19C50	Speedometer (mile/kilo)
2	34171-19C00	• . Socket
3	09471-12085	• . Bulb (12v,3w)
4	34124-19C00	Knob, Trip
5	34184-12D00	Screw
6	34200-19C20	Tachometer
7	34171-19C10	• . Socket
8	09471-12085	• . Bulb (12v,3w)
9	34300-19C20	Fuel Meter
10	34171-19C10	• . Socket
11	09471-12085	• . Bulb (12v,3w)
12	34189-30921	Cushion
13	09159-06076	Nut
14	36380-19C00	Box Assy, Pilot Lamp
14	36380-19C10	Box Assy, Pilot Lamp
15	36383-27A00	• . Plate, Trun Rh
16	36384-27A00	• . Plate, Turn Lh
17	34196-19C00	• . Cushion, Case
18	36382-27A00	• . Plate, Pilot Lamp
19	36457-45100	• . Screw
20	34197-19C00	• . Lock Plate
21	34171-19C20	• . Socket
22	09471-12100	• . Bulb (12v,1.7w)
23	09471-12085	• . Bulb (12v,3w)
24	09407-14403	Clamp, Meter Lead
25	34910-19C01	Cable, Speedometer
26	34938-45100	Clamp, Cable
27	34938-34C01	Clamp, Cable
28	01550-06163	Bolt
29	02112-05163	Screw
30	02142-05123	Screw

Ref No	Part No	Description
1	35100-34C01-999	Headlamp Assy
1	35100-20C51-999	Headlamp Assy
2	36118-32B10	• Socket
3	35173-48B00	• Socket Cover
4	09471-12060	Bulb (12v,60/55w)
5	09471-12063	Bulb (12v,4w)
6	01580-06203	Bolt

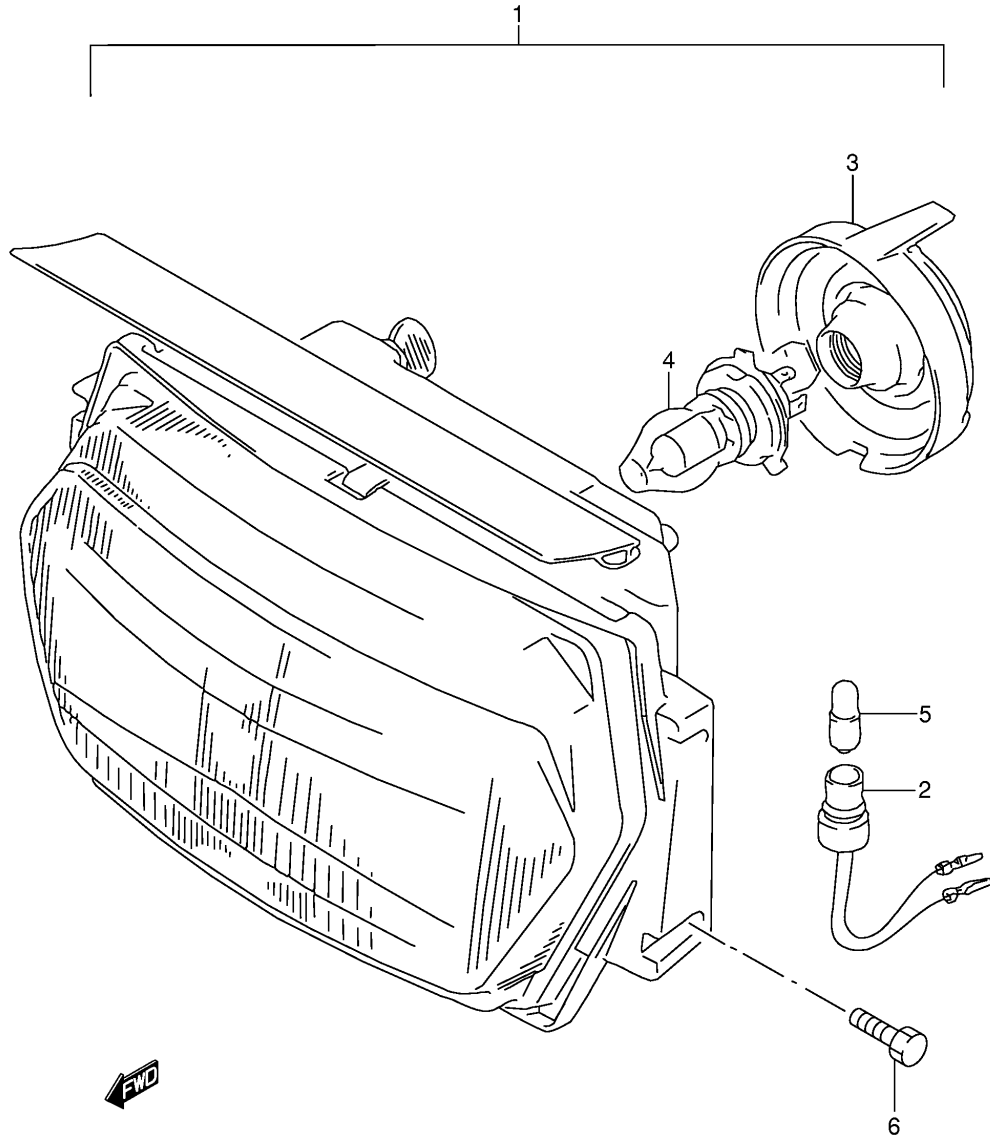 


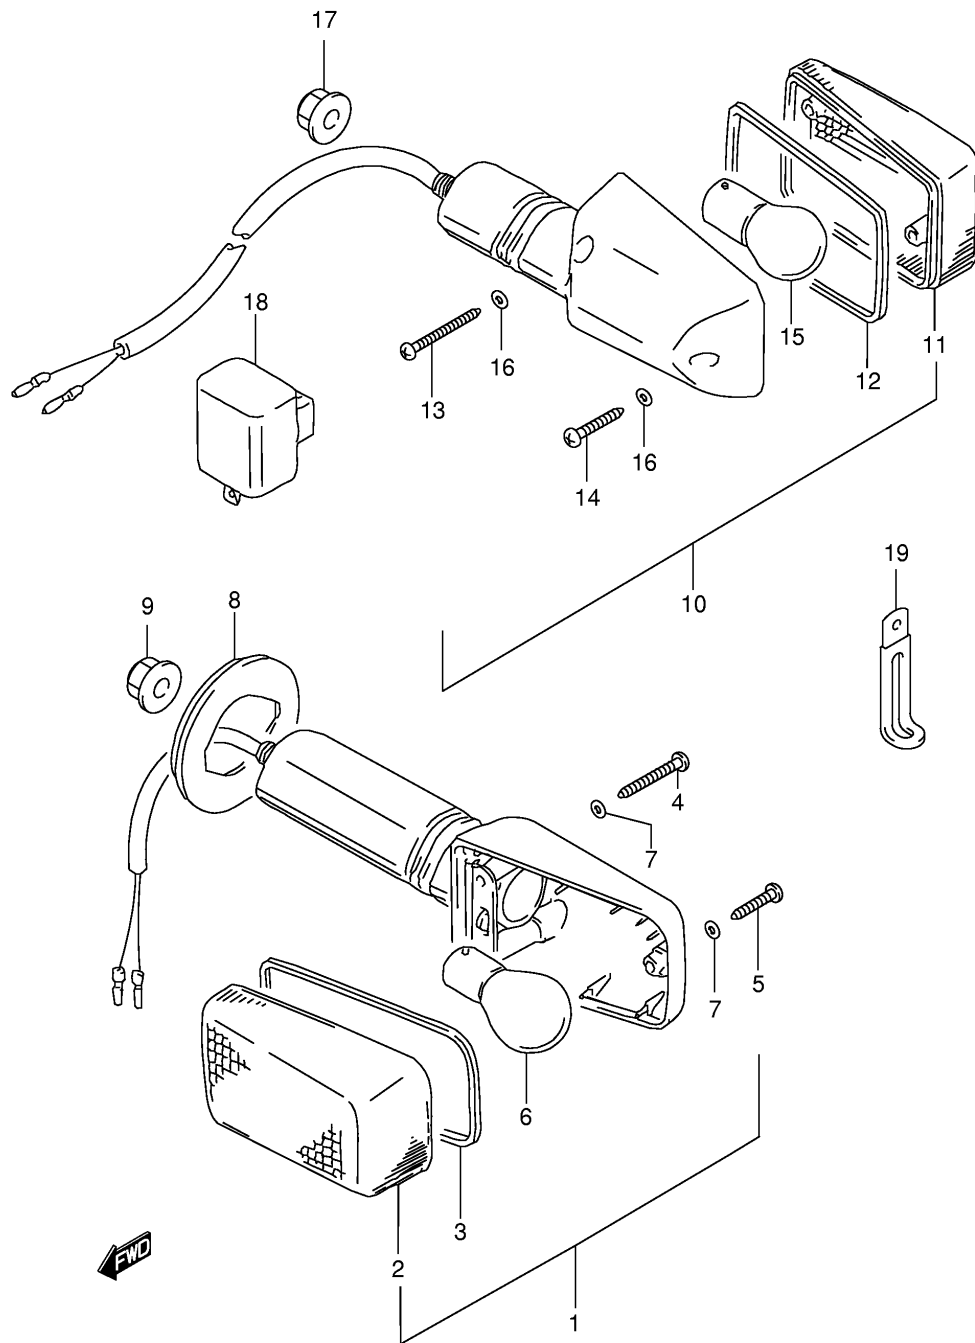 


Ref No	Part No	Description
1	35601-01D10	Lamp Assy, Front Turn Signal
2	35612-17C20	• Lens
3	35613-27A00	• Gasket
4	35623-27A00	• Screw (3x30)
5	35725-40511	• Screw (3x20)
6	09471-12045	• Bulb (12v,21w)
7	35627-27A02	• Gasket
8	35674-27A01	Grommet
9	08316-10103	Nut
10	35603-14D10	Lamp Assy, Rear Turn Signal
11	35603-14D20	Lamp Assy, Rear Turn Signal
12	35652-17C20	• Lens
13	35613-27A00	• Gasket
14	35623-27A00	• Screw (3x30)
15	35725-40511	• Screw (3x20)
16	09471-12045	• Bulb (12v,21w)
17	35627-27A02	• Gasket
18	08316-10103	Nut
19	38610-45D01	Relay, Turn Signal
	09404-06429	Clamp, Rear Turn Signal

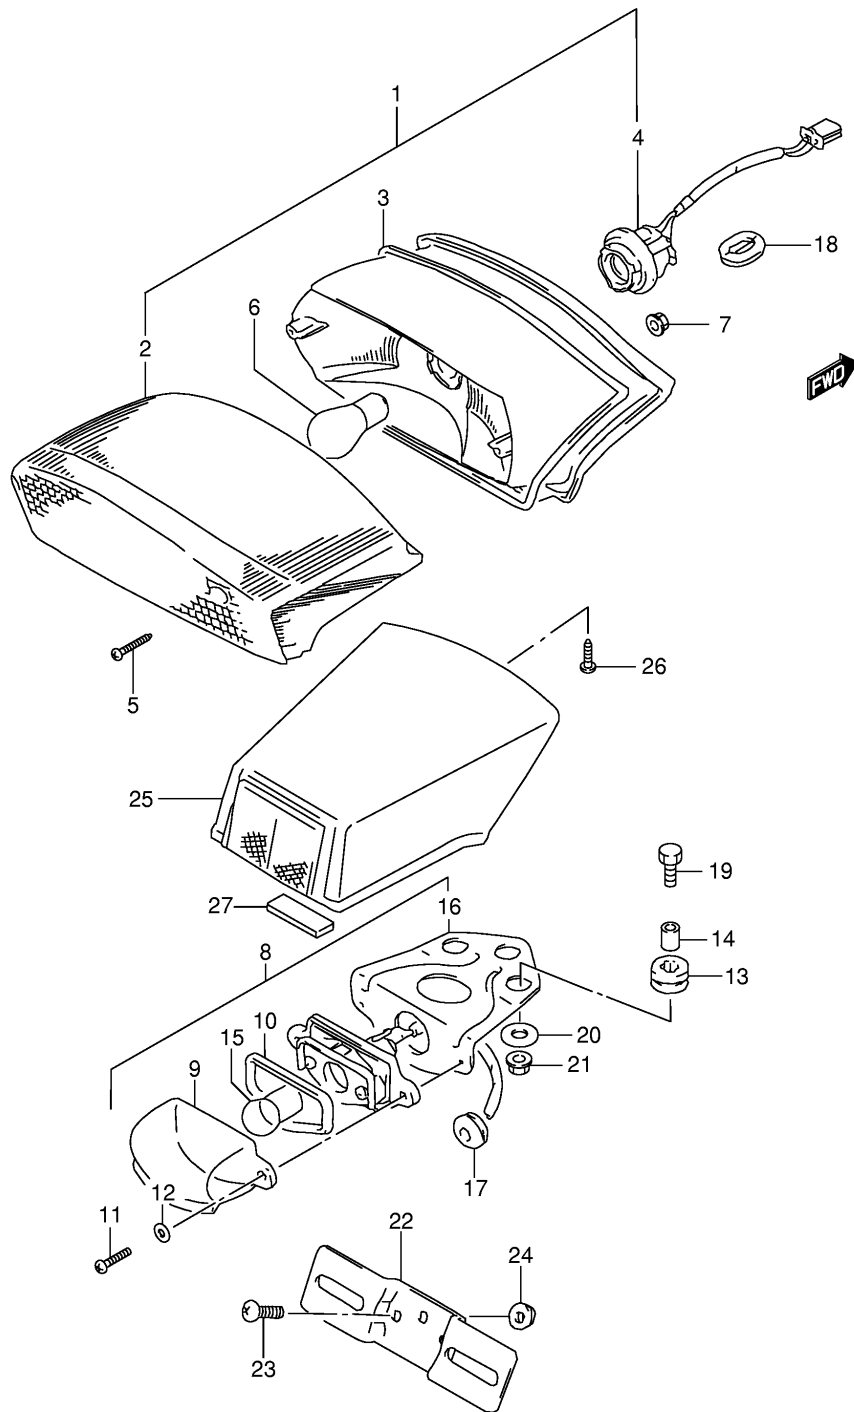 


Ref No	Part No	Description
1	35710-19C50	Lamp Assy, Rear Combination
2	35712-19C00	. Lens
3	35713-19C00	. Gasket
4	35718-19C00	. Socket
5	03211-04203	. Screw
6	09471-12083	. Bulb (12v,21/5w)
7	08316-20063	Nut
8	35910-19C10	Lamp Assy, License
9	35912-00A21	. Lens
10	35913-04A00	. Gasket
11	02112-04163	. Screw
12	08322-01047	. Washer
13	35765-35300	. Cushion
14	35766-19C00	. Spacer
15	09471-12140	. Bulb (12v,5w)
16	35916-19C00	. Bracket, License Lamp
17	09308-07009	Grommet
18	09308-12007	Grommet
19	09116-06115	Bolt (6x20)
20	09160-06077	Washer (6.5x20x1.2)
21	08316-20063	Nut
22	35927-00A10	Bracket, License Plate
23	02142-06203	Screw
24	08310-00063	Nut
25	35917-19C00	Cover, License Lamp
26	03541-05163	Screw
27	35995-05C00	Protector

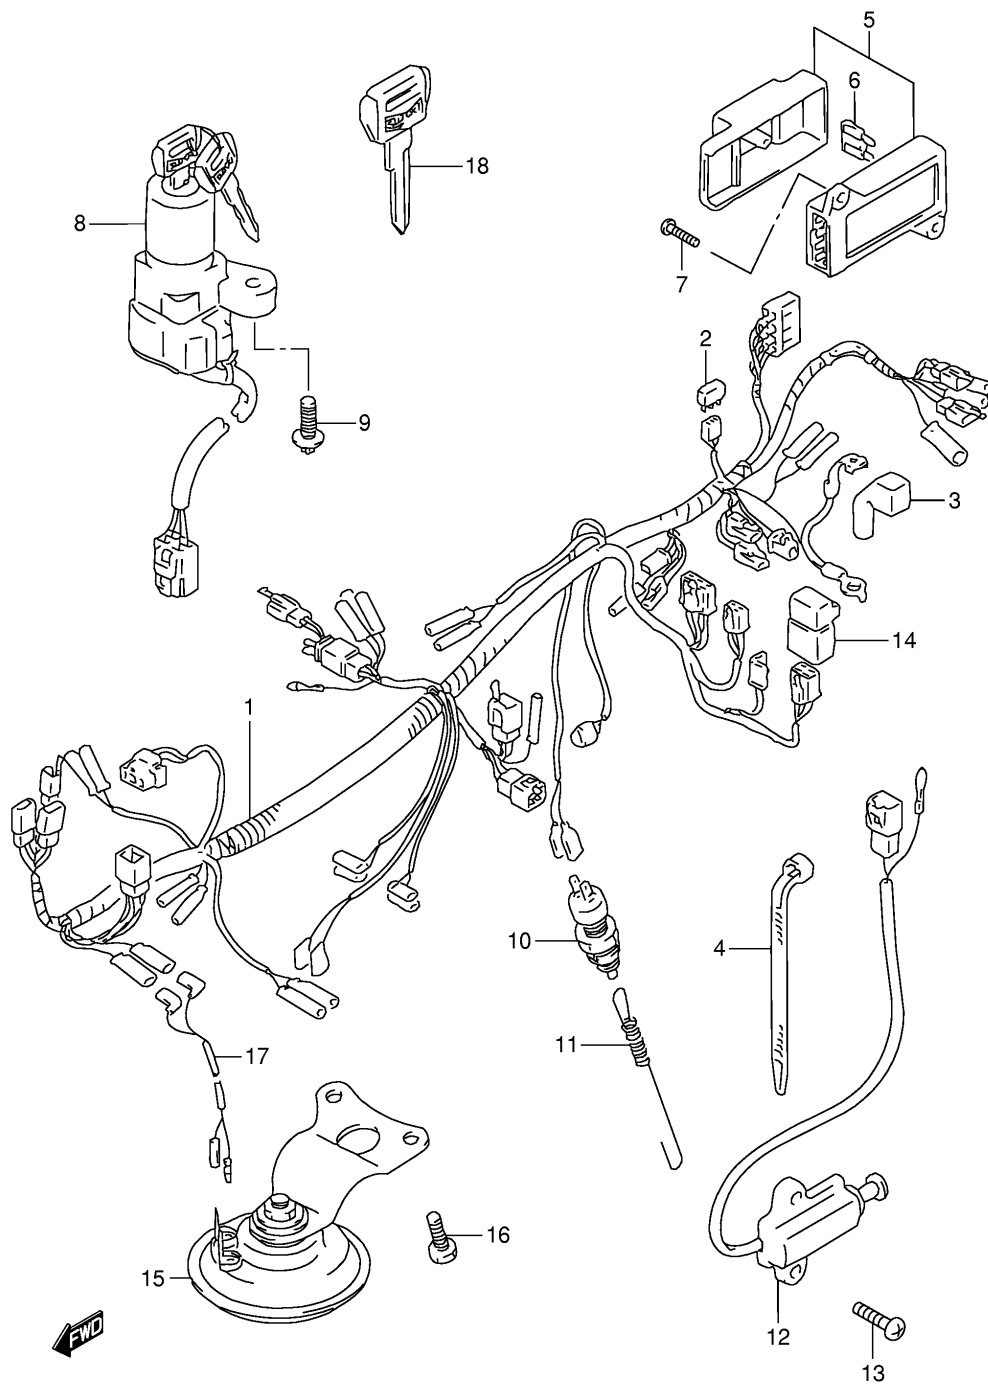 


Ref No	Part No	Description
1	36610-19C60	Harness, Wiring
2	36611-38A00	• Diode
3	33624-43500	• Cap, Battery Plus Terminal
4	09407-11401	Clamp (l:95)
4	09407-14403	Clamp (l:125)
4	09407-18403	Clamp (l:165)
5	36740-19C00	Fuse Box Assy
6	09481-10101	• Fuse (10a)
6	09481-25101	• Fuse (25a)
7	02142-06203	Screw
8	37100-26D02	Lock Assy, Steering
9	09139-06026	Bolt
10	37740-24A00	Switch Assy, Stop Lamp
11	09443-06005	Spring
12	37840-44X50	Switch Assy, Side Stand
13	01550-06203	Bolt
14	38740-24X50	Relay Assy, Side Stand
15	38500-19C01	Horn Assy
16	01550-06163	Bolt
17	36852-19D00	Wire, Clutch Switch
18	37146-26D10	Key, Blank

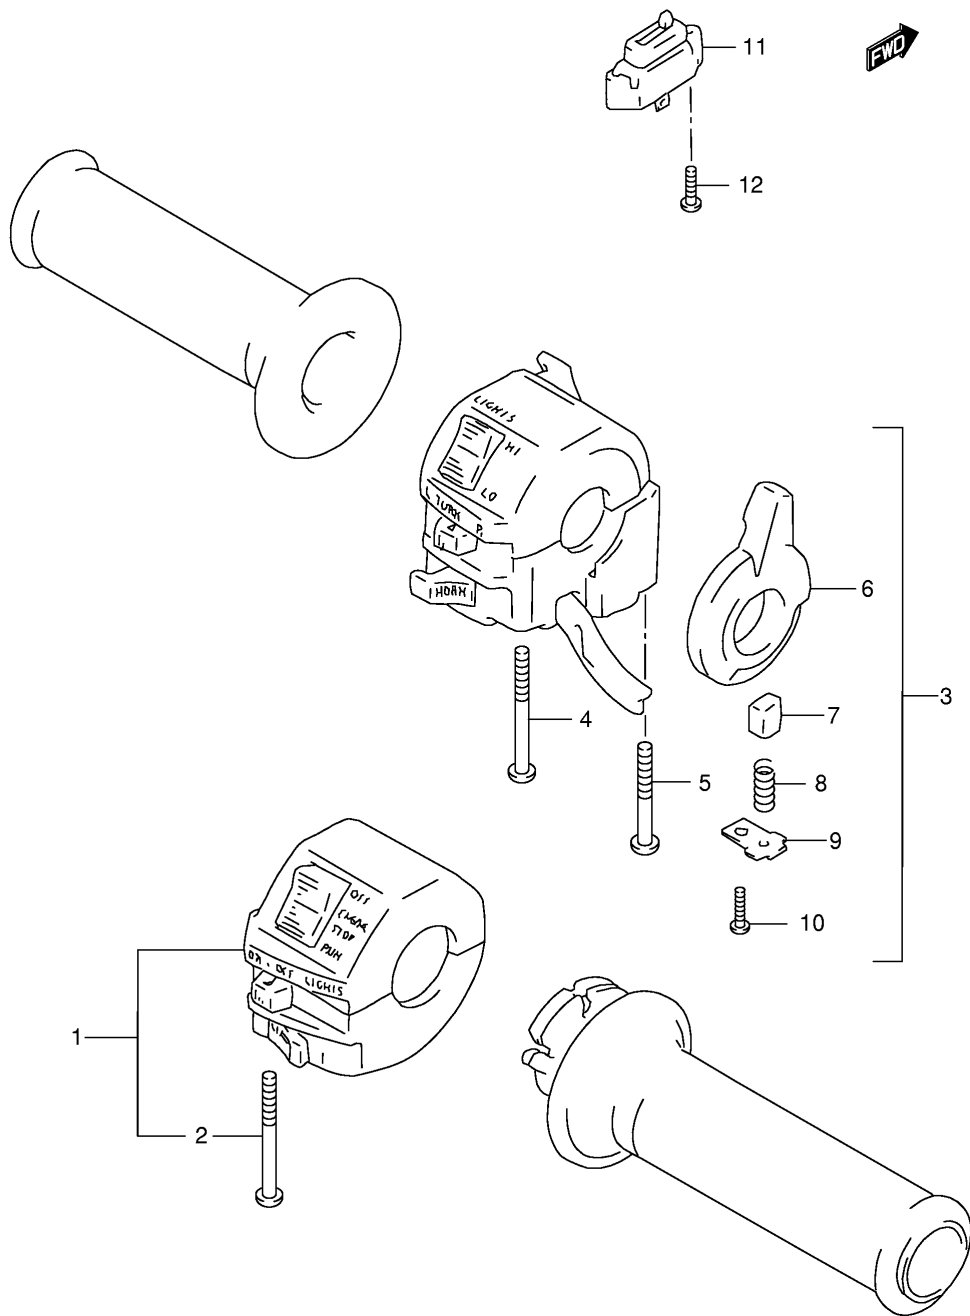 


Ref No	Part No	Description
1	37200-17C04	Sdwitch Assy, Handle,rh
2	02112-05455	• . Screw
3	37400-32B01	Switch Assy, Handle,lh
4	02112-05455	• . Screw
5	02112-05403	• . Screw
6	37481-30B01	• . Lever, Choke
7	37482-30B00	• . Piece, Slide
8	37483-30B00	• . Spring
9	37486-30B00	• . Plate
10	03511-04123	• . Screw
11	37560-38A00	Switch Assy, Clutch
12	37564-26E00	Screw

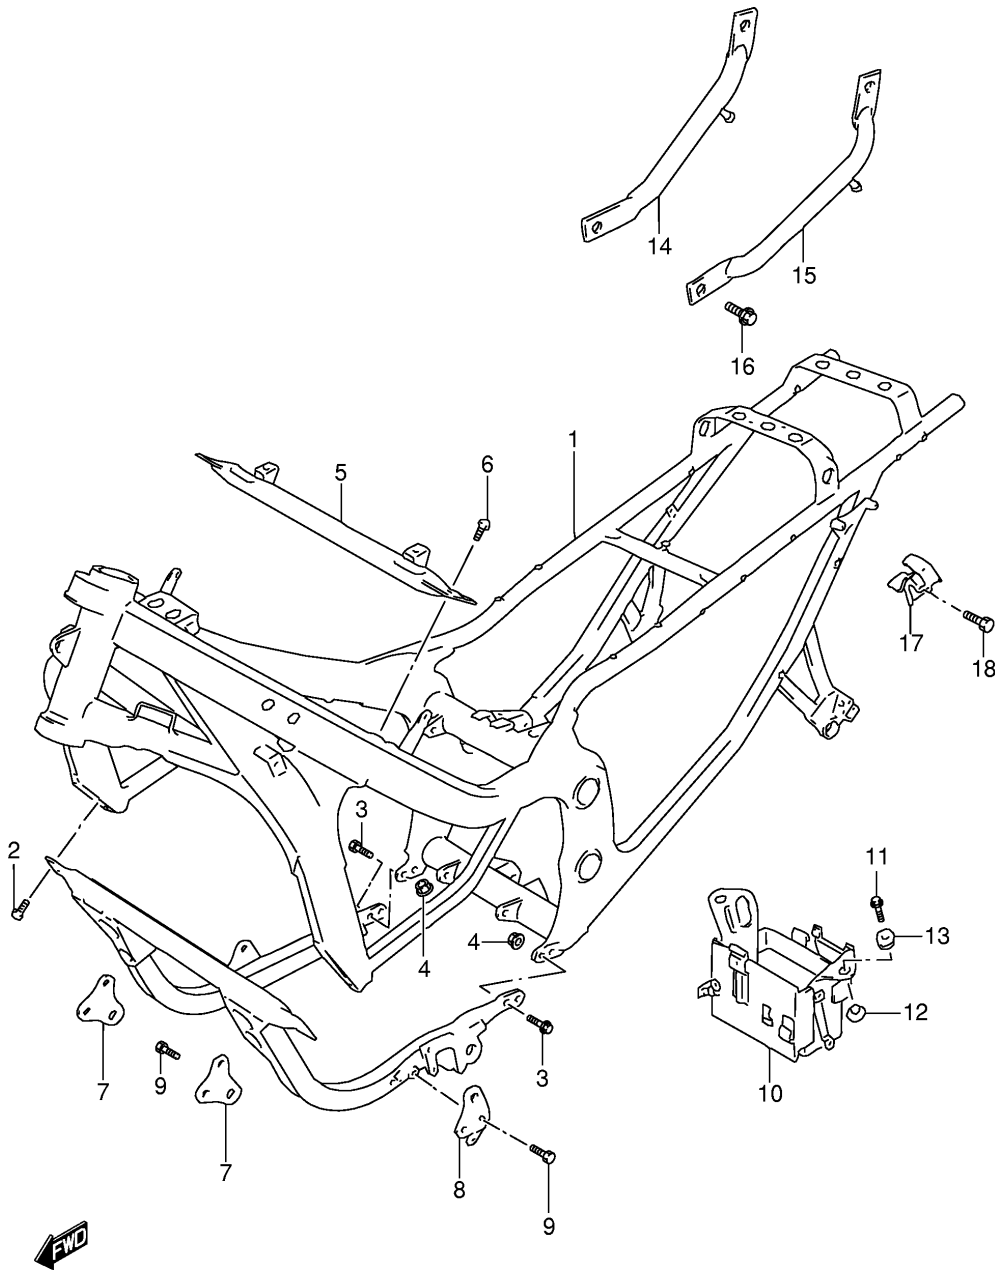 


Ref No	Part No	Description
1	41101-19840-019	Frame Set (black)
2	01570-08253	• Bolt, Upper
3	01550-08303	• Bolt, Lower
4	08319-31085	• Nut
5	41750-34C00	Tube, Frame Brige
6	09103-08266	Bolt
7	41911-19C00-019	Plate, No.1 (black)
8	41940-20C00-019	Plate, No.2 (black)
9	01570-08163	Bolt
10	41540-19C02	Holder, Battery
11	01570-06303	Bolt
12	09169-06065	Spacer
13	09320-08021	Cushion
14	43970-19C02	Grip, Rear Rh
15	43980-19C02	Grip, Rear Lh
16	01550-08163	Bolt
17	95720-20C00	Holder, Helmet
18	01570-06163	Bolt

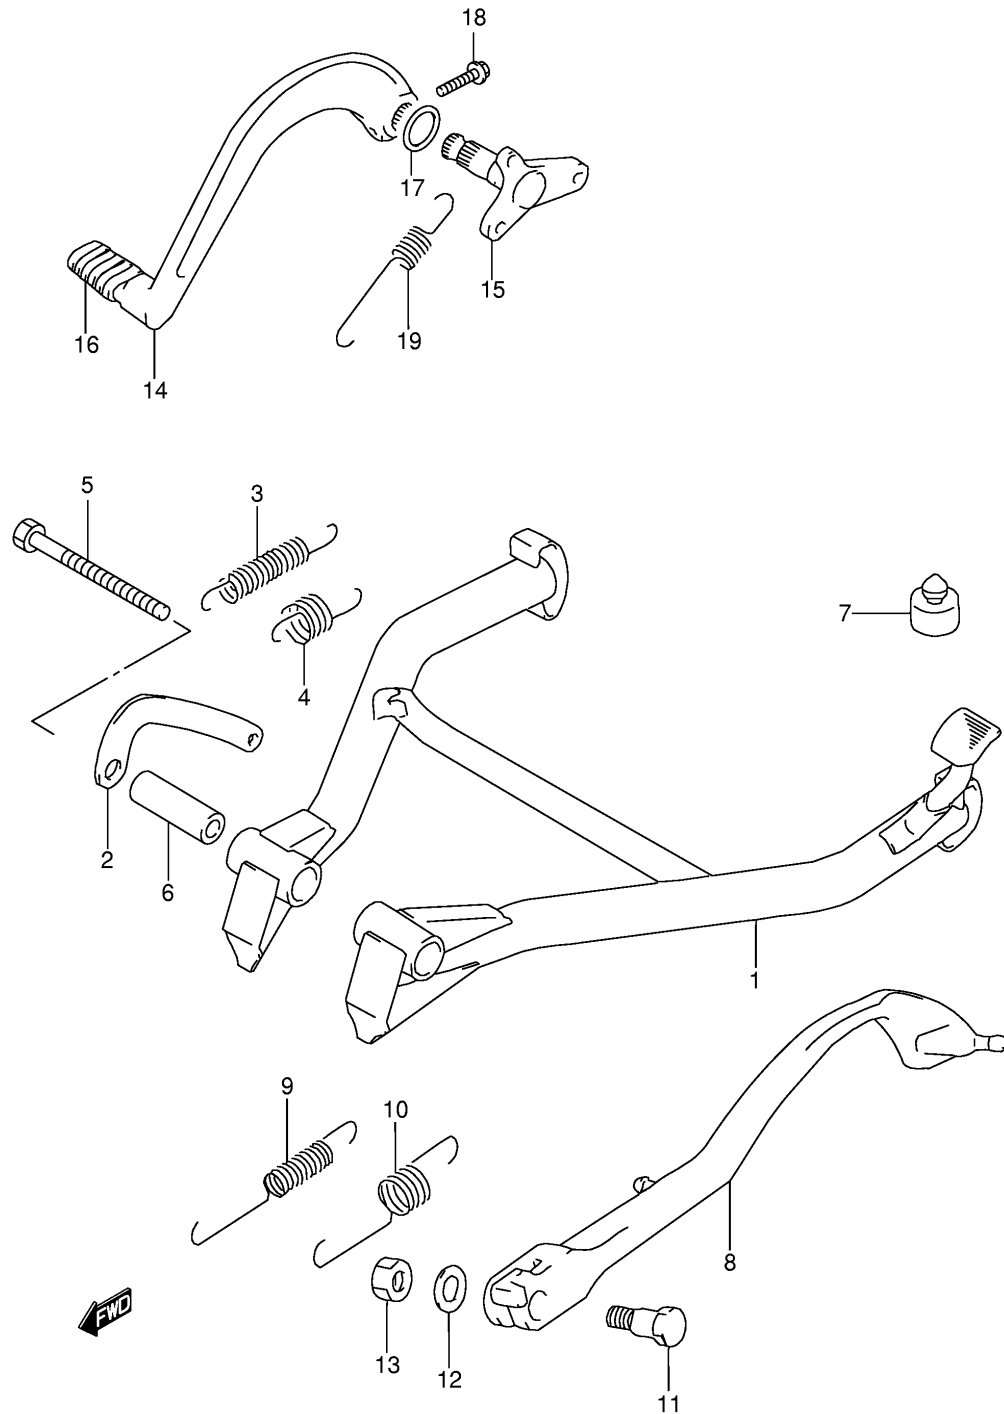 


Ref No	Part No	Description
1	42100-19843	Stand Set, Center
2	42251-19C00	• . Hook, Spring
3	09443-15039	• . Spring, Inner
4	09443-22009	• . Spring, Outer
5	01580-10603	• . Bolt
6	09180-10040	• . Spacer
7	09321-10017	• . Cushion
8	42310-19C01	Stand, Prop
9	09443-12036	Spring, Inner
10	09443-19010	Spring, Outer
11	09111-10036	Bolt
12	08221-12224	Shim
13	09159-10097	Nut
14	43110-19C02	Pedal, Brake
15	43120-19C00	Arm, Brake Pedal Rod
16	43151-04701	Rubber
17	43212-04A00	Washer, Brake Boss
18	01547-06253	Bolt
19	09443-13028	Spring

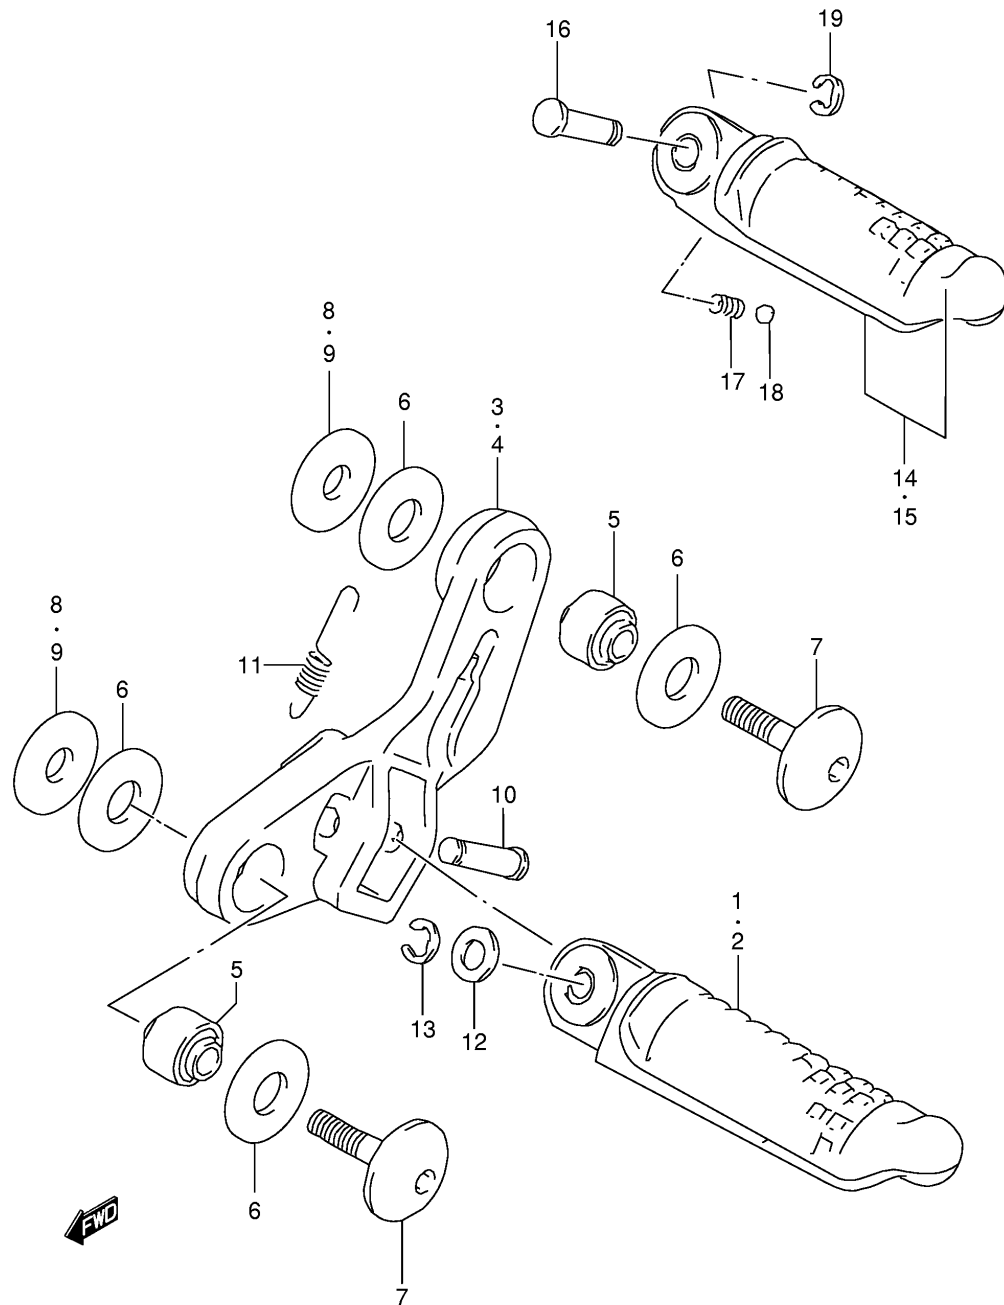 

Ref No	Part No	Description
1	43510-19C01	Footrest Assy, Front Rh
2	43520-19C01	Footrest Assy, Front Lh
3	43531-19C00	Holder, Front Footrest Rh
4	43541-19C00	Holder, Front Footrest Lh
5	09319-08033	Bush, Holder
6	09161-12006	Washer, Holder
7	09106-08137	Bolt
8	09160-08110	Washer
9	09160-08503	Washer
10	09208-08010	Pin
11	09443-08049	Spring
12	08322-01083	Washer
13	08332-11063	E Ring
14	43610-20C00	Bar, Pillion Footrest Rh
15	43710-20C00	Bar, Pillion Footrest Lh
16	09208-08011	Pin
17	09440-05005	Spring
18	06111-07004	Ball
19	08332-11063	E Ring

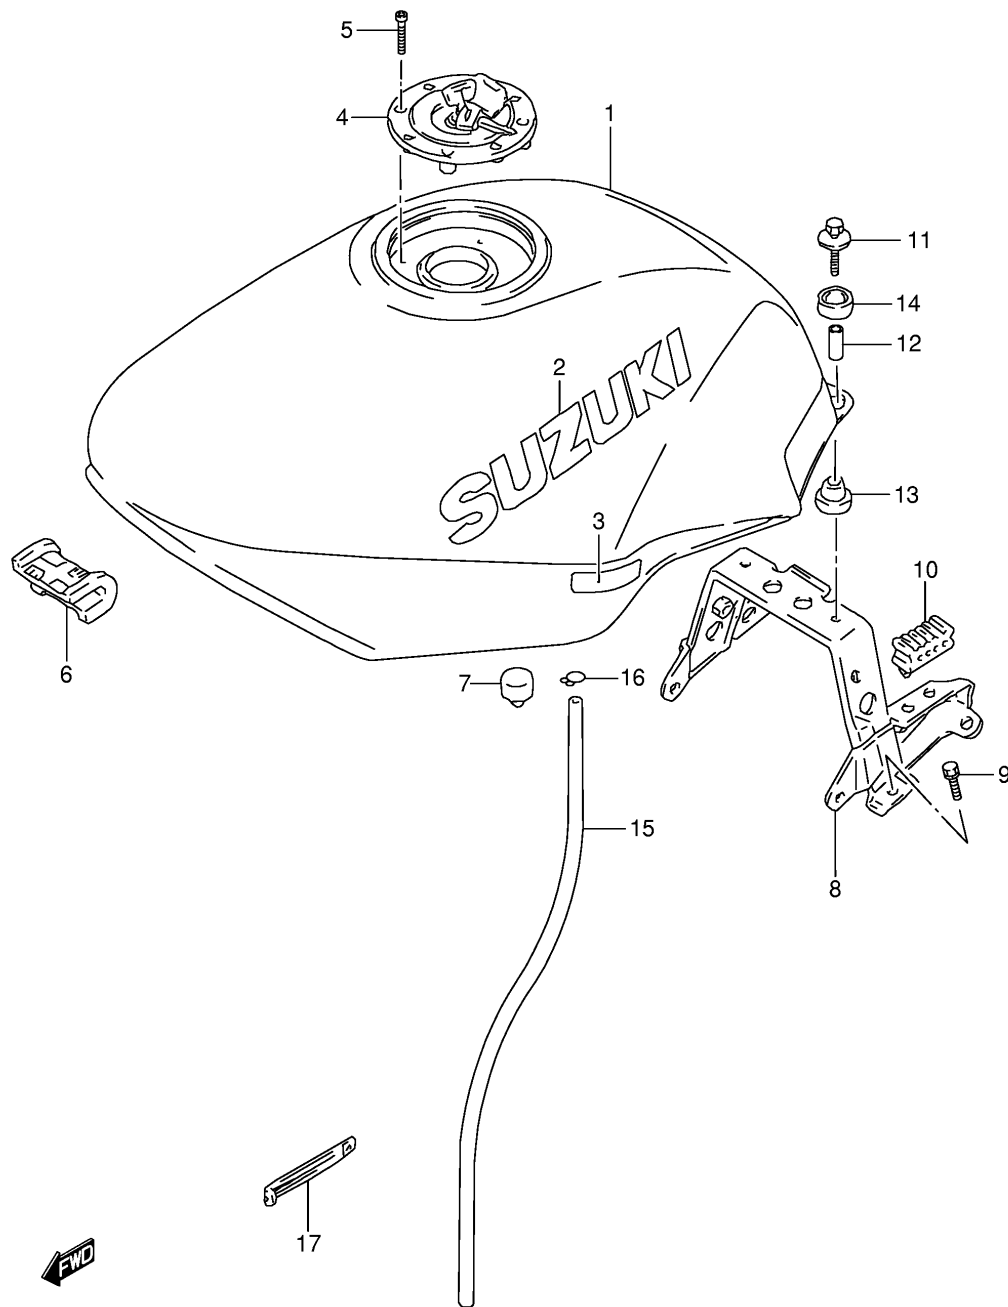 


Ref No	Part No	Description
1	44100-43C30-33J	Tank Assy, Fuel (black)
1	44100-43C30-1LF	Tank Assy, Fuel (blue)
1	44100-43C30-Z66	Tank Assy, Fuel (yellow)
1	44100-43C40-33J	Tank Assy, Fuel (black)
1	44100-43C40-1LF	Tank Assy, Fuel (blue)
1	44100-43C40-Z66	Tank Assy, Fuel (yellow)
2	68111-12C00-17U	• . Emblem (gray)
2	68111-12C00-20G	• . Emblem (charcoal)
3	32851-10D00	Protector, Fuel Tank
4	44201-01832	Cap Set, Fuel Tank
5	09106-05017	Bolt
6	44511-19C00	Cushion, Fuel Tank Front
7	09321-10011	Cushion, Fuel Tank Side
8	44550-19C00	Bracket, Rear
9	09137-06017	Bolt
10	45149-31300	Cushion, Fuel Tank Side Rear
11	09116-06172	Bolt, Rear
12	09180-06271	Spacer
13	09320-10038	Cushion, Rear
14	09320-14017	Cushion, Rear
15	44423-19C00	Hose, Water Drain
16	09401-08401	Clip
17	09404-08420	Clamp

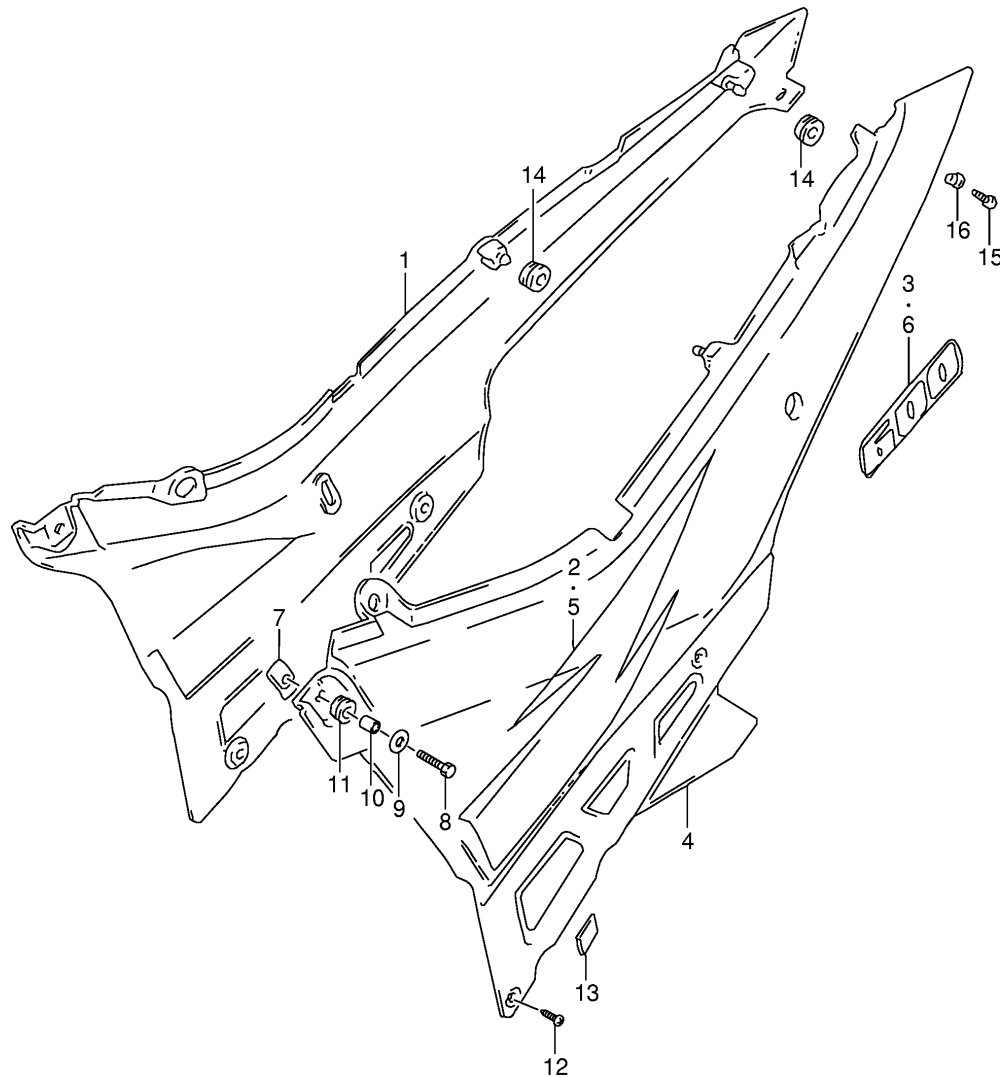 


Ref No	Part No	Description
1	47110-43CB0-3DC	Cover, Frame Rh
1	47110-43CB0-G3K	Cover, Frame Rh
1	47110-43CB0-G3L	Cover, Frame Rh
2	68135-43C20-G3U	. Tape, Rh
2	68135-43C20-G3V	. Tape, Rh
2	68135-43C20-G3W	. Tape, Rh
3	68131-43C30-G3Y	. Emblem
3	68131-43C30-G3Z	. Emblem
3	68131-43C30-G4A	. Emblem
4	47210-43CB0-3DC	Cover, Frame Lh
4	47210-43CB0-G3K	Cover, Frame Lh
4	47210-43CB0-G3L	Cover, Frame Lh
5	68145-43C20-G3U	. Tape, Lh
5	68145-43C20-G3V	. Tape, Lh
5	68145-43C20-G3W	. Tape, Lh
6	68131-43C30-G3Y	. Emblem
6	68131-43C30-G3Z	. Emblem
6	68131-43C30-G4A	. Emblem
7	47153-19C01	Plate
8	09139-06068	Screw, Front
9	09160-06109	Washer
10	09180-06263	Spacer
11	09320-09016	Cushion
12	09139-05038	Screw, Lower
13	47161-19C00	Cushion
14	09320-08018	Cushion, Rear
15	02142-05123	Screw, Rear
16	09169-05009	Washer




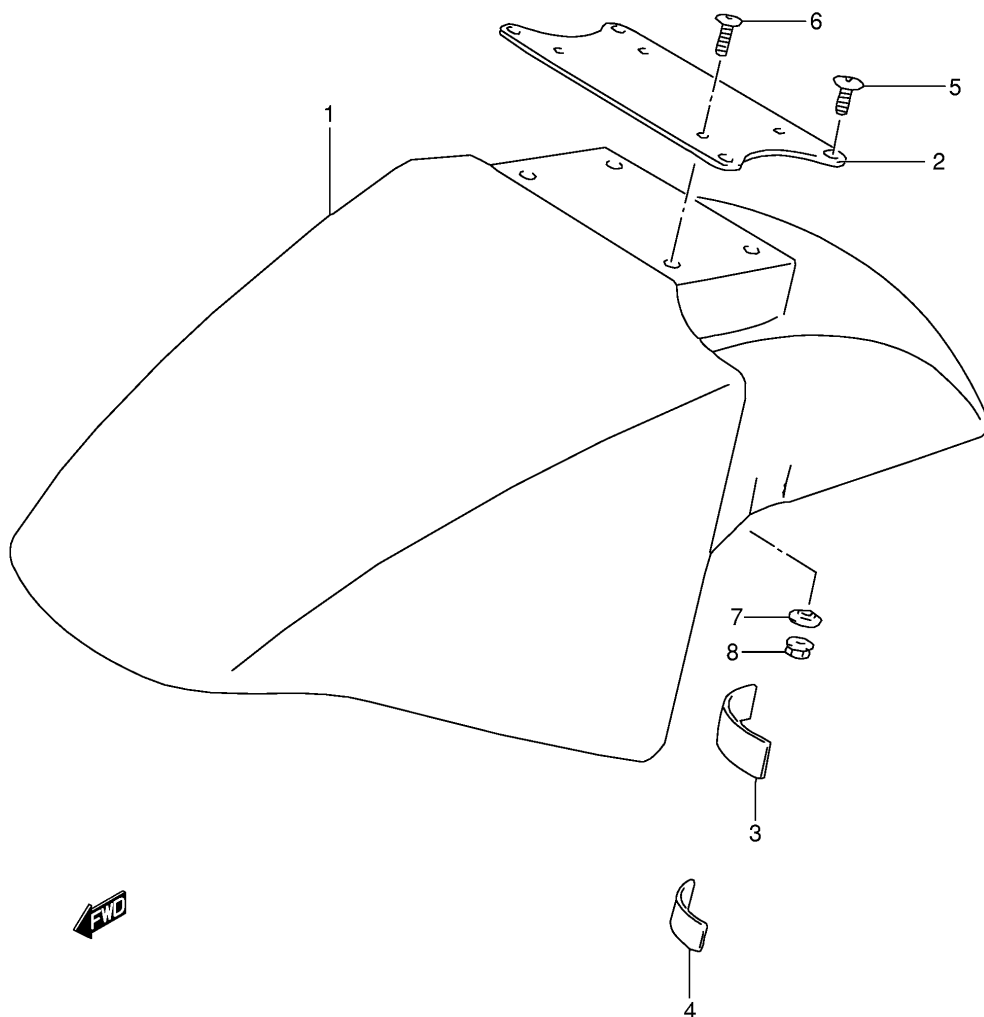 


Ref No	Part No	Description
1	53111-20C00-33J	Fender, Front (black)
1	53111-32B11-1LF	Fender, Front (blue)
1	53111-32B11-Z66	Fender, Front (yellow)
1	53111-20C00-33J	Fender, Front (black)
1	53111-19C21-1LF	Fender, Front (blue)
1	53111-19C21-Z66	Fender, Front (yellow)
2	53114-01D00	Brace, Front Fender
3	53145-19C00	Cushion, Fender
4	53146-20C00	Cushion, Fender Under
5	09139-06027	Screw, Fender
6	09139-05022	Screw, Brace
7	09169-05010	Washer
8	09159-05026	Nut

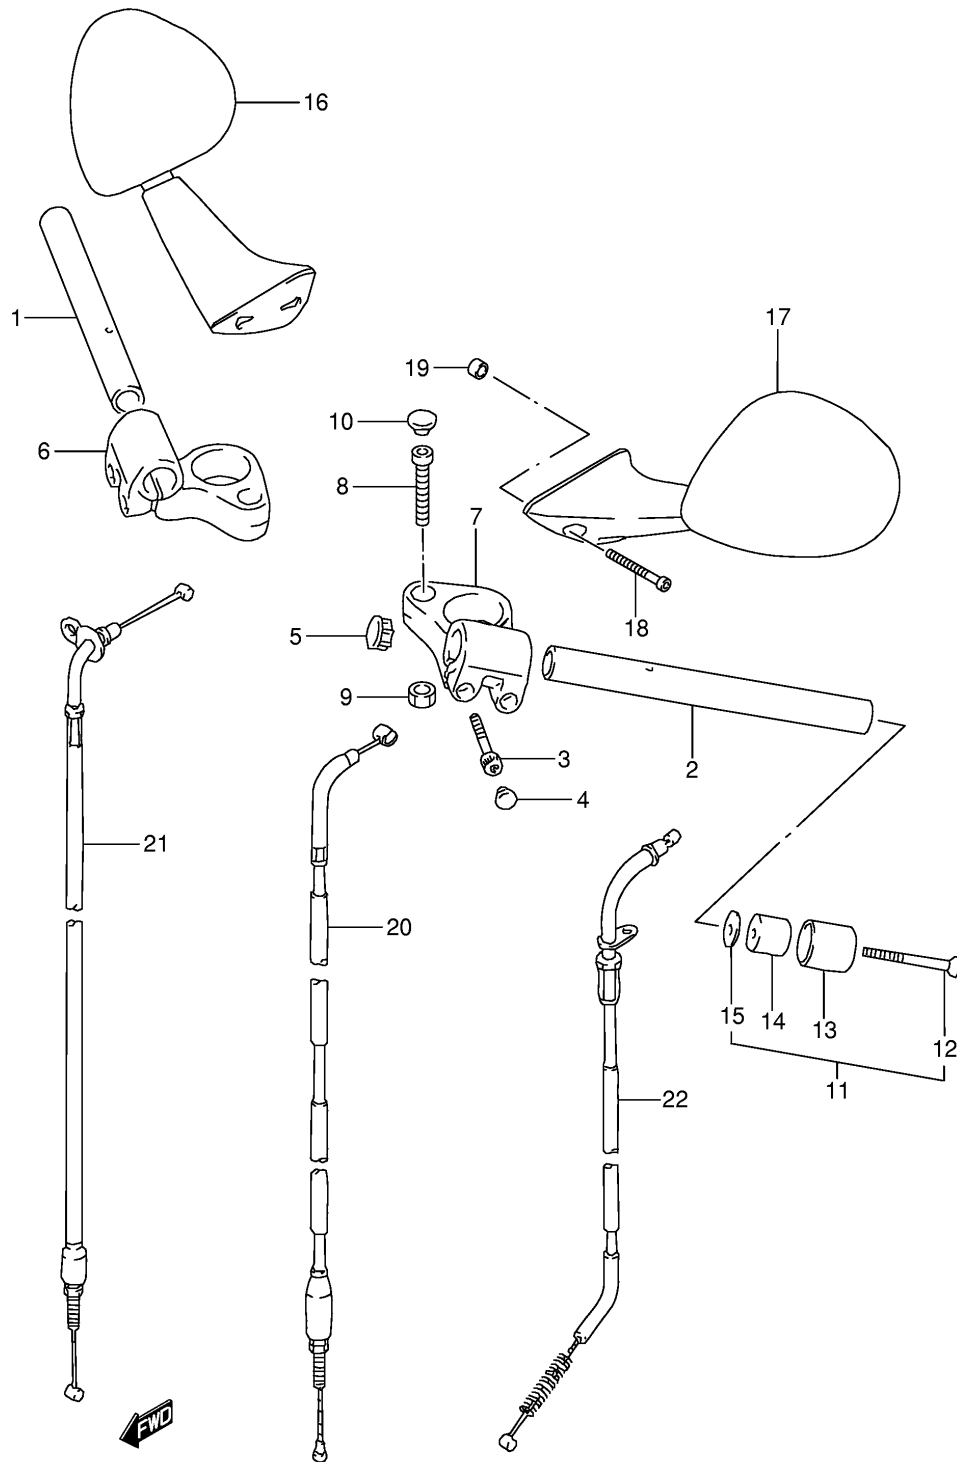 


Ref No	Part No	Description
1	56110-19C00	Handlebar, Rh
2	56150-19C00	Handlebar, Lh
3	07130-06303	Bolt
4	09250-05009	Cap
5	57215-33400	Cap
6	56211-19C11	Holder, Rh
7	56221-19C11	Holder, Lh
8	09106-10022	Bolt
9	08319-31107	Nut
10	09250-08010	Cap
11	56200-11831	Balancer Set, Handlebar
12	02122-06453	• . Screw
13	56274-31300	• . Cap
14	56271-49400	• . Balancer
15	56275-34401	• . Spacer
16	56500-19C10	Mirror Assy, Rear View,rh
16	56500-19C00	Mirror Assy, Rear View,rh
17	56600-19C10	Mirror Assy, Rear View,lh
17	56600-19C00	Mirror Assy, Rear View,lh
18	07130-06403	Bolt
19	09180-06255	Spacer
20	58200-19C00	Cable Assy, Clutch
21	58300-19C10	Cable Assy, Throttle
22	58410-19C11	Cable, Starter

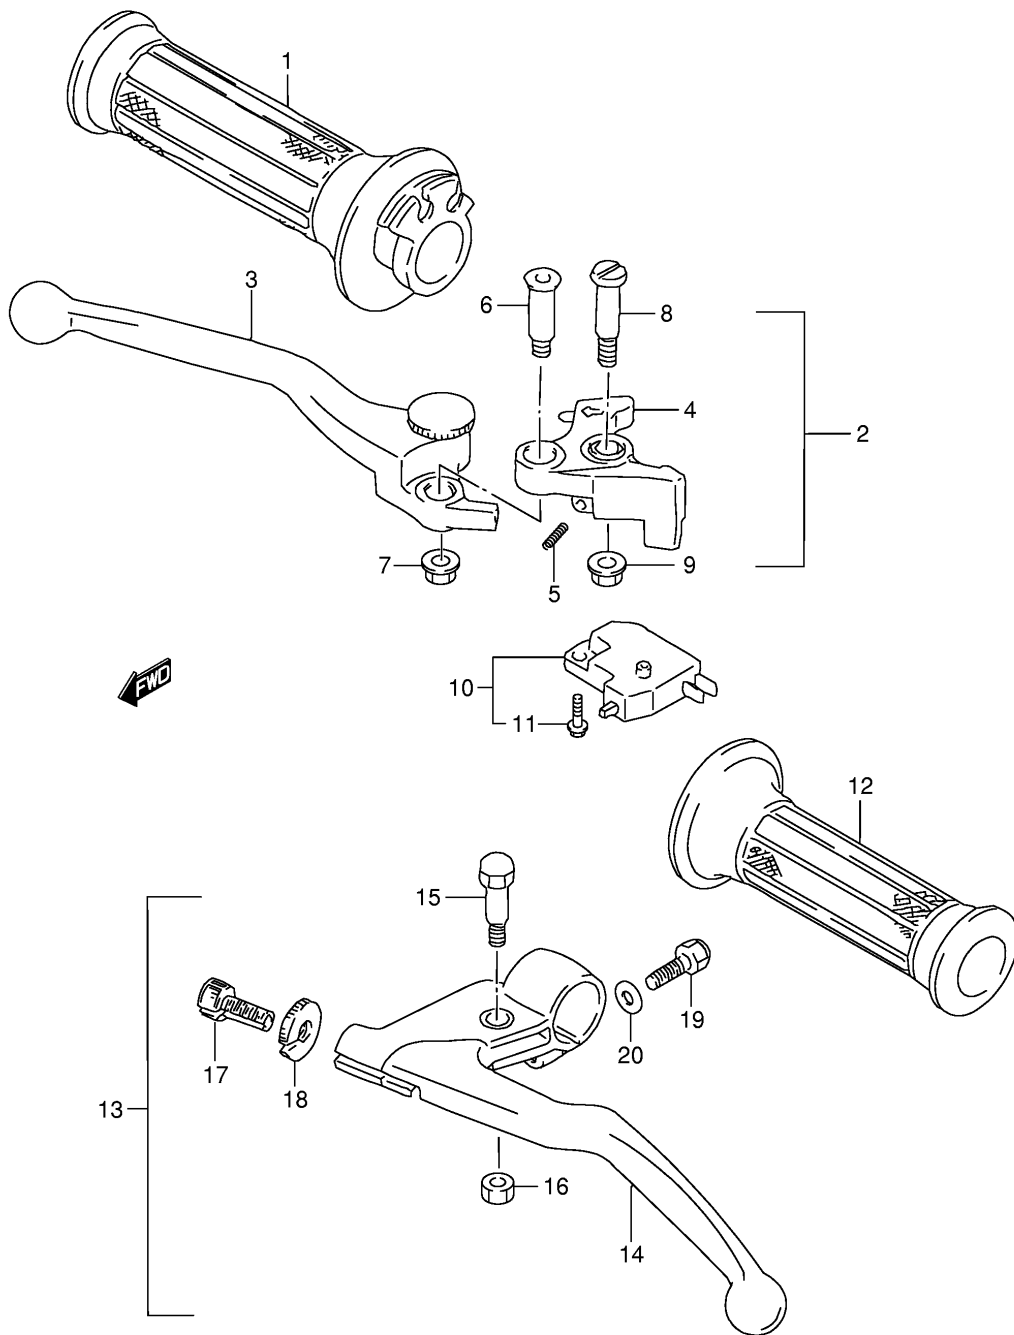 


Ref No	Part No	Description
1	57110-49501	Grip, Throttle
2	57300-32C01	Lever Assy, Brake
3	57420-32C00	• . Lever, Adjust
4	57430-32C00	• . Knocker
5	57438-32C00	•• . Spring
6	57437-32C01	• . Bolt
7	08319-31065	• . Nut
8	57431-17C00	• . Bolt, Lever
9	08316-10063	• . Nut
10	57460-17C00	Switch Assy, Stop
11	57465-17C00	• . Screw
12	57211-49500	Grip, Lh
13	57500-19C11	Lever Assy, Clutch
14	57620-19C01	• . Lever
15	57431-49110	• . Bolt
16	08319-21065	• . Nut
17	57441-44400	• . Adjuster
18	57442-44400	• . Nut
19	01204-06204	• . Bolt
20	08322-01063	• . Washer

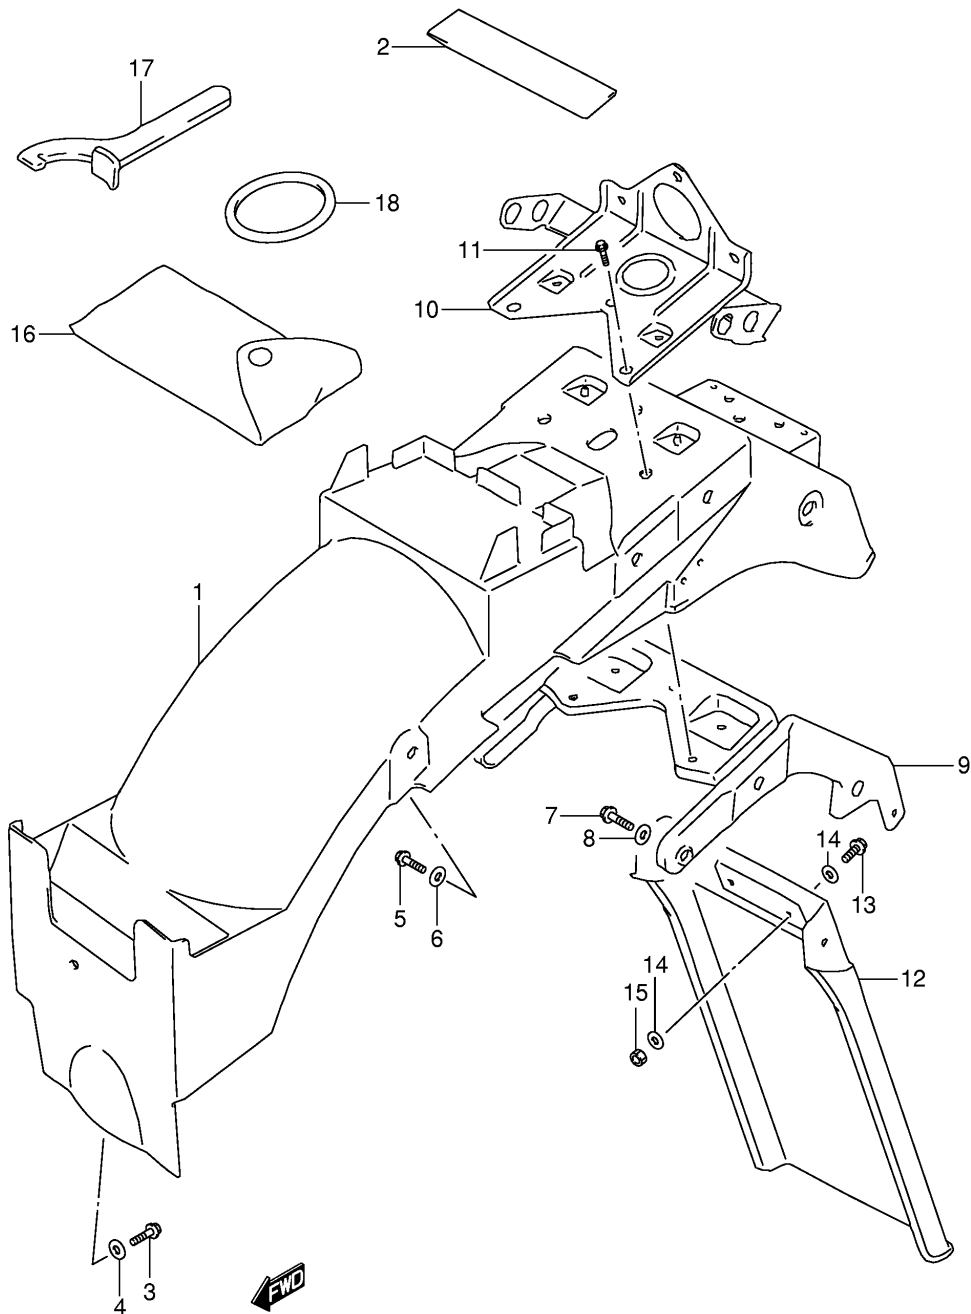 


Ref No	Part No	Description
1	63111-19C00	Body, Rear Fender
1	63111-19C20	Body, Rear Fender
2	63191-19C00	Cushion, Fender
3	01550-06103	Bolt, Front
4	09169-06037	Washer
5	01550-06203	Bolt, Side
6	09169-06037	Washer
7	01550-06203	Bolt, Rear
8	09169-06042	Washer
9	63120-19C00	Reinforcement, Rear Fender
10	63460-19C01	Bracket, Lap
11	01550-06123	Bolt
12	63311-19C00	Extension, Rear Fender
13	02142-06163	Screw
14	09160-06019	Washer
15	08319-21066	Nut
16	09800-21036	Tool Assy
17	09822-00005	Clamp, Wrench
18	09280-61002	Band

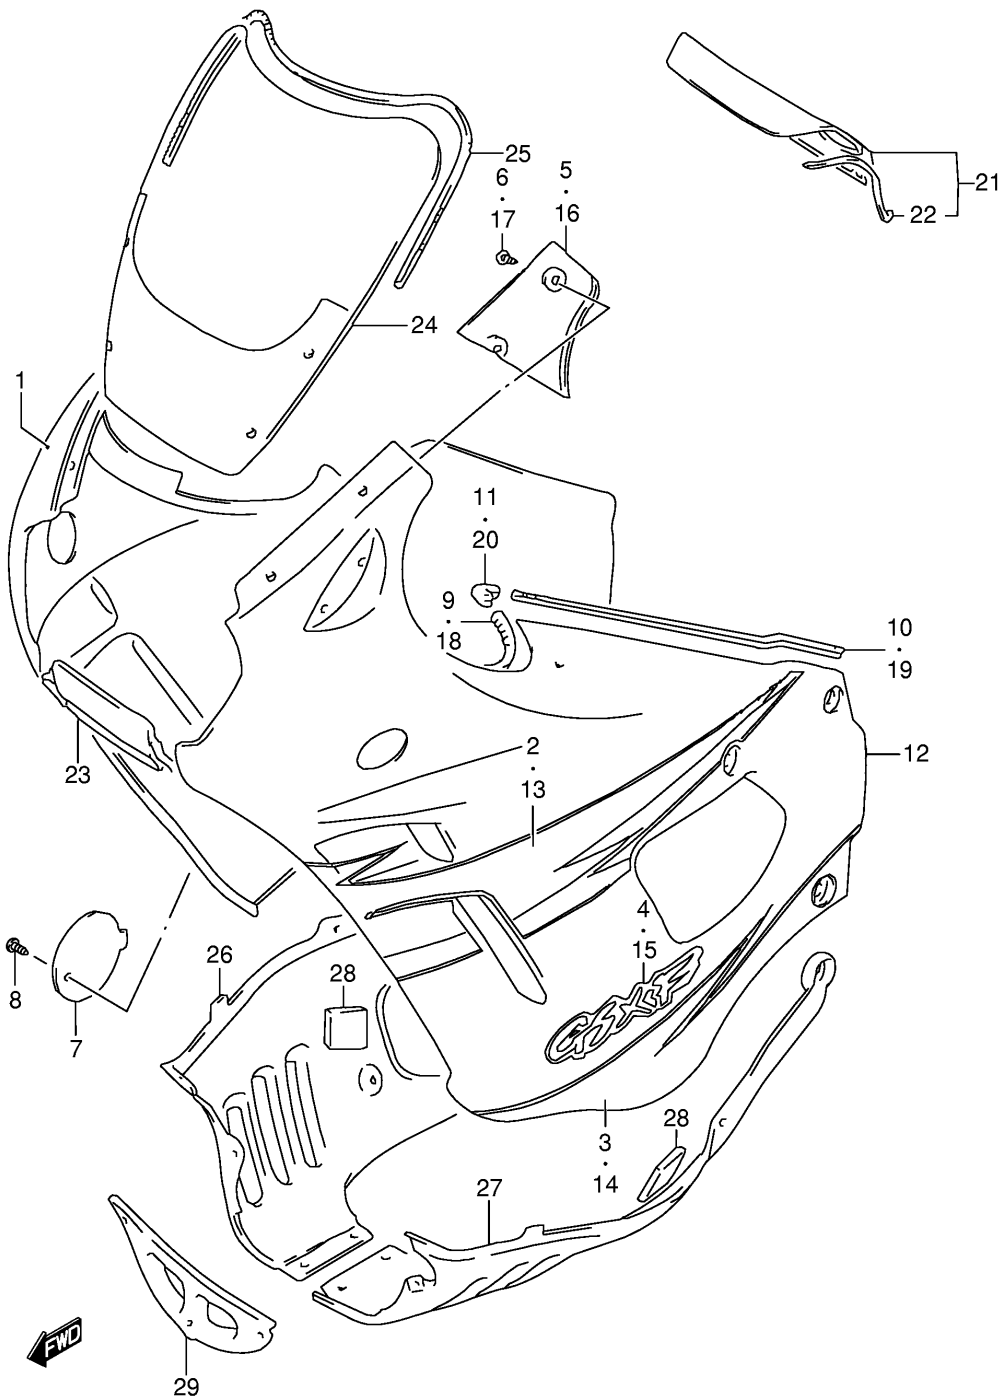 


Ref No	Part No	Description
1	94401-43CL0-33J	Cover, Cowl Rh (black)
1	94401-43CL0-1LF	Cover, Cowl Rh (blue)
1	94401-43CL0-Z66	Cover, Cowl Rh (yellow)
2	68685-21C10-G4B	. Tape, Side Upper Rh
2	68685-21C10-G4C	. Tape, Side Upper Rh
2	68685-21C10-G4D	. Tape, Side Upper Rh
3	68686-21C20-G3U	. Tape, Side Lower Rh
3	68686-21C20-G3V	. Tape, Side Lower Rh
3	68686-21C20-G3W	. Tape, Side Lower Rh
4	68681-21C50-G3Y	. Emblem, Side
4	68681-21C50-G3Z	. Emblem, Side
4	68681-21C50-G4A	. Emblem, Side
5	94433-19C01-33J	. Cover, Meter Rh (black)
5	94433-19C01-1LF	. Cover, Meter Rh (blue)
5	94433-19C01-Z66	. Cover, Meter Rh (yellow)
6	03541-04103	. Screw
7	94435-19C01-33J	. Lid, Oil (black)
7	94435-19C01-1LF	. Lid, Oil (blue)
7	94435-19C01-Z66	. Lid, Oil (yellow)
8	09139-06030	. Screw
9	94631-49310	. Molding, Front
10	94635-19C00	. Molding, Rear
11	94438-19C00	. Joint
12	94402-43CL0-33J	Cover, Cowl Lh (black)
12	94402-43CL0-1LF	Cover, Cowl Lh (blue)
12	94402-43CL0-Z66	Cover, Cowl Lh (yellow)
13	68695-21C10-G4B	. Tape, Side Upper Lh
13	68695-21C10-G4C	. Tape, Side Upper Lh
13	68695-21C10-G4D	. Tape, Side Upper Lh
14	68696-21C20-G3U	. Tape, Side Lower Lh
14	68696-21C20-G3V	. Tape, Side Lower Lh
14	68696-21C20-G3W	. Tape, Side Lower Lh
15	68681-21C50-G3Y	. Emblem, Side
15	68681-21C50-G3Z	. Emblem, Side
15	68681-21C50-G4A	. Emblem, Side
16	94443-19C01-33J	. Cover, Meter Lh (black)
16	94443-19C01-1LF	. Cover, Meter Lh (blue)
16	94443-19C01-Z66	. Cover, Meter Lh (yellow)
17	03541-04103	. Screw
18	94631-49310	. Molding, Front
19	94635-19C00	. Molding, Rear
20	94438-19C00	. Joint
21	94420-19C02	Cover, Meter
22	94635-19C00	. Molding
23	94421-19C01-33J	Panel, Center (black)
23	94421-19C01-1LF	Panel, Center (blue)
23	94421-19C01-Z66	Panel, Center (yellow)
24	94610-19C60	Window, Cowling
25	94631-18D01	Molding
26	94471-19C00-Y0R	Cover, Under Rh (red)
26	94471-19C00-17U	Cover, Under Rh (gray)
26	94471-19C00-35W	Cover, Under Rh (charcoal)
27	94481-19C00-Y0R	Cover, Under Lh (red)
27	94481-19C00-17U	Cover, Under Lh (gray)

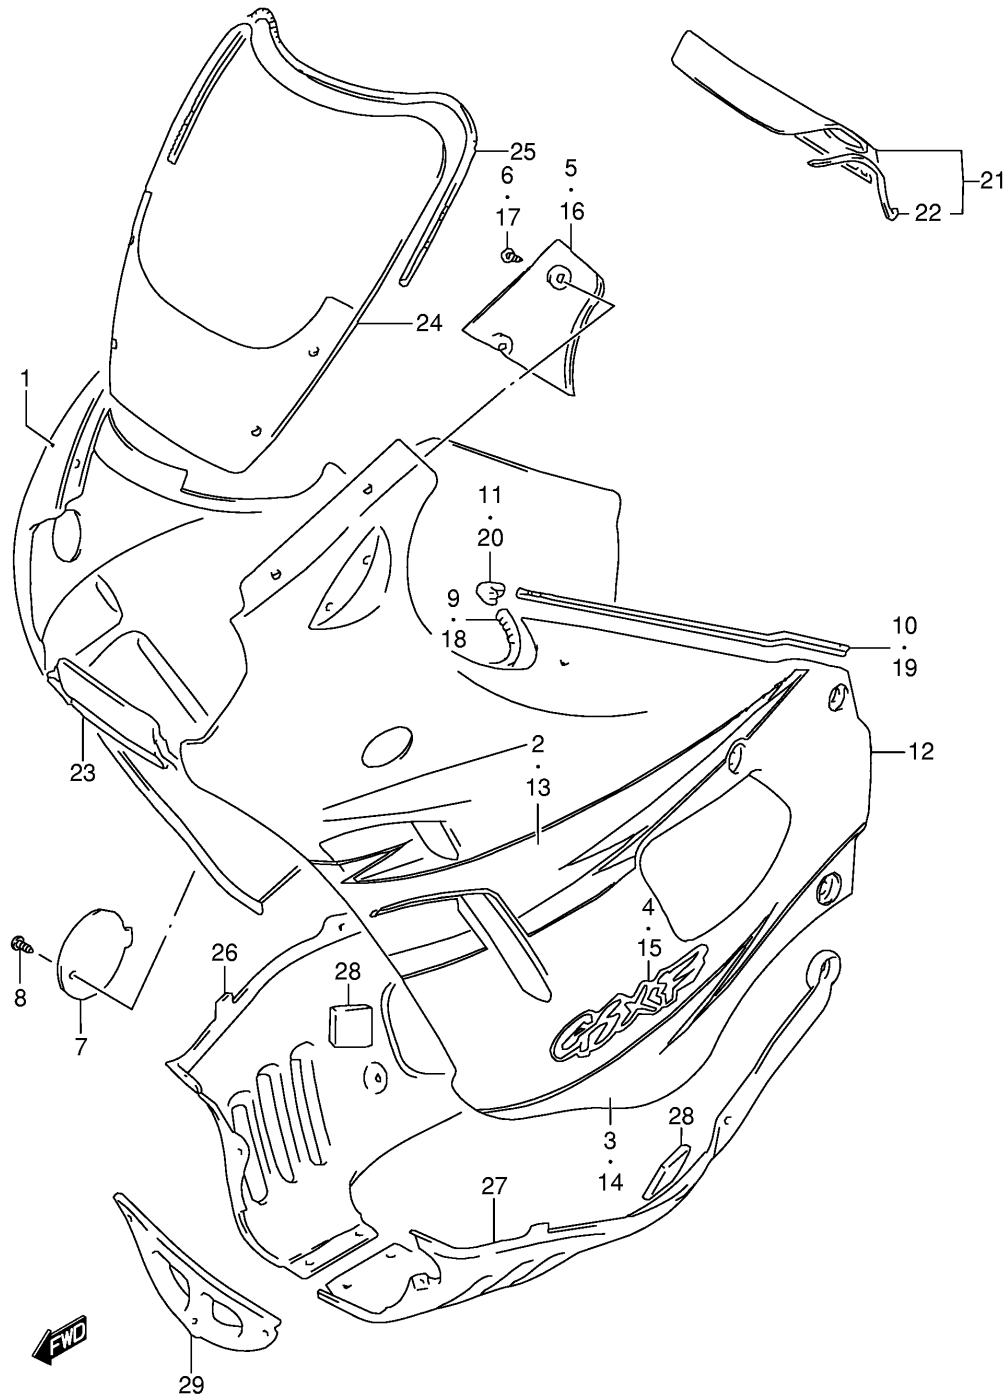 

Ref No	Part No	Description
27	94481-19C00-35W	Cover, Under Lh (charcoal)
28	94475-48B10	Cushion
29	94475-19C01	Cover, Under Front

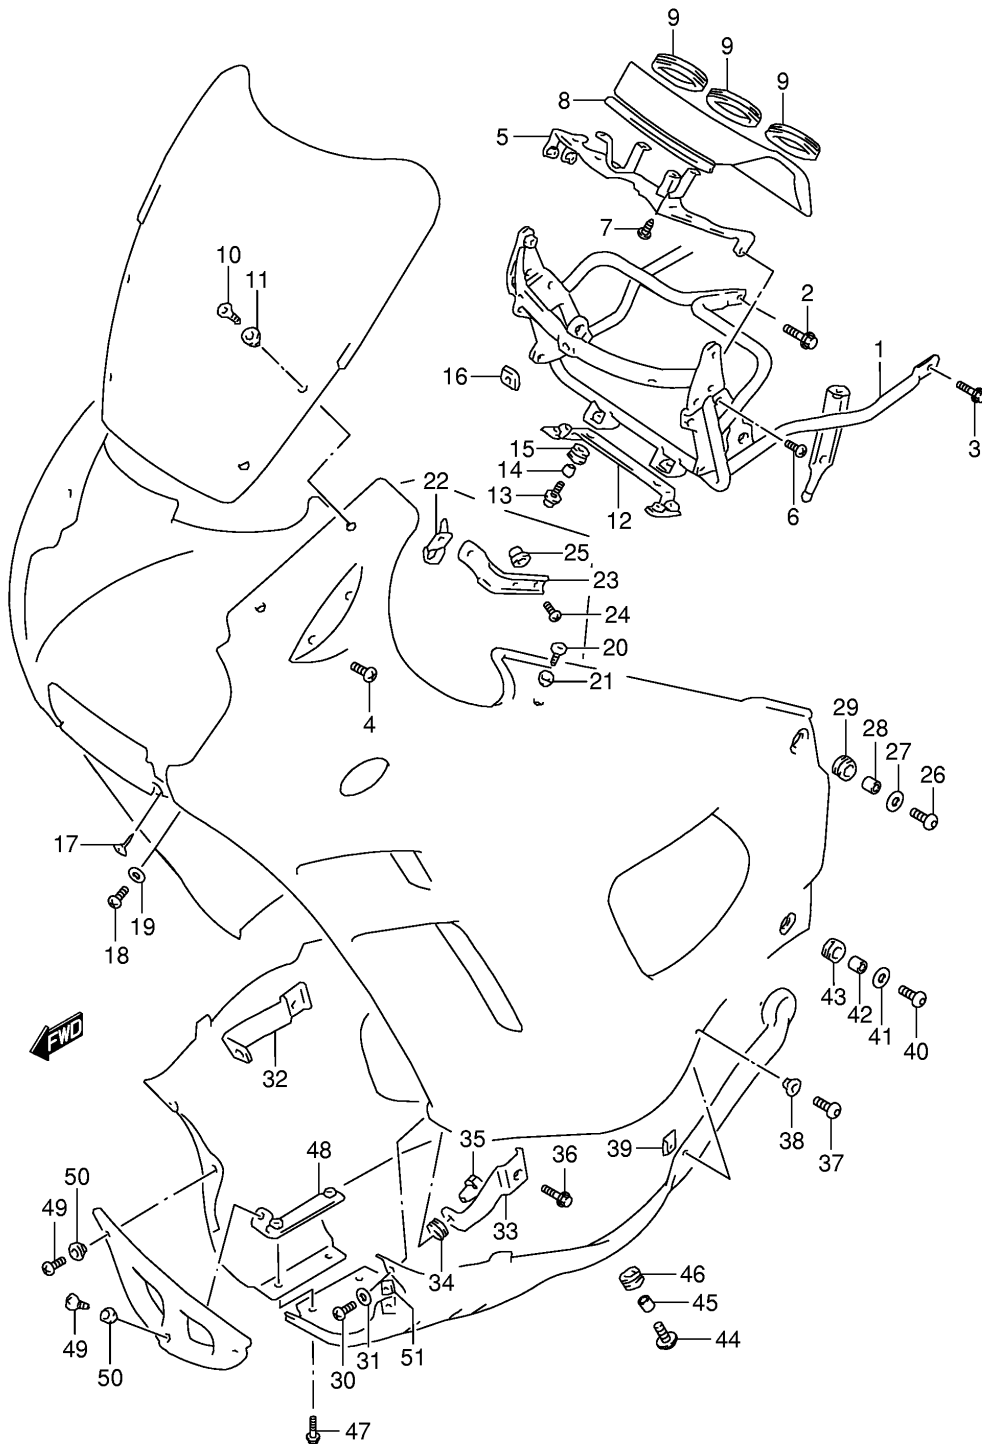 


Ref No	Part No	Description
1	94510-20C20	Brace, Cowling
2	09103-08266	Bolt (8x20)
3	01550-06123	Bolt
4	02142-06123	Screw
5	94520-19C00	Plate, Meter
6	02142-06123	Screw
7	03541-05083	Screw
8	94527-19C00	Molding, Meter
9	94426-19C00	Cushion, Speedometer
10	09139-05022	Screw (5x16)
11	09161-05002	Washer
12	94460-19C00	Plate, Center
13	09136-06081	Screw (6x20)
14	09180-06317	Spacer
15	09320-10015	Cushion
16	94638-19C00	Cushion, Screen
17	02142-05123	Screw
18	09139-06029	Screw, Front (6x25)
19	09160-06006	Washer
20	09139-06030	Screw, Upper (6x16)
21	09161-06021	Washer
22	94560-19C00	Bracket, Upper Rh
23	94570-19C00	Bracket, Upper Lh
24	02142-06253	Screw
25	94573-19C00	Nut
26	09139-06029	Screw (6x25)
27	09160-06006	Washer
28	09180-06263	Spacer
29	09320-09016	Cushion
30	09139-06042	Screw, Front (6x30)
31	09160-06006	Washer
32	94531-19C00	Bracket, Under,rh
33	94532-19C00	Bracket, Under,lh
34	09320-10015	Cushion
35	94590-19C00	Nut
36	01580-06163	Bolt
37	09139-05025	Screw (5x14)
38	09161-05017	Washer
39	94484-32B00	Nut
40	09139-06029	Screw, Rear (6x25)
41	09160-06006	Washer
42	09180-06097	Spacer
43	09320-09016	Cushion
44	09136-06081	Screw, Lower (6x20)
45	09180-06263	Spacer
46	09320-09016	Cushion, Lower
47	02142-05163	Screw, Lower
48	94580-19C00	Bracket, Lower
49	02142-05163	Screw
50	09161-05017	Washer
51	94484-32B00	Nut

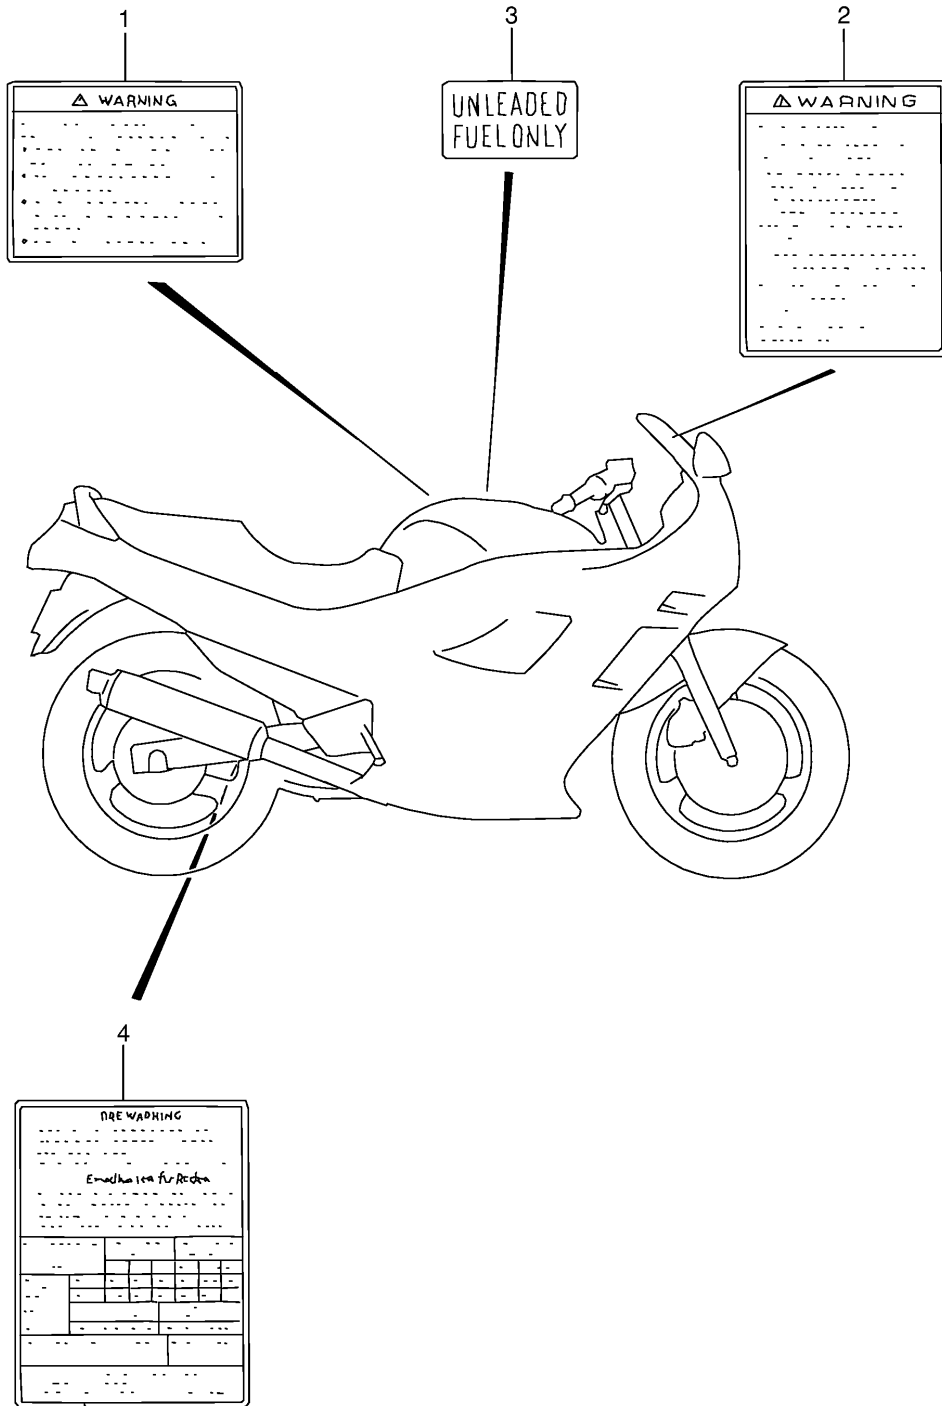 

WARNING LABEL


Ref No	Part No	Description
1	68319-33E00	Label, Warning Safety (english)
1	68319-33E20	Label, Warning Safety (german)
1	68319-33E30	Label, Warning Safety (french)
1	68319-33E40	Label, Warning Safety (italian)
1	68319-33E50	Label, Warning Safety (spanish)
1	68319-33E70	Label, Warning Safety (dutch)
1	68319-33E90	Label, Warning Safety (swedish)
1	68319-33EA0	Label, Warning Safety (finnish)
1	68319-33EB0	Label, Warning Safety (norwegian)
1	68319-33EC0	Label, Warning Safety (danish)
2	68612-48B00	Label, Warning Screen (english)
2	68612-48B10	Label, Warning Screen (french)
2	68612-48B20	Label, Warning Screen (german)
3	68623-17D00	Label, Fuel
4	68332-19C01	Label, Tire Air
4	68332-19C21	Label, Tire Air
5	99011-20C58-042	Manual, Owner's


Ref No	Part No	Description
1	45100-19C00-58R	Seat Set (black)
2	45149-43500	• . Cushion
3	09321-10012	• . Cushion, Center
4	45300-19C00-58R	Seat Set, Pillion (black)
5	45149-31300	Cushion, Seat Front
6	45700-19840	Lock Set, Seat
7	01570-06163	Bolt
8	45220-19C00	Bracket, Seat Support Rear
9	02122-06303	Screw
10	09407-18403	Clamp

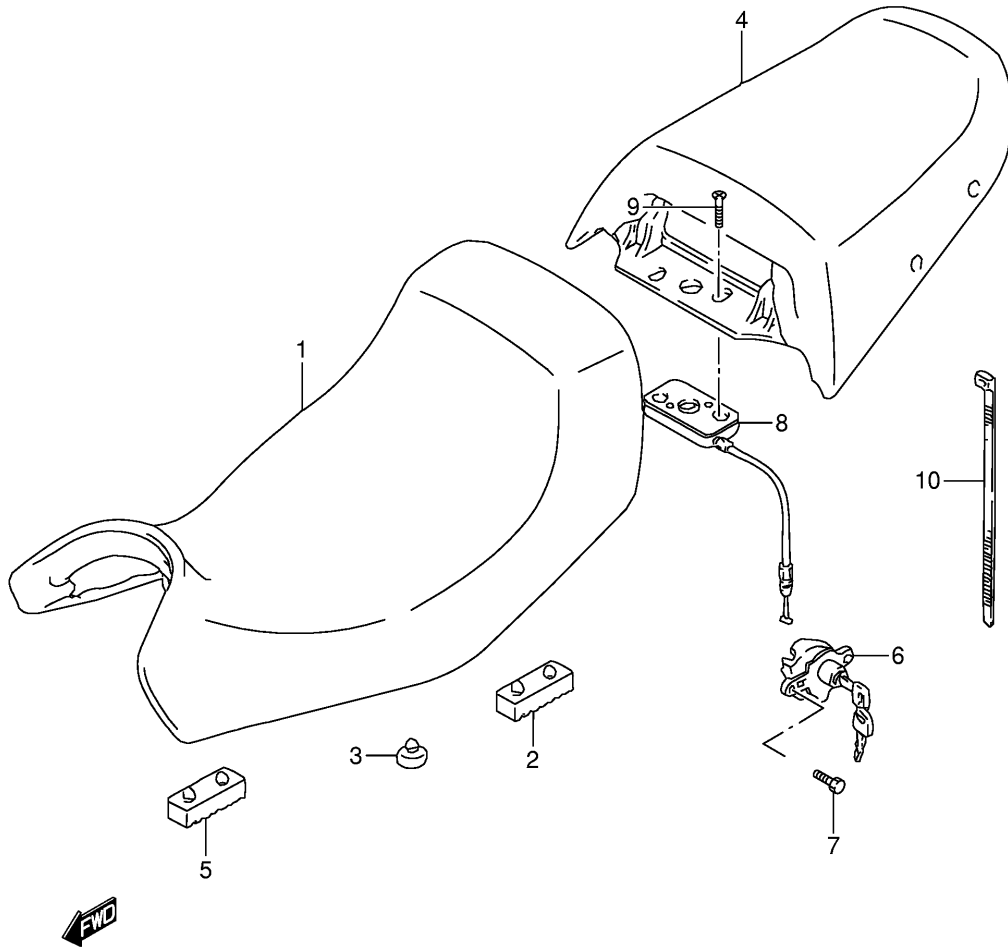 


Ref No Part No Description

1	46211-19C00-019	Handle,pillion Rider (black)
2	07130-08353	Bolt, Front
3	09180-08205	Spacer, Front (8.5x14x21.50)
4	07130-08553	Bolt, Rear
5	09180-08206	Spacer, Rear (8.5x14x28)
6	09250-06004	Cap
7	46220-19C01	Bracket, Pillion Handle Rh
8	46230-19C01	Bracket, Pillion Handle Lh
9	01550-08553	Bolt
10	08316-20083	Nut
11	02142-06203	Screw

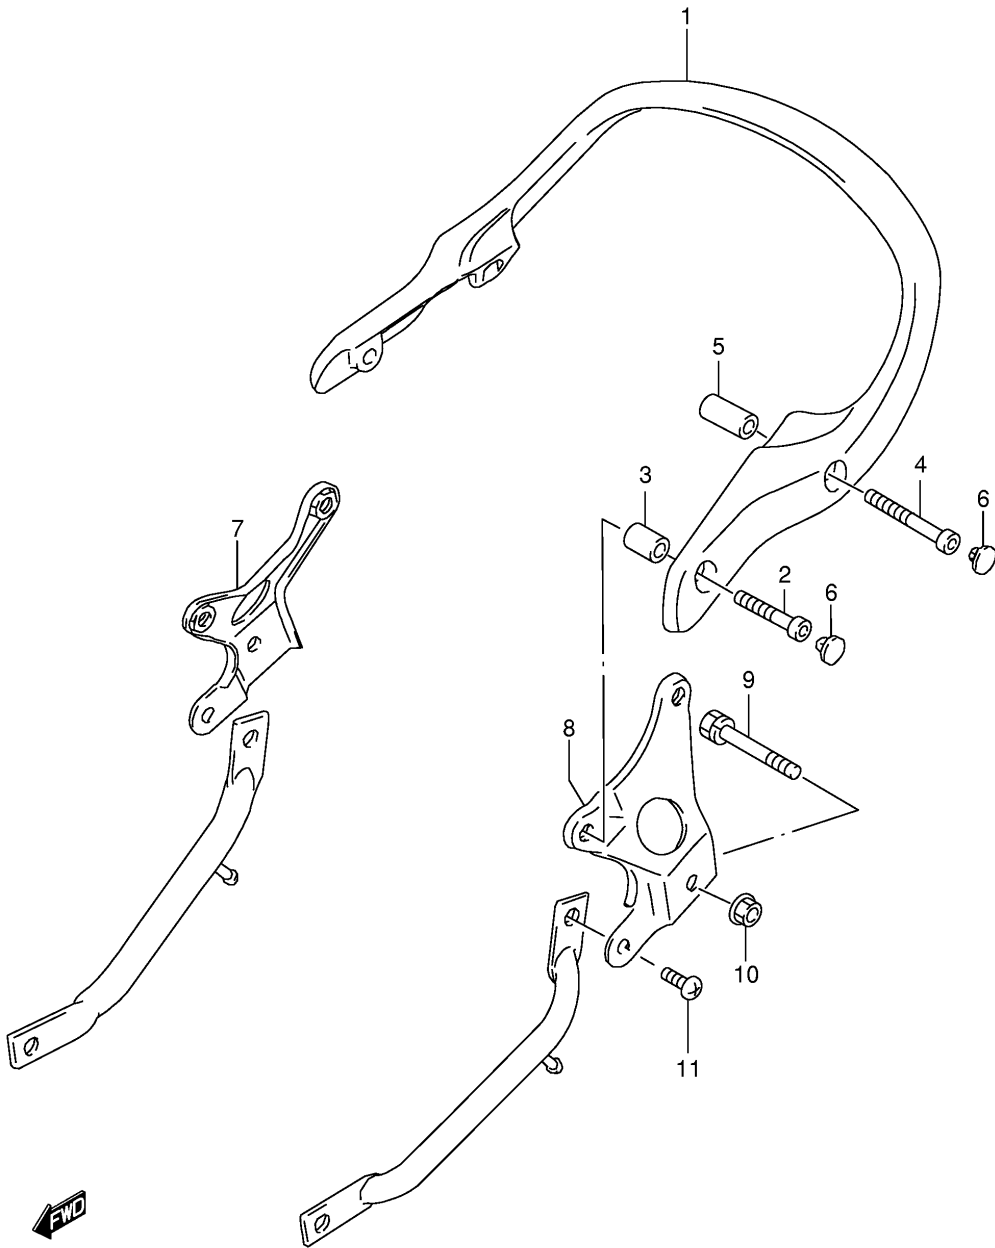 


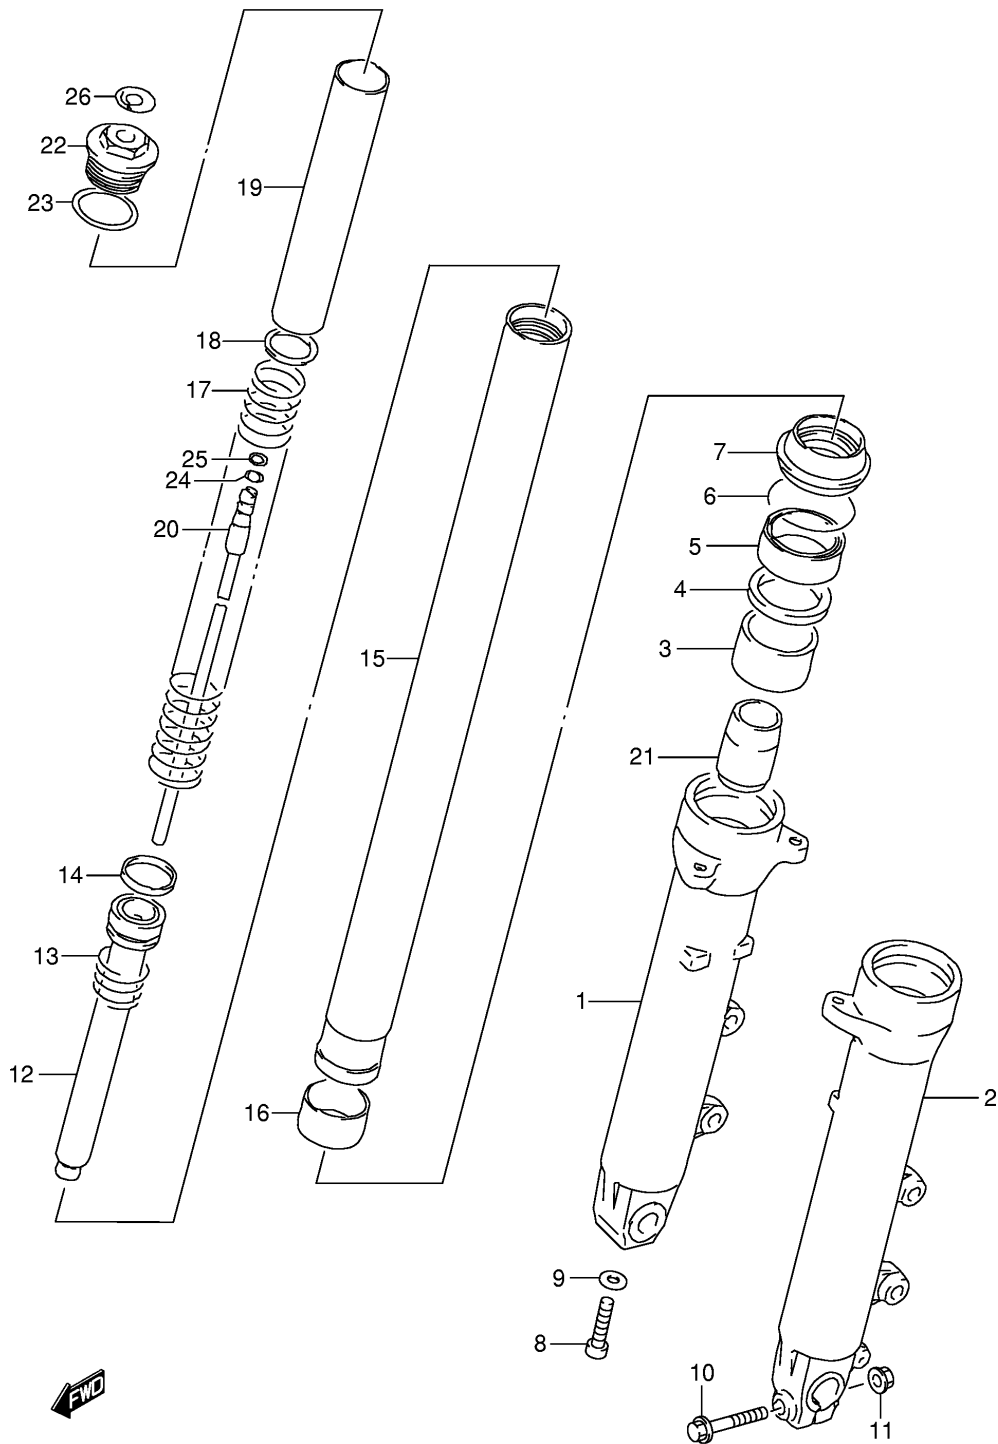 

Ref No	Part No	Description	
	51103-19C30-13L	Damper Assy, Front Fork Rh	(silver)
	51104-19C30-13L	Damper Assy, Front Fork Lh	(silver)
1	51130-20C20-13L	. Tube, Outer Rh (silver)	
2	51140-20C20-13L	. Tube, Outer Lh (silver)	
3	51152-48B31	. Bush, Guide	
4	51168-38B00	. Spacer, Seal	
5	51153-08D00	. Oil Seal	
6	51556-38B00	. Ring, Stopper	
7	51571-47D50	. Dust Seal	
8	51147-48130	. Bolt, Lower	
9	51148-36011	. Gasket	
10	01550-08507	. Bolt, Lh	
11	08316-10087	. Nut, Lh	
12	51194-19C30	. Pipe, Seat Under	
13	51177-48B31	. Spring, Rebound	
14	51196-19C00	. Ring, Piston	
15	51110-19C30	. Tube, Inner	
16	51121-48B31	. Bush, Slide	
17	51171-19C30	. Spring, Front	
18	51192-19C00	. Joint, Spring	
19	51176-34C00	. Spacer, Spring	
20	52111-20C20	. Rod, Inner	
21	51195-48B31	. Piece, Oil Lock	
22	51351-20C20	. Bolt, Fork	
23	51117-12C00	. O Ring	
24	09280-06005	. O Ring	
25	51169-20C20	. Ring, Stopper	
26	51149-20C20	. Label	

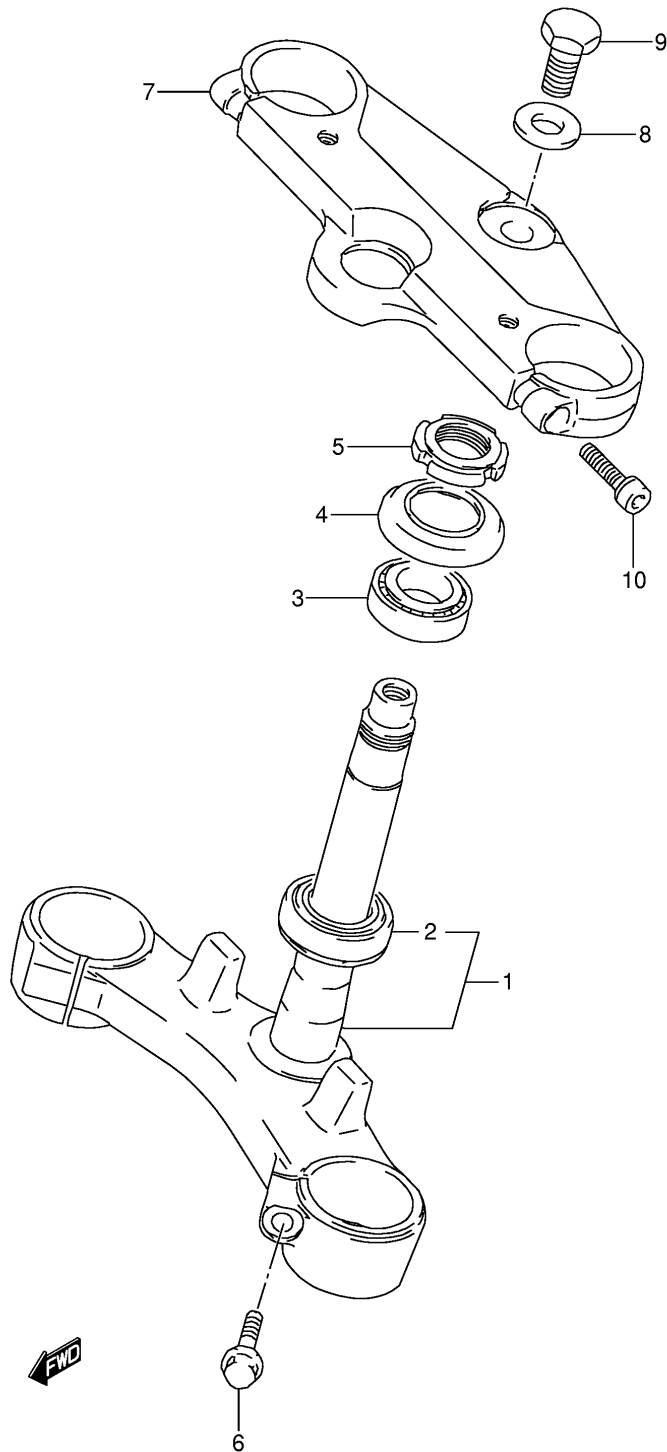 


Ref No	Part No	Description
1	51410-19C02	Stem, Steering
2	09265-30009	• . Bearing (30x55x17)
3	09265-25019	Bearing, Upper (25x47x15)
4	51643-49002	Dust Seal
5	51631-28000	Nut, Steering Stem
6	01550-10403	Bolt, Lower
7	51311-19C20	Head, Steering Stem
8	51356-43530	Washer
9	51352-43530	Bolt, Upper
10	07130-08307	Bolt, Upper Side

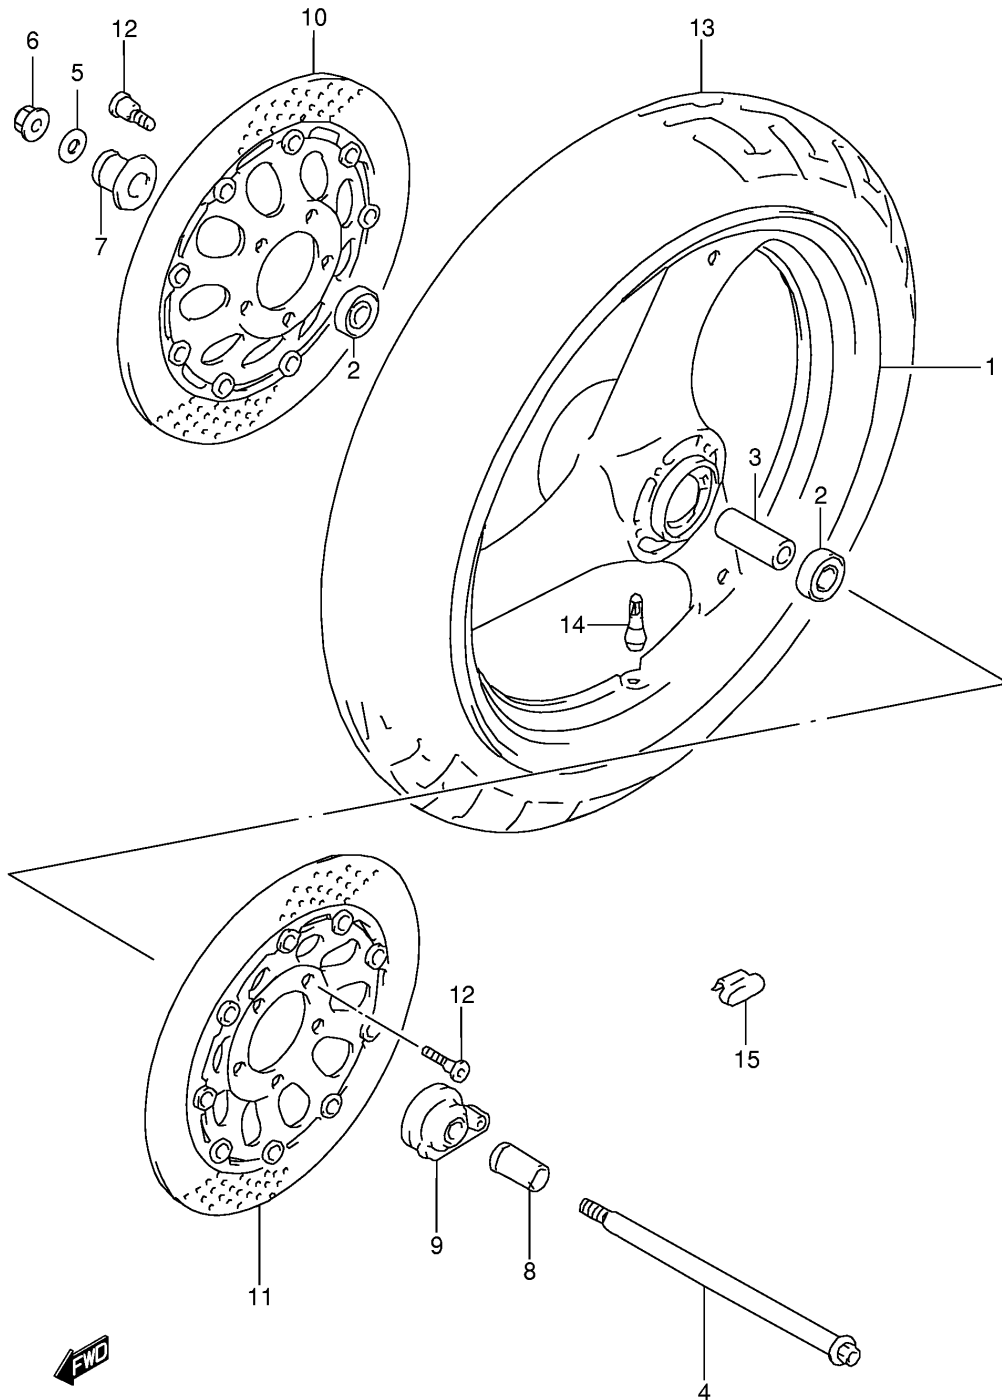 


Ref No	Part No	Description	
1	54111-34C00-12R	Wheel, Front (mt3.00x17)	Silver
2	08123-63027	Bearing	
3	09180-15011	Spacer (15.3x21.7x63)	
4	54711-19C00	Axle, Front	
5	08322-01127	Washer	
6	09159-12028	Nut	
7	54740-33410	Spacer, Bearing Rh	
8	54741-19C00	Spacer, Axle Lh	
9	54600-30B02	Box Assy, Speedometer Gear	
10	59210-32C31	Disc, Front Brake Rh	(silver/black)
11	59220-32C31	Disc, Front Brake Lh	(silver/black)
12	09106-08125	Bolt	
13	55110-19C10	Tire, T/I Front (110/80 V17)	Dunlop
14	43130-24A11	Valve Assy, Wheel Rim, Tr412	
15	55411-00A00	Balancer (10g)	
15	55412-00A01	Balancer (20g)	


Ref No	Part No	Description
--------	---------	-------------

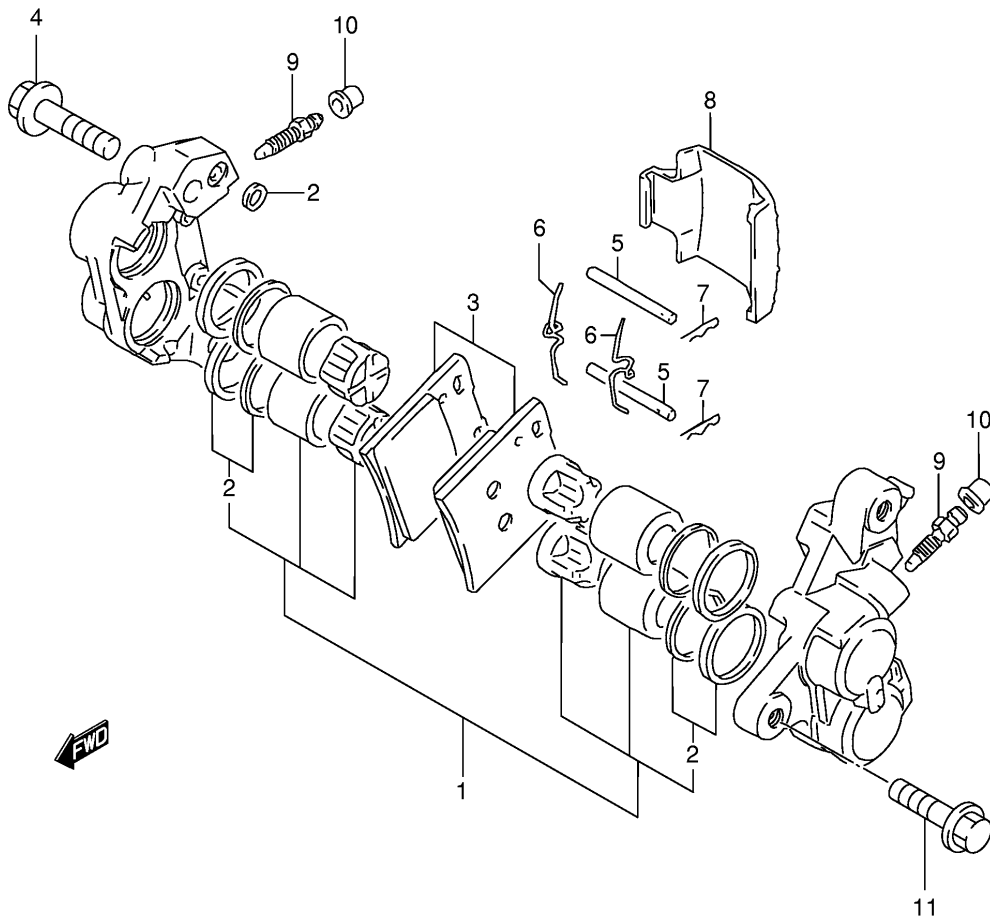 

	59100-34C02	Caliper Assy, Front Rh
	59300-34C02	Caliper Assy, Front Lh
1	59100-19841	• . Piston Set
2	59100-19830	•• .. Seal Set, Piston
3	59100-19820	• . Pad Set
4	59145-16700	• . Bolt
5	69141-45000	• . Pin
6	69143-45001	• . Spring
7	69142-45000	• . Clip
8	59151-04A01	• . Cover
9	59121-18410	• . Bleeder
10	55156-66310	• . Cap
11	01550-08353	Bolt

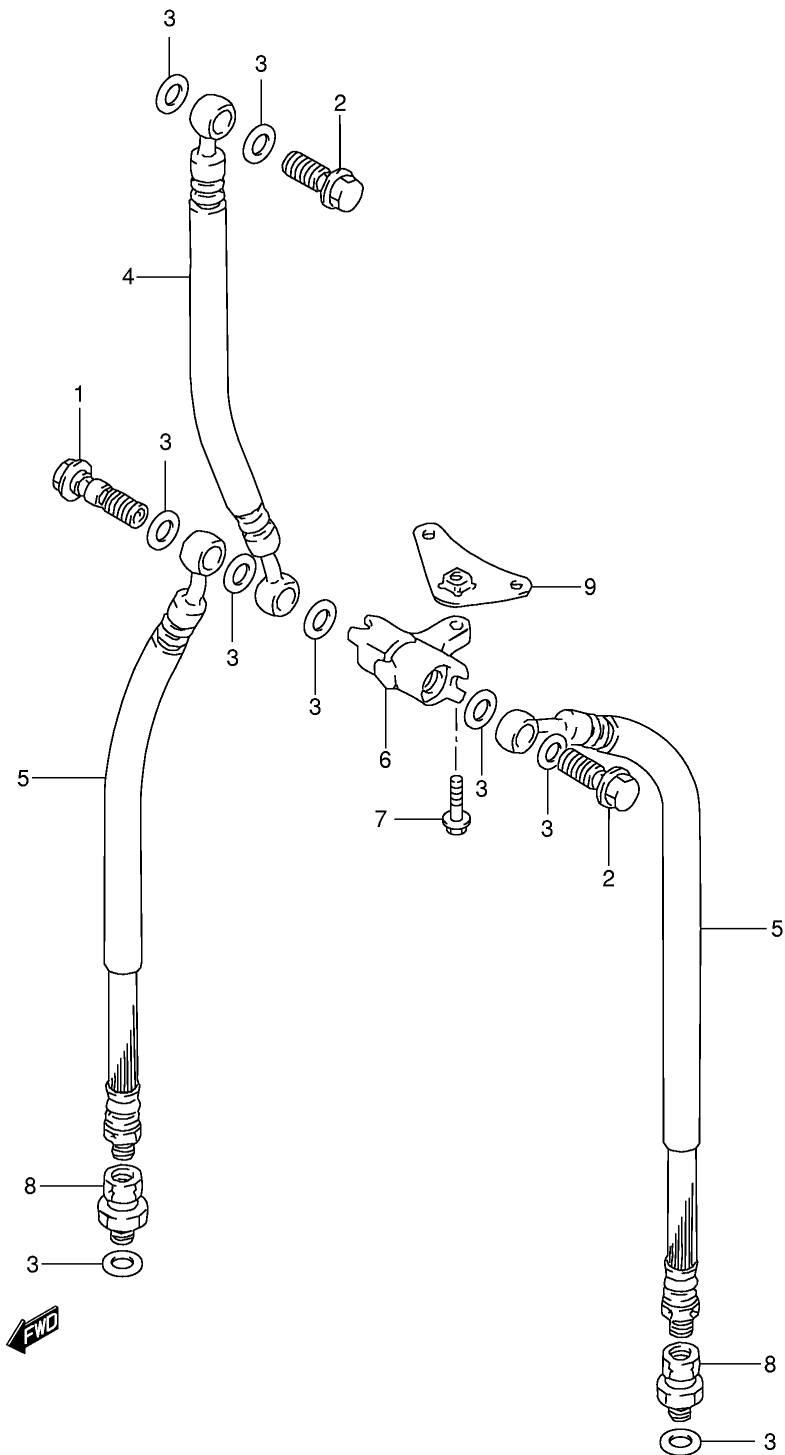 


Ref No	Part No	Description
1	09360-10043	Bolt (10x1.00x36)
2	09360-10041	Bolt (10x1.00x22)
3	09161-10009	Washer
4	59480-19C10	Hose, Front Brake No.1
5	59240-19C10	Hose, Front Brake No.2
6	59491-45001	Joint, Brake Hose
7	01550-06203	Bolt
8	59290-43500	Adaptor, Brake Hose
9	59390-19C00	Plate, Joint

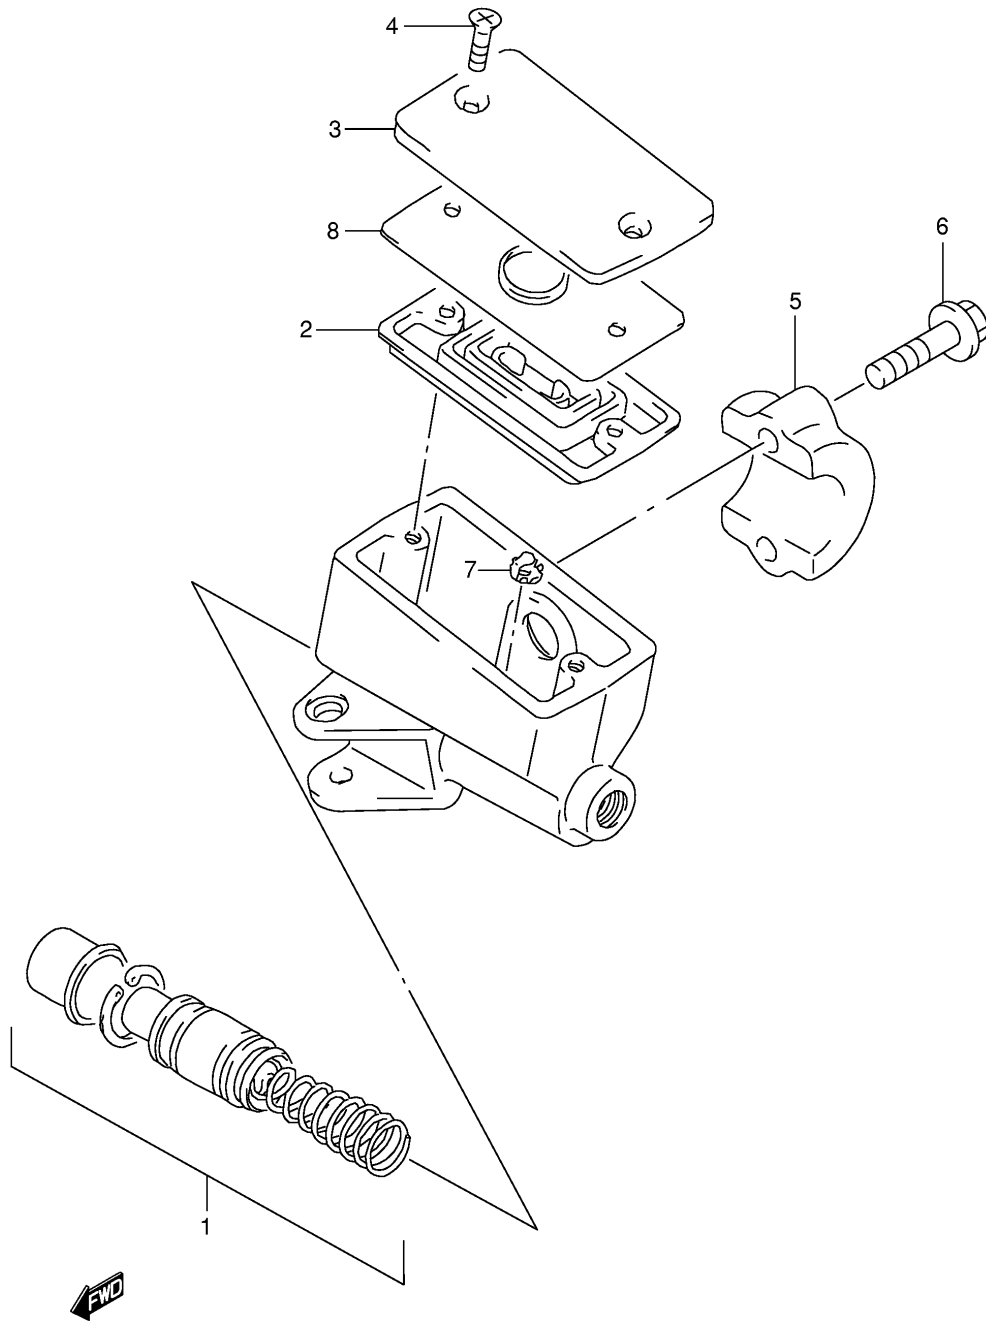 


Ref No	Part No	Description
	59600-20C00	Cylinder Assy, Front Master
1	59600-45860	• . Piston/cup Set
2	59667-49460	• . Diaphragm
3	59669-41C00	• . Cap
4	69689-49300	• . Screw
5	59671-19B00	• . Holder
6	59675-19C00	• . Bolt, Holder Set
7	59664-48B00	• . Protector
8	59668-41C00	• . Plate




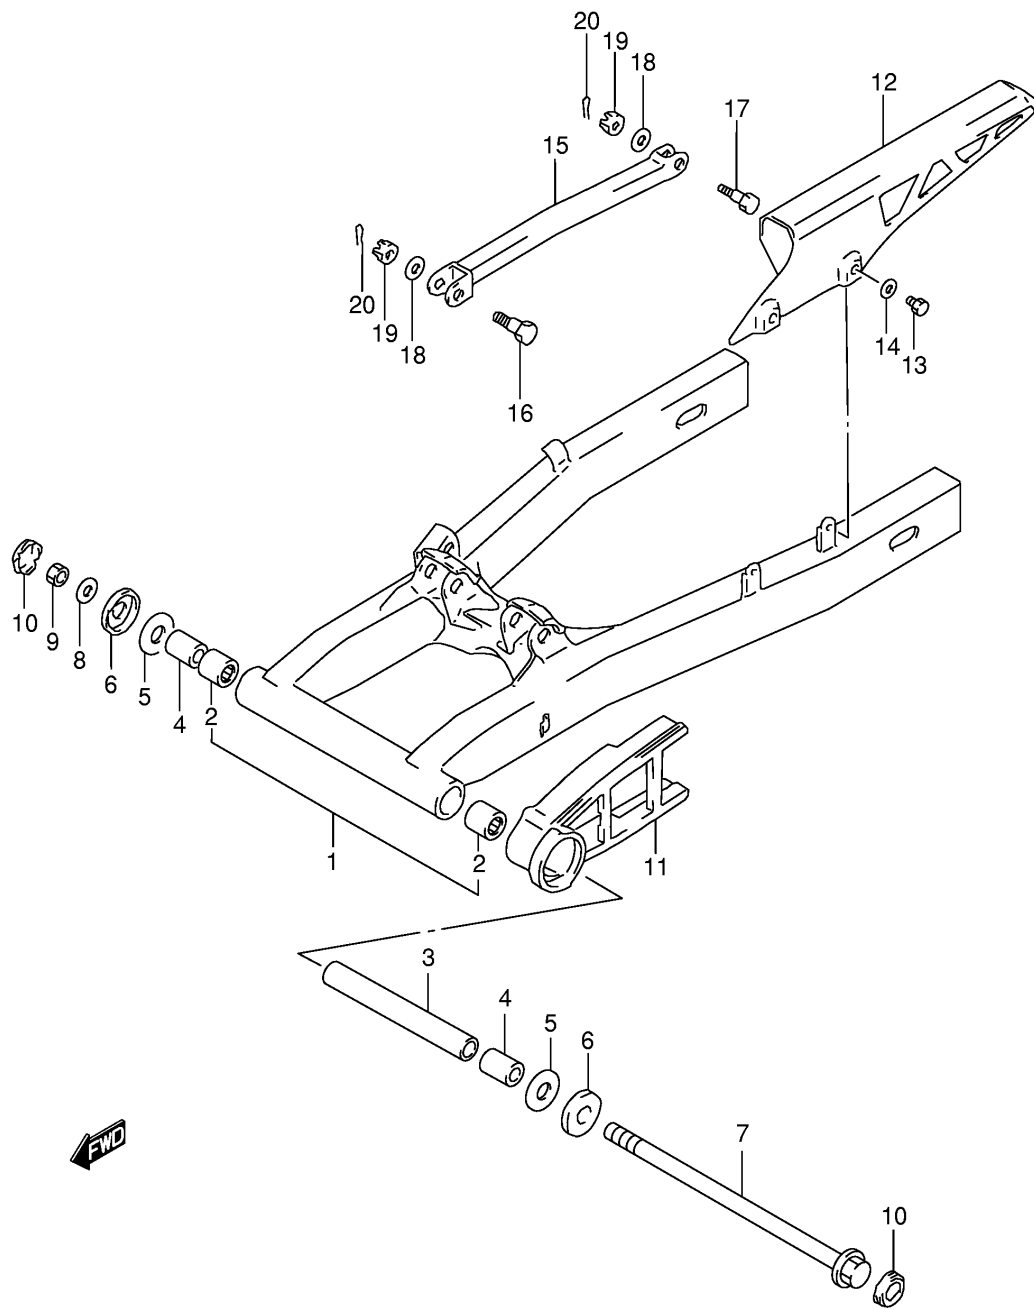 

Ref No	Part No	Description
1	61000-19C10-13L	Swinging Arm Assy, Rear (silver)
2	09263-22017	• . Bearing (22x29x30)
3	61282-19C00	Spacer, Center
4	61251-45001	Spacer, Pivot Bearing
5	08211-14341	Washer
6	61262-45002	Dust Seal, Pivot Shaft
7	61211-19C00	Shaft, Swinging Arm Pivot
8	09160-14015	Washer
9	09159-14019	Nut
10	61222-43400	Cap, Swinging Arm Pivot
11	61273-20C00	Buffer, Chain Touch Defense
12	61310-27A01	Case, Chain
13	02142-06123	Screw
14	09169-06026	Washer
15	64310-19C00	Torque Link, Rear
16	09111-10016	Bolt, Front (10x41)
17	09101-10036	Bolt, Rear (10x35)
18	09160-10069	Washer
19	08314-40103	Nut
20	04111-20208	Pin, Cotter

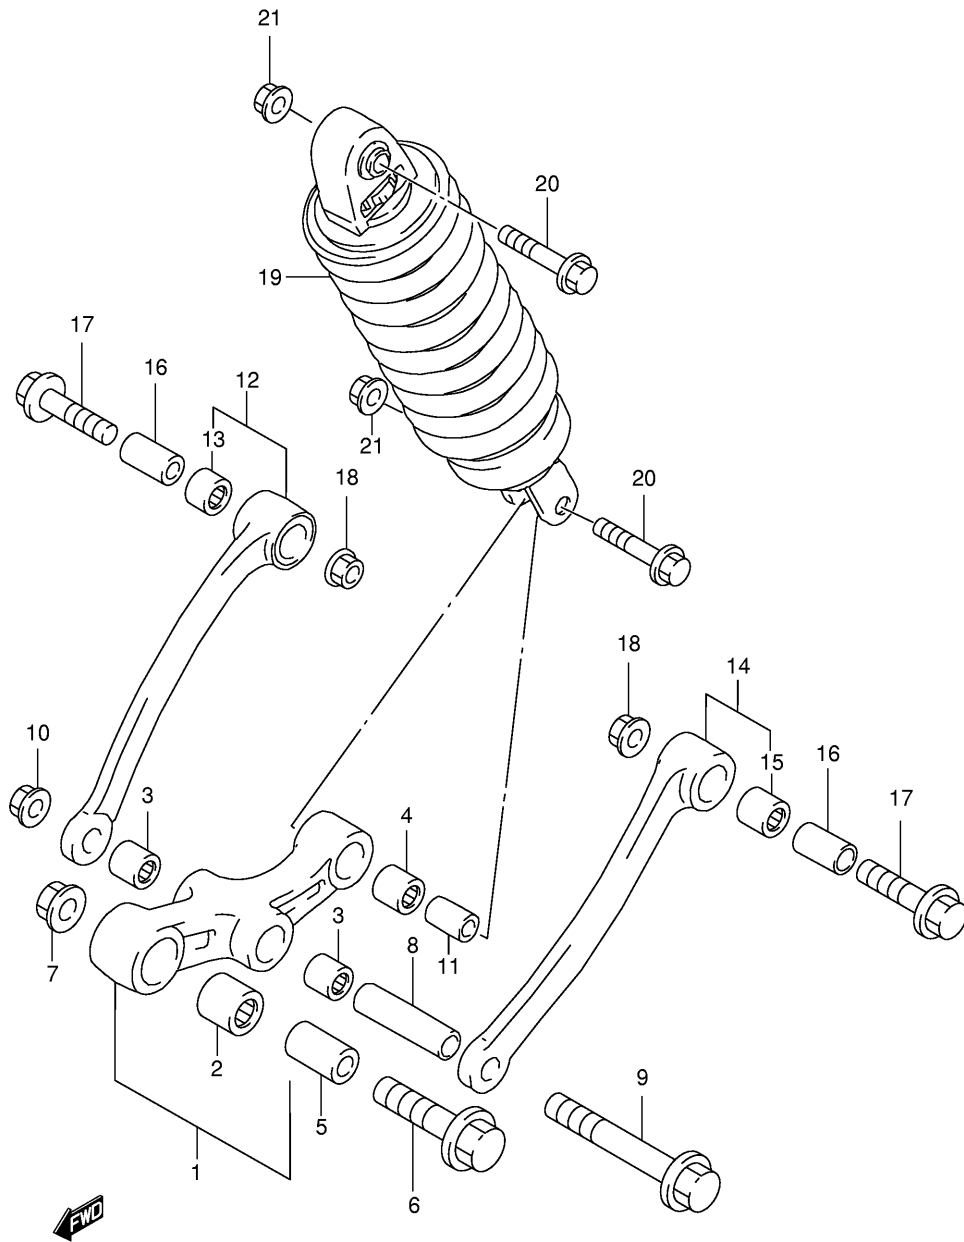 


Ref No	Part No	Description
1	62600-19830	Lever Set, Rear Cushion
2	09263-20070	• . Bearing, Front (20x27x30)
3	09263-17037	• . Bearing (17x24x25)
4	09263-17034	• . Bearing, Rear (17x24x26)
5	09180-14014	Spacer, Front (14x20x34)
6	09103-14012	Bolt, Front (14x62)
7	08319-31145	Nut
8	09180-12121	Spacer, Center (12x17x60)
9	09103-12034	Bolt, Center (12x96)
10	08319-31125	Nut
11	62684-40A10	Spacer, Rear
12	62600-19840	Rod Set, Rear Cushion,rh
13	09263-17034	• . Bearing (17x24x26)
14	62600-19850	Rod Set, Rear Cushion,lh
15	09263-17034	• . Bearing (17x24x26)
16	09180-12120	Spacer, Rod (12x17x29)
17	09103-12035	Bolt (12x52)
18	08319-31125	Nut
19	62100-19C21	Absorber Assy, Rear Shock
20	09103-10197	Bolt (10x52)
21	08319-31105	Nut

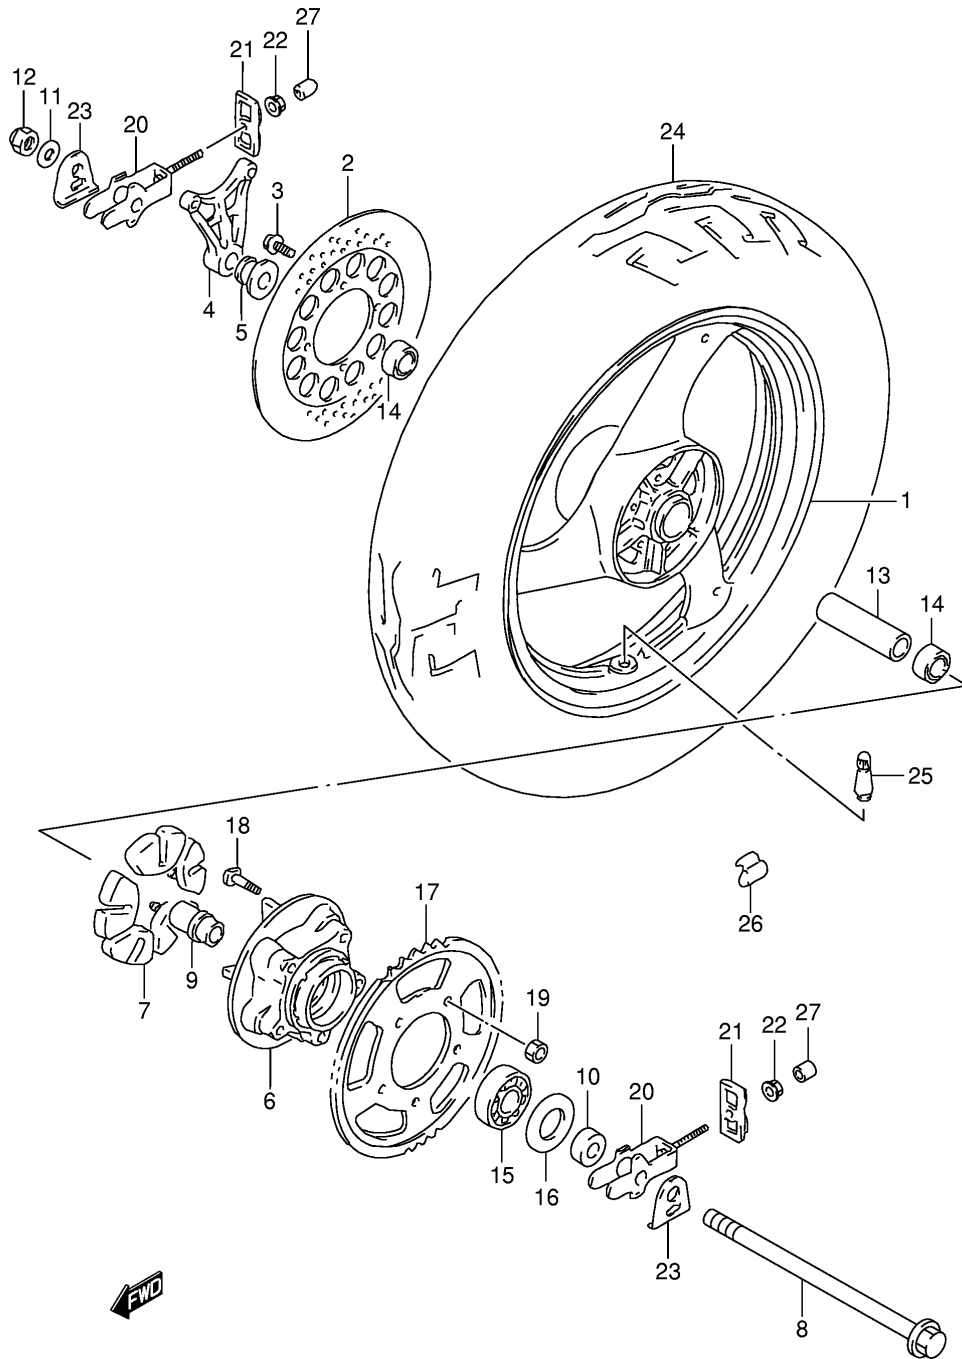 


Ref No	Part No	Description
1	64111-34C00-12R	Wheel, Rear (mt3.50x17) Silver
2	69211-01D00	Disc, Rear Brake
3	09106-08131	Bolt
4	69721-43400	Bracket, Caliper
5	64740-19C00	Spacer, Rear Axle,rh
6	64611-17C01	Drum, Rear Sprocket
7	64651-27A01	Absorber, Rear Hub Shock
8	64711-19C00	Axle, Rear
9	64733-34C00	Retainer, Drum
10	64751-34C00	Spacer, Rear Axle,lh
11	09160-17013	Washer
12	08319-21168	Nut
13	09180-17067	Spacer, Bearing (17.5x28x49.80)
14	08143-63037	Bearing
15	09262-25073	Bearing
16	09285-35001	Oil Seal (35x62x8)
17	64511-20C21	Sprocket, Rear (nt:45)
18	09119-10037	Bolt
19	08319-31107	Nut
20	61410-20C02	Adjuster, Chain
21	61421-20C01	Plate, Guide
22	08319-31087	Nut
23	61445-20C01	Washer, Chain Adjuster
24	65110-19C10	Tire, T/I Rear (140/80 V17) Dunlop
25	43130-24A11	Valve Assy, Wheel Rim, Tr412
26	55411-00A00	Balancer (10g)
26	55412-00A01	Balancer (20g)
27	61442-33300	Cap

Ref No	Part No	Description
--------	---------	-------------

	69100-34C03	Caliper Assy, Rear
1	69100-32810	• . Piston Set
2	69100-32820	• . Seal Set, Piston
3	69100-34860	• . Pad Set
4	59145-16700	• . Bolt
5	59143-16700	• . Spring
6	69141-45000	• . Pin
7	69142-45000	• . Clip
8	59151-16701	• . Cover
9	59121-18410	• . Bleeder
10	55156-66310	• . Cap
11	59371-33410	• . Shim
12	01550-08303	Bolt

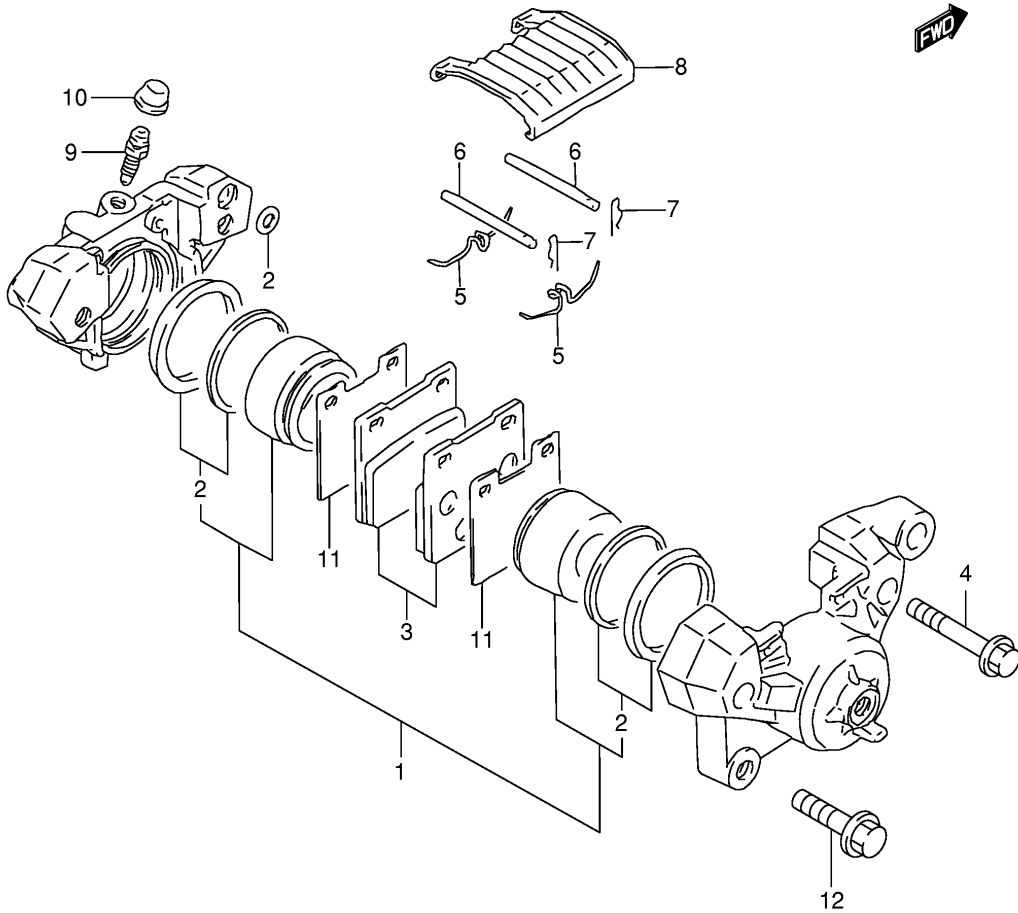 

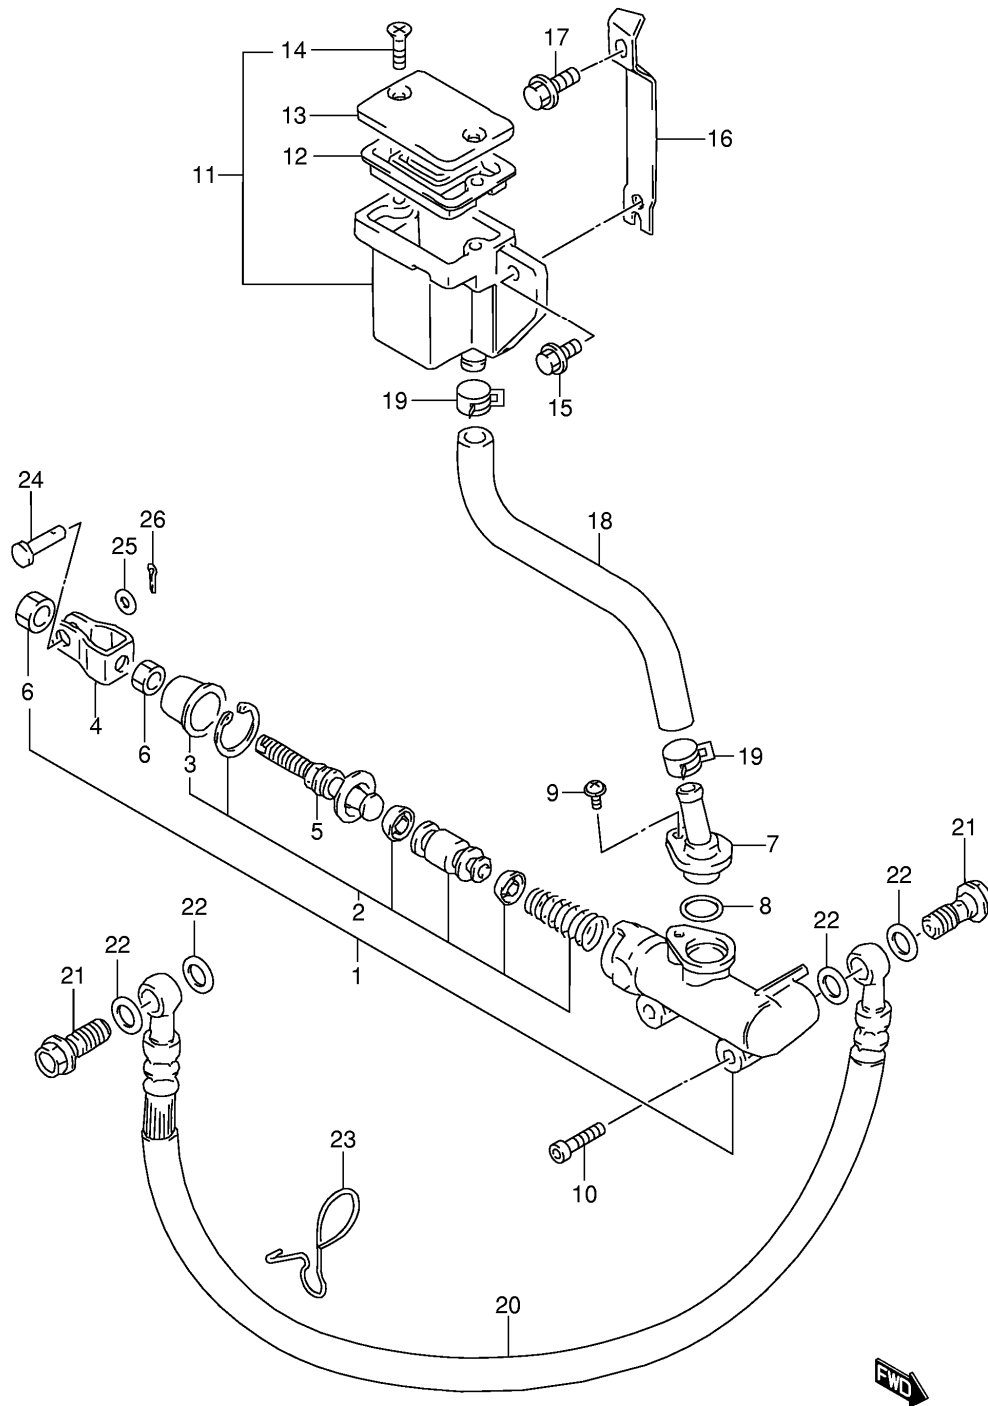 

Ref No	Part No	Description
1	69600-19C00	Cylinder Assy, Rear Master
2	69600-04820	. Piston / Cap Set
3	69691-00A00	•• . Boot
4	69692-19A00	. Yoke
5	69670-19C00	. Rod, Push
6	69693-05A00	. Nut
7	69672-20A00	. Connector
8	69686-34200	. O Ring
9	02112-74123	. Screw
10	07130-06163	Bolt
11	69740-24A01	Tank Assy, Rear Reservoir
12	59667-04700	. Diaphragm
13	59669-05D00	. Cap
14	69689-04A00	. Screw
15	01550-06123	Bolt
16	69750-19C00	Plate, Reservoir Tank
17	01570-06163	Bolt
18	69731-19C00	Hose, Reservoir
19	09401-13413	Clamp
20	69480-19C20	Hose, Rear Brake
21	09360-10041	Bolt (10x1.00x22)
22	09161-10009	Washer (10x15x1.5)
23	69243-19C00	Guide, Brake Hose
24	09200-06037	Pin
25	08322-01063	Washer
26	04111-20158	Pin, Cotter

Ref No	Part No	Description	
1	99000-25110	Suzuki Pbc Grease	
2	99000-32020	Thread Lock Super (1333)	
2	99000-32030	Thread Lock Super (1303b)	
2	99000-32050	Thread Lock Super (1342)	
2	99000-32100	Thread Lock Super (1305)	
2	99000-32130	Thread Lock Super (1360)	
3	99000-32040	Thread Lock Cement	
4	99000-31140	Suzuki Bond (1207b)	
5	99000-25030	Suzuki Super Grease	
6	99000-25140	Suzuki Moly Paste	
7	99000-10209-13L	Paint (bright Silver Metallic)	
7	99000-10209-33J	Paint (pearl Novelty Black)	
7	99000-10209-Y0R	Paint (candy Flare Red)	
7	99000-10209-Z66	Paint (candy Pharaoh Yellow)	
7	99000-10209-1LF	Paint (pearl Suzuki	Deep Blue)
7	99000-10209-17U	Paint (urban Gray Metallic)	
7	99000-10209-35W	Paint (charcoal Gray	Metallic)

