 
 


Ref No	Part No	Description
1	11402-07891	Gasket Set
2	11141-17D10	. Gasket, Cylinder Head
3	11143-06B00	. O Ring, Head Gasket
4	11173-27A02	. Gasket, Cylinder Head Cover
5	11177-27A00-H17	. Gasket, Breather Cover
6	11178-27A01	. Gasket, Head Cover No.2
7	11179-27A02	. Gasket, Head Cover No.3
8	11241-27A04	. Gasket, Cylinder
9	11482-27A20	. Gasket, Clutch Cover
10	11483-27A20	. Gasket, Starter Gear Cover
11	11489-27A21	. O Ring, Oil Pan
12	11491-27A30	. Gasket, Signal Gen Cover
13	12837-27A10	. Gasket, Tensioner Adjuster
14	14181-18C00	. Gasket, Exhaust Pipe
15	16491-27A01	. O Ring, Oil Pump
16	16528-27A21	. Gasket, Oil Str Protector
17	16529-27A01	. Gasket, Oil Outlet
18	09168-06024	. Gasket (5.8x11x1.2)
19	09168-08016	. Gasket (8.2x14x1)
20	09168-08021	. Gasket (8.5x17x2.3)
21	09168-10031	. Gasket (10.2x20x2.3)
22	09168-14004	. Gasket (14.1x18x1.5)
23	09168-16002	. Gasket (16x22x2)
24	09280-04004	. O Ring (d:1.2,id:4.0)
25	09280-14011	. O Ring (d:2.5,id:13.8)
26	09280-15007	. O Ring (d:2.4,id:15.8)
27	09280-17002	. O Ring (d:2.4,id:16.8)
28	09280-17003	. O Ring (d:3.1,id:16.8)
29	09280-18009	. O Ring (d:3.2,id:17.8)
30	09280-21008	. O Ring (d:2.5,id:21.0)
31	09280-22016	. O Ring (d:3.7,id:21.7)
32	09280-24003	. O Ring (d:3.0,id:24.5)
33	09280-25001	. O Ring (d:1.0,id:24.5)
34	09280-36001	. O Ring (d:2.4,id:36.5)
35	09280-42003	. O Ring (d:2.4,id:41.7)

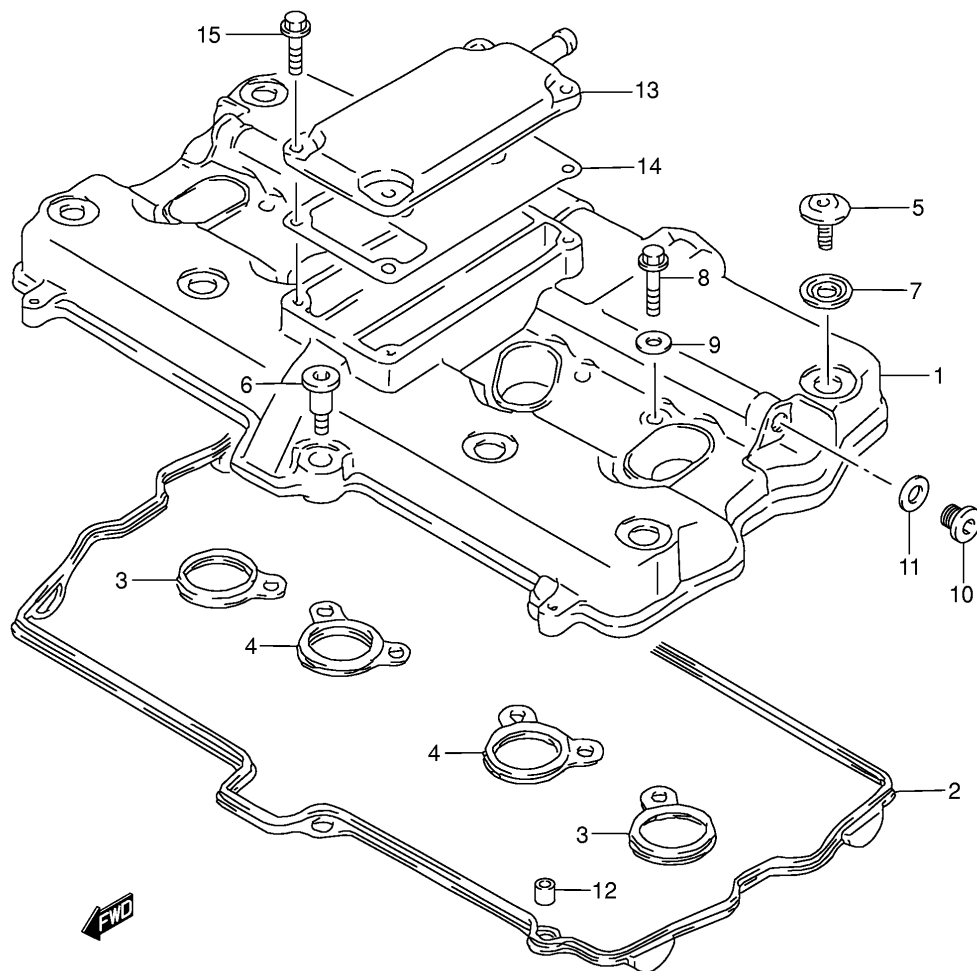


Ref No	Part No	Description
1	11171-26E01	Cover, Cylinder Head
2	11173-27A02	Gasket, Head Cover No.1
3	11178-27A01	Gasket, Head Cover No.2
4	11179-27A02	Gasket, Head Cover No.3
5	09106-07020	Bolt (l:5.5)
6	09106-07010	Bolt (l:19)
7	09161-11008	Washer
8	11181-27E00	Bolt, Union
9	09168-08029	Gasket
10	09248-12010	Plug, Head Cover
11	09168-12002	Gasket
12	04221-08129	Pin
13	11176-31301	Cover, Breather
14	11177-27A00-H17	Gasket, Breather Cover
15	01550-06203	Bolt

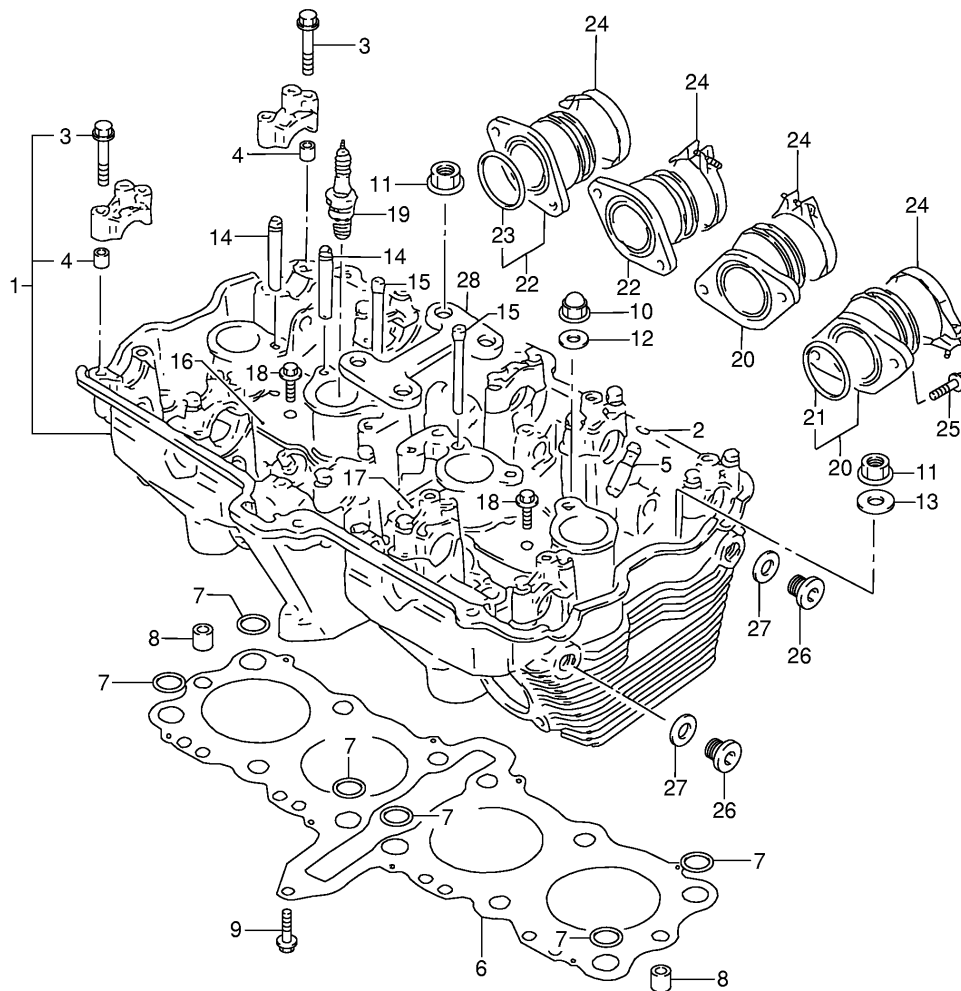


Ref No	Part No	Description
1	11100-08F10	Head Assy, Cylinder
1	11100-17D20	Head Assy, Cylinder
2	09381-10004	• . Ring, Valve Guide
3	09103-06026	• . Bolt (6x39)
4	09206-08001	• . Pin
5	11116-06B70	Guide, Valve
6	11141-17D10	Gasket, Cylinder Head
7	11143-06B00	O Ring
8	04211-11169	Pin
9	01550-06303	Bolt
10	09159-10069	Nut
11	08316-10103	Nut
12	09168-10031	Gasket
13	09160-10060	Washer (10.5x22x2.3)
14	11131-27A00	Pipe, Oil No.1,2
15	11133-27A00	Pipe, Oil No.3
16	11135-27A02	Plate, Oil Pipe Rh
17	11136-27A02	Plate, Oil Pipe Lh
18	01550-06123	Bolt
19	09482-00410	Spark Plug (ngk,cr9ek)
19	09482-00411	Spark Plug (denso,u27etr)
19	09482-00412	Spark Plug (ngk,cr8ek)
19	09482-00413	Spark Plug (denso,u24etr)
19	09482-00462	Spark Plug (ngk,cr10ek)
19	09482-00463	Spark Plug (denso,u31etr)
20	13101-08F00	Pipe, Intake Lh
21	09280-42003	• . O Ring (d:2.4,id:41.7)
22	13103-08F00	Pipe, Intake Rh
23	09280-42003	• . O Ring (d:2.4,id:41.7)
24	09402-52208	Clamp
25	07120-06163	Screw
26	09248-14012	Plug, Cylinder Head
27	09168-14002	Gasket
28	11138-40C00	Plate, Head Reinforcement




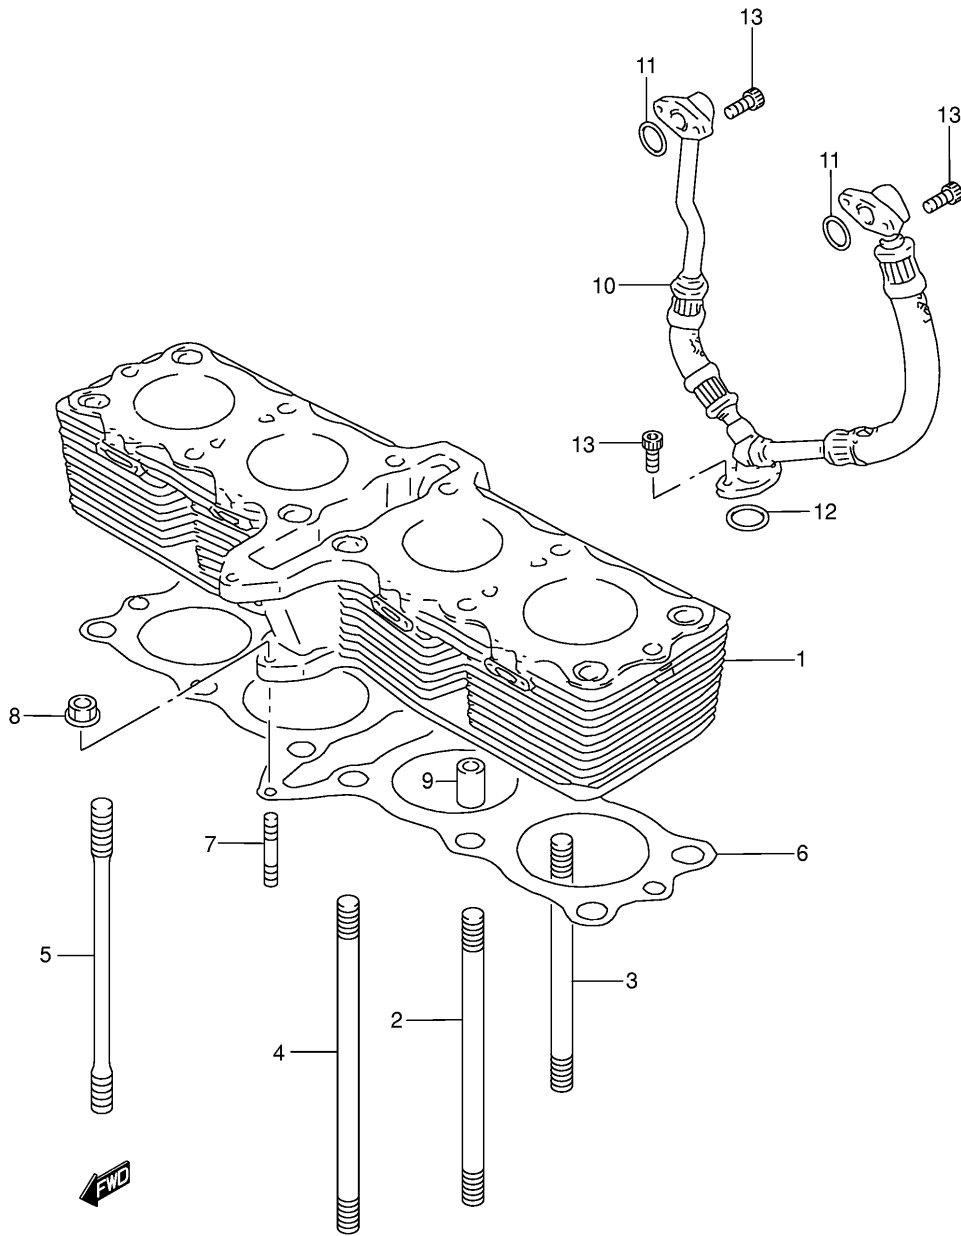 

Ref No	Part No	Description
1	11210-08F10	Cylinder
1	11210-07D10	Cylinder
2	09108-10144	Stud Bolt (10x150)
3	09108-10073	Stud Bolt (10x143)
4	09108-10099	Stud Bolt (10x157)
5	09108-10144	Stud Bolt (10x150)
6	11241-27A04	Gasket, Cylinder
7	01421-06203	Stud Bolt
8	08316-10063	Nut
9	09206-13017	Pin
10	11328-27A04	Hose, Oil Head Cooler
11	09280-14011	O Ring (d:2.5,id:13.8)
12	09280-15007	O Ring (d:2.4,id:15.8)
13	07130-06163	Bolt

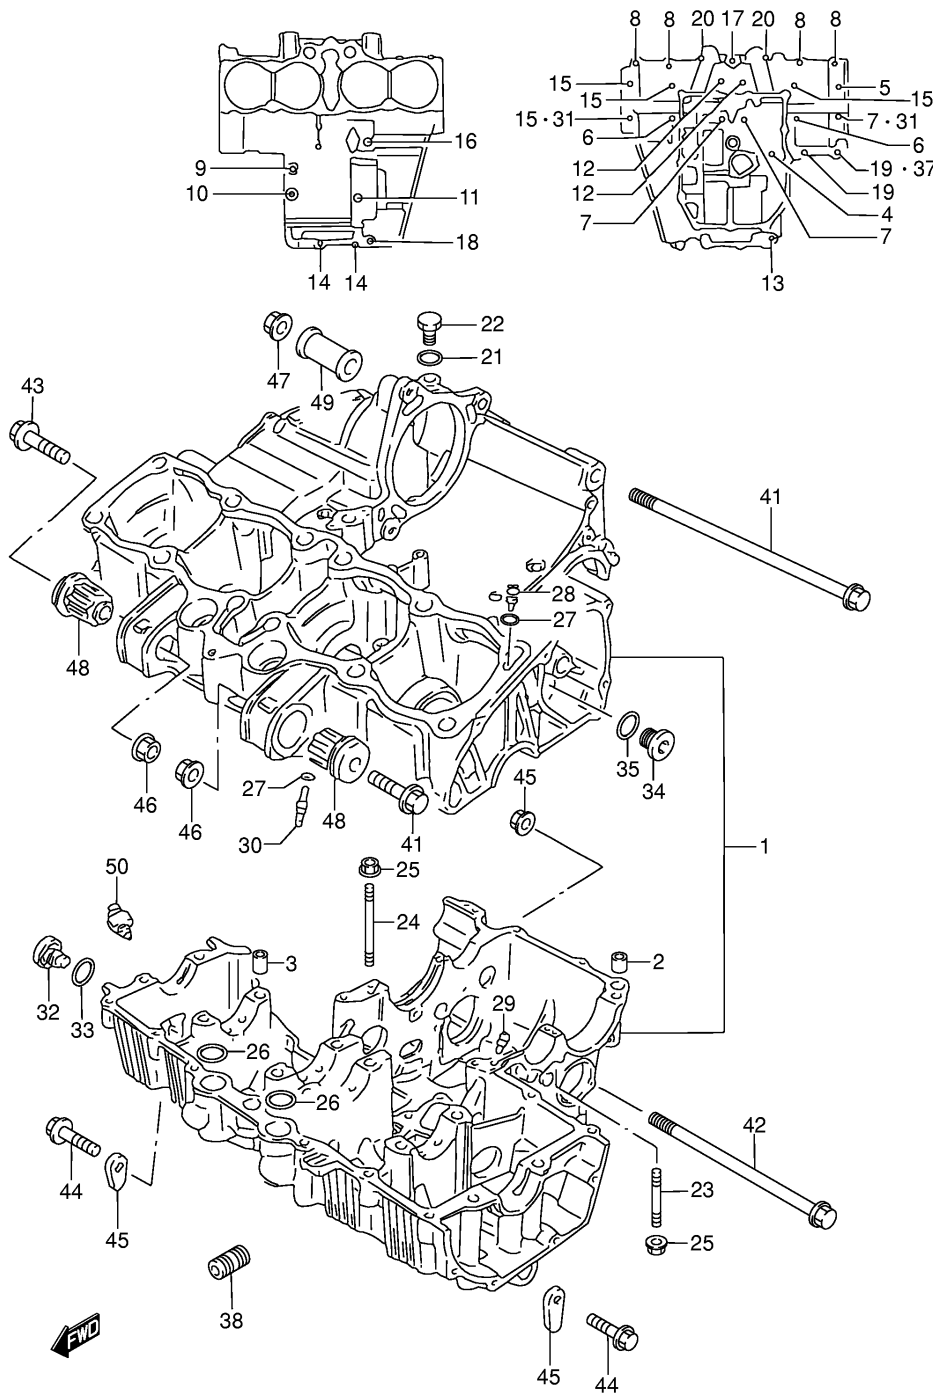 


Ref No	Part No	Description
1	11301-19890	Crankcase Set
2	09206-13004	. Pin
3	09206-11007	. Pin
4	09103-06163	. Bolt (6x105)
5	09103-08097	. Bolt (8x105)
6	09103-08182	. Bolt (8x125)
7	09103-08098	. Bolt (8x115)
8	01550-06353	. Bolt
9	07130-06403	. Bolt
10	07130-06503	. Bolt
11	07130-06653	. Bolt
12	07130-08653	. Bolt
13	01550-08603	. Bolt
14	01550-06407	. Bolt
15	09103-08066	. Bolt (8x95)
16	01550-06803	. Bolt
17	01550-06503	. Bolt
18	01550-06603	. Bolt
19	01550-06553	. Bolt
20	01550-06703	. Bolt
21	09168-12002	. Gasket, Hole Plug
22	09247-12103	. Plug, Hole
23	01421-06408	. Stud Bolt
24	01421-06608	. Stud Bolt
25	08316-10063	. Nut
26	09280-21008	. O Ring (d:2.5,id:21.0)
27	09280-04004	. O Ring (d:1.2,id:4.0)
28	09493-14002	. Jet, Oil Gall Head
29	09493-24010	. Jet, Oil Gall Gear Shift
30	09493-26007	. Jet, Oil Gall Piston
31	09168-08021	. Gasket
32	09248-16003	. Plug, Oil Gallery
33	09280-17002	. O Ring (d:2.4,id:16.8)
34	09248-14010	. Plug, Oil Gallery
35	09168-14002	. Gasket
36	09168-06023	. Gasket (5.8x13x1.2)
37	09168-06023	. Gasket (5.8x13x1.2)
38	16591-06B00	. Union, Oil Filter Stand
39	12228-43414	. Bearing, Thrust Rh (brown)
40	12228-43411	. Bearing, Thrust Lh (red)
40	12228-43412	. Bearing, Thrust Lh (black)
40	12228-43413	. Bearing, Thrust Lh (blue)
40	12228-43414	. Bearing, Thrust Lh (green)
40	12228-43415	. Bearing, Thrust Lh (yellow)
40	12228-43416	. Bearing, Thrust Lh (white)
41	09103-10151	Bolt (10x175)
42	09103-10237	Bolt (10x130)
43	01550-10553	Bolt
44	09103-10298	Bolt (10x55)
45	09159-10020	Nut
46	08316-10103	Nut
47	09159-10058	Nut
48	11681-06B00	Bush

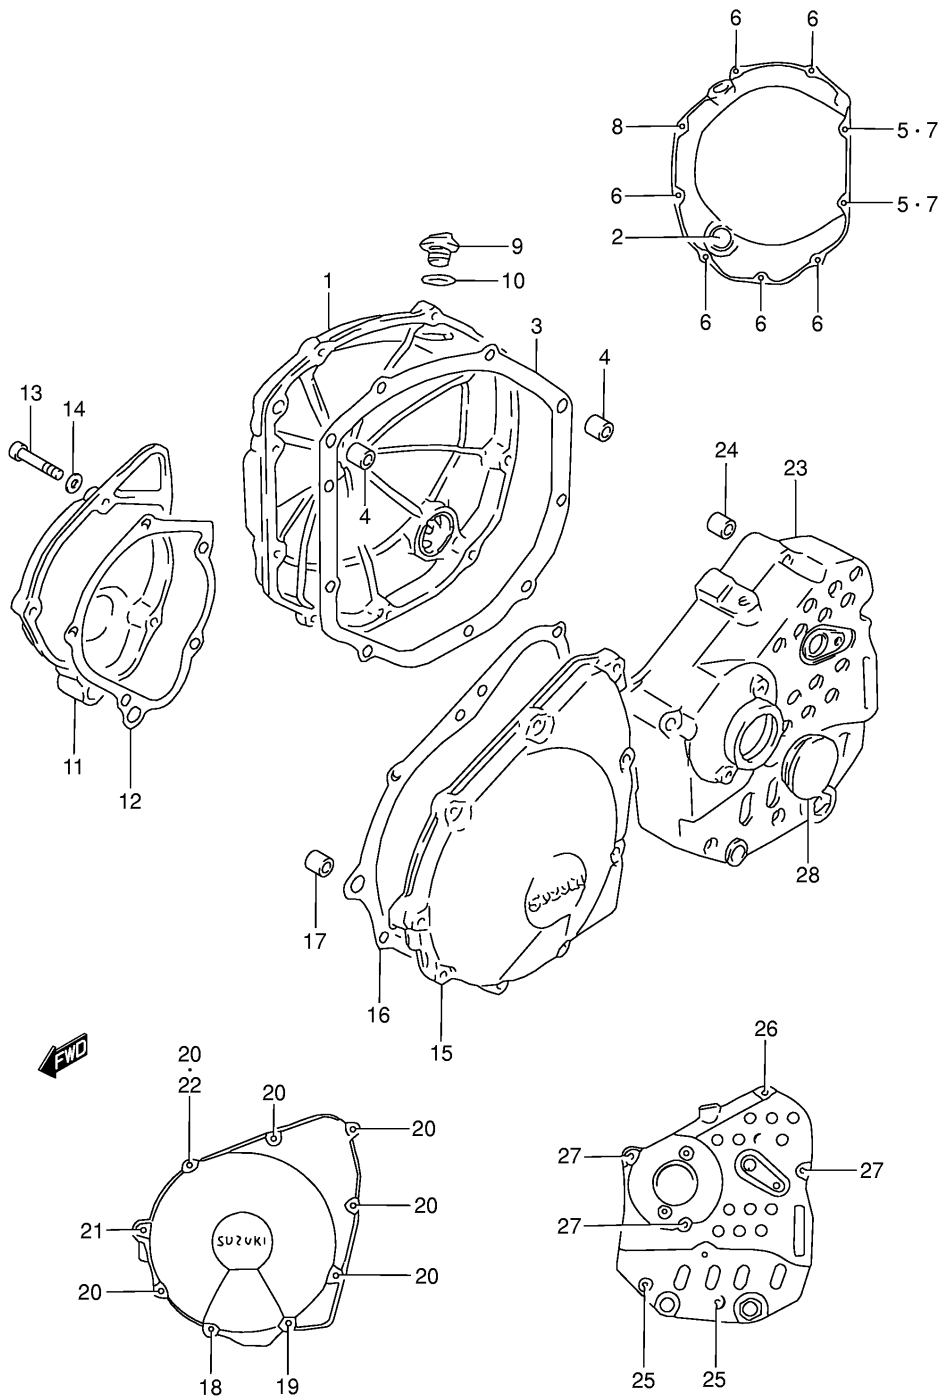 


Ref No	Part No	Description
1	11340-26E00	Cover, Clutch
2	11971-33210	• Lens, Oil Level
3	11482-27A20	Gasket, Clutch Cover
4	04211-09189	Pin
5	09168-06023	Gasket (5.8x13x1.2)
6	09106-06090	Bolt (l:25)
7	09106-06091	Bolt (l:30)
8	09106-06092	Bolt (l:35)
9	11971-25D00	Plug, Engine Oil Filler
10	09280-17003	O Ring (d:3.1,id:16.8)
11	11381-26D11	Cover, Signal Generator
12	11491-27A30	Gasket
13	09106-06094	Bolt (l:22)
14	09168-06023	Gasket (5.8x13x1.2)
15	11351-26E01	Cover, Starter Gear
16	11483-27A20	Gasket, Gear Cover
17	09206-11007	Pin
18	09106-06115	Bolt (l:16)
19	09106-06116	Bolt (l:20)
20	09106-06090	Bolt (l:25)
21	09106-06093	Bolt (l:40)
22	09168-06023	Gasket (5.8x13x1.2)
23	11361-19E00	Cover, Engine Sprocket
24	04211-09129	Pin
25	09106-06092	Bolt (l:35)
26	09106-06109	Bolt (l:50)
27	09106-06111	Bolt (l:65)
28	09250-30003	Cap, Clutch Release



 
GSX750FK4 (GSX750FK4 E2)

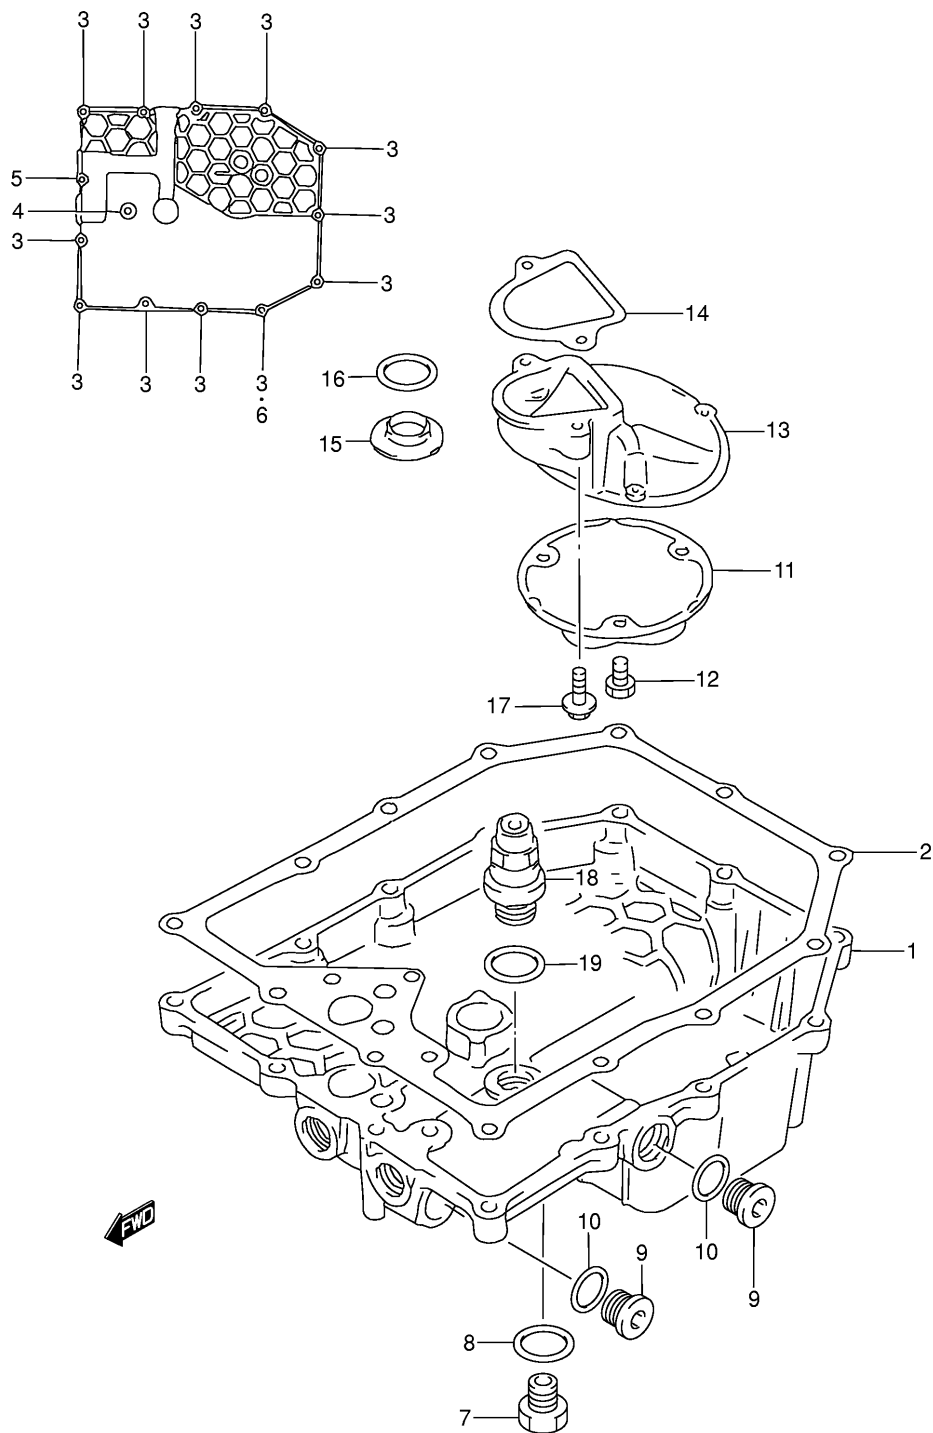


Ref No	Part No	Description
1	11511-26E01	Pan, Oil
2	11489-27A21	Gasket, Oil Pan
3	01550-06253	Bolt
4	01550-06303	Bolt
5	01550-06503	Bolt
6	09168-06023	Gasket (5.8x13x1.2)
7	09247-14026	Plug, Oil Drain
8	09168-14002	Gasket
9	09248-16012	Plug, Oil Gallery
10	09168-16002	Gasket
11	16520-09301	Strainer, Engine Oil
12	01570-06123	Bolt
13	16525-06B00	Protector, Strainer
14	16528-27A21	Gasket, Protector
15	16529-27A01	Gasket, Oil Outlet
16	09280-18009	O Ring (d:3.2,id:17.8)
17	01550-06253	Bolt
18	16440-17C01	Valve Assy, Oil Relief
19	09168-16002	Washer

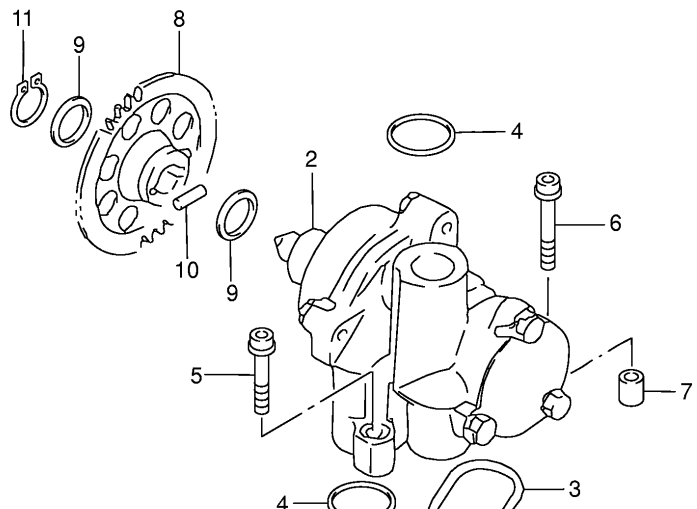 


Ref No	Part No	Description
1	16510-03G00-X07	Filter, Engine Oil
2	16400-06B31	Pump Assy, Engine Oil
3	16491-27A01	O Ring, Oil Pump
4	09280-18009	O Ring (d:3.2,id:17.8)
5	09106-06089	Bolt (6x30)
6	09106-06088	Bolt (6x35)
7	04211-09129	Pin
8	16332-19C00	Gear, Oil Pump Driven
9	08221-12205	Washer
10	09261-05006	Pin
11	08331-31126	Circlip
12	16481-17D00	Pipe, Outlet
13	09280-22016	O Ring (d:3.7,id:21.7)
14	16530-27A02	Pipe, Oil Under, Lh
15	16540-27A02	Pipe, Oil Under, Rh

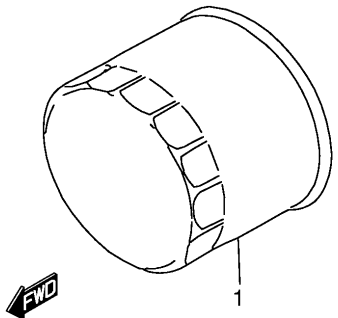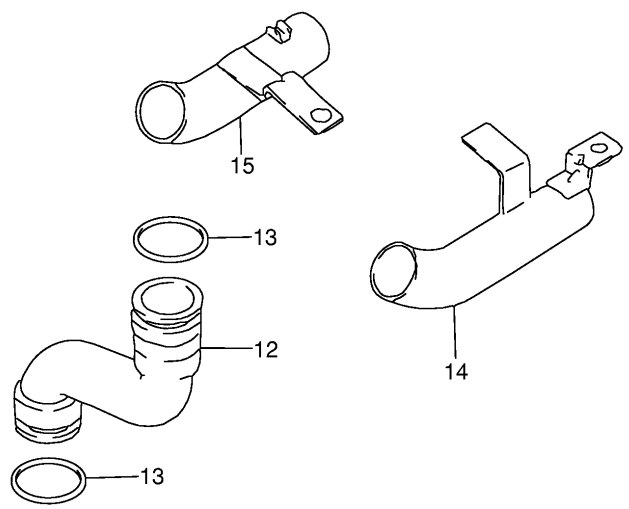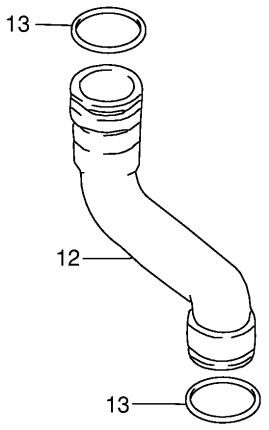   


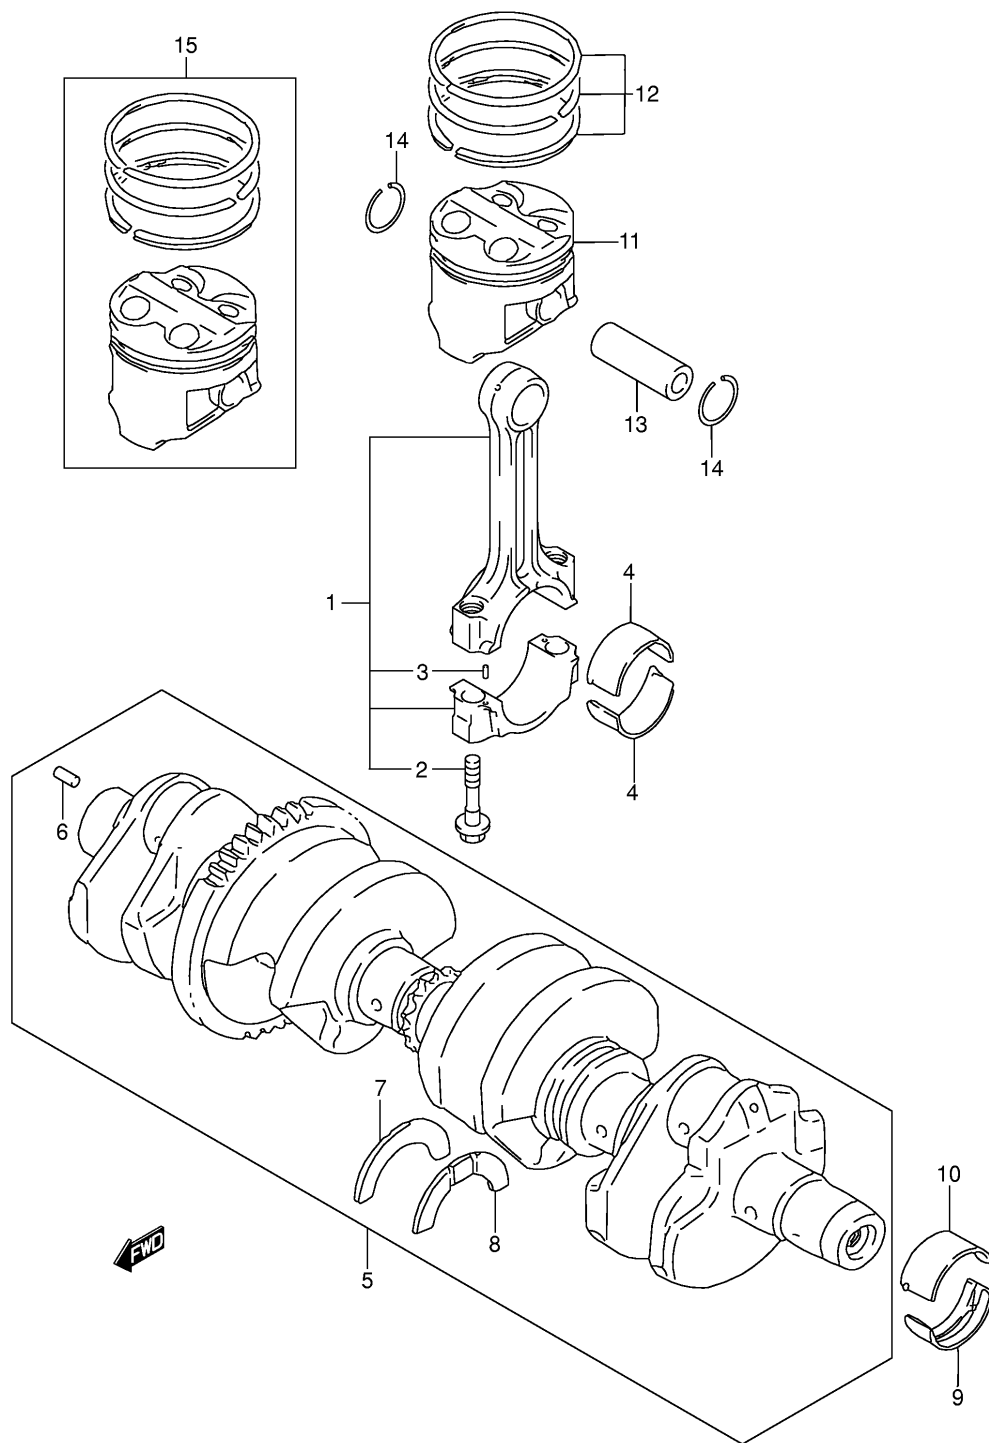 

Ref No	Part No	Description
1	12160-17E01	Rod Assy, Connecting
2	12163-27A52	. Bolt
3	12165-27A50	. Pin, Connrod
4	12164-26E00-0A0	Bearing, Crank Pin (green)
4	12164-26E00-0B0	Bearing, Crank Pin (black)
4	12164-26E00-0C0	Bearing, Crank Pin (brown)
4	12164-26E00-0D0	Bearing, Crank Pin (yellow)
5	12000-03810	Crankshaft Set
6	04221-04089	. Pin
7	12228-43414	. Bearing, Thrust Rh (brown)
8	12228-43411	. Bearing, Thrust Lh (red)
8	12228-43412	. Bearing, Thrust Lh (black)
8	12228-43413	. Bearing, Thrust Lh (blue)
8	12228-43414	. Bearing, Thrust Lh (green)
8	12228-43415	. Bearing, Thrust Lh (yellow)
8	12228-43416	. Bearing, Thrust Lh (white)
9	12229-27A00-0A0	Bearing, Crankshaft (green)
9	12229-27A00-0B0	Bearing, Crankshaft (black)
9	12229-27A00-0C0	Bearing, Crankshaft (brown)
9	12229-27A00-0D0	Bearing, Crankshaft (yellow)
10	12229-27A10-0A0	Bearing, Crankshaft (green)
10	12229-27A10-0B0	Bearing, Crankshaft (black)
10	12229-27A10-0C0	Bearing, Crankshaft (brown)
10	12229-27A10-0D0	Bearing, Crankshaft (yellow)
11	12111-03F00-0F0	Piston
12	12140-03F00	Ring Set, Piston
13	12151-07D00	Pin, Piston
14	09381-18003	Circlip
15	12100-03F00-050	Piston Set (os:0.5)

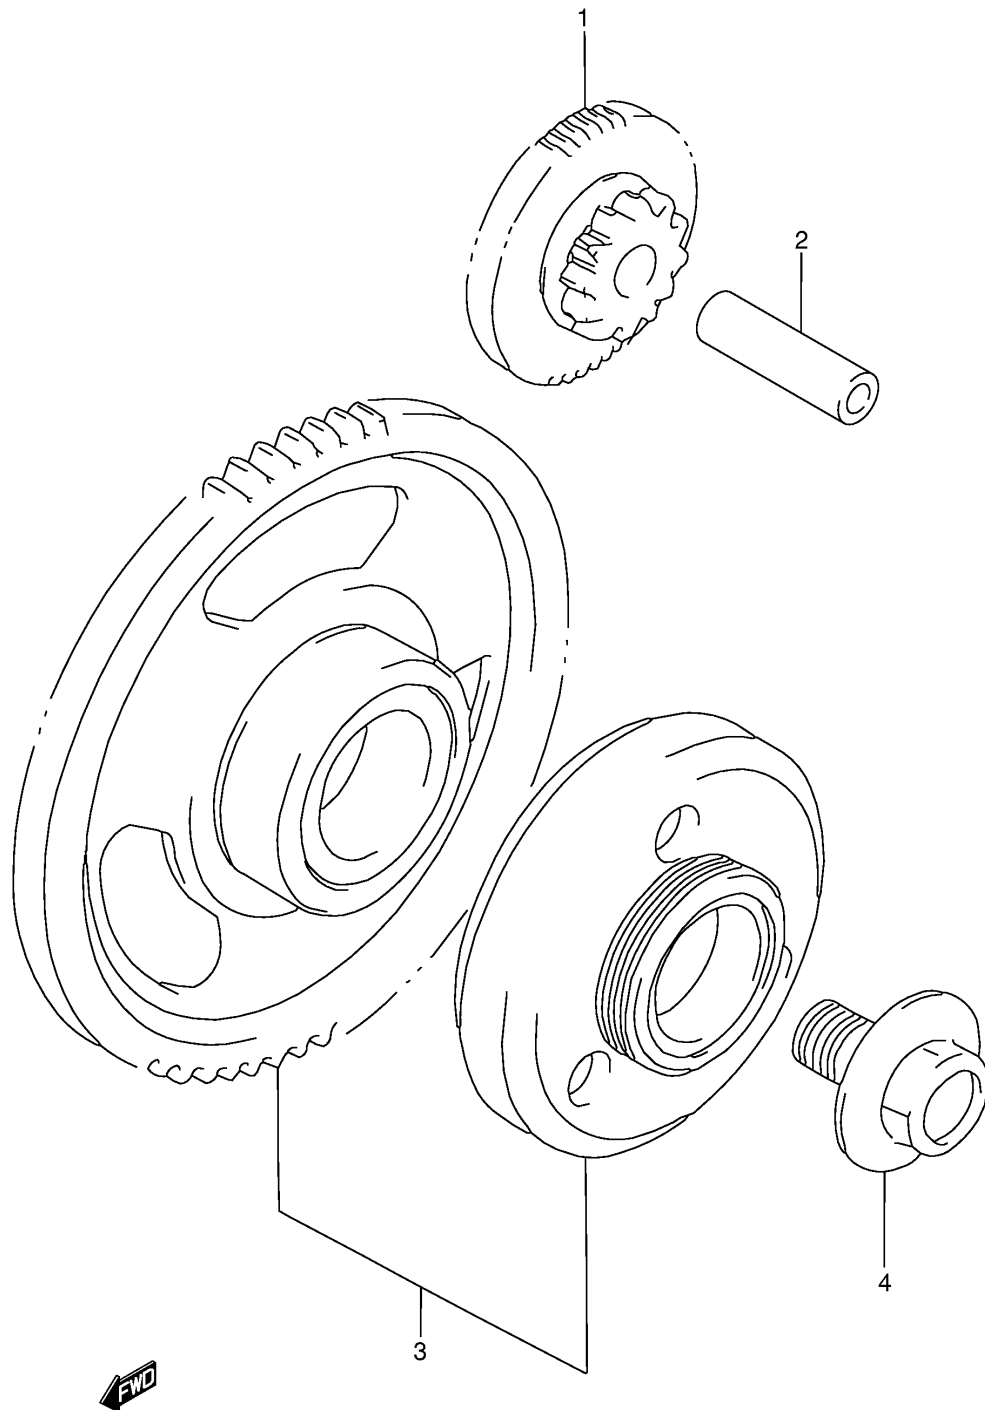 




Ref No	Part No	Description
1	12611-06B00	Gear, Starter Idle (nt:12/53)
2	09206-11014	Pin
3	12600-48812	Clutch Set, Starter
4	09103-14005	Bolt (14x21)

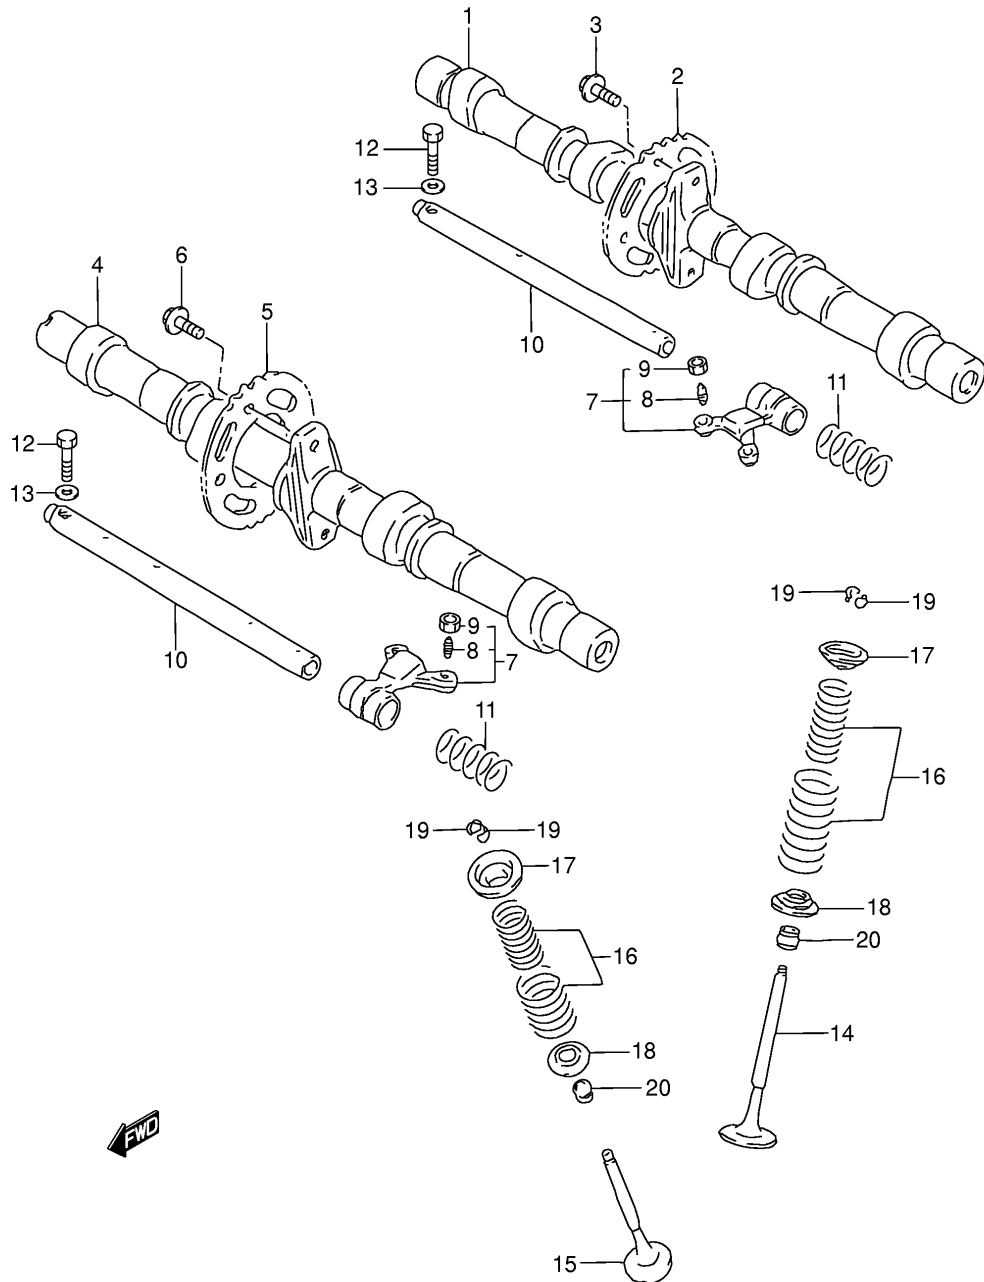 

Ref No	Part No	Description
1	12711-03F00	Camshaft, Intake
2	12741-26E00	Sprocket, Cam Shaft
3	09103-07001	Bolt (7x11.5)
4	12721-26E20	Camshaft, Exhaust
5	12741-26E00	Sprocket, Cam Shaft
6	09103-07001	Bolt (7x11.5)
7	12840-27A01	Arm, Valve Rocker
8	12842-49201	• Screw
9	12843-27A00	• Nut
10	12861-27A00	Shaft, Valve Rocker Arm
11	09440-13014	Spring
12	09112-06004	Bolt
13	08322-01063	Washer
14	12911-03F00	Valve, Intake
15	12912-03F00	Valve, Exhaust
16	12920-17C00	Spring Set, Valve
17	12931-17C01	Retainer, Spring
18	12933-17C00	Seat, Valve Spring
19	12932-27A00	Cotter, Valve
20	09289-05011	Oil Seal (5x10x8.7)



Ref No	Part No	Description
1	12760-26E00	Chain, Cam Shaft Drive
2	12771-26E00	Guide, Cam Chain No.1
3	12810-26E00	Tensioner, Cam Chain
4	12814-34200	Cushion
5	12782-26E00	Guide, Cam Chain No.2
6	01550-06163	Bolt
7	12830-46E10	Adjuster Assy, Tensioner
8	12834-27A00	• . Plug
9	12832-27A00	• . Gasket
10	12833-46E10	• . Spring
11	12837-27A10	Gasket, Adjuster
12	07130-06253	Bolt

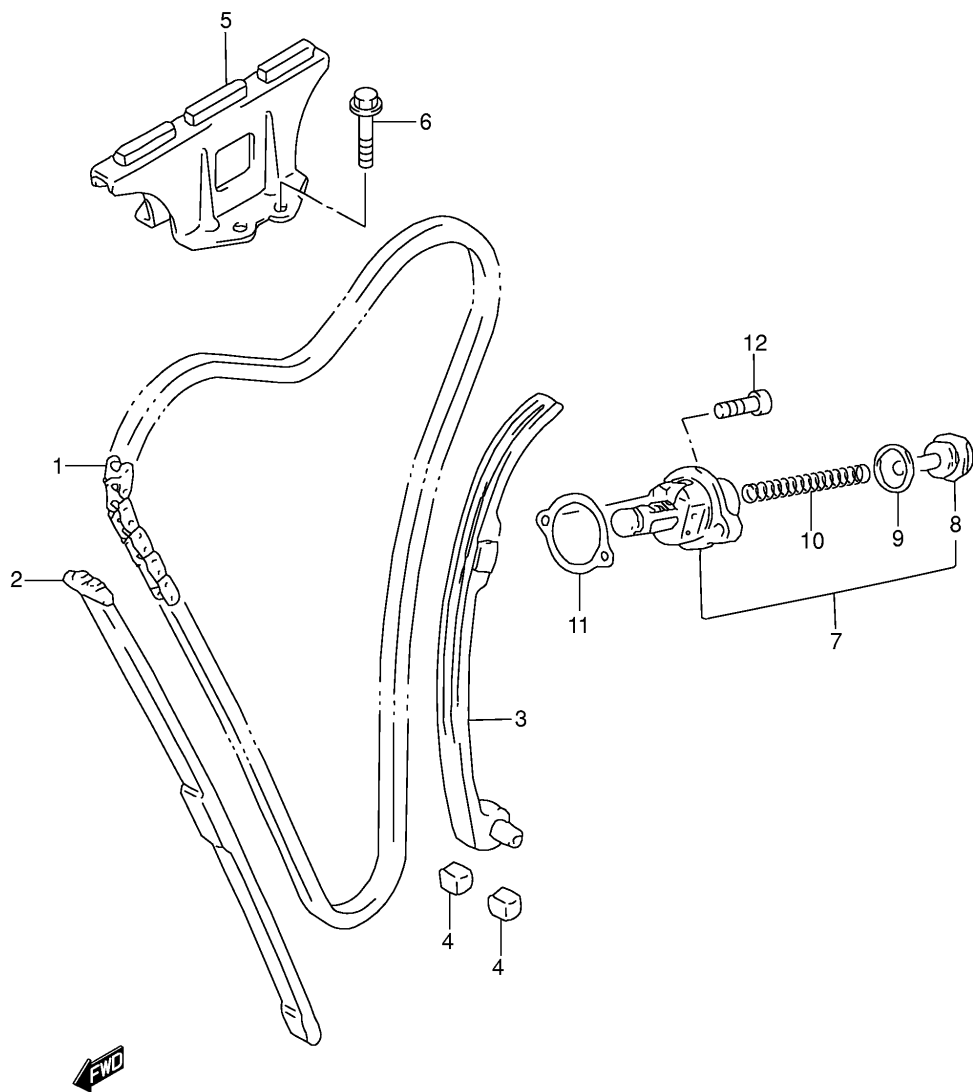 

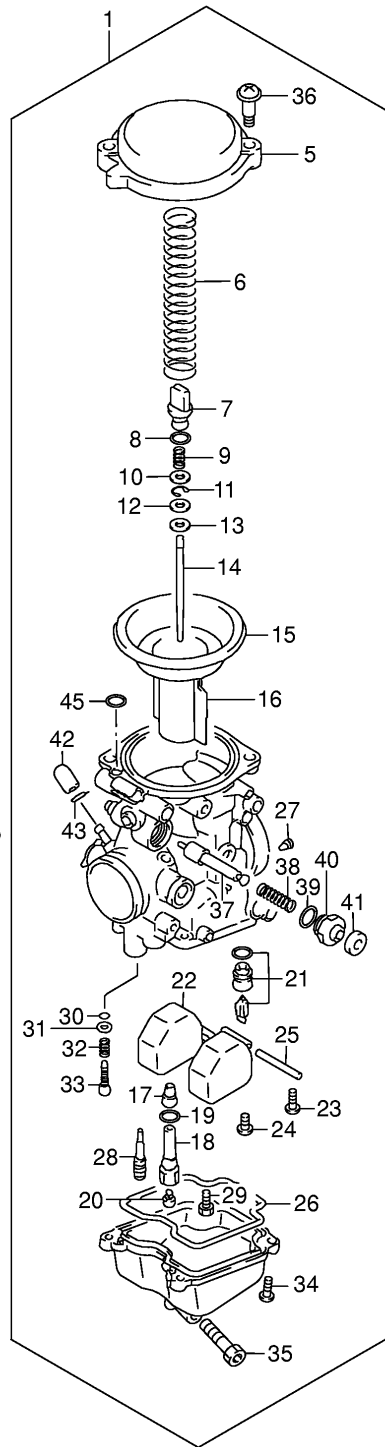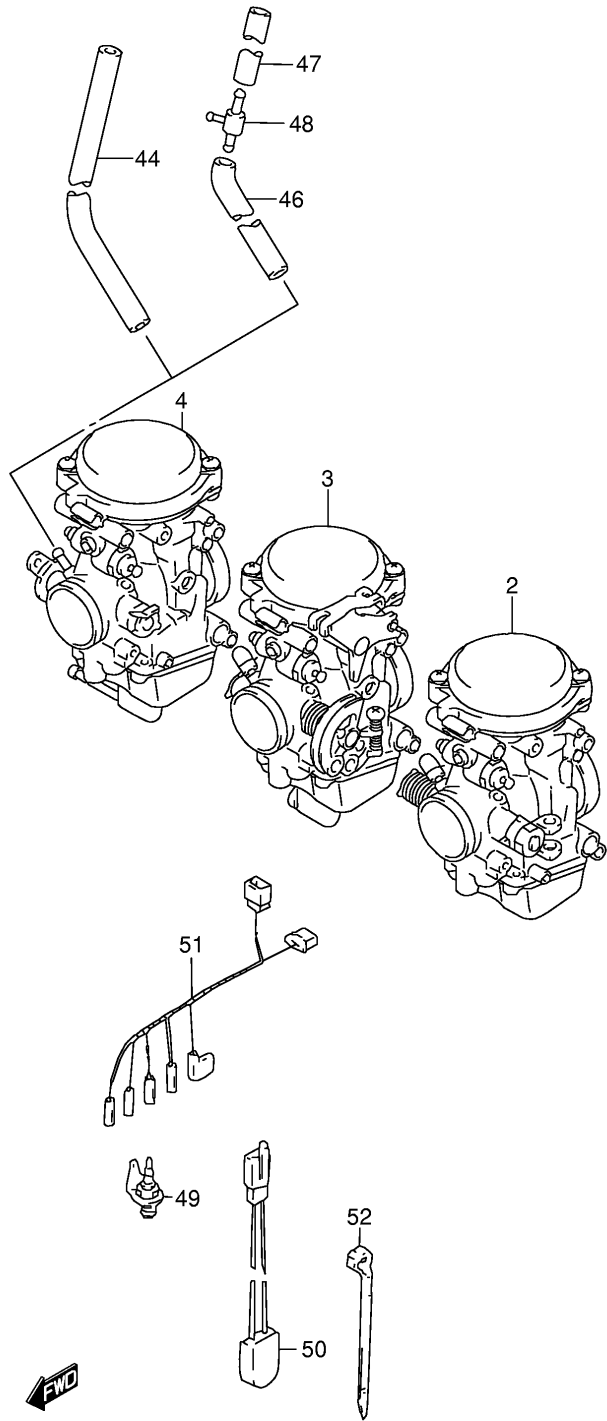  


Ref No	Part No	Description
1	13201-08F60	Carburetor Assy, Lh
1	13201-08F01	Carburetor Assy, Lh
2	13202-08F60	Carburetor Assy, Ml
2	13202-08F01	Carburetor Assy, Ml
3	13203-08F60	Carburetor Assy, Mr
3	13203-08F01	Carburetor Assy, Mr
4	13204-08F60	Carburetor Assy, Rh
4	13204-08F01	Carburetor Assy, Rh
5	13502-08F00	. Diaphragm Cover
6	13573-33E00	. Spring
7	13418-33E00	. Holder
8	09280-05004	. O Ring
9	13481-33E00	. Spring
10	13382-19E00	. Washer
11	13394-17E60	. E Ring, Multiple Jet Nozzle
12	13387-44030	. Ring
13	13291-29FA0	. Washer
14	13383-08F60	. Needle, Jet (5df25-3)
14	13383-08F00	. Needle, Jet (5df20-52-3)
15	13507-17C01	. Diaphragm
16	13501-08F00	. Valve, Piston
17	13341-19E60	. Jet, Needle (p-0m)
17	09494-00910	. Jet, Needle (p-0)
18	13385-08F00	. Holder, Jet
19	13246-43010	. O Ring
20	09491-23019	. Jet, Main (117.5)
21	13370-08F50	. Valve Assy, Needle (2.5)
22	13250-04F00	. Float Assy
23	02112-04083	. Screw
24	13602-05A10	. Screw
25	13254-01010	. Pin, Float
26	13258-04F00	. Gasket
27	09493-28013	. Jet, Pilot Air (140)
27	09492-26002	. Jet, Pilot Air (130)
28	09492-12008	. Jet, Pilot (12.5)
28	09492-15017	. Jet, Pilot (15)
29	09491-50006	. Jet, Starter (50)
30	13295-29900	. O Ring
31	13291-29900	. Washer
32	13268-48700	. Spring
33	13279-33E00	. Adjuster (3,1/2)
33	13279-33E00	. Adjuster, Lh/rh (2.0)
33	13279-33E00	. Adjuster, Ml/mr (1,1/2)
34	02112-04107	. Screw
35	13247-13A00	. Screw, Drain
36	13247-33E00	. Screw
37	13411-05300	. Plunger
38	13417-26D00	. Spring
39	13278-47090	. O Ring
40	13418-44080	. Holder, Guide
41	13682-31210	. Cap, Starter Valve
42	13274-84000	. Cap
43	09401-06101	. Clip



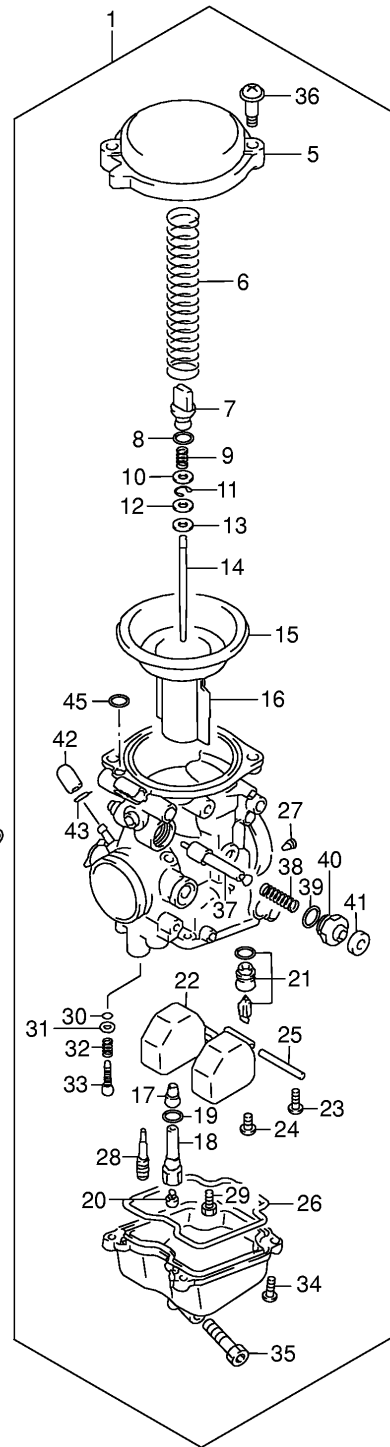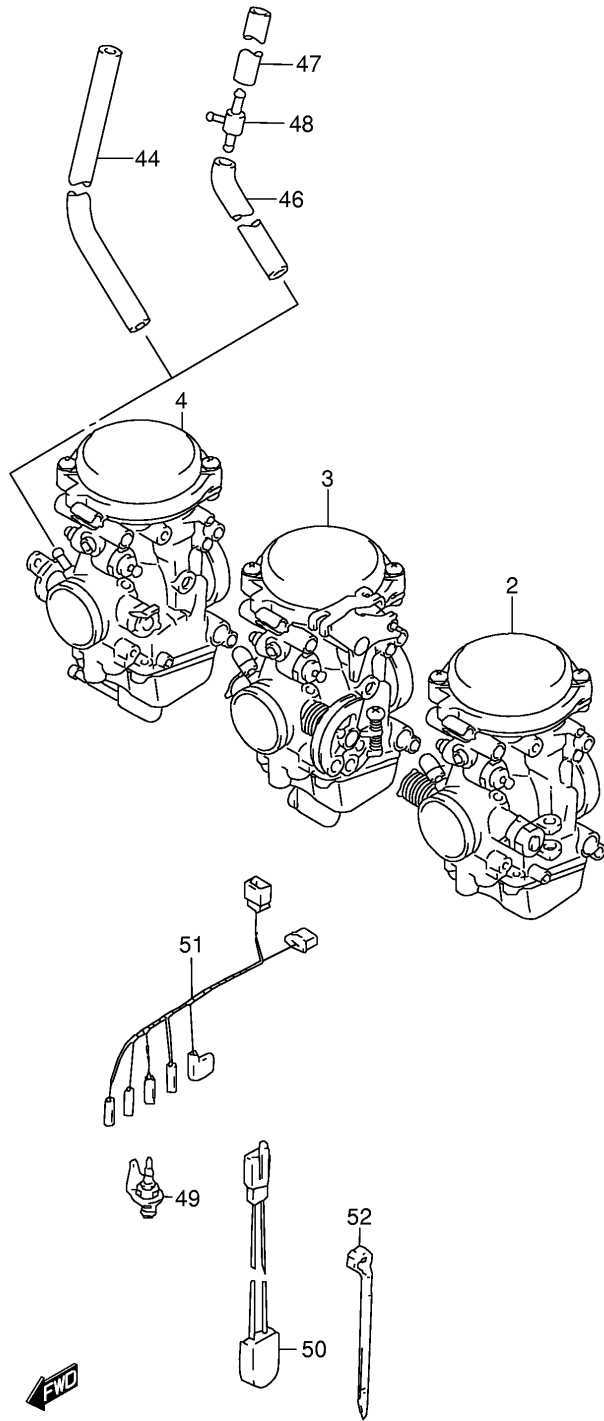  


Ref No	Part No	Description
44	09355-50105-600	. Hose
45	13295-33010	. O Ring
46	09352-50901-600	. Hose
47	09352-50903-600	. Hose
48	13685-48B00	. Nipple
49	13650-25E01	Heater Assy, Carburetor
50	13655-16F00	Thermo Switch
51	36856-21E00	Wire, Carb Heater
52	09408-00100	Clamp

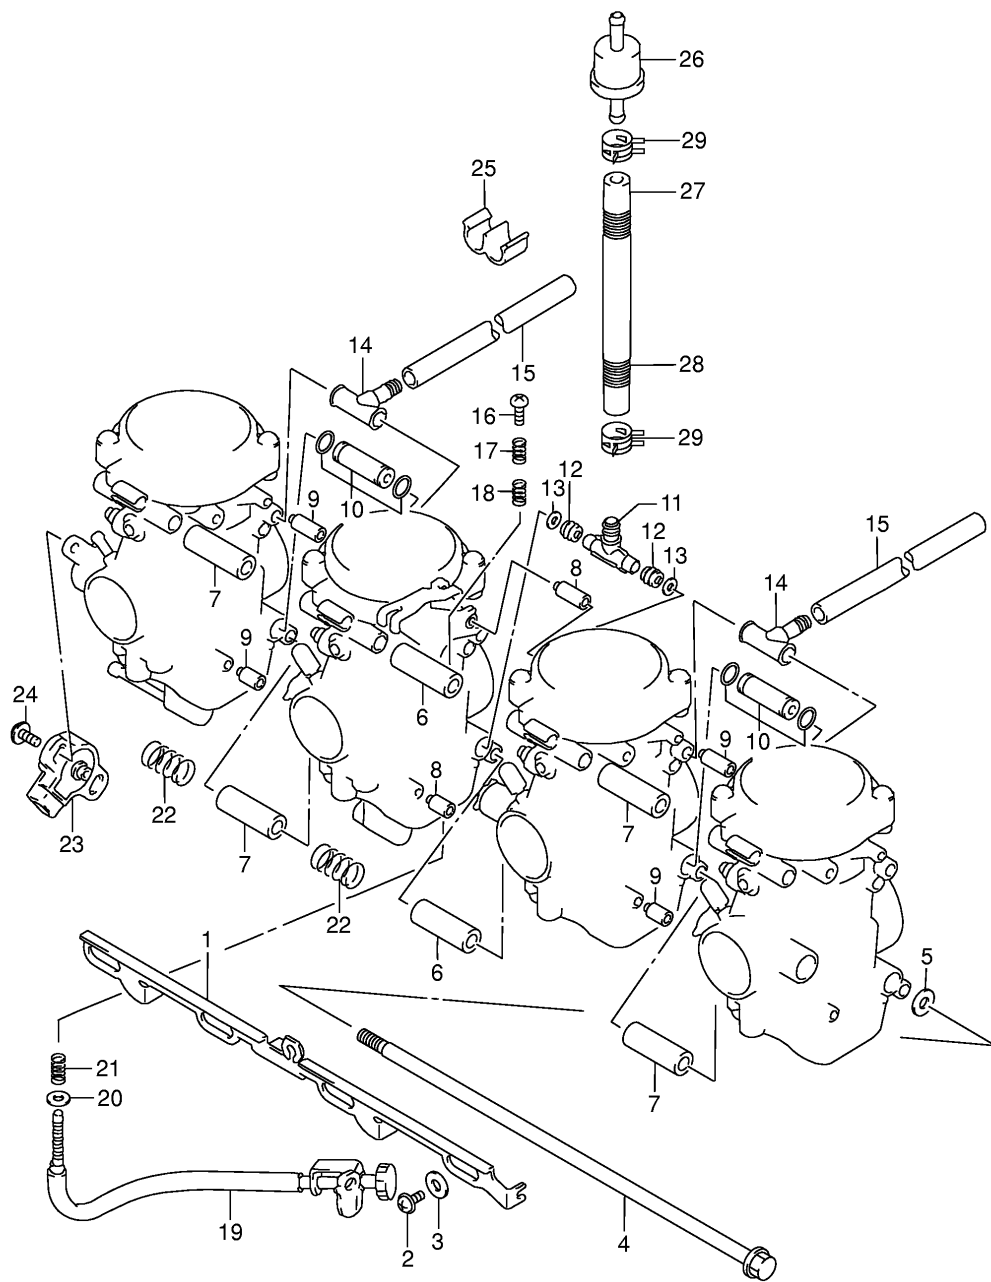 


Ref No	Part No	Description
1	13413-19E00	Lever
2	02142-04083	Screw
3	13557-33E00	Packing
4	13612-33E00	Bolt
5	08322-01063	Washer
6	13685-19E20	Pipe
7	13685-34E00	Pipe
8	13685-19E00	Rod
9	13685-19E30	Rod
10	13685-08F00	Pipe Assy
11	13685-16E00	Nipple
12	13673-44B00	Seal
13	13531-09300	Washer
14	13683-01DB0	Hose
15	13684-40C00	Hose
16	13267-44B00	Screw
17	13271-44B00	Spring
18	13268-96111	Spring
19	13267-19E00	Adjust Screw Assy
20	13615-43010	Washer
21	13444-61A00	Spring
22	13573-06C10	Spring
23	13550-13D60	Sensor Assy, Throttle
24	13605-20C00	Screw, Sensor
25	09408-00100	Clamp, Air Vent Hose
26	15410-19E00	Strainer, Fuel
27	09355-70125-600	Hose, Fuel
28	09440-14030	Protector
29	09401-11407	Clip



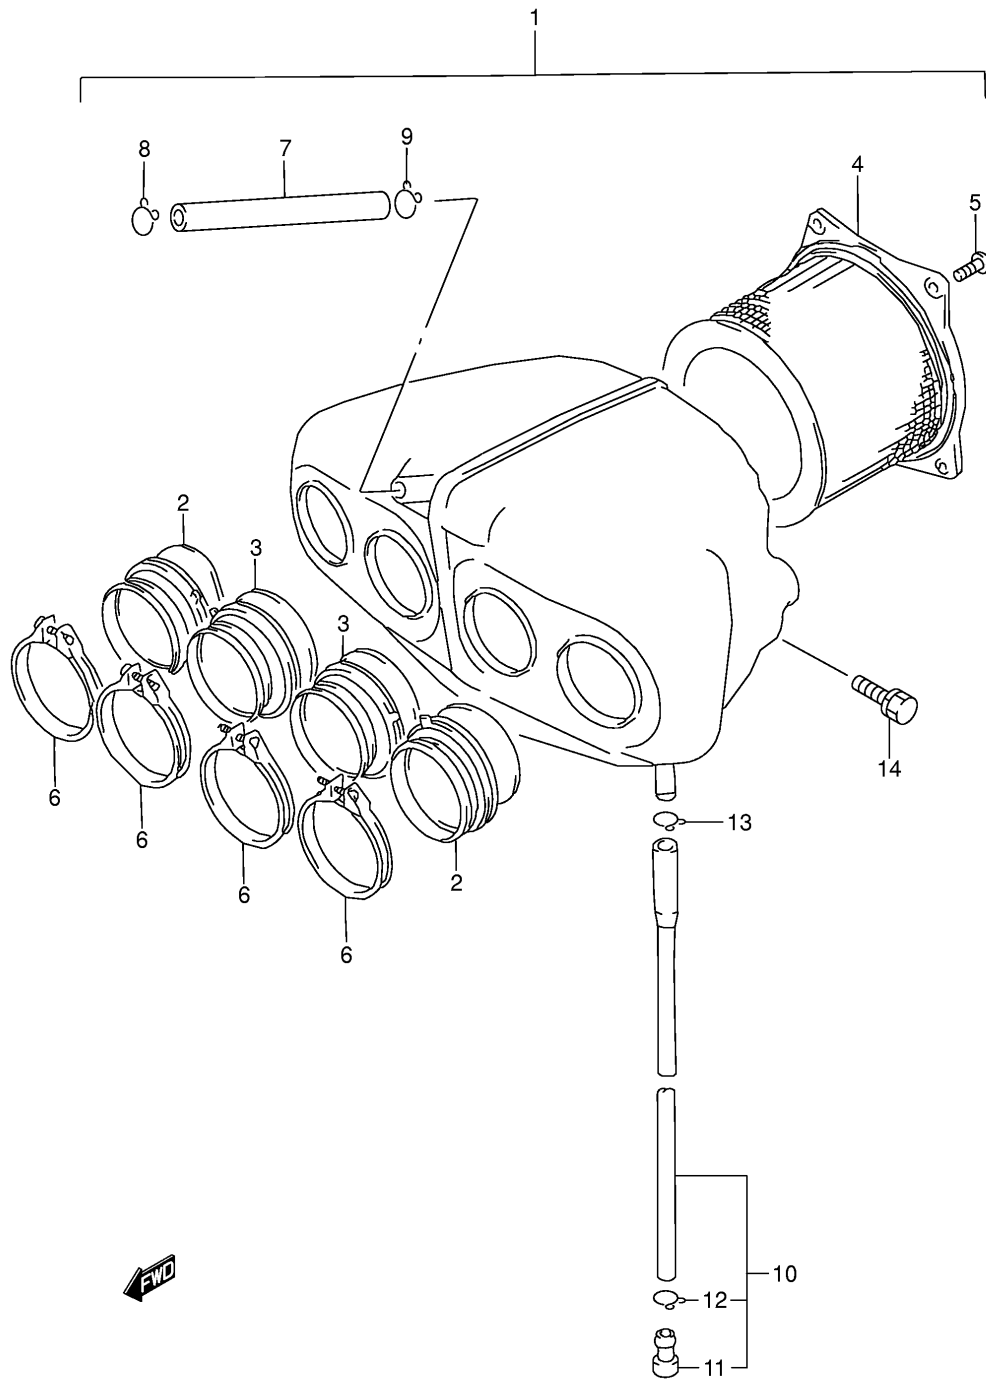 


Ref No	Part No	Description
1	13700-08F00	Cleaner Assy, Air
2	13881-08F00	. . Tube, Outlet Outside
3	13882-08F00	. . Tube, Outlet Inside
4	13780-20C00	. . Filter
5	02142-05123	. . Screw
6	09402-64203	. . Clamp
7	13853-19C00	. . Tube, Breather
8	09401-14301	. . Clip
9	09401-16401	. . Clip
10	13870-11458	. . Tube, Drain
11	13877-38A00	•• . Stopper
12	09401-13409	•• . Clip
13	09401-13409	. . Clip
14	01580-06163	Screw

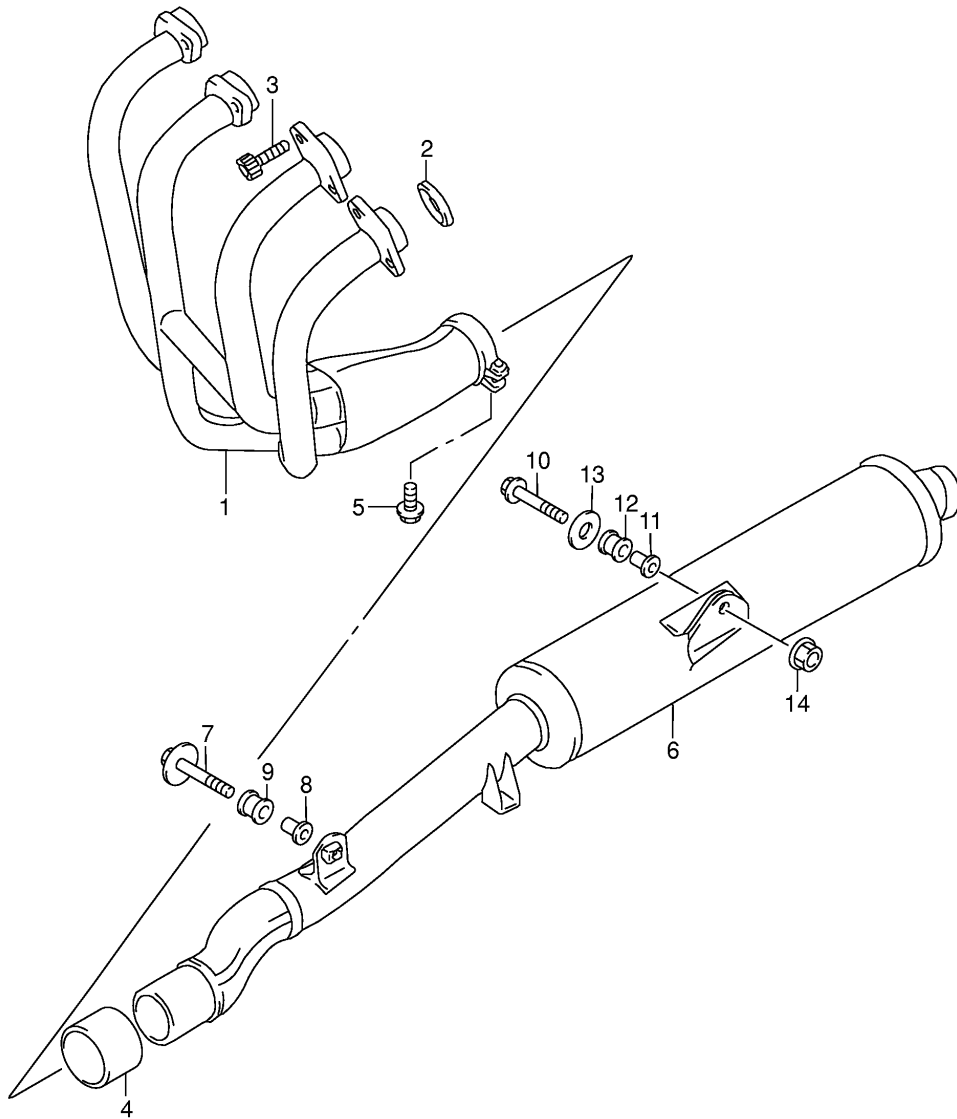 


Ref No	Part No	Description
1	14100-19E10	Exhaust
2	14181-18C00	Gasket, Exhaust Pipe
3	07130-08253	Bolt, Exhaust Pipe (green)
4	14771-27E00	Connector, Muffler
5	01550-08403	Bolt, Muf Connector
6	14305-19E20	Muffler
6	14305-19E30	Muffler
7	09118-08068	Bolt (8x40)
8	09180-08152	Spacer, Muf Sprt, Fr (l:24.2)
9	09320-12048	Cushion, Muf Sprt, Fr
10	09103-08358	Bolt, Muf Sprt, Rr
11	09180-08156	Spacer, Muf Sprt, Rr (l:25.5)
12	09320-12049	Cushion, Muf Sprt, Rr
13	09160-08140	Washer, Muf Support, Rr
14	08361-25088	Nut, Muf Sprt, Rr




Ref No	Part No	Description
1	16600-08F10	Cooler Assy, Oil
2	09118-08131	Bolt (8x40)
3	09180-08304	Spacer
4	16629-27A01	Cushion, No.1
5	16628-27A00	Cushion, No.2
6	16460-08F10	Hose, Oil Cooler, Rh
7	16470-08F10	Hose, Oil Cooler, Lh
8	09360-16002	Bolt, Union (16x32)
9	09168-16002	Gasket
10	09280-12012	O Ring
11	07130-06163	Bolt

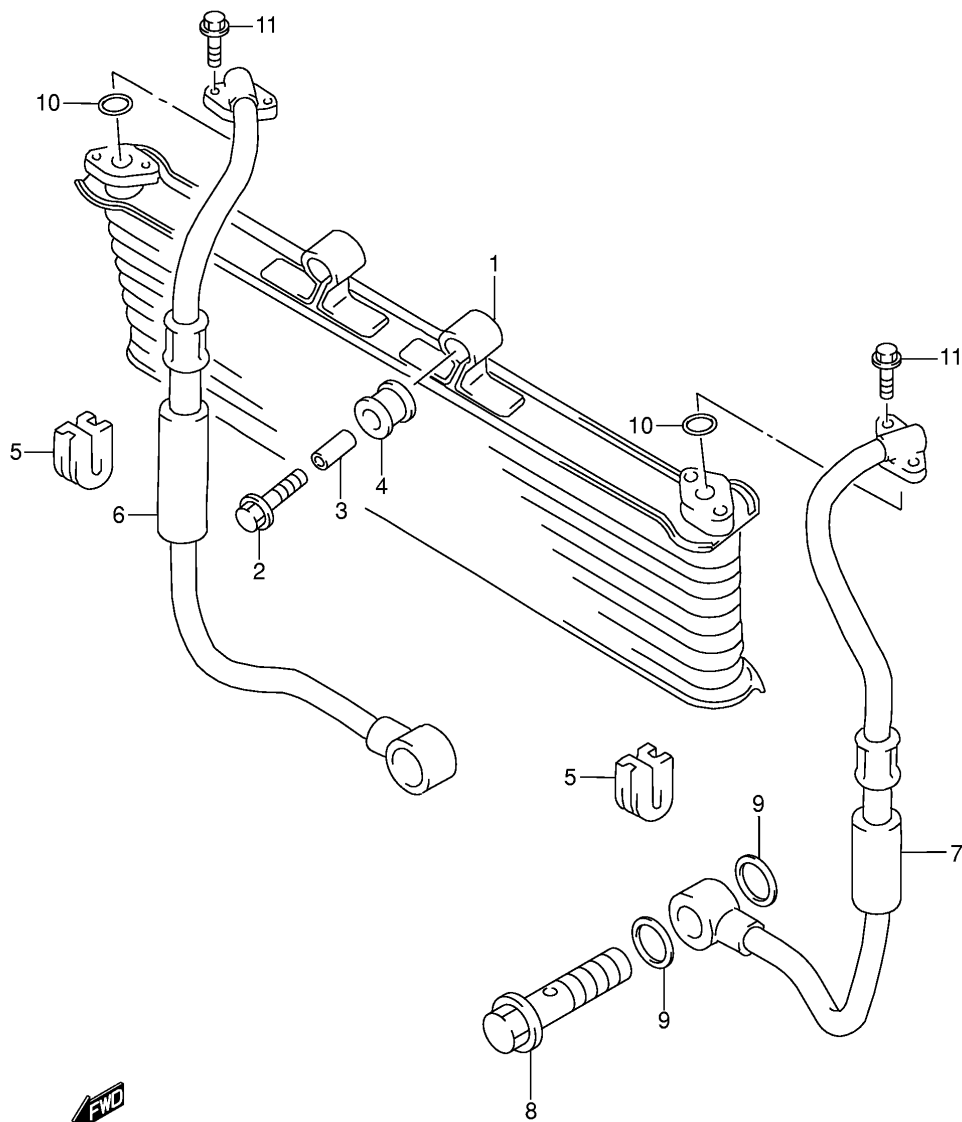 


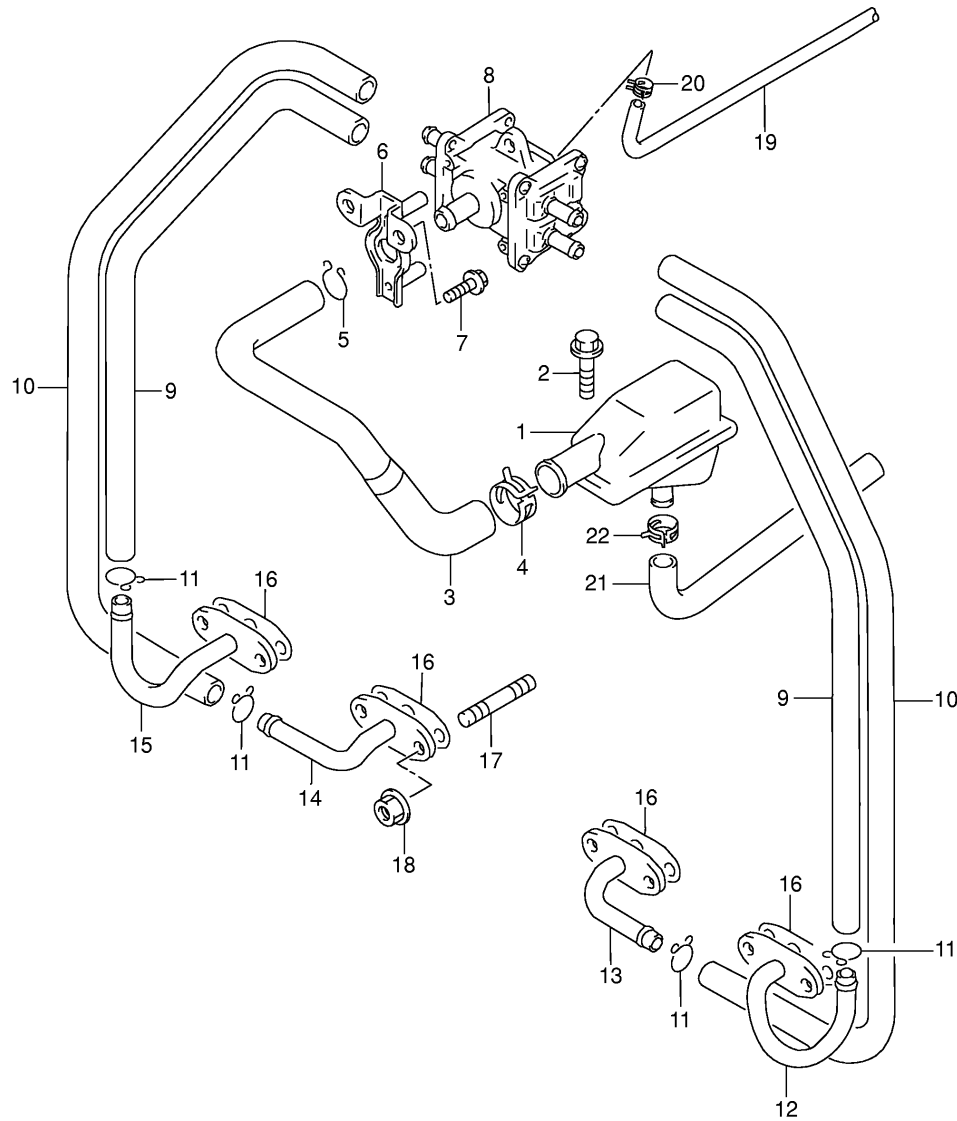 

Ref No	Part No	Description
1	13800-27E00	Cleaner, 2nd Air
2	01550-06163	Bolt
3	18711-08F00	Hose, 2nd Air Cleaner
4	09401-18404	Clip, No.1
5	09401-15401	Clip, No.2
6	18610-08F00	Bracket, 2nd Air Valve
7	01550-06163	Bolt
8	18450-33E12	Valve Assy, 2nd Air
9	18461-08F00	Hose, 2nd Air Valve Outer
10	18471-08F00	Hose, 2nd Air Valve Inner
11	09401-13409	Clip
12	18410-20C00	Pipe, 2nd Air No.1
13	18420-19C02	Pipe, 2nd Air No.2
14	18430-19C02	Pipe, 2nd Air No.3
15	18440-20C00	Pipe, 2nd Air No.4
16	18441-17C11	Gasket, 2nd Air Pipe
17	01421-06163	Bolt, Stud
18	08316-10063	Nut
19	09359-45852-600	Hose, 2nd Air Valve Vacuum
20	09401-07402	Clip
21	18731-08F00	Hose, 2nd Air Cleaner Inlet
22	09401-16403	Clip

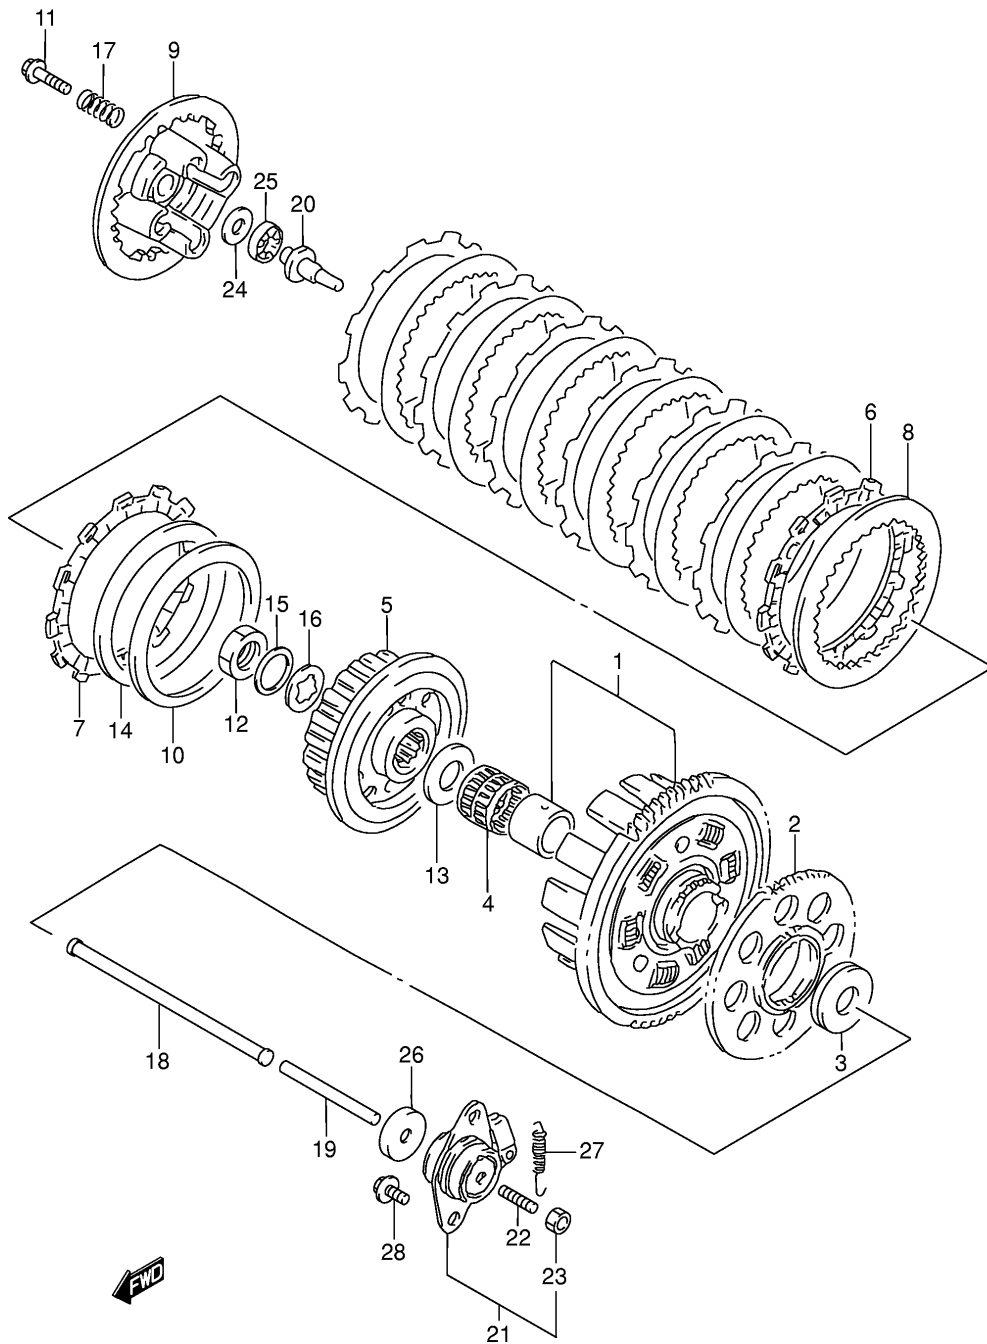 


Ref No	Part No	Description
1	21200-26833	Gear, Primary Driven (nt:75)
2	22721-17D02	Gear, Generator (nt:34/64)
3	09160-25037	Washer (25.1x54x2.5)
4	09263-35017	Bearing (35x40x35.8)
5	21410-27A02	Hub, Clutch Sleeve
6	21441-37430	Plate, Clutch Drive No.1
7	21442-37401	Plate, Clutch Drive No.2
8	21451-05A00	Plate, Clutch Driven
9	21462-27A00	Disk, Clutch Pressure
10	21471-37400	Seat, Clutch Plate Wave Washer
11	09116-06150	Bolt (6x25)
12	09140-22008	Nut, Clutch Sleeve Hub
13	09160-25056	Washer (25x50x2.5)
14	09164-00004	Washer
15	09164-22007	Washer (22.2x35x2)
16	09181-22251	Washer (22x36x1.0)
17	09440-20020	Spring, Clutch
18	23110-20C00	Rod, Clutch Push, Rh
19	23111-15501	Rod, Clutch Push, Lh
20	23121-27A00	Piece, Clutch Push
21	23200-31300	Screw Assy, Clutch Release
22	09134-06010	• . Screw (6x25)
23	08310-00067	• . Nut
24	09160-15045	Washer (15.5x28x1)
25	09263-15003	Bearing, Clutch (15x28x2)
26	09285-06015	Seal, Clutch (6x34x5.5)
27	09443-07038	Spring, Clutch Return
28	01550-06163	Bolt, Clutch Screw

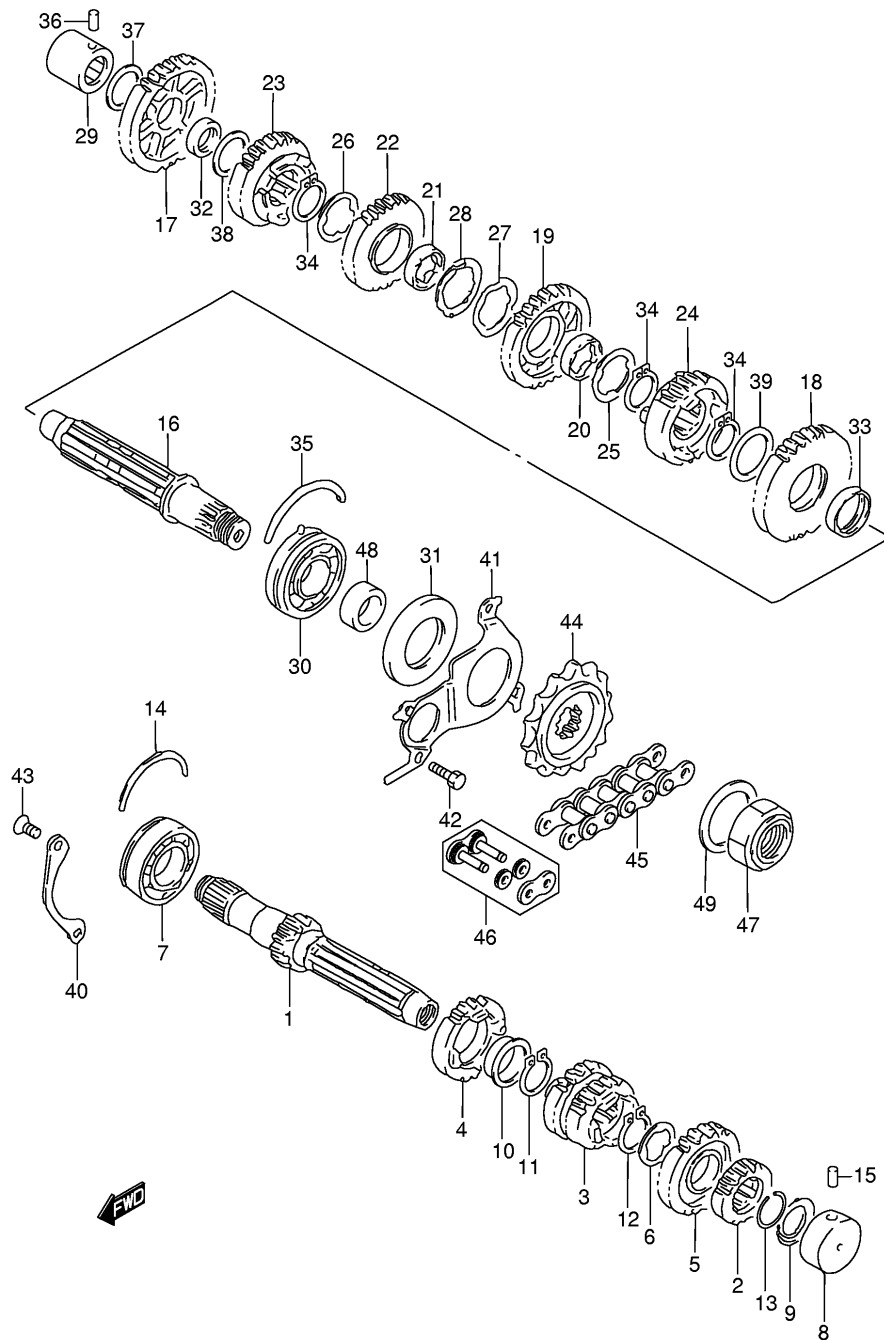 


Ref No	Part No	Description
1	24121-19C01	Shaft, Cntr (nt:12)
2	24221-27A01	Gear, 2nd Drive (nt:16)
3	24231-27A00	Gear, 3/4th Drive (nt:17/20)
4	24251-27A01	Gear, 5th Drive (nt:22)
5	24261-17C02	Gear, 6th Drive (nt:21)
6	09167-25012	Washer, 6th Drive (25.1x31x1)
7	09262-25051	Bearing, Cntr Shaft, Rh
8	09263-20049	Bearing, Cntr Shaft, Lh
9	09285-20006	Seal, Oil (20x31.2x2.7)
10	24322-19F00	Bush, 5th Drive Gear
11	09380-25003	Circlip, 5th Gear
12	09380-25003	Circlip, 6th Gear
13	09380-25013	Circlip, 2nd Gear
14	09390-62012	C Ring, Cntr Brg, Rh
15	04221-07129	Pin, Cntr Brg, Lh
16	24131-20C31	Shaft, Drive
17	24311-19C10	Gear, 1st Driven (nt:37)
18	24321-20C00	Gear, 2nd Driven (nt:33)
19	24331-27A00	Gear, 3rd Driven (nt:28)
20	24332-27A00	Bush, 3rd Driven
21	24332-27A00	Bush, 4th Driven
22	24341-27A01	Gear, 4th Driven (nt:28)
23	24351-27A00	Gear, 5th Driven (nt:27)
24	24361-20C01	Gear, 6th Driven (nt:23)
25	09167-28001	Washer, 3rd Lh (28.1x38x1)
26	09167-28001	Washer, 4th Rh (28.1x38x1)
27	09167-28002	Washer, 3rd Rh (28.1x43x1.5)
28	09169-28001	Washer, 3rd Rh (28.1x40x1)
29	09263-20040	Bearing, Drive Shaft Rh
30	09267-25011	Bearing, Drive Shaft Lh
31	09283-34005	Seal, Drive Shaft Oil
32	09300-22008	Bush, 1st Driven Gear
33	09300-28003	Bush, 2nd Driven Gear
34	08331-31286	Circlip, 2nd/3rd/4th
35	09390-62012	C Ring, Drive Brg, Lh
36	04221-07209	Pin, Drive Shaft Brg, Rh
37	09181-20251	Washer, 1st,rh (20x34x1.0)
38	09181-22223	Washer, 1st,lh (22x34x1.0)
39	09181-28195	Washer, 2nd (28x38x1.0)
40	24741-27A00	Retainer, Cntr Shaft
41	24751-40C01	Retainer, Drive Shaft
42	01500-06123	Bolt, Drive Shaft
43	09126-06011	Screw, Cntr Shaft (6x12)
44	27510-17C10	Sprocket, Engine (nt:15)
45	27600-16G00-116	Chain Assy (rk 50sm0z1)
46	27620-16G00	Joint Set, Chain
47	09159-20004	Nut, Engine Sprocket
48	09180-25091	Spacer, Engine Sprocket
49	09181-25268	Washer, Sprocket (25x40x1.5)


Ref No	Part No	Description
--------	---------	-------------

1	25211-27A12	Fork, Gear Shift No.1
2	25221-27A01	Fork, Gear Shift No.2
3	25231-27A00	Fork, Gear Shift No.3
4	25411-27A00	Shaft, Gear Shift Fork
5	25310-27A03	Cam, Gear Shift
6	25322-31310	Gear, Gear Shift Cam
7	25323-34201	Pole, Gear Shift No.1
8	25324-34201	Pole, Gear Shift No.2
9	25331-31301	Lifter, Gear Shift Pole
10	25341-27A00	Guide, Cam
11	09261-05003	Pin, Gear
12	09263-43001	Bearing, Gear Rh (43x49x12)
13	09440-04003	Spring, Gear Return
14	09126-06011	Screw, Cam Guide
15	09126-06011	Screw, Pole
16	08113-69050	Bearing, Gear Lh
17	08331-41426	Circlip, Gear
18	25350-27A00	Stopper, Gear Shift Cam
19	25353-27A00	Shaft, Gear Shift Stopper
20	25381-38400	Plate, Gear Shift Stopper
21	09168-10002	Gasket, Gear Shift Stopper
22	09443-09033	Spring, Gear Shift Stopper
23	04221-04069	Pin, Tear Shift Stopper
24	08331-31086	Circlip, Gear Shift Cam
25	08331-31256	Circlip, Shift Cam Stopper
26	25510-19C01	Shaft, Gear Shift
27	25520-47000	Arm, Gear Shift Link
28	25526-47000	• . Cover, Dust
29	25525-12C10	Rod, Gear Shift Link
30	25671-01011	Stopper, Gear Shift Arm
31	09160-12090	Washer, Gear (12.5x26x1.6)
32	09285-12002	Seal, Gear Shift (12x22x9.0)
33	09444-26017	Spring, Gear Shift Return
34	08331-31126	Circlip, Gear
35	01500-06203	Bolt, Gear Shift Link
36	08310-00067	Nut, Gear Shift Link
37	09140-06025	Nut, Gear Shift Lh
38	25600-19C04	Lever Assy, Gear Shift
39	25652-20C00	• . Rubber, Gear Shift
40	25526-47000	• . Cover, Dust
41	25617-20A00	Shaft, Gear Shift Lever
42	09160-12011	Washer (12.5x20x1)
43	08316-10103	Nut
44	08331-31126	Circlip
45	33885-27A01	Grommet, Lead Wire
46	37720-20C00	Terminal Base Assy, Neutral
47	09209-05011	Contact, Neutral Sw
48	09280-35006	O Ring (d:2.40,id:35.5)
49	09440-04010	Spring, Neutral Sw
50	09138-05015	Screw, Neutral Sw (5x16)

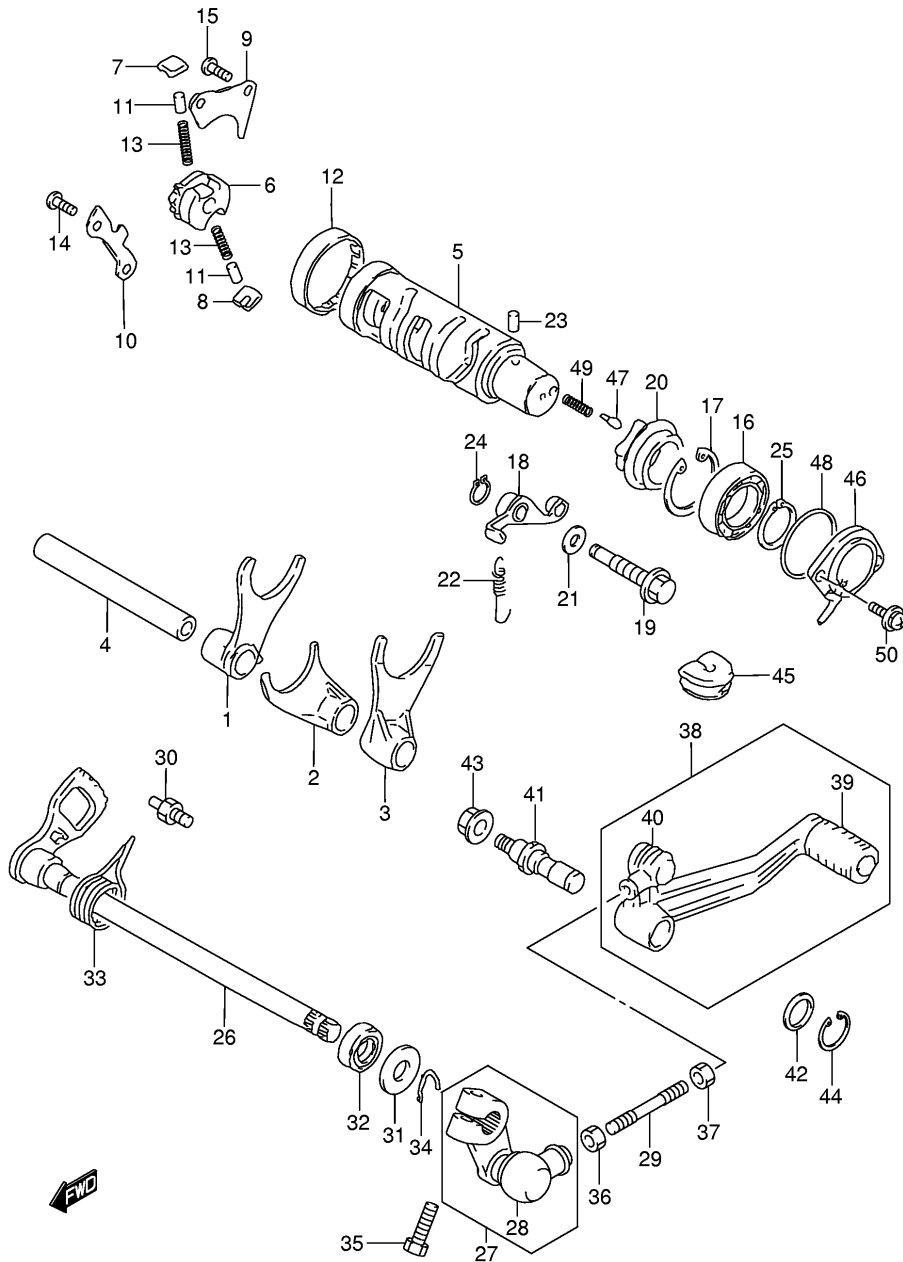 


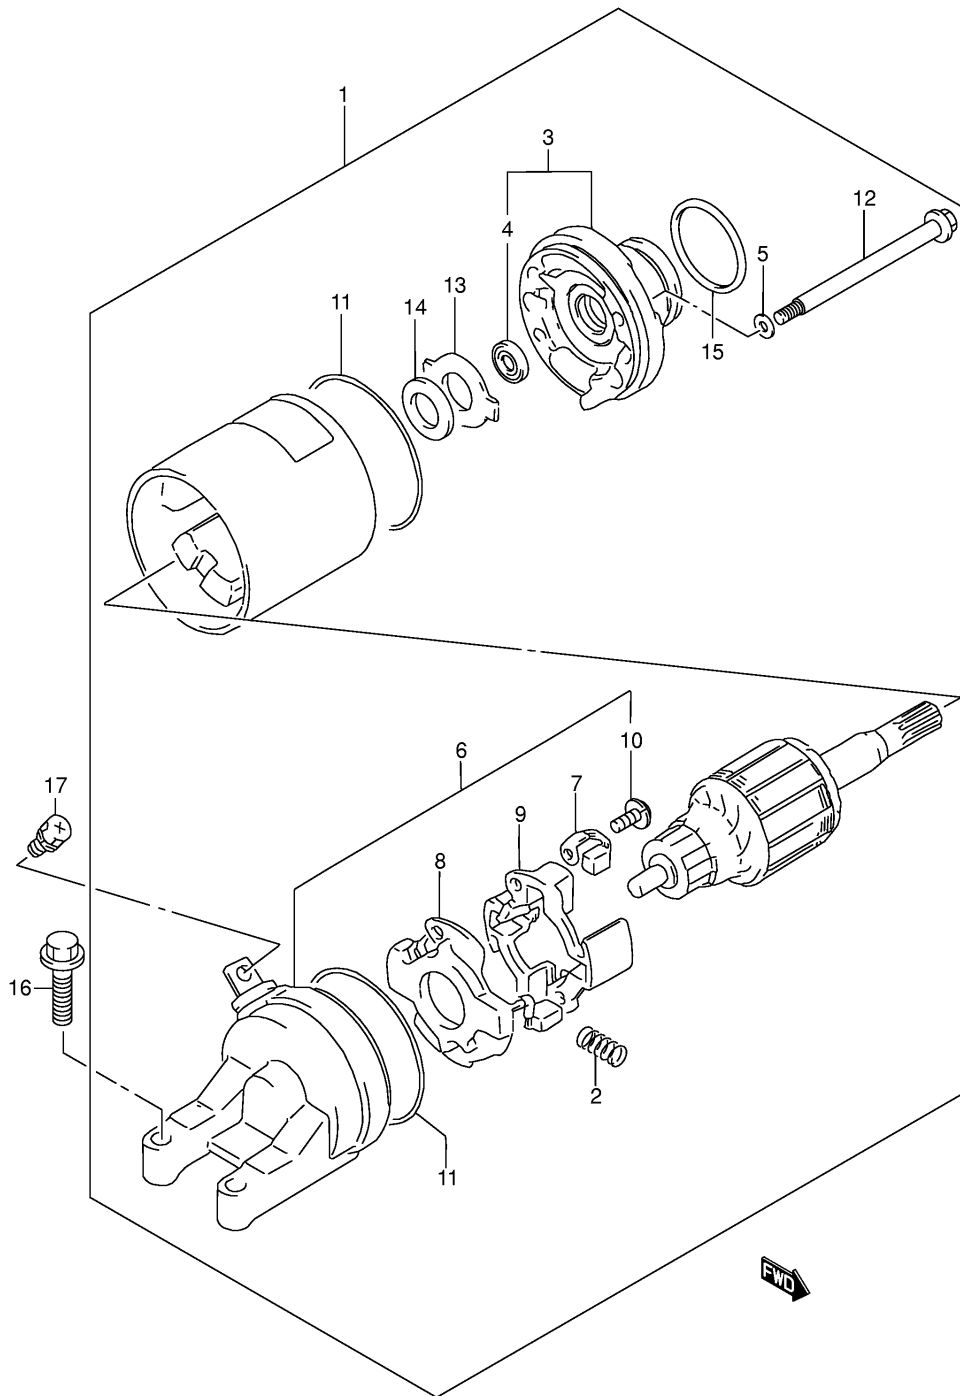 


Ref No	Part No	Description
1	31100-08F00	Motor Assy, Starting
2	31135-32C10	• . Spring
3	31150-08F00	• . Bracket
4	31153-49210	•• .. Oil Seal
5	31156-08F00	• . O Ring
6	31175-08F00	• . Frame Assy, Commutator
7	31132-32C10	•• .. Brush
8	31130-32C20	•• .. Brush Sub Assy
9	31133-32C10	•• .. Holder, Brush
10	02112-34123	•• .. Screw
11	31264-32C10	• . O Ring
12	31281-32C10	• . Bolt
13	31361-32C10	• . Plate, Lock
14	31361-38300	• . Shim, No.3
15	09280-24003	• . O Ring (d:3,id:24.5)
16	09128-06024	Bolt, Motor (6x25)
17	09137-05004	Screw, Motor Lead (5x8)

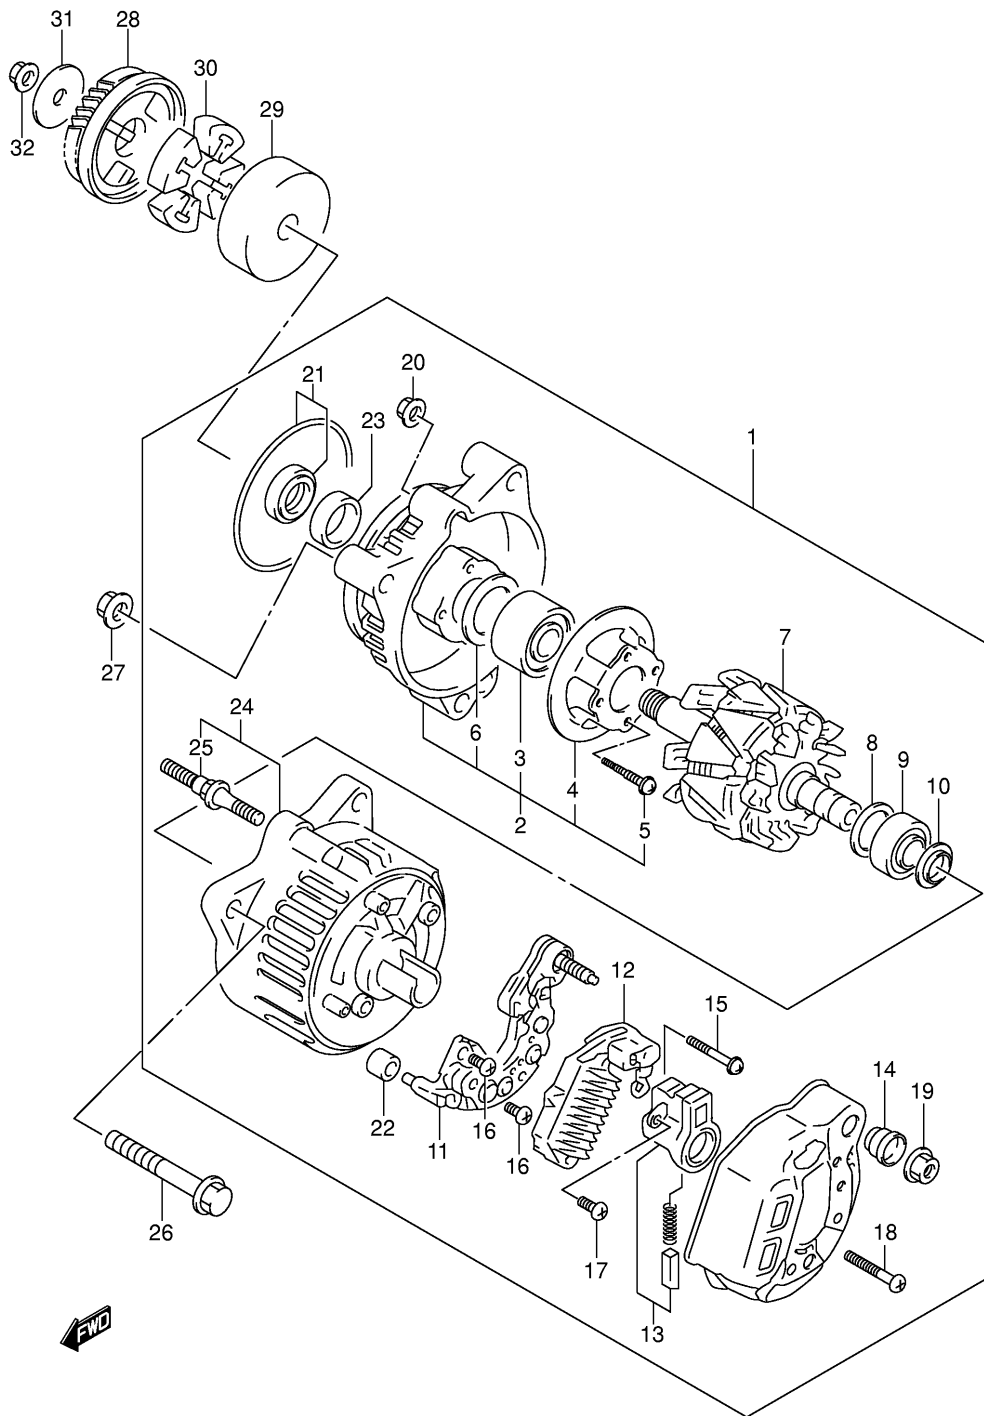 


Ref No	Part No	Description
1	31400-03F40	Alternator Assy
2	31580-03F00	. . Frame, Drive End
3	31612-06B00	•• .. Bearing
4	31585-03F00	•• .. Retainer
5	31586-03F00	•• .. Screw (4x14)
6	31613-48B00	•• .. Cover, Bearing
7	31710-03F00	. . Rotor Assy
8	31613-82610	. . Cover, Bearing
9	31612-48B00	. . Bearing
10	31613-27A10	. . Cover, No.2
11	31621-03F00	. . Holder, Rectifier
12	32500-03F10	. . Regulator Assy
13	31656-03F00	. . Holder, Brush
14	31514-85250	. . Insulator, Terminal
15	02112-34253	. . Screw
16	02112-04063	. . Screw
17	02112-04087	. . Screw
18	02112-04253	. . Screw
19	08361-15063	. . Nut
20	08316-10053	. . Nut
21	31780-27X50	. . Service Kit, A
22	31780-03F02	. . Service Kit, B
23	31776-06B00	. . Spacer
24	31611-03F40	. . Frame, End
25	31587-85250	•• .. Stud Bolt
26	01550-08653	Bolt
27	08361-35068	Nut
28	22730-19C02	Gear, Generator Driven (nt:30)
29	22733-27A05	Housing Damper
30	21231-06B00	Damper
31	08211-10283	Washer
32	08316-20103	Nut

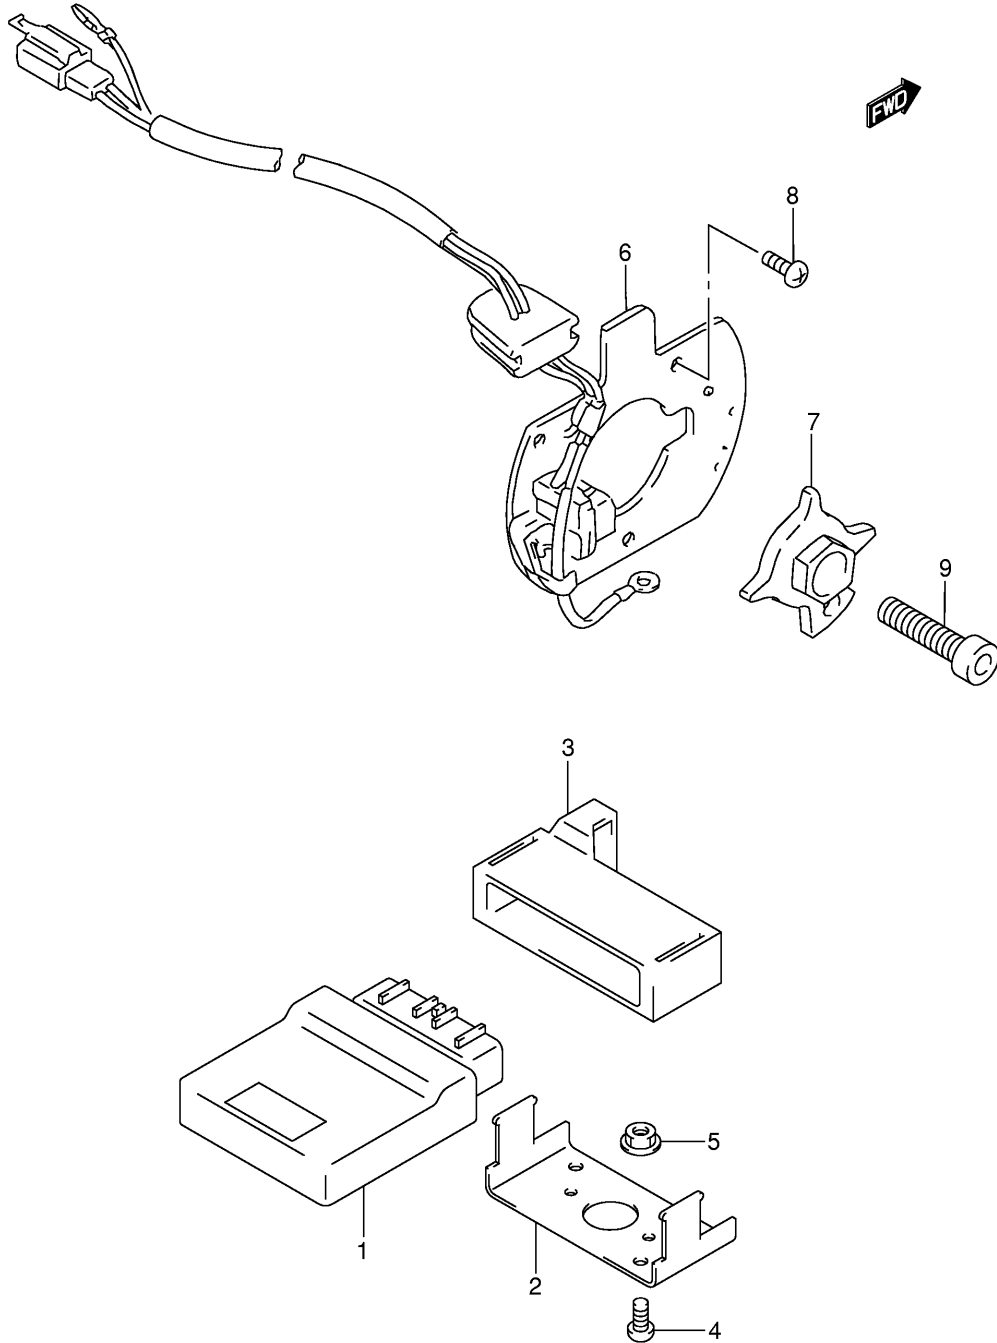 

Ref No	Part No	Description
1	32900-08FL0	Igniter Assy
2	32933-08F10	Bracket, Igniter
3	32980-41F00	Cushion, Igniter
4	02142-05123	Screw
5	08316-10053	Nut
6	33110-31F00	Stator, Signal Generator
7	33120-19C20	Rotor, Signal Generator
8	02112-05103	Screw, Stator
9	07130-08303	Bolt, Rotor

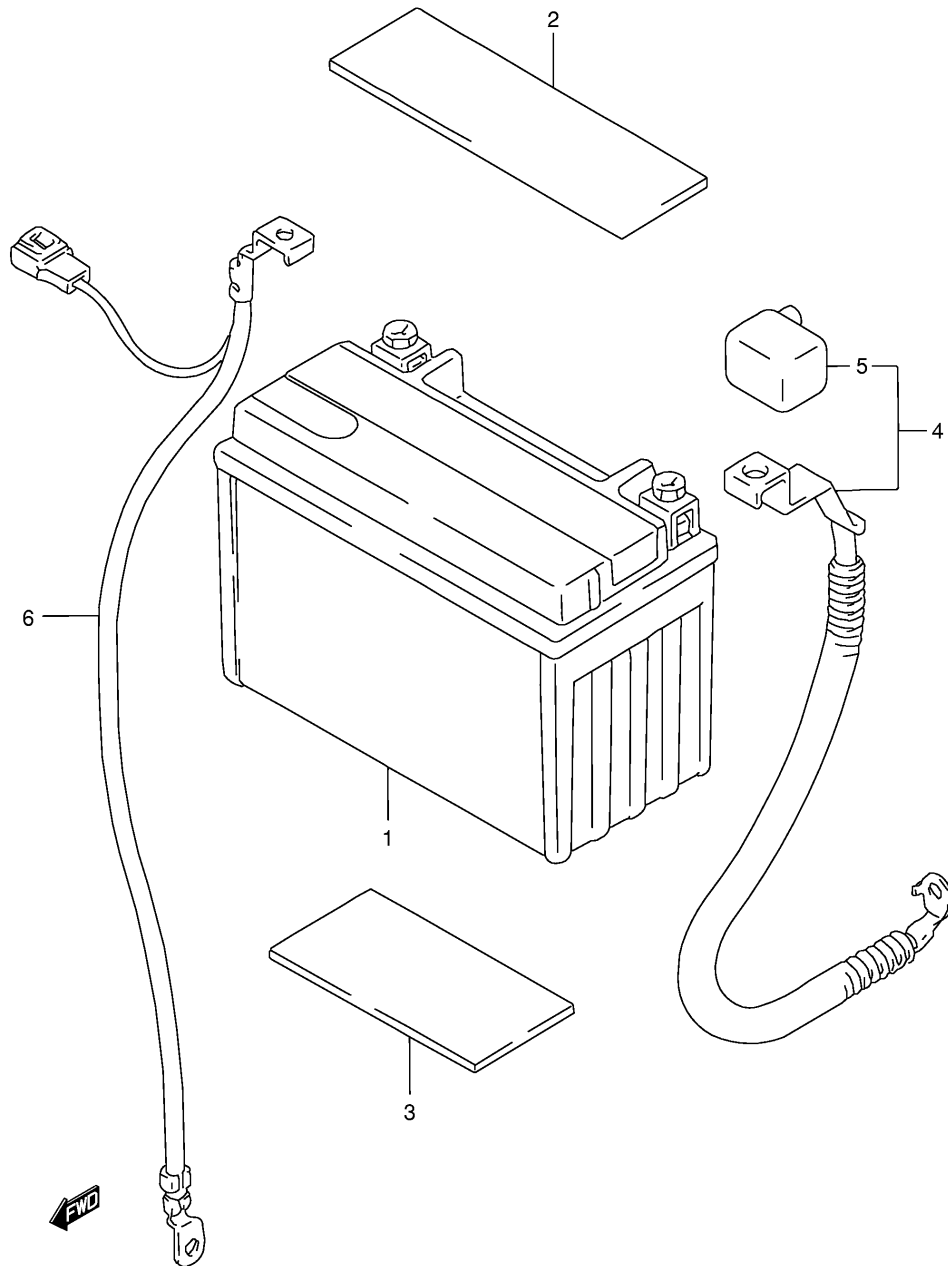 


Ref No	Part No	Description
1	33610-33E20	Battery Assy (12v,8ah)
2	33651-37000	Protector (170x95x3.0)
3	33652-35400	Protector (20x50x8.0)
4	33820-48E00	Wire, Battery Plus Lead
5	33624-16E00	• . Cap, Battery Plus
6	33860-08F00	Wire, Battery Minus Lead

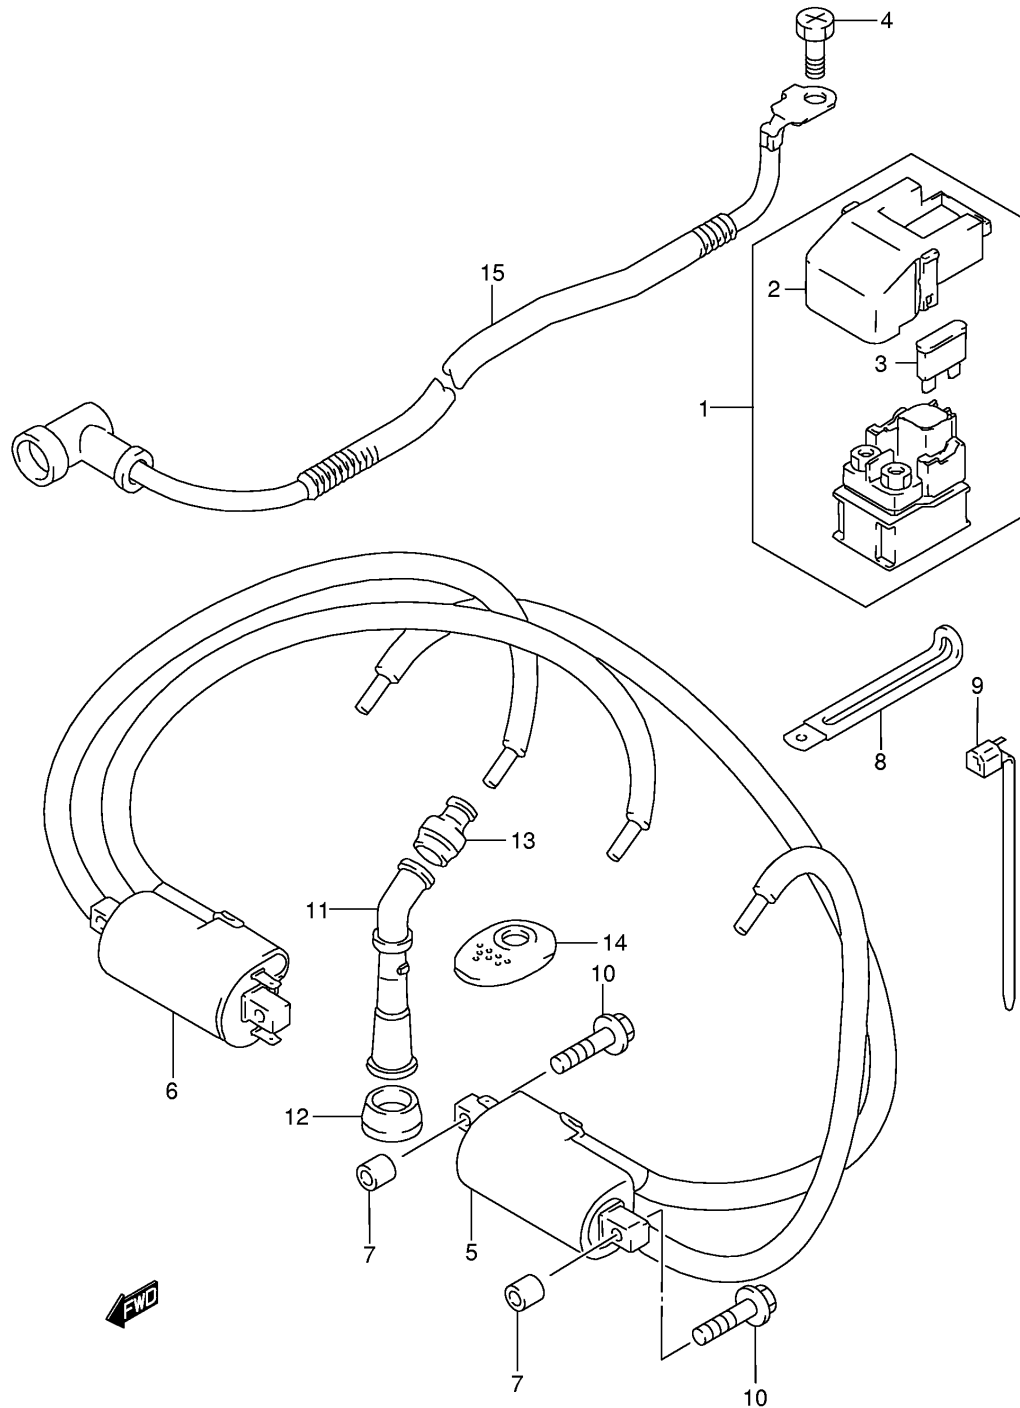 


Ref No	Part No	Description
1	31800-21E20	Relay Assy, Starting
2	31861-47E00	• . Cover
3	09481-30101	• . Fuse (30a)
4	09128-06013	Bolt, Starting Motor (6x8)
5	33410-19C01	Coil Assy, Ignition No.1
6	33420-19C01	Coil Assy, Ignition No.2
7	09180-06174	Spacer, Ign Coil (6.2x12.6x14)
8	09404-06431	Clamp, Ht Cord (l:65)
9	09407-18402	Clamp, Ht Cord (l:165)
10	01550-06453	Bolt, Ign Coil
11	33510-48B10	Cap, Spark Plug
12	33541-23E01	Seal, Spark Plug
13	33542-38B00	Seal, High Tension Cord
14	33543-48B00	Cover, Spark Plug Cap
15	33810-08F00	Wire, Battery Minus



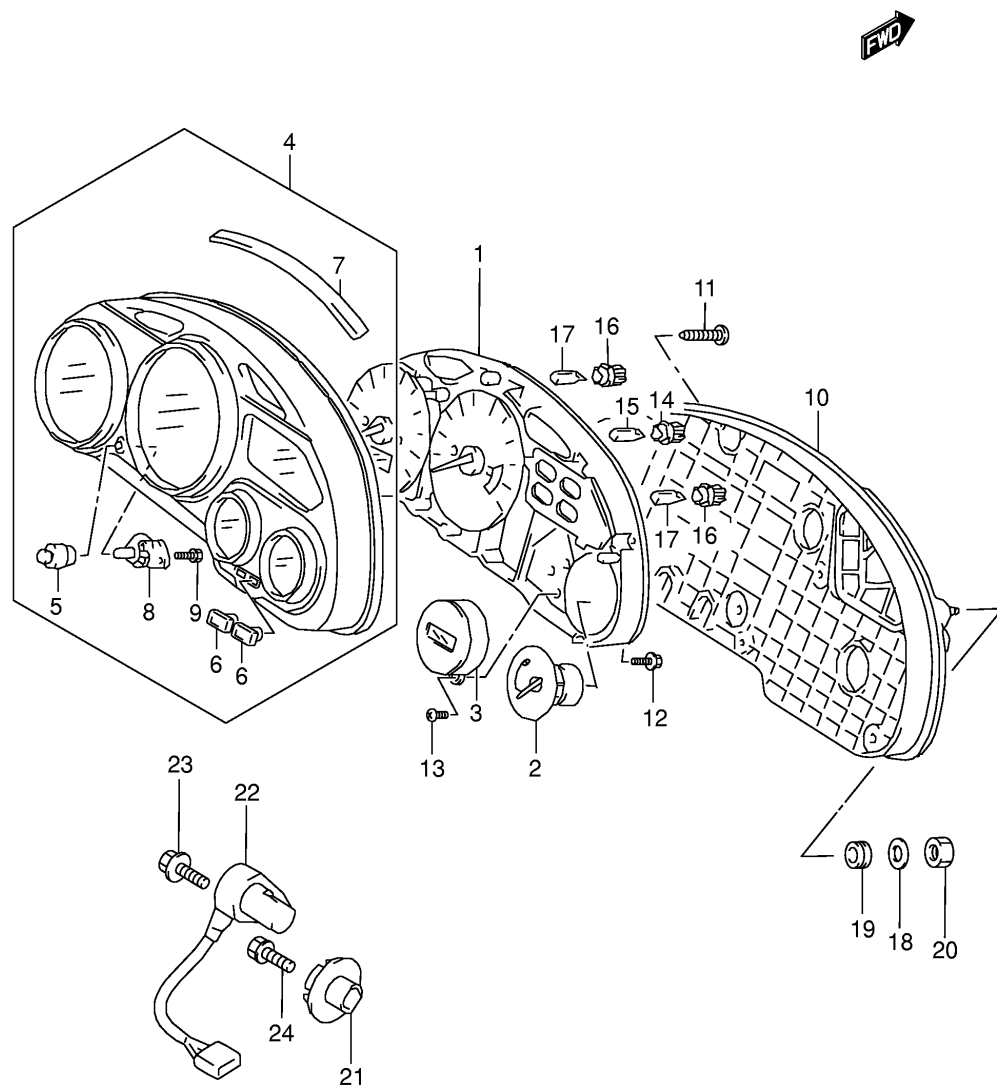 


Ref No	Part No	Description
1	34120-08FC0	Speedometer (mile/kilo)
1	34120-08FB0	Speedometer (kilo)
2	34320-08F90	Fuel Meter
3	34720-08F50	Clock Assy
4	34150-08F50	Visor Assy
5	34124-33E00	. Switch, Gum (trip)
6	34661-21EA0	. Switch, Gum (clock)
7	34153-21EA0	. Packing
8	34123-33E00	. Attachment, Switch
9	09132-03005	. Screw, Pan Head (3x10)
10	34130-21EA1	Case Assy
11	03541-04203	Screw
12	02112-73207	Screw
13	03511-04163	Screw
14	34172-33E00	Socket (t6.5)
15	09471-12108	Bulb (12v,1.7w,t6.5)
16	34175-78900	Socket (t5)
17	09471-12055	Bulb (12v,1.4w,t5)
18	09160-06054	Washer (6.5x22x1.6)
19	09320-08053	Cushion
20	08310-00063	Nut
21	34981-35F00	Rotor, Speed
22	34990-35F00	Sensor, Speed
23	07120-05123	Bolt, Speed Sensor
24	07130-08253	Bolt, Speed Rotor

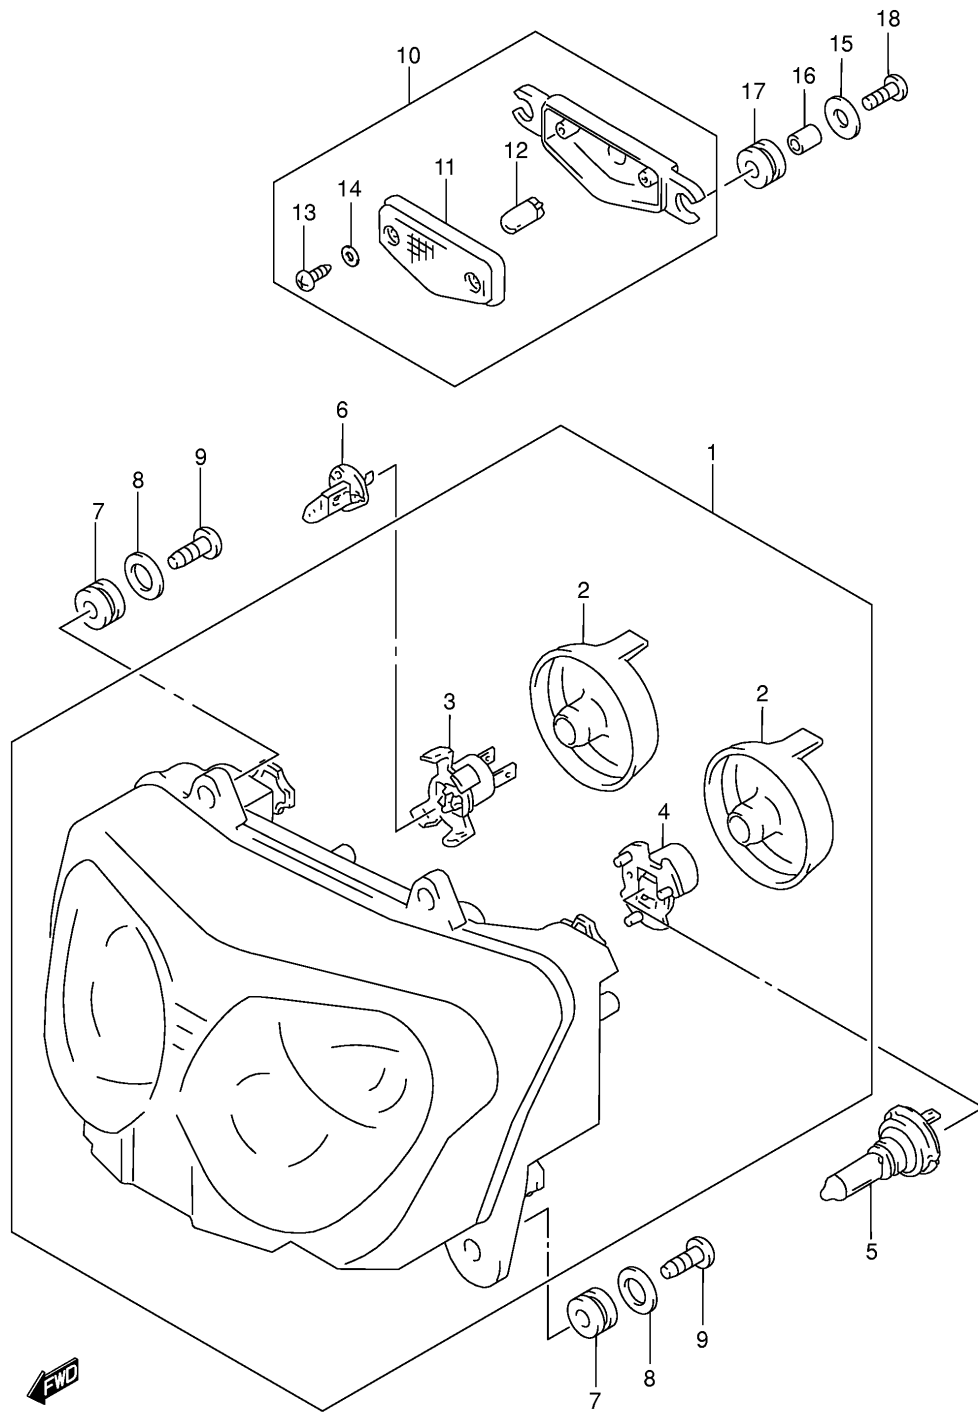 


Ref No	Part No	Description
1	35100-08F20-999	Headlamp Assy
1	35100-08F50-999	Headlamp Assy
2	35173-18E50	• . Cover, Socket
3	35175-18E50	• . Adapter Assy, Rh
4	34175-33E50	• . Adapter Assy, Lh
5	09471-12188	Bulb (12v,55w,h7,px26d,philips)
6	09471-12122	Bulb (12v,55w,h1, P14.5s Osra/philips)
7	35137-33E00	Cushion, Headlamp
8	09160-05045	Washer (5.5x18x1)
9	03512-05163	Screw
10	36110-08F00	Lamp Assy, Front Position
11	36112-08F00	• . Lens
12	09471-12081	• . Bulb (12v,5w)
13	03211-04123	• . Screw
14	35128-37B00	• . Washer
15	09160-05045	Washer (5.5x18x1.0)
16	09180-05048	Spacer (5.5x8x10.5)
17	09320-08001	Cushion
18	02142-05203	Screw


Ref No	Part No	Description
--------	---------	-------------

1	35100-08F30-999	Headlamp Assy
2	35125-74F00	• . Cover, Socket
3	09471-12185	Bulb (12v,60/55w,h4)
4	35137-33E00	Cushion
5	09160-05045	Washer (5.5x18x1.0)
6	03512-05163	Screw
7	36110-08F00	Lamp Assy, Front Position
8	36112-08F00	• . Lens
9	09471-12081	• . Bulb (12v,5w)
10	03211-04123	• . Screw
11	35128-37B00	• . Washer
12	09160-05045	Washer (5.5x18x1.0)
13	09180-05048	Spacer (5.5x8x10.5)
14	09320-08001	Cushion
15	02142-05203	Screw
16	35950-14A00	Reflex Reflector Assy
17	35956-08F01	Bracket, Front Side Rh
18	35957-08F01	Bracket, Front Side Lh
19	02142-05103	Screw
20	08316-10053	Nut

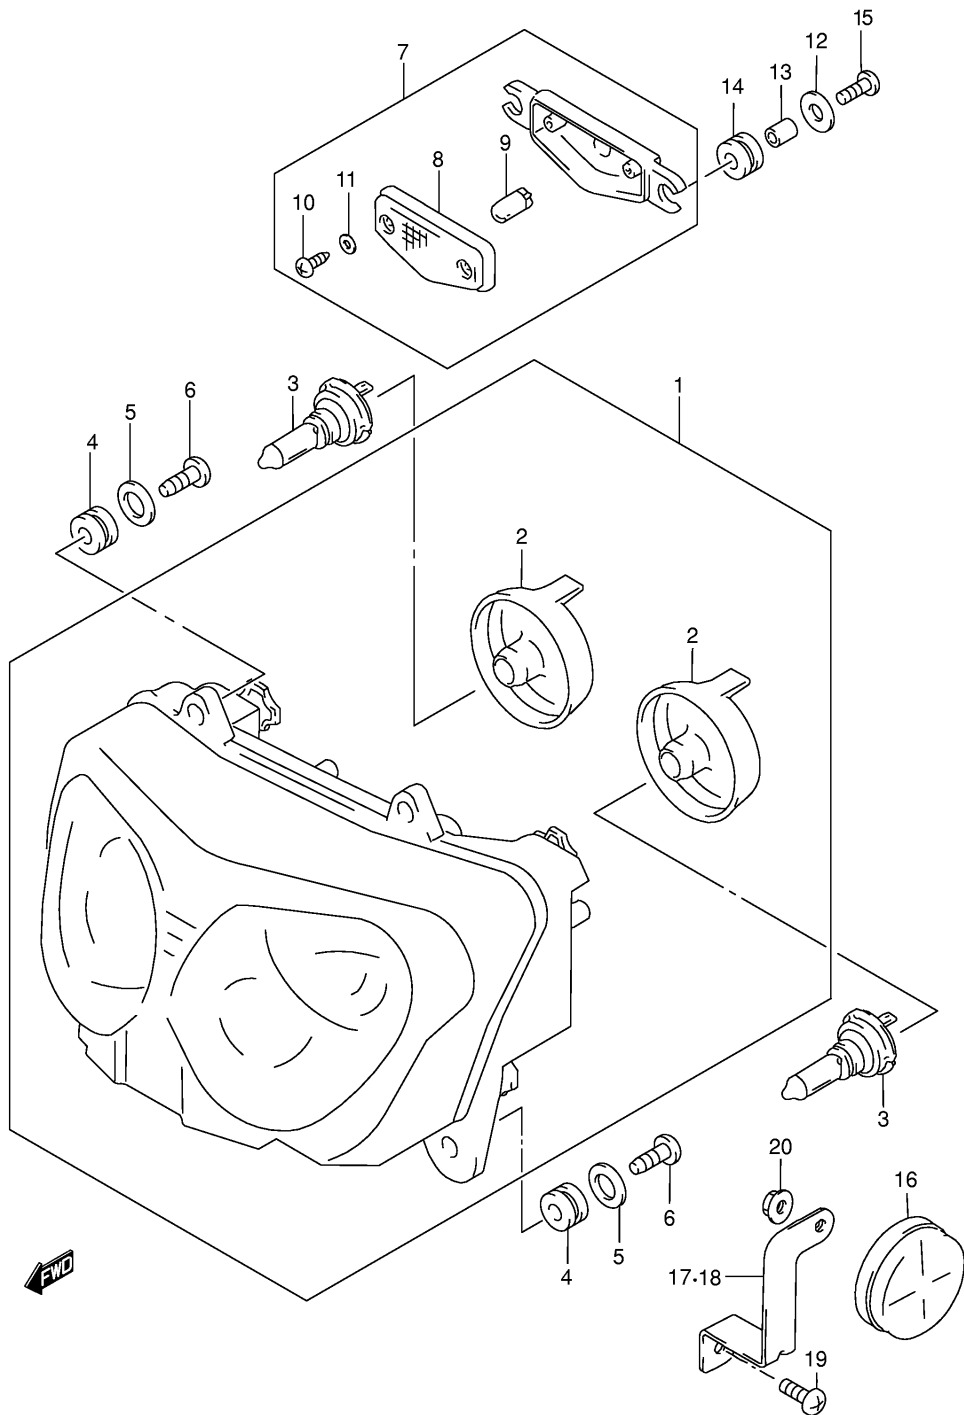 


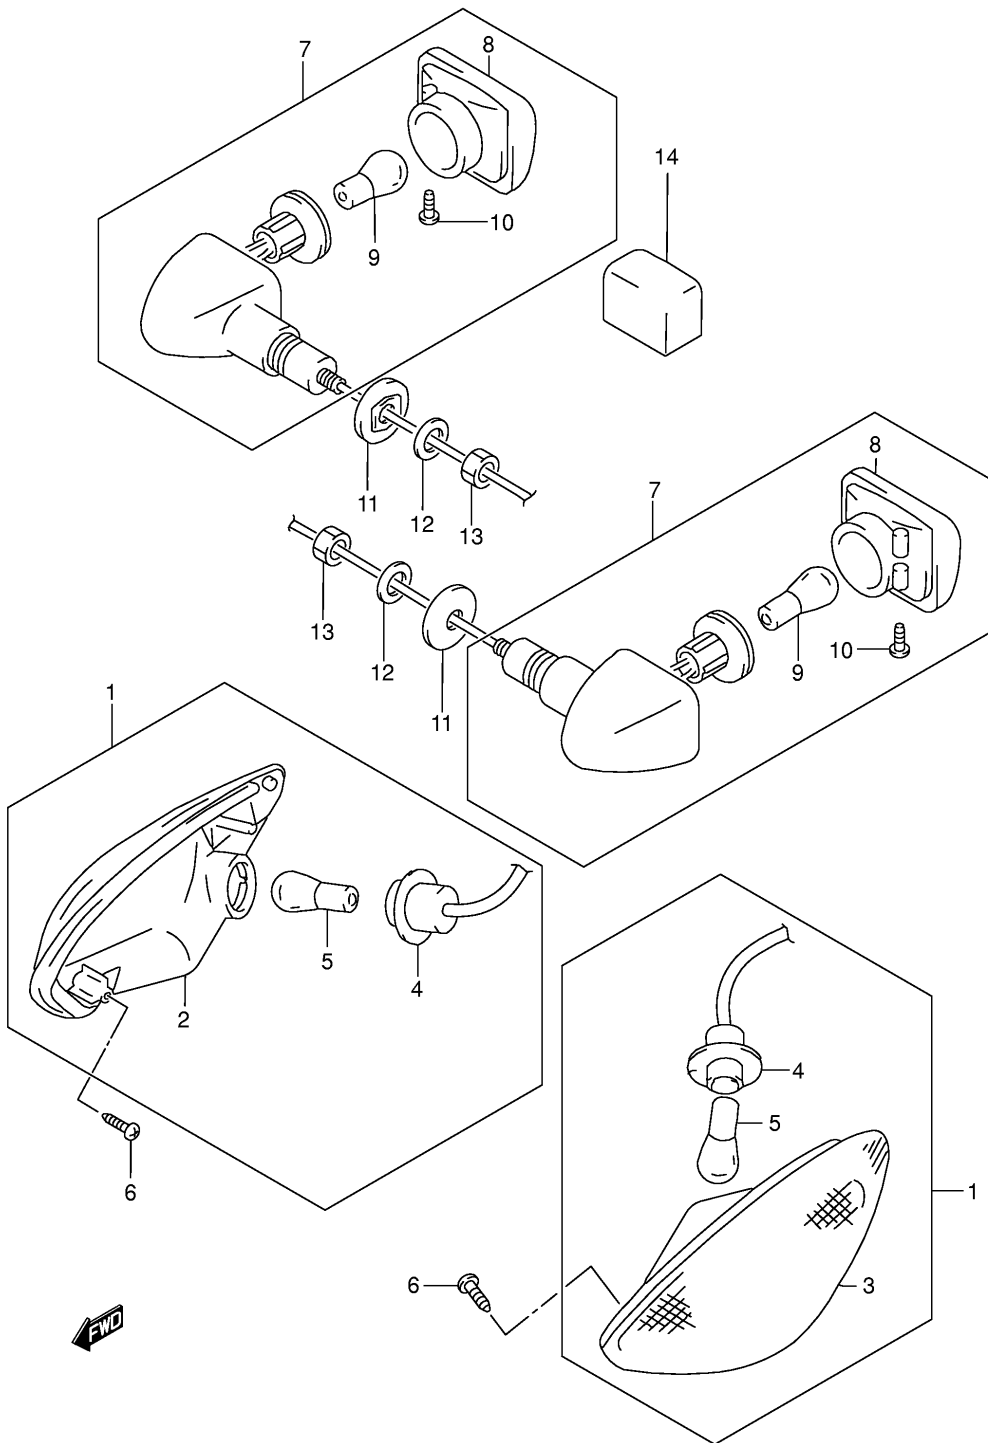 


Ref No	Part No	Description
1	35601-08F00	Lamp Assy, Front Turn Rh
1	35602-08F00	Lamp Assy, Front Turn Lh
2	35610-08F00	. Lamp Unit, Rh
3	35630-08F00	. Lamp Unit, Lh
4	35618-08F00	. Socket & Cord
5	09471-12045	. Bulb (12v,21w)
6	03541-05163	Screw
7	35603-33E30	Lamp Assy, Rear Turnsignal Rh
7	35604-33E30	Lamp Assy, Rear Turnsignal Lh
8	35610-33E00	. Lamp Unit
9	09471-12045	. Bulb (12v,21w)
10	03242-04123	. Screw
11	35695-17C00	Spacer
12	09160-10501	Washer (10.5x30x2.3)
13	08310-00103	Nut
14	38610-03F00	Relay, Turnsignal

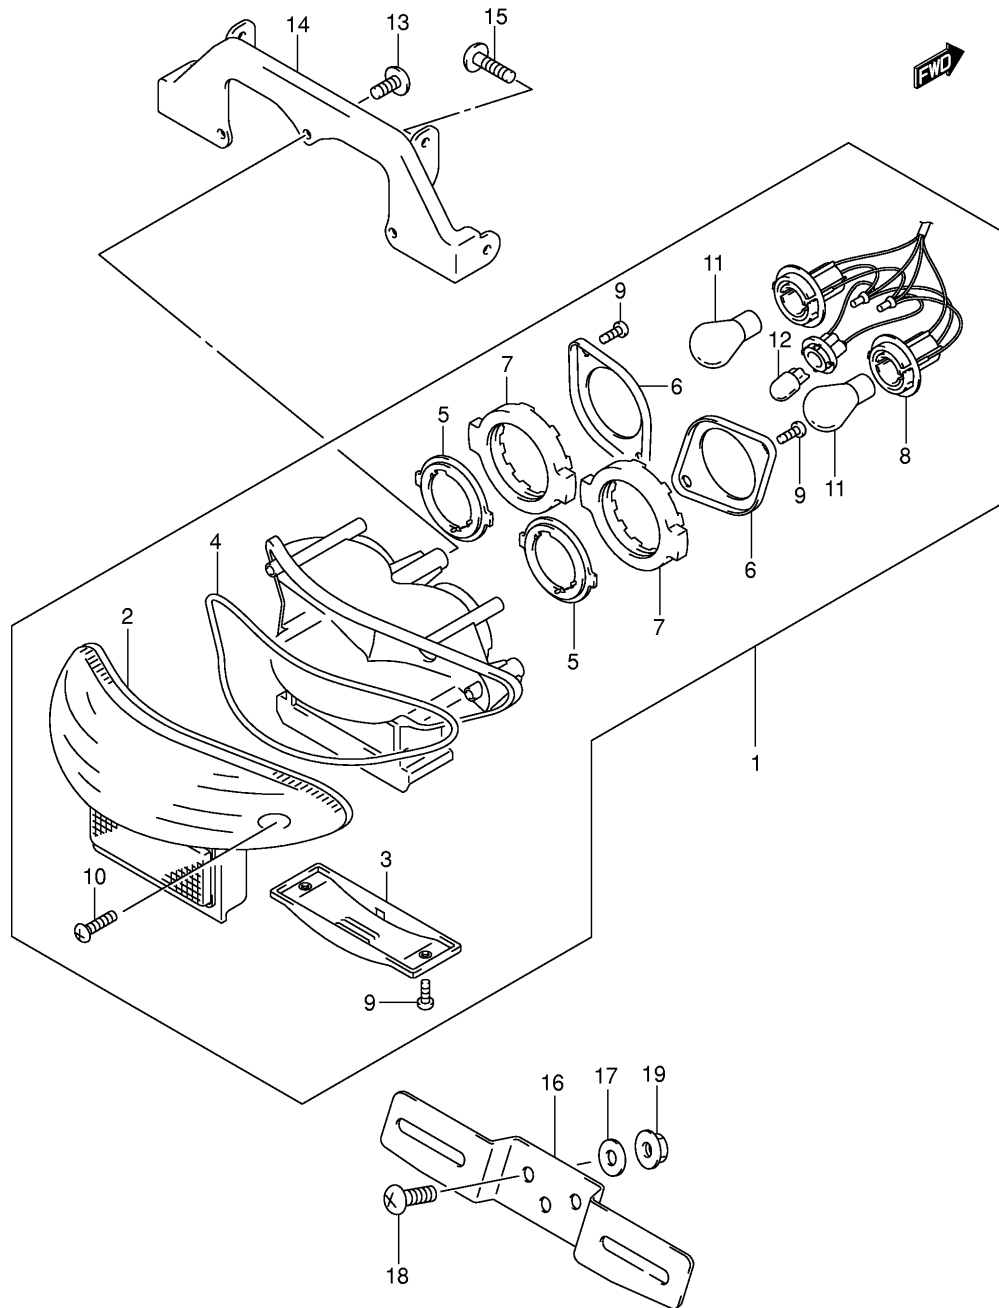 

Ref No	Part No	Description
1	35710-24F00	Lamp Assy, Rear Combination
2	35712-24F00	. Lens
3	35912-24F00	. Lens, License
4	35713-24F00	. Gasket
5	35716-48B21	. Plate No.1
6	35736-48B21	. Plate No.2
7	35765-48B21	. Cushion
8	35718-24F00	. Socket & Cord
9	03211-04123	. Screw
10	03211-04207	. Screw
11	09471-12083	. Bulb (12v,21/5w)
12	09471-12216	. Bulb (12v,5w)
13	03541-05163	Screw, Rear Comb
14	35726-08F00	Bracket, Rear Comb
15	03541-05163	Screw, Bracket
16	35927-44110	Bracket, License Plate
17	09160-06088	Washer (6.5x20x1.60)
18	02142-06163	Screw
19	08316-10063	Nut

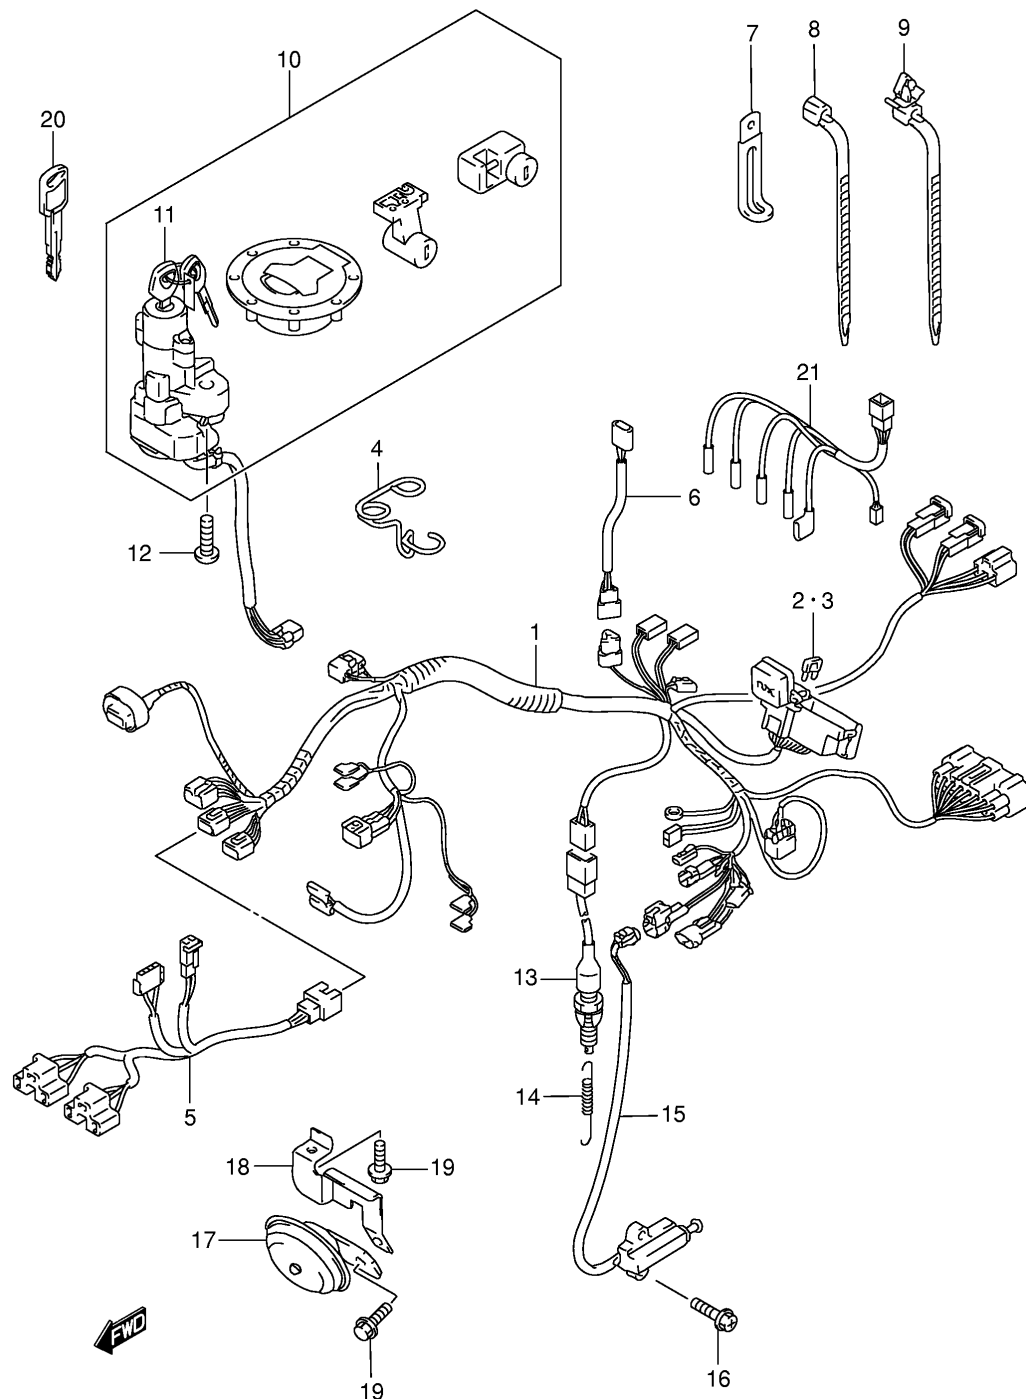 


Ref No	Part No	Description
1	36610-08FD0	Harness, Wiring No.1
1	36610-08FE0	Harness, Wiring No.1
2	09481-10501	• . Fuse (10a)
2	09481-10501	• . Fuse (10a)
3	09481-15501	• . Fuse (15a)
3	09481-15501	• . Fuse (15a)
4	36619-08F00	Guide, Wiring Harness
5	36620-08FB0	Harness, Wiring No.2
5	36620-08FA0	Harness, Wiring No.2
6	36853-08F00	Wire, Tps Lead
7	09404-06435	Clamp (l:135)
8	09407-11401	Clamp (l:95)
8	09407-14403	Clamp (l:125)
8	09407-18402	Clamp (l:165)
9	09407-11402	Clamp (l:90)
9	09407-14408	Clamp (l:120)
10	37105-33850	Lock Set
11	37100-33E20	• . Lock Assy, Steering
12	09139-08016	Screw (8x20)
13	37740-19F00	Switch Assy, Stop Lamp
14	09443-06005	Spring
15	37840-44X50	Switch Assy, Side Stand
16	02162-06163	Bolt
17	38500-08F10	Horn Assy
18	38590-08F00	Bracket, Horn
19	01550-08123	Bolt, Horn
20	37146-33E00	Key, Blank
21	36856-21E00	Wire, Carb Heater Lead

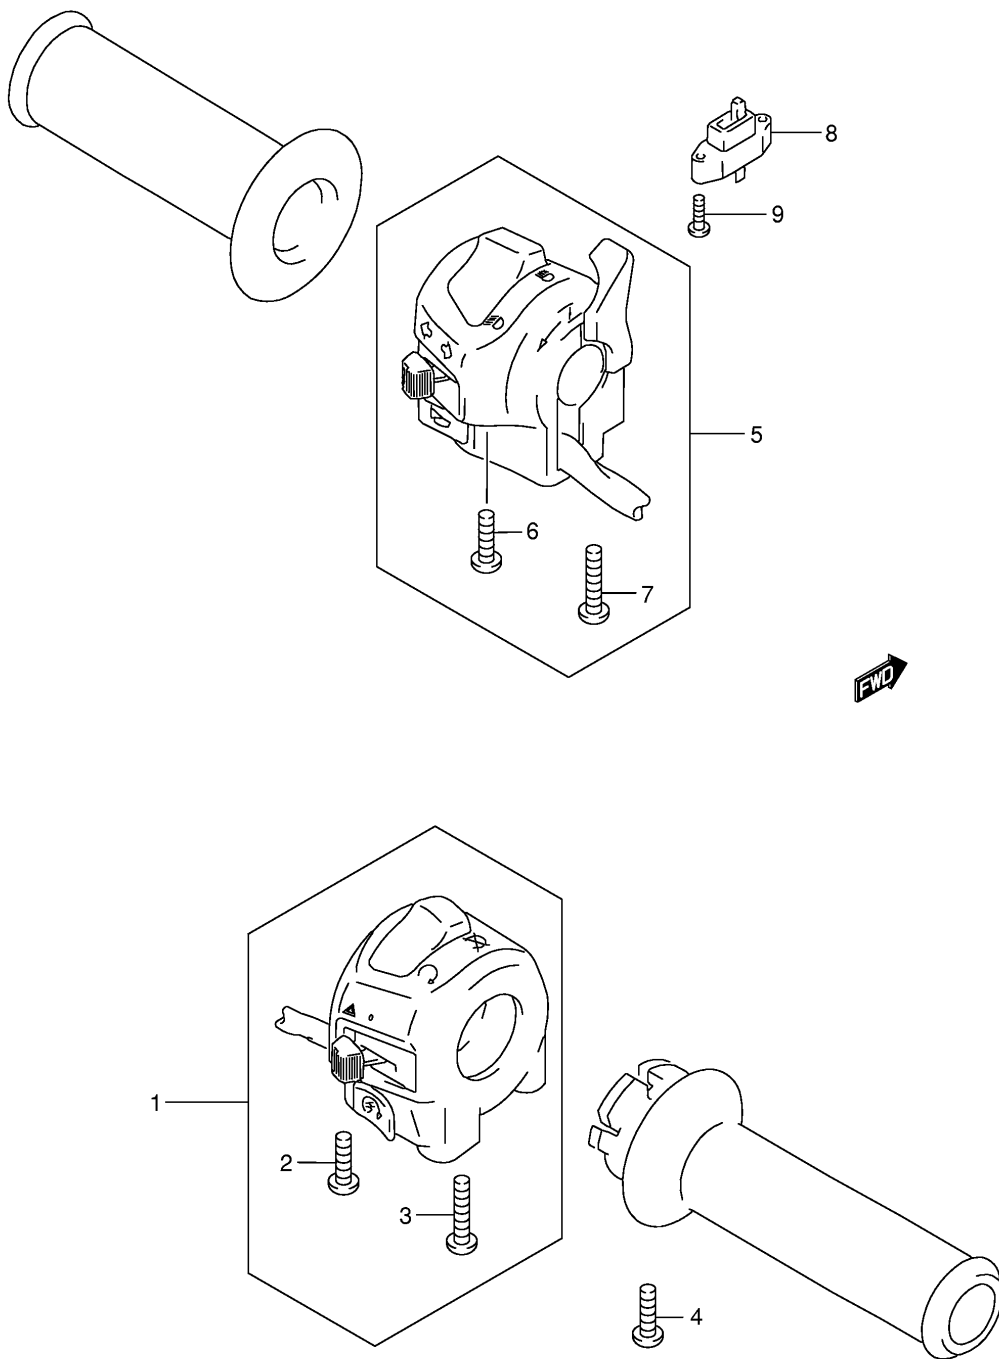 



Ref No	Part No	Description
1	37200-33E60	Switch Assy, Handle, Rh
2	02112-05303	• Screw
3	02112-05503	• Screw
4	02112-05103	Screw, Throttle
5	37400-26E11	Switch Assy, Handle, Lh
6	02112-05253	• Screw
7	02112-05453	• Screw
8	37560-38A00	Switch Assy, Clutch
9	09132-03017	Screw, Clutch Switch

Ref No	Part No	Description
1	41100-08FL0-019	Frame (black)
2	01570-08253	Bolt, Upper
3	01550-08303	Bolt, Lower
4	08319-31083	Nut
5	41750-34C00	Tube, Frame Bridge
6	09103-08266	Bolt
7	41911-19C00-019	Plate, No.1 (black)
8	01570-08163	Bolt
9	43970-08F00	Grip, Rear Rh
10	43980-08F00	Grip, Rear Lh
11	01550-08163	Bolt
12	47410-08F01	Holder, Electric Parts
13	01550-06163	Bolt

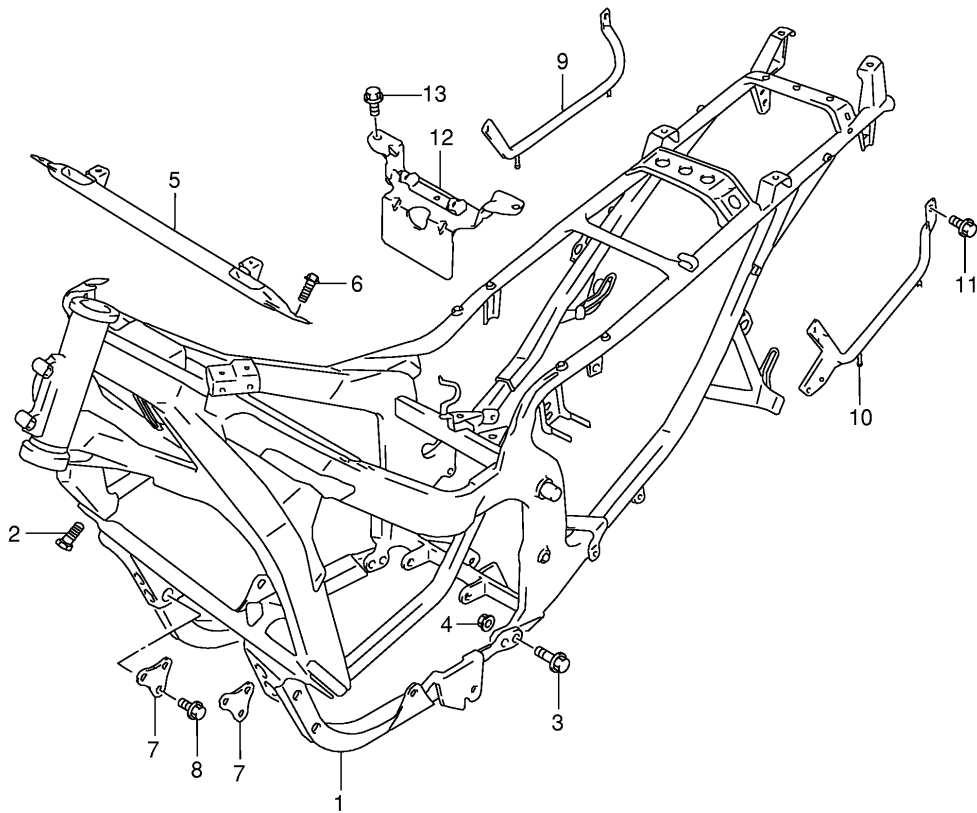 


Ref No	Part No	Description
1	42100-08F00	Stand, Center
2	09443-14059	Spring, Inner
3	09443-22013	Spring, Outer
4	01580-10603	Bolt
5	09180-10040	Spacer
6	09321-10017	Cushion
7	42310-08F01	Stand, Prop
8	09443-12036	Spring, Inner
9	09443-19010	Spring, Outer
10	09111-10036	Bolt
11	08221-12224	Shim
12	09159-10097	Nut
13	43110-19C02	Pedal, Brake
14	43120-19C00	Arm, Brake Pedal Rod
15	43151-04701	Rubber
16	43212-04A00	Washer, Brake Boss
17	01547-06253	Bolt
18	09443-13028	Spring

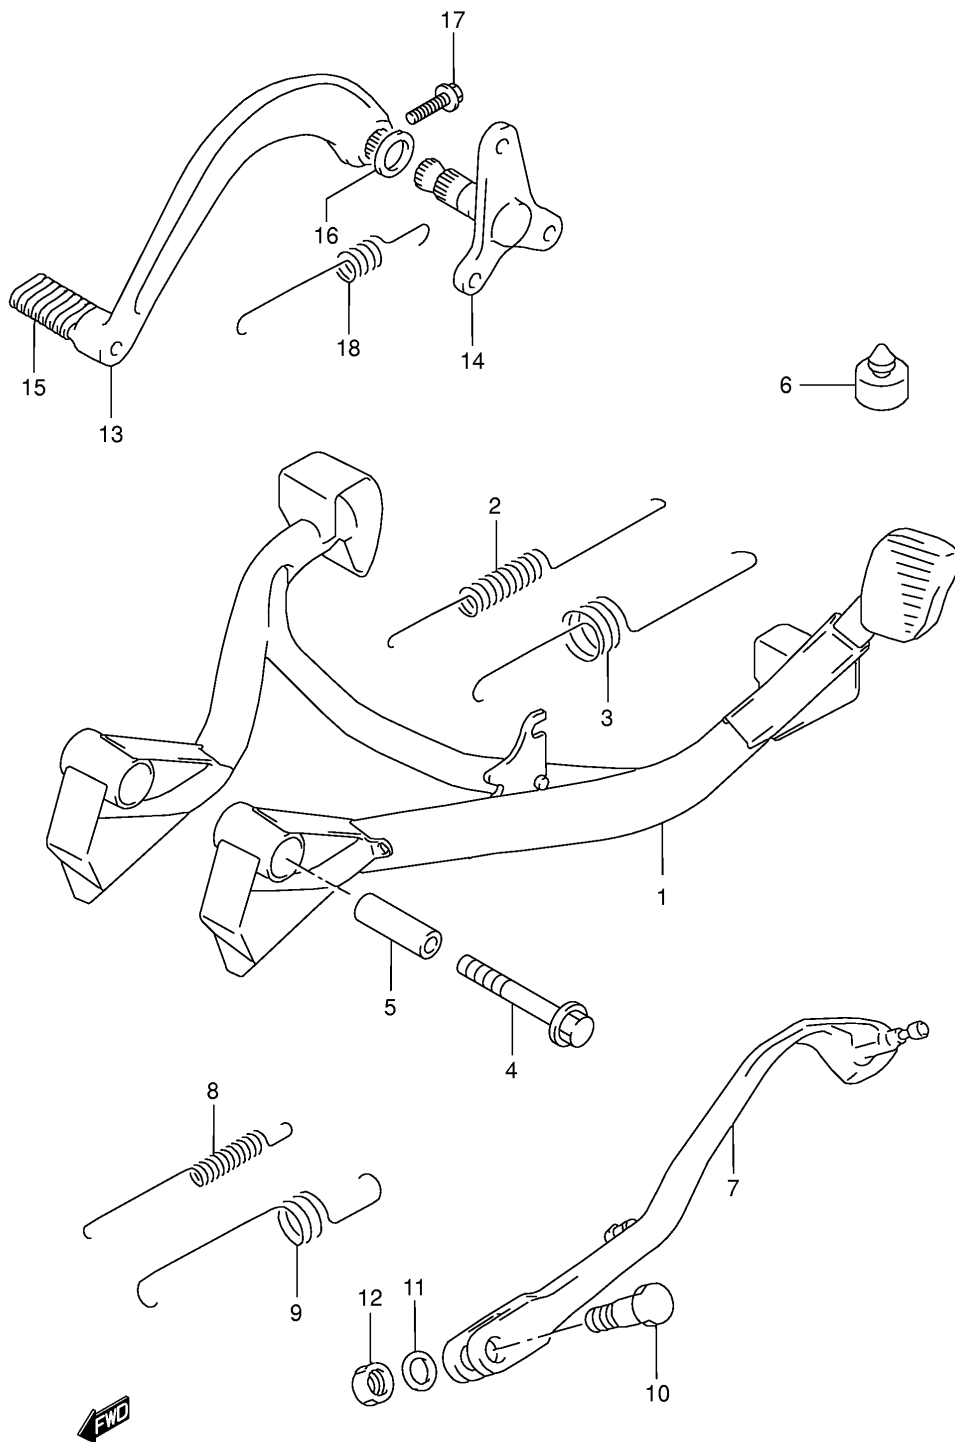 


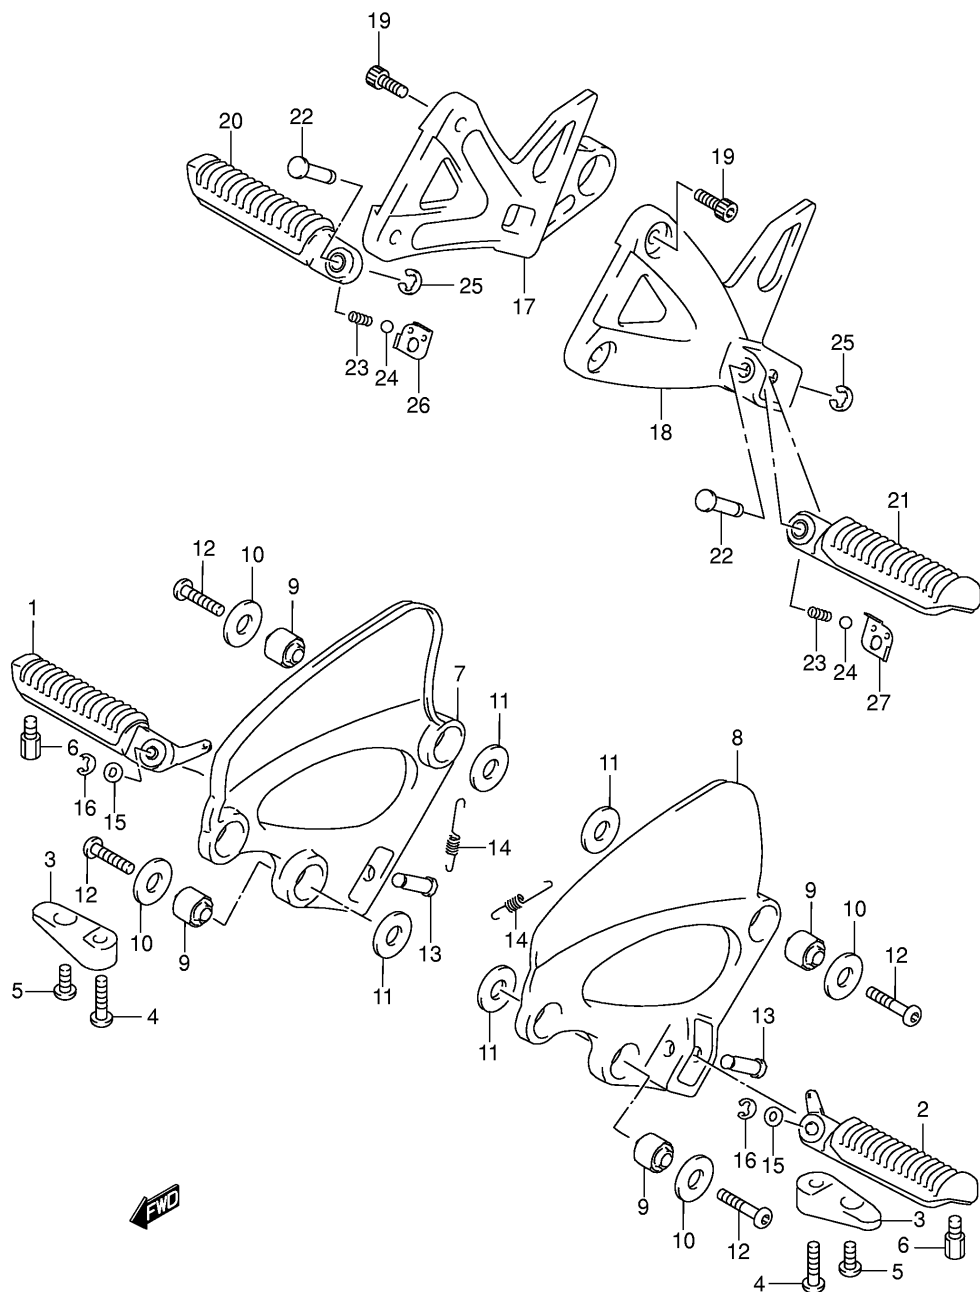 

Ref No	Part No	Description
1	43510-19C22	Footrest Assy, Front Rh
2	43520-19C22	Footrest Assy, Front Lh
3	43536-19C21	Balancer, Footrest Lower
4	02112-05353	Screw, Inner
5	02112-05203	Screw, Outer
6	43576-48B20	Bolt, Bank Sensor
7	43517-08FA0	Holder, Front Footrest Rh
8	43527-08FA0	Holder, Front Footrest Lh
9	09319-08045	Bush, Holder
10	09161-13004	Washer, Outer
11	09161-17002	Washer, Inner
12	09106-08147	Bolt
13	09208-08010	Pin
14	09443-10037	Spring
15	08322-01083	Washer
16	08332-11063	E Ring
17	43811-08F10	Bracket, Pillion Rh
18	43821-08F10	Bracket, Pillion Lh
19	09106-08150	Bolt, Bracket
20	43610-08F00	Bar, Pillion Footrest Rh
21	43710-08F00	Bar, Pillion Footrest Lh
22	09208-08011	Pin
23	09440-05005	Spring
24	06111-07004	Ball
25	08332-11063	E Ring
26	43816-23E00	Plate, Pillion Rh
27	43826-23E00	Plate, Pillion Lh

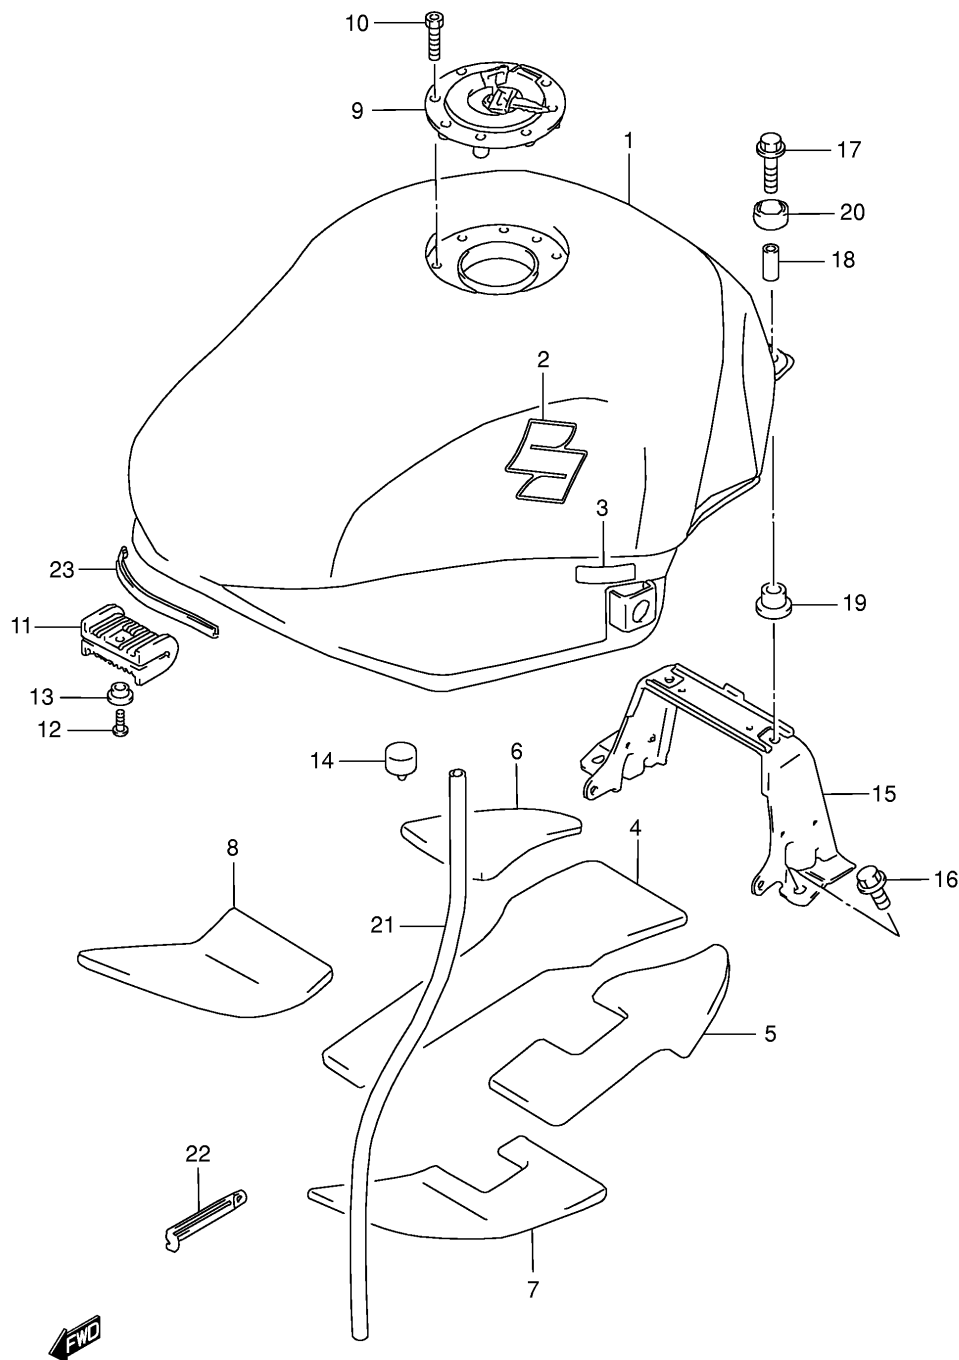 



Ref No	Part No	Description
1	44100-08FA0-YU8	Tank Assy, Fuel (gray)
1	44100-08FA0-YBA	Tank Assy, Fuel (blue)
1	44100-08F40-YU8	Tank Assy, Fuel (gray)
1	44100-08F40-YBA	Tank Assy, Fuel (blue)
2	68111-18G00-ANA	• . Emblem
2	68111-18G00-ABF	• . Emblem
3	32851-10D00	Protector, Fuel Tank
4	44191-08F00	Shield, Heat No.1
5	44192-08F00	Shield, Heat No.2
6	44193-08F00	Shield, Heat No.3
7	44194-08F00	Shield, Heat No.4
8	44195-08F00	Shield, Heat No.5
9	44200-33870	Cap Set, Fuel Tank
10	09106-05017	Bolt
11	44510-33D00	Cushion, Fuel Tank Front
12	02142-05123	Screw
13	09169-05012	Washer
14	09321-10011	Cushion, Fuel Tank Side
15	44550-08F00	Bracket, Rear
16	01550-08163	Bolt
17	09116-06172	Bolt, Rear
18	09180-06271	Spacer
19	09320-10038	Cushion, Rear
20	09320-14017	Cushion, Rear
21	44423-08F00	Hose, Water Drain
22	09404-08420	Clamp
23	68241-08F00	Molding, Fuel Tank

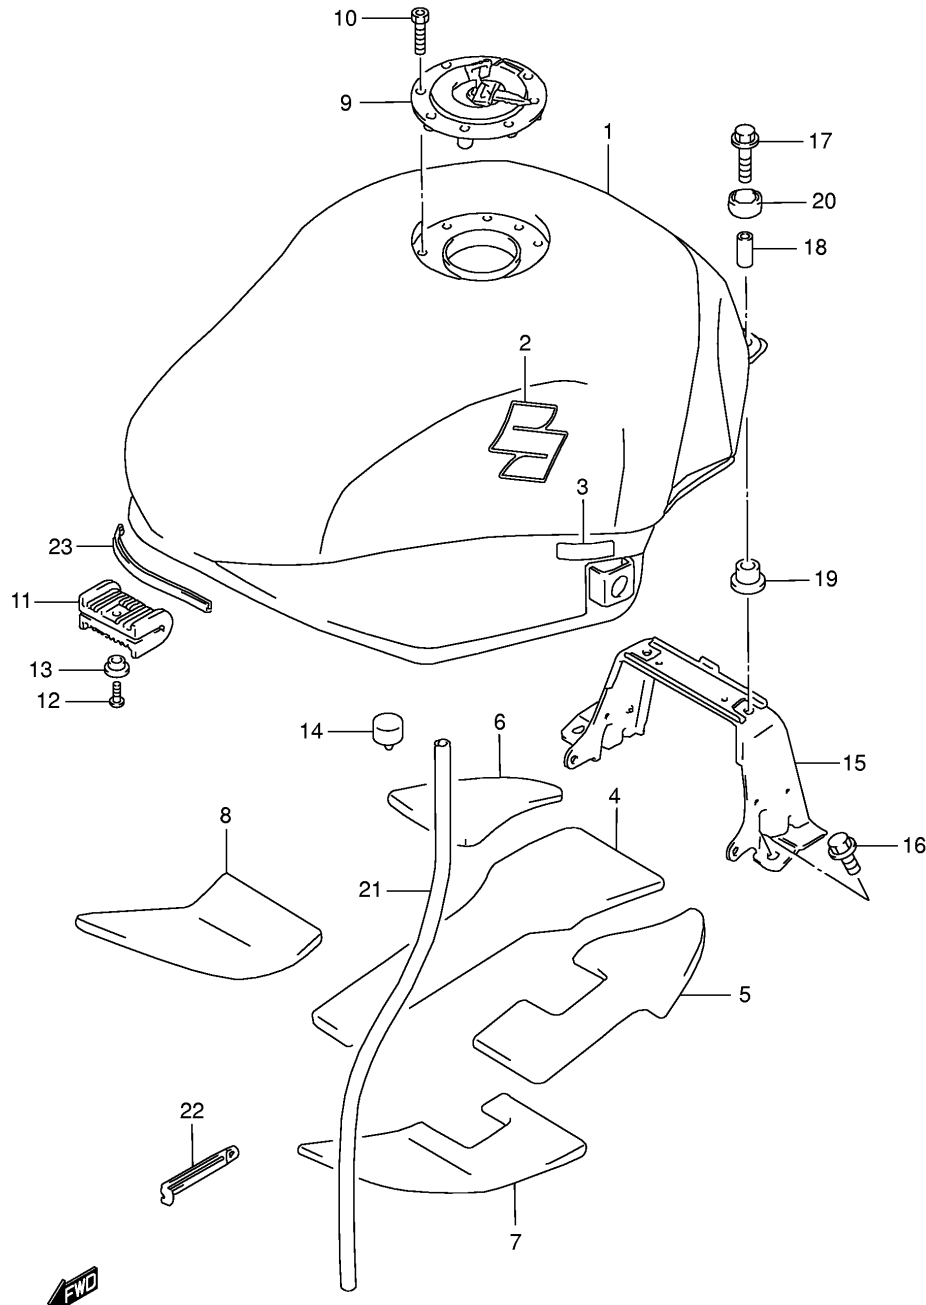 

Ref No	Part No	Description
1	44100-08F80-YU8	Tank Assy, Fuel (gray)
1	44100-08F80-YAR	Tank Assy, Fuel (blue)
1	44100-08F60-YU8	Tank Assy, Fuel (gray)
1	44100-08F60-YAR	Tank Assy, Fuel (blue)
2	68111-18G20	Emblem
3	32851-10D00	Protector, Fuel Tank
4	44191-08F00	Shield, Heat No.1
5	44192-08F00	Shield, Heat No.2
6	44193-08F00	Shield, Heat No.3
7	44194-08F00	Shield, Heat No.4
8	44195-08F00	Shield, Heat No.5
9	44200-33870	Cap Set, Fuel Tank
10	09106-05017	Bolt
11	44510-33D00	Cushion, Fuel Tank Front
12	02142-05123	Screw
13	09169-05012	Washer
14	09321-10011	Cushion, Fuel Tank Side
15	44550-08F00	Bracket, Rear
16	01550-08163	Bolt
17	09116-06172	Bolt, Rear
18	09180-06271	Spacer
19	09320-10038	Cushion, Rear
20	09320-14017	Cushion, Rear
21	44423-08F00	Hose, Water Drain
22	09404-08420	Clamp
23	68241-08F00	Molding, Fuel Tank


Ref No	Part No	Description
1	44300-08F00	Cock, Fuel
2	44348-49170	. O Ring
3	09128-06006	Bolt
4	09168-06026	Gasket
5	44431-21E00	Hose, Fuel
6	09401-11407	Clip
7	34810-08F00	Gauge Assy, Fuel Level
8	34825-45100	. Gasket
9	09117-05003	Bolt
10	44395-08F00-13L	Label, Fuel Cock (silver)

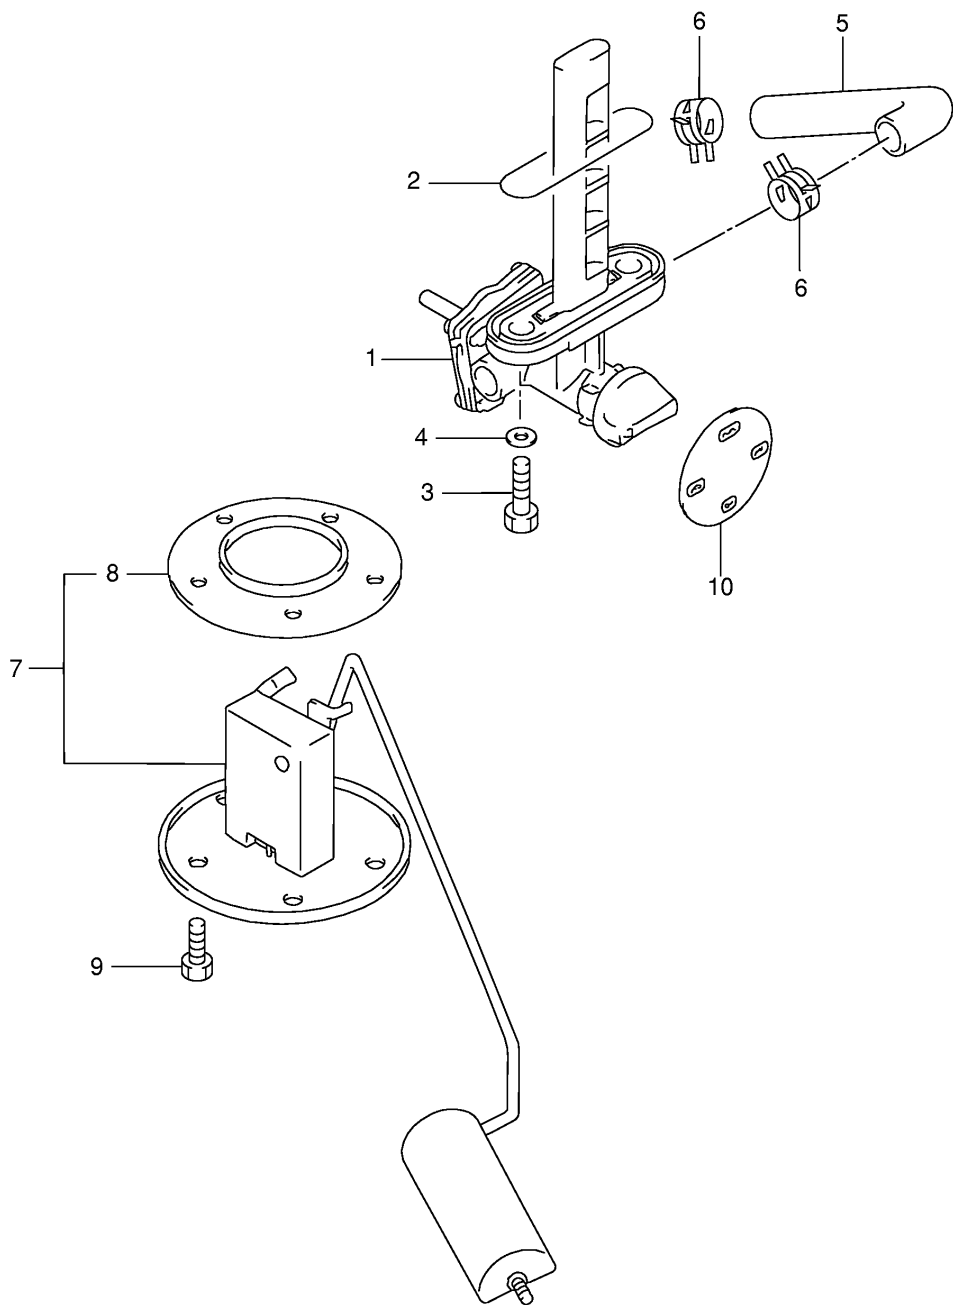 

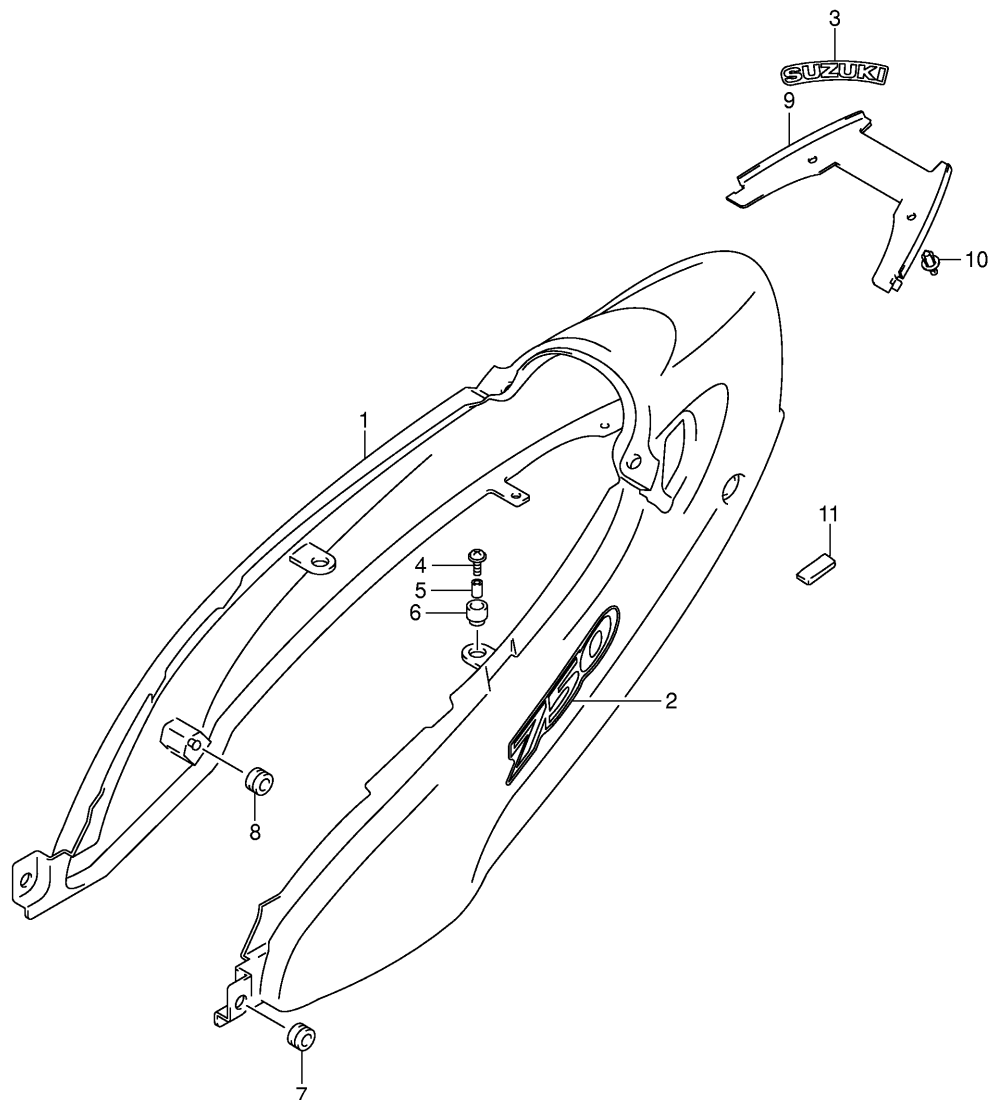 



Ref No	Part No	Description
1	47110-08F80-4GX	Cover, Frame (gray)
1	47110-08F80-YAR	Cover, Frame (blue)
2	68131-08F60-BNJ	. Emblem
2	68131-08F60-BNK	. Emblem
3	68131-39F00-YD8	. Emblem, "suzuki" (silver)
4	09136-06105	Screw, Upper
5	09180-06286	Spacer
6	09320-10045	Cushion
7	09320-08028	Cushion, Front
8	09320-08018	Cushion, Center
9	47321-08FA0	Cover, Lower
10	09409-08308-5ES	Clip (black)
11	44894-24A00	Cushion, Rear

Ref No	Part No	Description
1	53111-08FA0-YU8	Fender, Front (gray)
1	53111-08FA0-YAR	Fender, Front (blue)
2	09139-06121	Screw, Fender
3	01550-06303	Bolt
4	53122-06G00	Nut

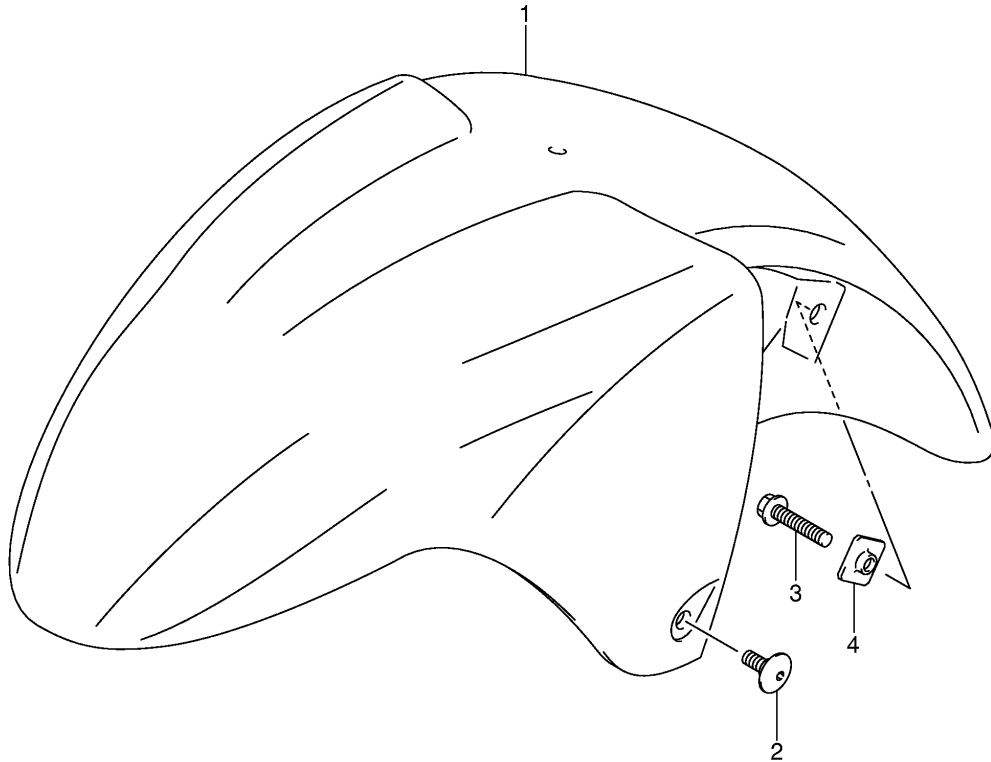 


Ref No	Part No	Description
1	56110-08F01	Handlebar, Rh
2	56150-08F01	Handlebar, Lh
3	07130-08303	Bolt
4	57215-33400	Cap
5	56211-08F10	Holder
6	68281-35F00	Emblem
7	09250-08014	Cap
8	09106-10075	Bolt
9	09160-10094	Washer
10	56240-42A00	Cushion, Bracket
11	56243-20C00	Spacer
12	08319-31107	Nut
13	56200-08830	Balancer Set, Handlebar
14	02122-06603	• . Screw
15	56500-08F10	Mirror Assy, Rear View, Rh
16	56600-08F10	Mirror Assy, Rear View, Lh
17	07130-06163	Bolt
18	58200-08F00	Cable Assy, Clutch
19	58300-08F00	Cable Assy, Throttle No.1
20	58300-08F10	Cable Assy, Throttle No.2
21	58410-08F20	Cable, Starter
22	09407-25401	Clamp

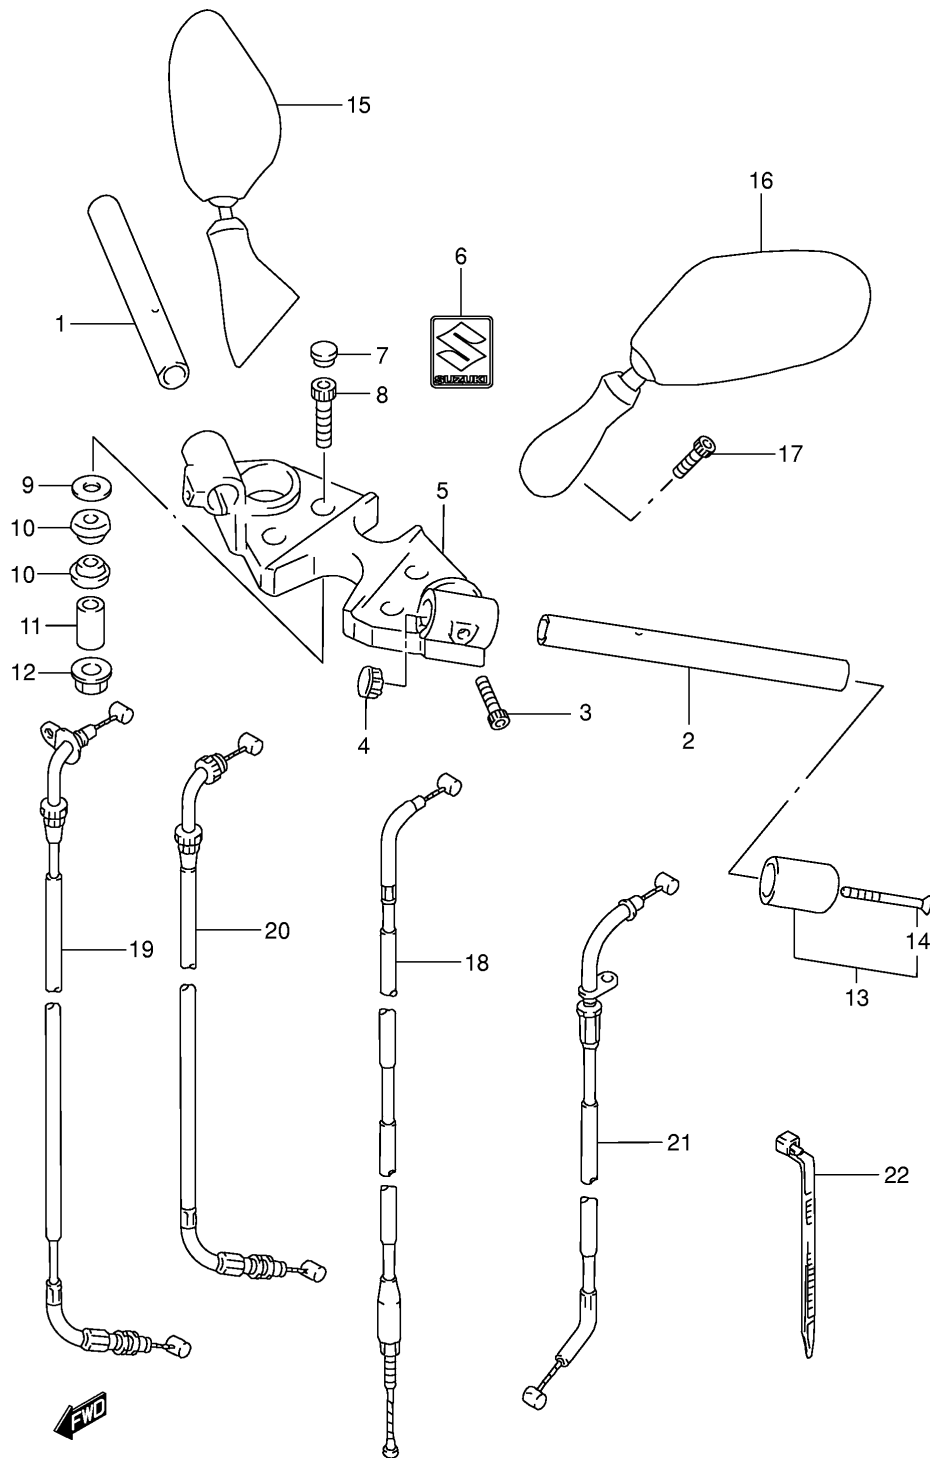 


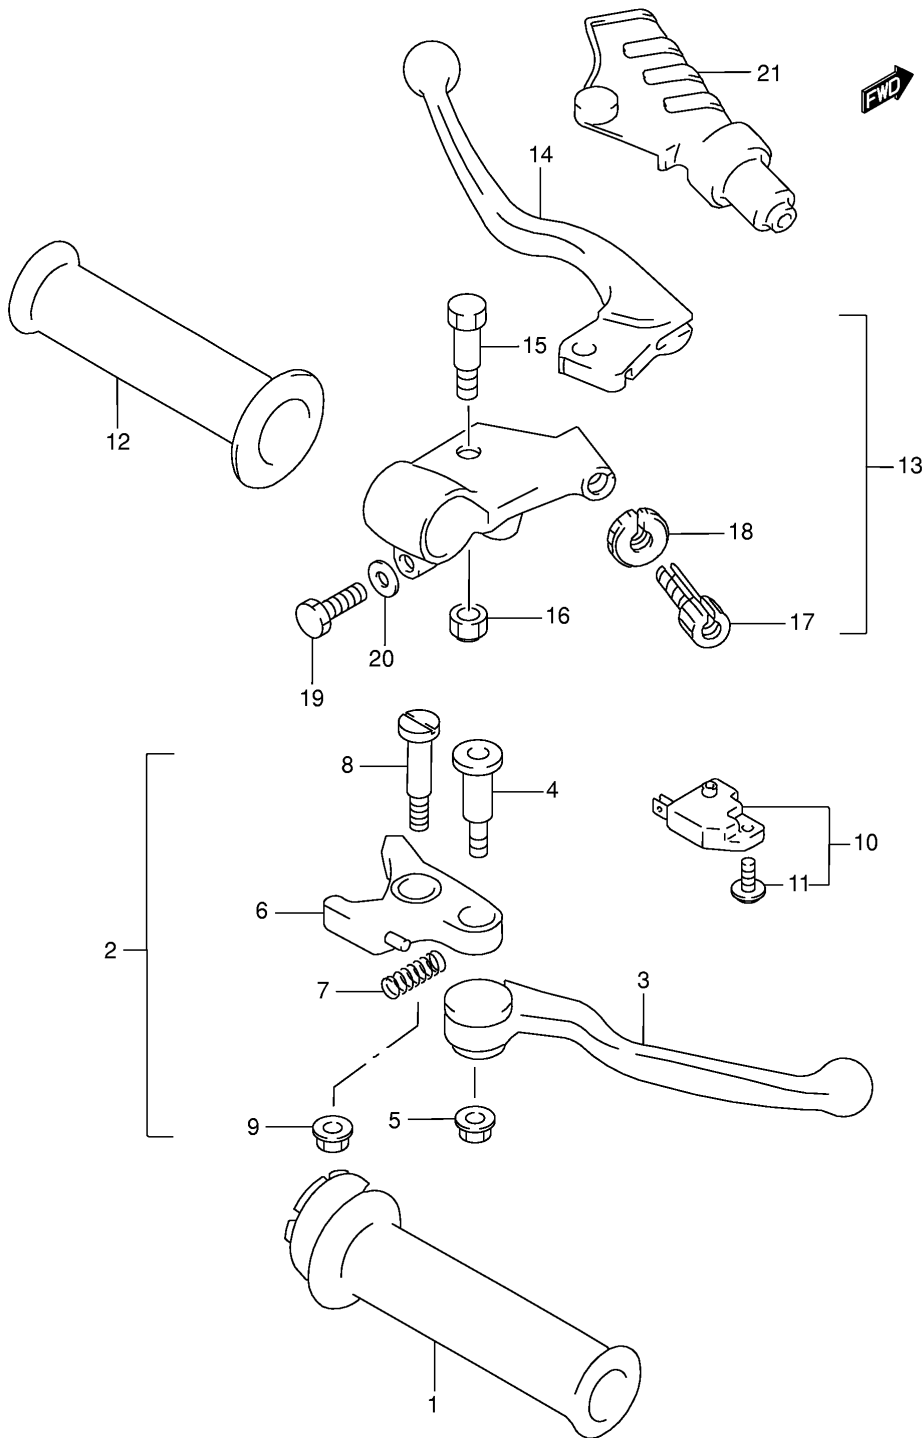 

Ref No	Part No	Description
1	57110-46E01	Grip, Throttle
2	57300-40C10	Lever Assy, Brake
3	57420-32C00	• . Lever
4	57437-32C01	• . Bolt, Lever
5	08319-31063	• . Nut
6	57430-40C10	• . Knocker
7	57438-32C00	•• . Spring
8	57431-17C00	• . Bolt, Knocker
9	08316-10063	• . Nut
10	57460-17C11	Switch Assy, Stop
11	57465-17C00	• . Screw
12	57211-22D01	Grip, Lh
13	57500-10D80	Lever Assy, Clutch
14	57620-27A31	• . Lever
15	57531-14A00	• . Bolt, Lever
16	08319-21063	• . Nut
17	57441-11010	• . Adjuster, Cable
18	57442-11010	• . Nut
19	01500-06203	• . Bolt
20	08322-01063	• . Washer
21	57661-45C00	Cover, Clutch Lever

Ref No	Part No	Description
1	63111-08FA0-291	Fender, Rear (black)
2	09113-06001	Bolt
3	01550-06163	Bolt, Front Lh
4	09169-06071	Washer
5	09116-06165	Bolt, Center
6	95700-44820	Lock Set, Helmet
7	09139-06089	Screw
8	09800-21036	Tool Assy
9	09816-00102	Hexagon, Spanner, 3
10	47435-02F01	Band, Tool

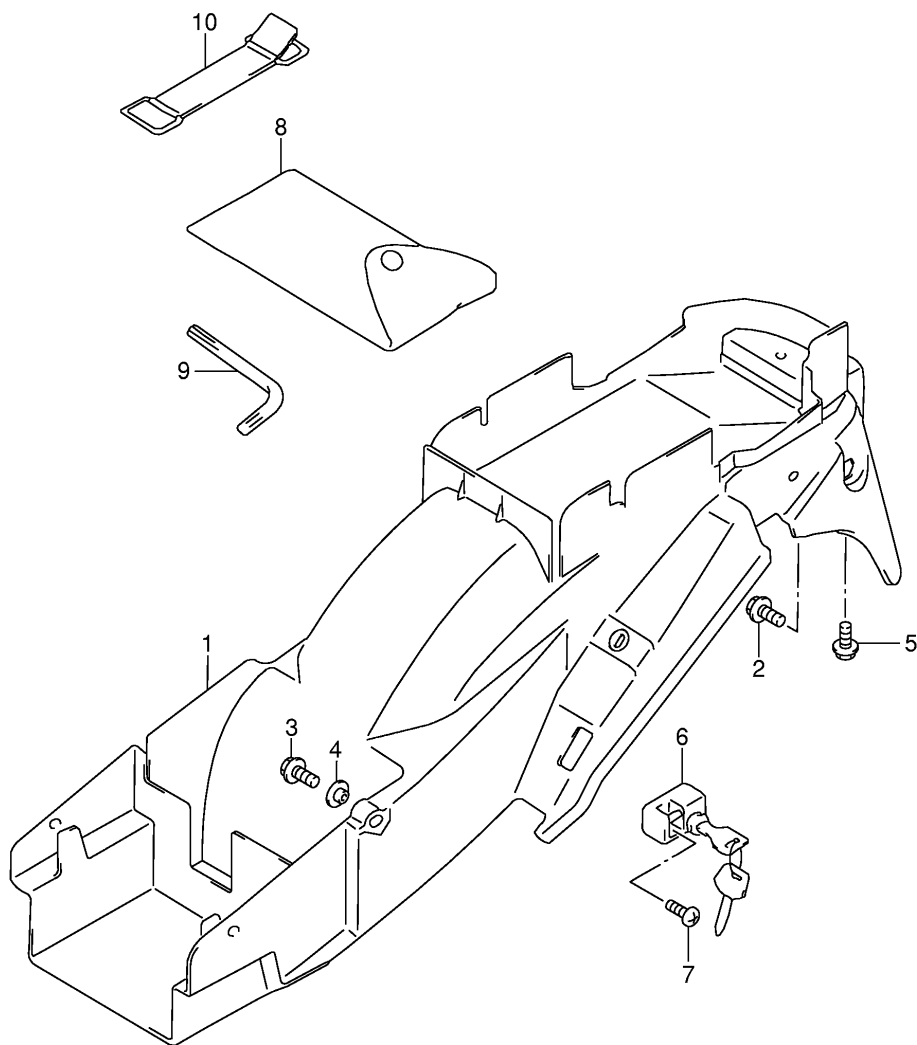 


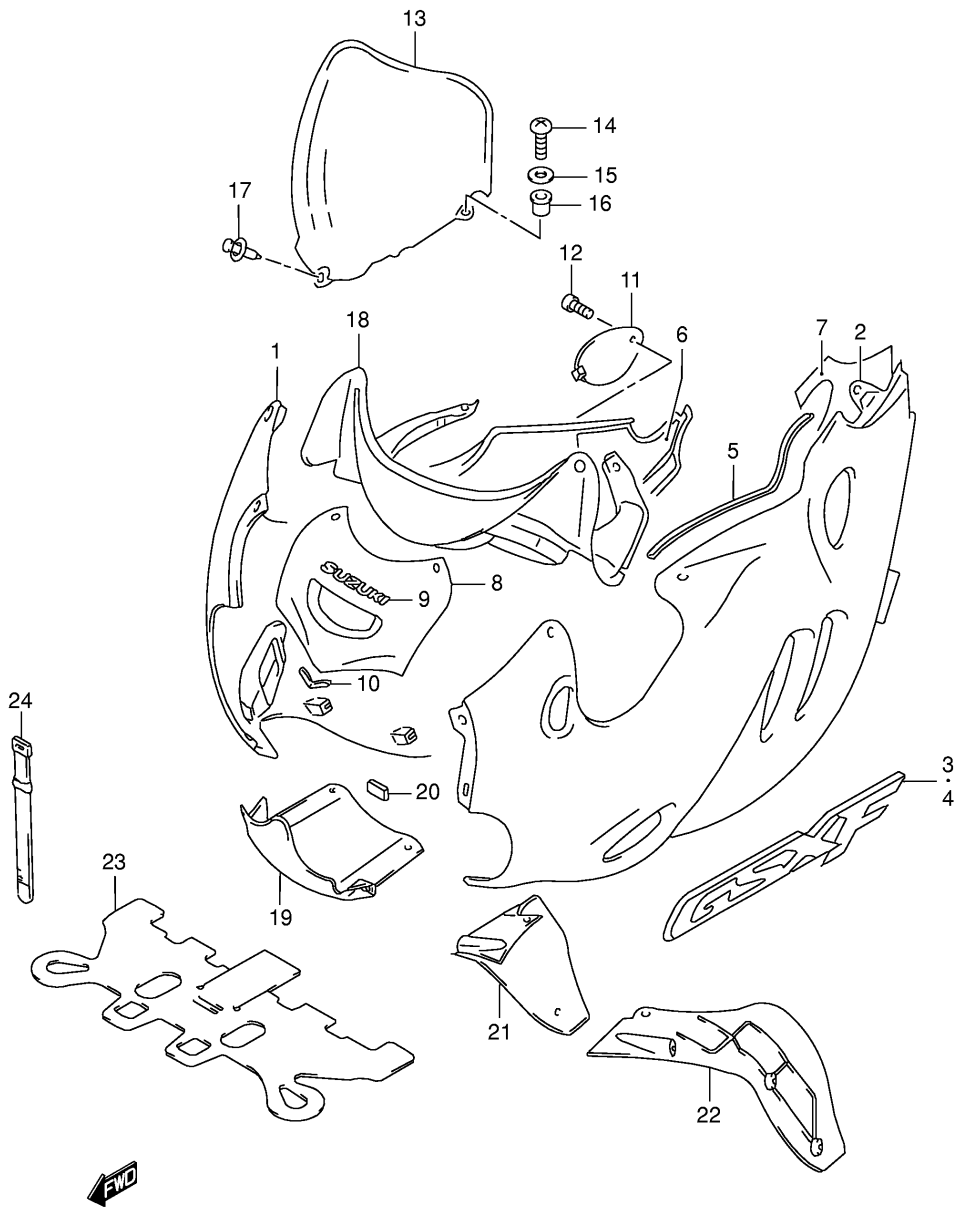 


Ref No	Part No	Description
1	94403-08FF0-YBA	Cowl Assy, Side Rh (blue)
1	94403-08FF0-YU8	Cowl Assy, Side Rh (gray)
2	94404-08FF0-YBA	Cowl Assy, Side Lh (blue)
2	94404-08FF0-YU8	Cowl Assy, Side Lh (gray)
3	68681-08F40	. Emblem, Gsxf Rh
4	68691-08F40	. Emblem, Gsxf Lh
5	94631-44110	. Molding
6	94439-08F00	. Shield, Side Rh
7	94449-08F00	. Shield, Side Lh
8	94410-08F00-ZTX	Panel, Center Upper (gray)
8	94410-08F00-YBA	Panel, Center Upper (blue)
9	68185-05C10-YD8	. Emblem, "suzuki" (silver)
10	94413-08F00	. Cushion, Upper
11	94435-08F00-YBA	Lid, Oil (blue)
11	94435-08F00-YU8	Lid, Oil (gray)
12	09139-06030	Screw
13	94611-08F00	Wind Screen
14	09139-05025	Screw
15	08322-01053	Washer
16	09159-05019	Nut
17	09409-08308-5ES	Clip (black)
18	94421-08F00	Panel, Meter
19	94412-08F00-YBA	Panel, Center Lower (blue)
19	94412-08F00-YU8	Panel, Center Lower (gray)
20	94414-08F00	Cushion, Lower
21	94461-08F10	Panel, Inner Rh
22	94462-08F10	Panel, Inner Lh
23	94451-20C01	Plate, Air Guide
24	09407-18402	Clamp
24	09407-25401	Clamp

Ref No	Part No	Description
--------	---------	-------------


1	94403-08FF0-YAR	Cowl Assy, Side Rh (blue)
1	94403-08FF0-YU8	Cowl Assy, Side Rh (gray)
2	94404-08FF0-YAR	Cowl Assy, Side Lh (blue)
2	94404-08FF0-YU8	Cowl Assy, Side Lh (gray)
3	68681-08F40	. . Emblem, Gsxf Rh
4	68691-08F40	. . Emblem, Gsxf Lh
5	94631-44110	. . Molding
6	94439-08F00	. . Shield, Side Rh
7	94449-08F00	. . Shield, Side Lh
8	94410-08F00-ZTX	Panel, Center Upper (gray)
8	94410-08F00-YAR	Panel, Center Upper (blue)
9	68185-05C10-YD8	. . Emblem, "suzuki" (silver)
10	94413-08F00	. . Cushion, Upper
11	94435-08F00-YAR	Lid, Oil (blue)
11	94435-08F00-YU8	Lid, Oil (gray)
12	09139-06030	Screw
13	94611-08F00	Wind Screen
14	09139-05025	Screw
15	08322-01053	Washer
16	09159-05019	Nut
17	09409-08308-5ES	Clip (black)
18	94421-08F00	Panel, Meter
19	94412-08F00-YAR	Panel, Center Lower (blue)
19	94412-08F00-YU8	Panel, Center Lower (gray)
20	94414-08F00	Cushion, Lower
21	94461-08F10	Panel, Inner Rh
22	94462-08F10	Panel, Inner Lh
23	94451-20C01	Plate, Air Guide
24	09407-18402	Clamp
24	09407-25401	Clamp

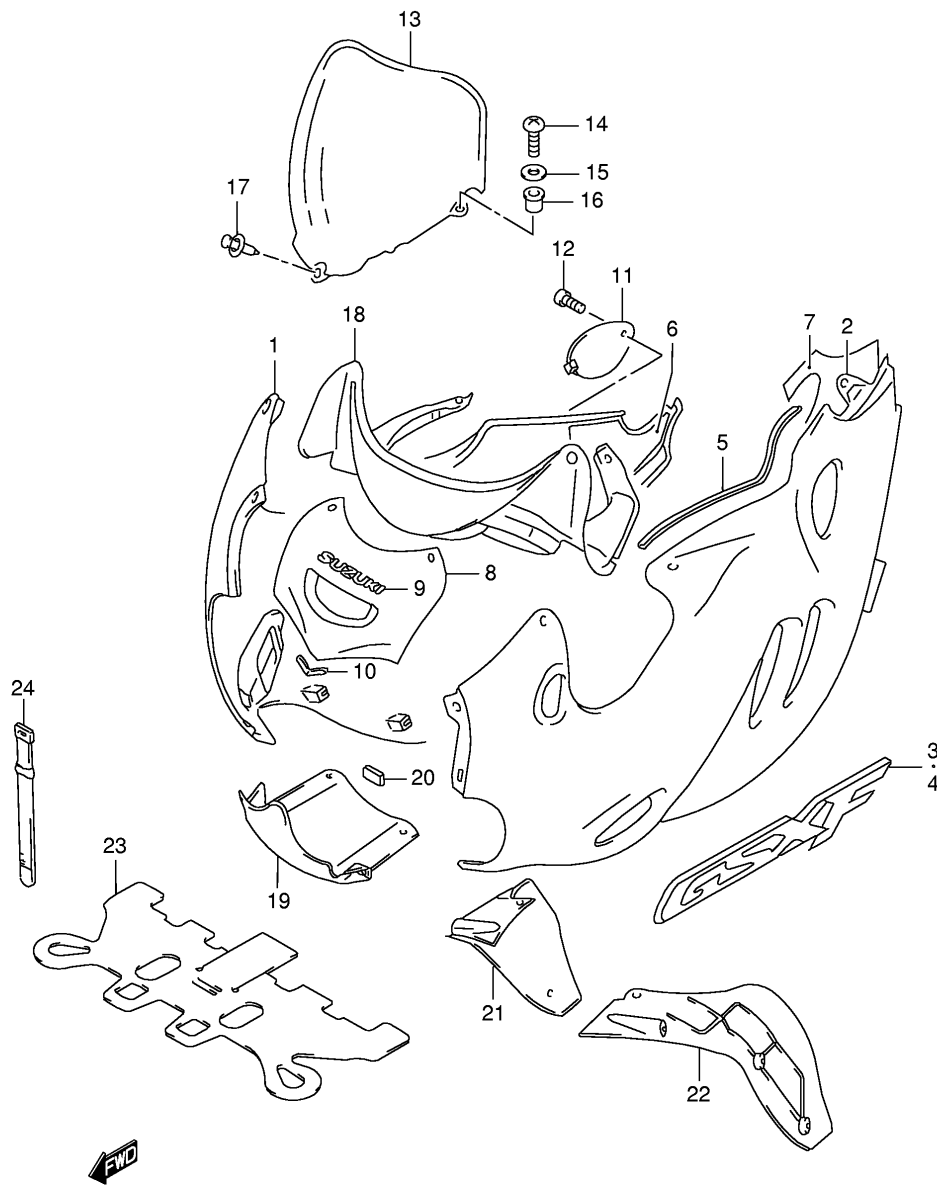 


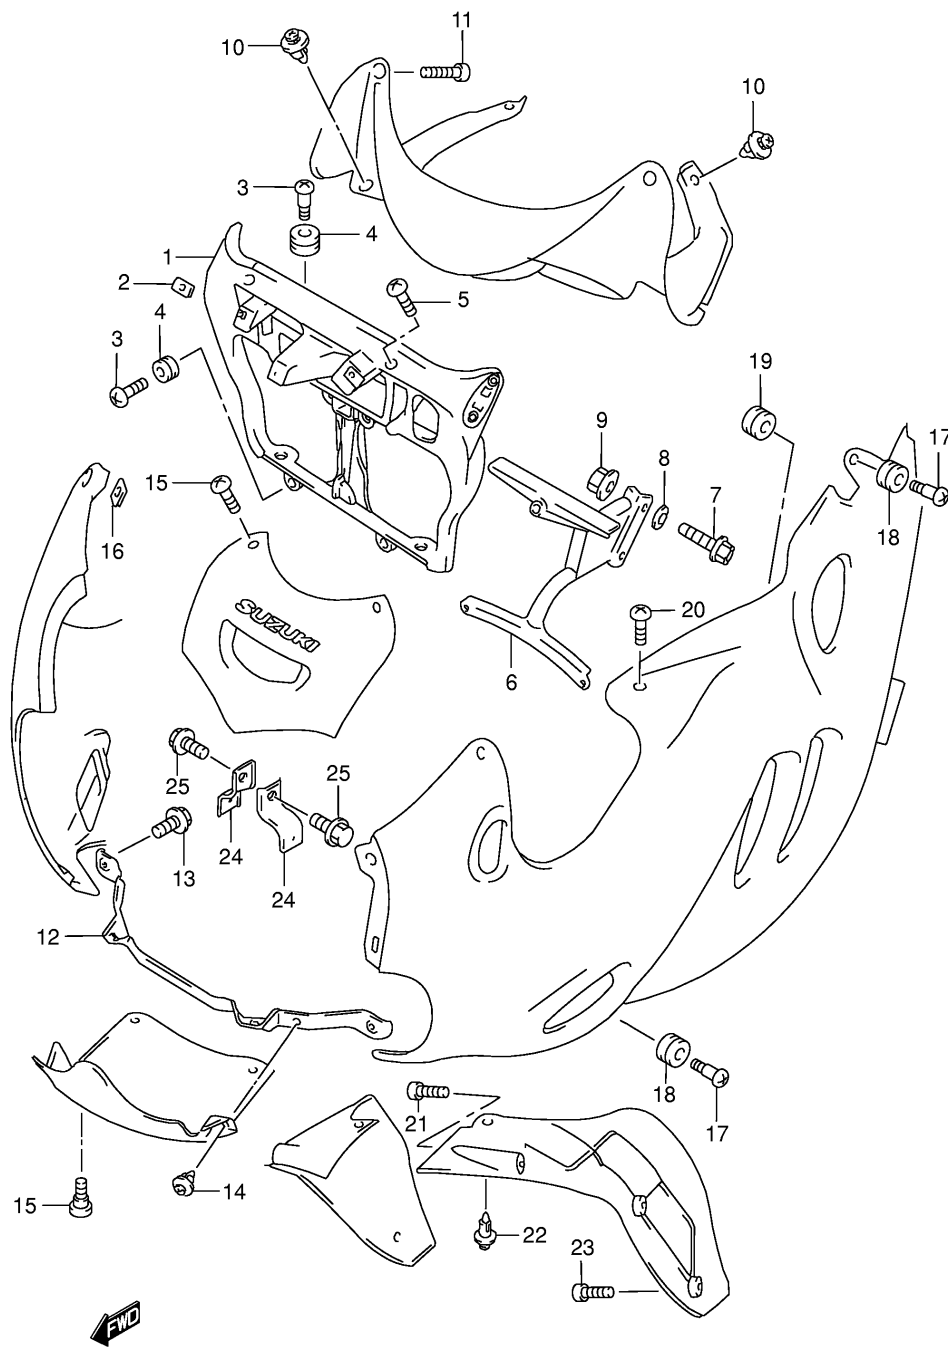 

Ref No	Part No	Description
1	94520-08F00	Brace, Cowling Front
2	94484-24F00	Nut
3	09139-06126	Screw
4	09320-09016	Cushion
5	02142-05163	Screw
6	94510-08F10	Brace, Cowling Rear
7	09103-08222	Bolt
8	09164-08020	Washer
9	08316-10083	Nut, Lower
10	09409-08308-5ES	Clip, Meter Panel (black)
11	03541-05163	Screw, Upper
12	94540-08F00	Bracket, Center Lower
13	01580-06163	Bolt, Bracket
14	09409-06322-5PK	Clip (black)
15	09139-05042	Screw, Center Panel
16	09148-05038	Nut, Meter Panel Upper
17	09139-06126	Screw, Side Cowling
18	09320-09016	Cushion
19	09320-08018	Cushion, Center
20	09139-05054	Screw, Meter Panel Rear
21	09136-04003	Screw, Inner Panel Upper
22	09409-08308-5ES	Clip, Inner Panel
23	02142-15163	Screw
24	94530-08F00	Bracket, Side Lower
25	09116-06109	Bolt

Ref No	Part No	Description
1	94470-08F00-YU8	Cowling, Under Rh (gray)
1	94470-08F00-YD8	Cowling, Under Rh (silver)
2	94472-08F00	• Shield, Under Cowl
3	94481-08F00-YU8	Cowling, Under Lh (gray)
3	94481-08F00-YD8	Cowling, Under Lh (silver)
4	09139-05054	Screw
5	94484-24F00	Nut
6	09139-06126	Screw, Center
7	09320-09016	Cushion
8	94570-08F00	Bracket, Lower Lh
9	94475-08F00	Cowling, Under Center
10	03541-05123	Screw


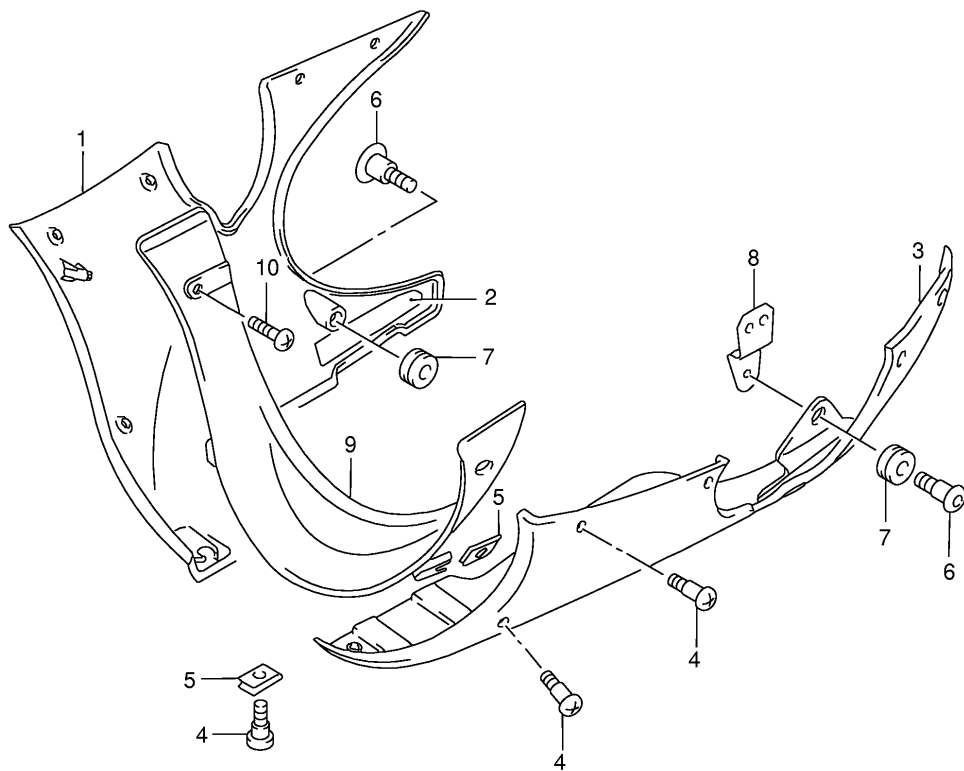 


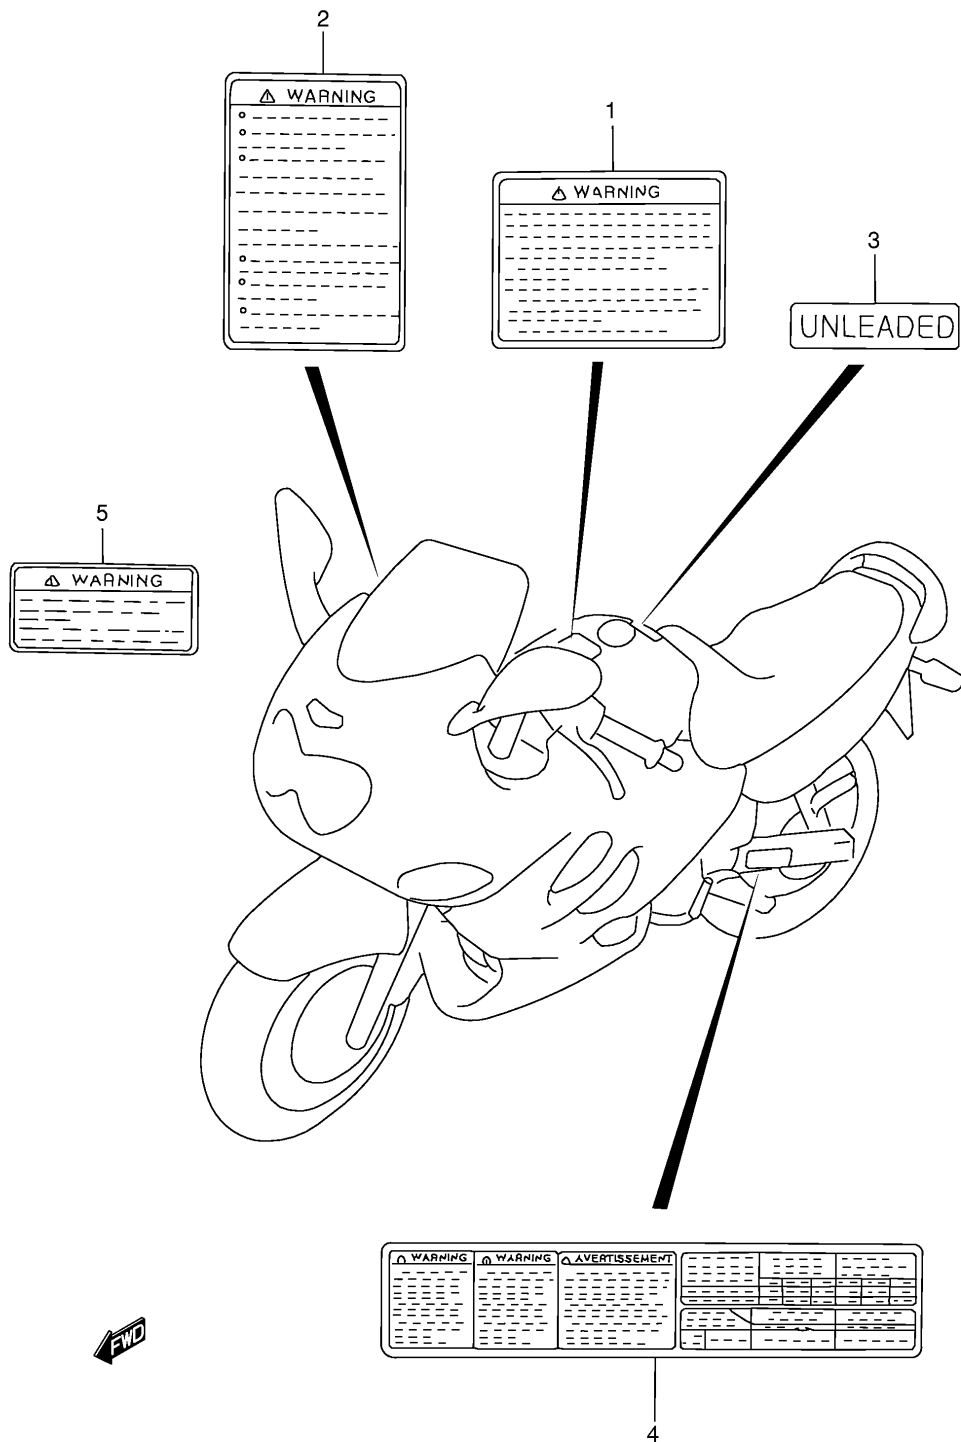 


Ref No	Part No	Description
1	68319-29F00	Label Warning (english)
1	68319-29F20	Label Warning (german)
1	68319-29F30	Label Warning (french)
1	68319-29F40	Label Warning (italian)
1	68319-29F50	Label Warning (spanish)
1	68319-29F70	Label Warning (dutch)
1	68319-29F80	Label Warning (portuguese)
1	68319-29F90	Label Warning (swedish)
1	68319-29FA0	Label Warning (finnish)
1	68319-29FB0	Label Warning (norwegian)
1	68319-29FC0	Label Warning (danish)
1	68319-30F40	Label Warning (italian)
1	68319-30F90	Label Warning (swedish)
2	68922-29F00	Label, Screen (english)
2	68922-29F20	Label, Screen (german)
2	68922-29F30	Label, Screen (french)
2	68922-29F40	Label, Screen (italian)
2	68922-29F50	Label, Screen (spanish)
2	68922-29F70	Label, Screen (dutch)
2	68922-29F80	Label, Screen (portuguese)
2	68922-29F90	Label, Screen (swedish)
2	68922-29FA0	Label, Screen (finnish)
2	68922-29FB0	Label, Screen (norwegian)
2	68922-29FC0	Label, Screen (danish)
2	68922-14F40	Label, Screen (italian)
2	68922-14F90	Label, Screen (swedish)
3	68623-17D00	Label, Fuel
3	86932-73060	Label, Fuel
4	68332-08F11	Label, Tire Information
5	68613-24F00	Label, Steering
6	99011-20C67-01A	Manual, Owner's (english)
6	99011-20C67-01F	Manual, Owner's (french)
6	99011-20C67-01K	Manual, Owner's (german)
6	99011-20C67-01W	Manual, Owner's (swedish)
6	99011-20C67-SDE	Manual, Owner's


Ref No	Part No	Description
--------	---------	-------------

1	45100-08F10-LN6	Seat Assy
2	09321-08006	• Cushion
3	45220-20A01	Bracket, Seat Support
4	02122-06303	Screw
5	95700-31840	Lock Set, Seat
6	01547-05103	Bolt
7	45289-03F10	Bracket, Seat Lock
8	03141-14123	Screw
9	45280-43510	Cable, Seat Lock
10	46211-03F11-YU8	Handle, Pillion Rider (gray)
10	46211-03F11-YAR	Handle, Pillion Rider (blue)
11	01551-08303	Bolt (8x30)
12	46212-03F10	Cushion (17x24x1.5)
13	09160-08501	Washer (8.5x24x2.3)

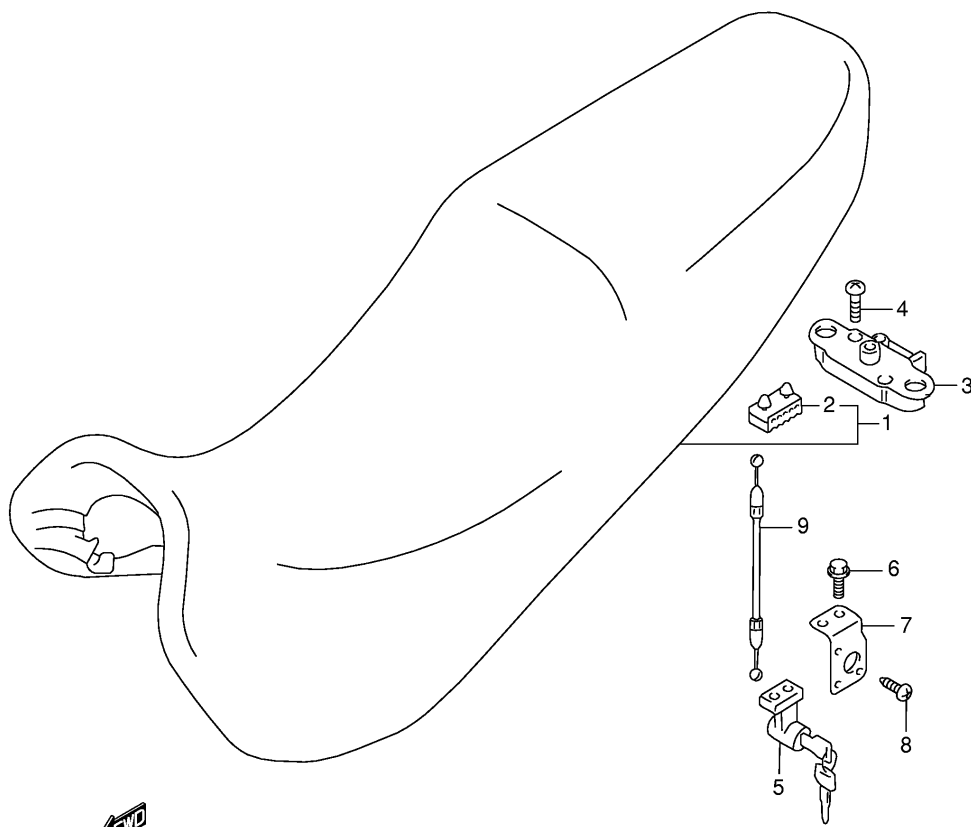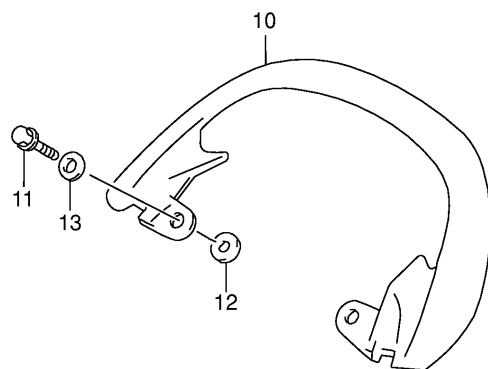  


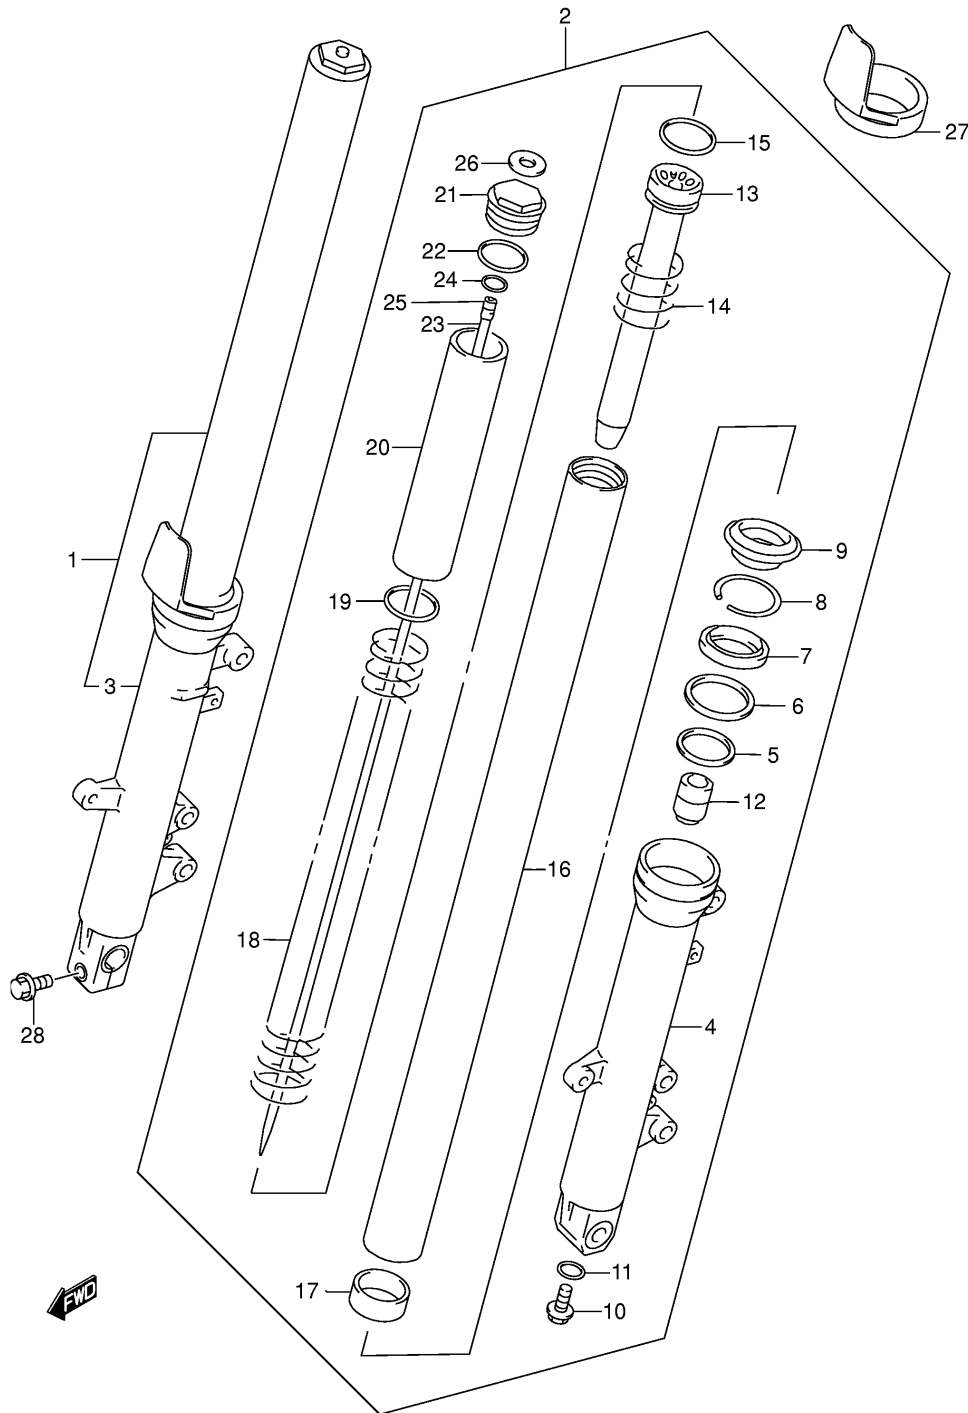 

Ref No	Part No	Description
1	51103-08FC0	Damper Assy, Front Fork Rh
2	51104-08FC0	Damper Assy, Front Fork Lh
3	51130-08F10	. Tube, Outer Rh
4	51140-08F10	. Tube, Outer Lh
5	51152-11D60	. Bush, Guide
6	51168-38B00	. Spacer, Seat
7	51153-08D00	. Seal, Oil
8	51556-38B00	. Ring
9	51571-47D50	. Seal, Dust
10	51147-48130	. Bolt
11	51148-36011	. Gasket
12	51195-10F00	. Piece, Oil Lock
13	51194-08FA0	. Seat, Under
14	51177-48B31	. Spring
15	51196-12C00	. Ring
16	51110-08FA0	. Tube, Inner
17	51121-48B31	. Bush, Slide
18	51171-08FA0	. Spring, Front
19	51192-19C00	. Joint, Spring
20	51176-19C00	. Collar, Spring
21	51351-20C20	. Bolt, Fork
22	51117-12C00	. O Ring, Spring
23	52111-08F00	. Rod, Damper
24	09280-03002	. O Ring (id:3.8,d:1.9)
25	51169-20C20	. Ring, Stopper (id:6.1,d:0.6)
26	51149-20C20	. Label, S-h
27	51201-32F00	Protector
28	01550-08407	Bolt, Rh

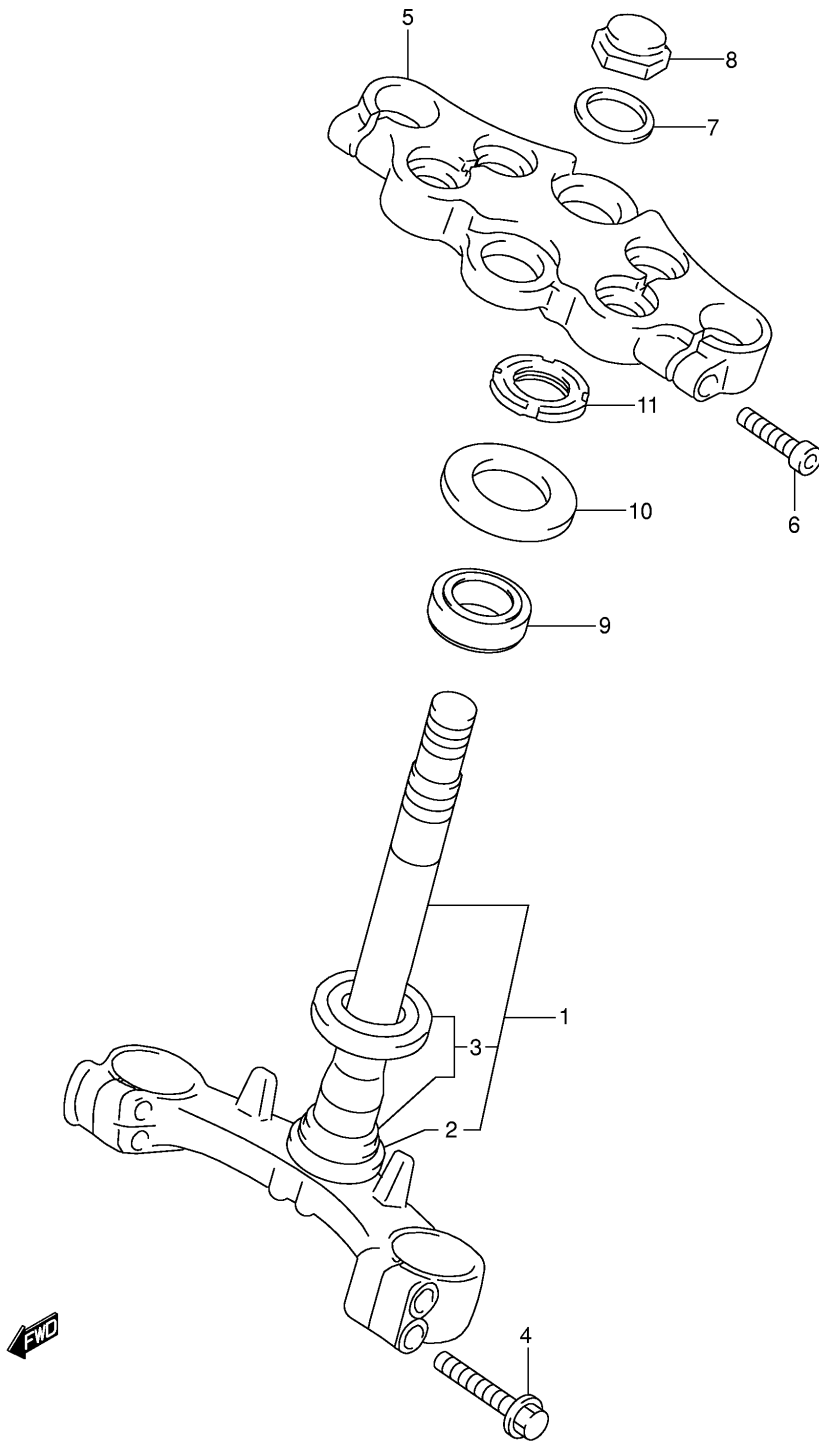 


Ref No	Part No	Description
1	51410-08F10	Stem, Steering
2	51644-12C00	• . Seal, Steering Lower
3	09265-30020	• . Bearing (30x55x17)
4	01550-08403	Bolt
5	51311-08FC0	Head, Steering Stem
6	07130-08353	Bolt
7	51356-24B01	Washer
8	51353-24B00	Nut
9	09265-25038	Bearing (25x47x15)
10	51643-40502	Dust Seal
11	51631-28000	Nut, Steering Stem

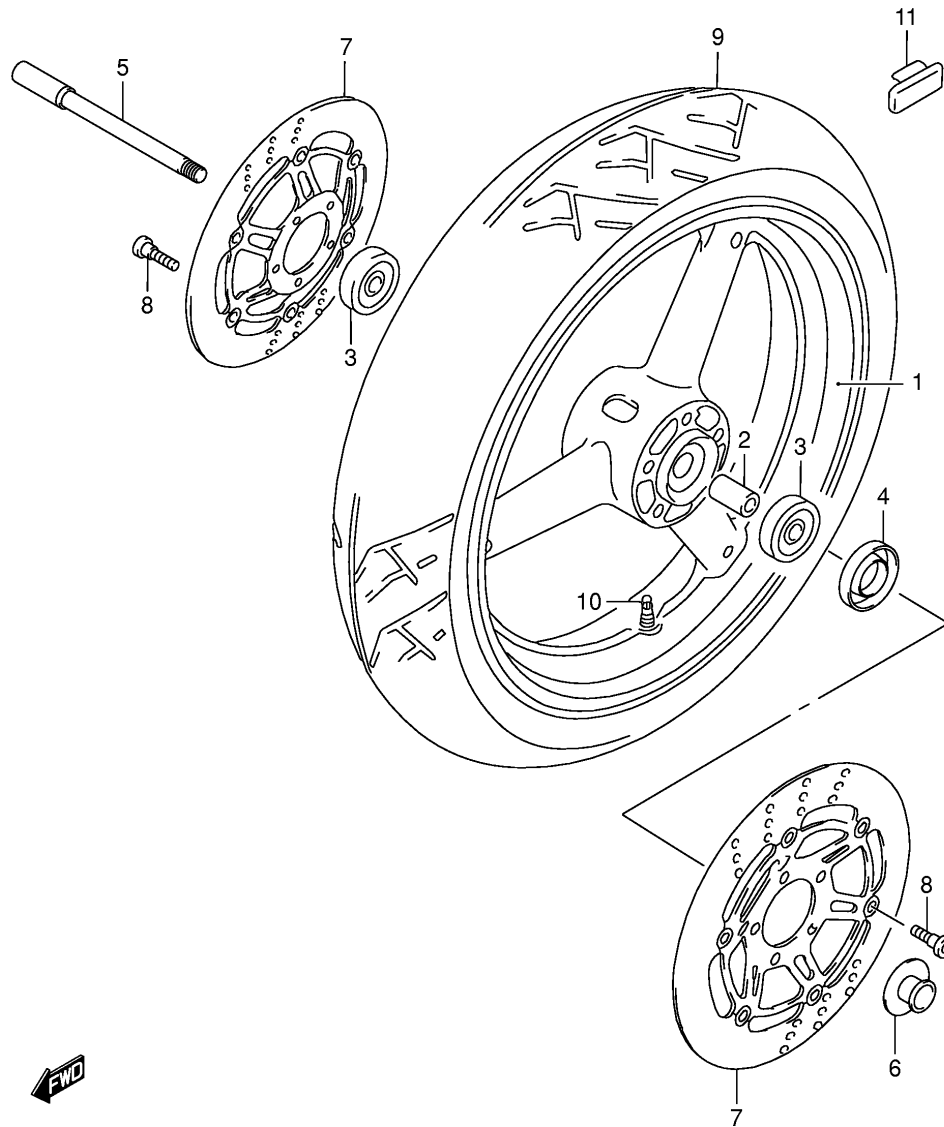 


Ref No	Part No	Description
1	54111-08F20-019	Wheel, Front (17m/cxmt3.50) Black
2	09180-17067	Spacer (17.5x25x88)
3	08133-62037	Bering
4	09285-22004	Seal, Front Wheel Bearing
5	54711-08F00	Axle, Front
6	54750-31F00	Spacer, Front Axle Lh
7	59210-08F10	Disc, Front Brake
8	09106-08160	Bolt
9	55110-08F10	Tire, Front,120/70 Zr17 (58w) (dunlop)
10	43130-24A00	Valve Assy, Wheel Rim (tr412)
11	55411-17G00	Balancer, Wheel No.1
11	55412-17G00	Balancer, Wheel No.2
11	55413-17G00	Balancer, Wheel No.3




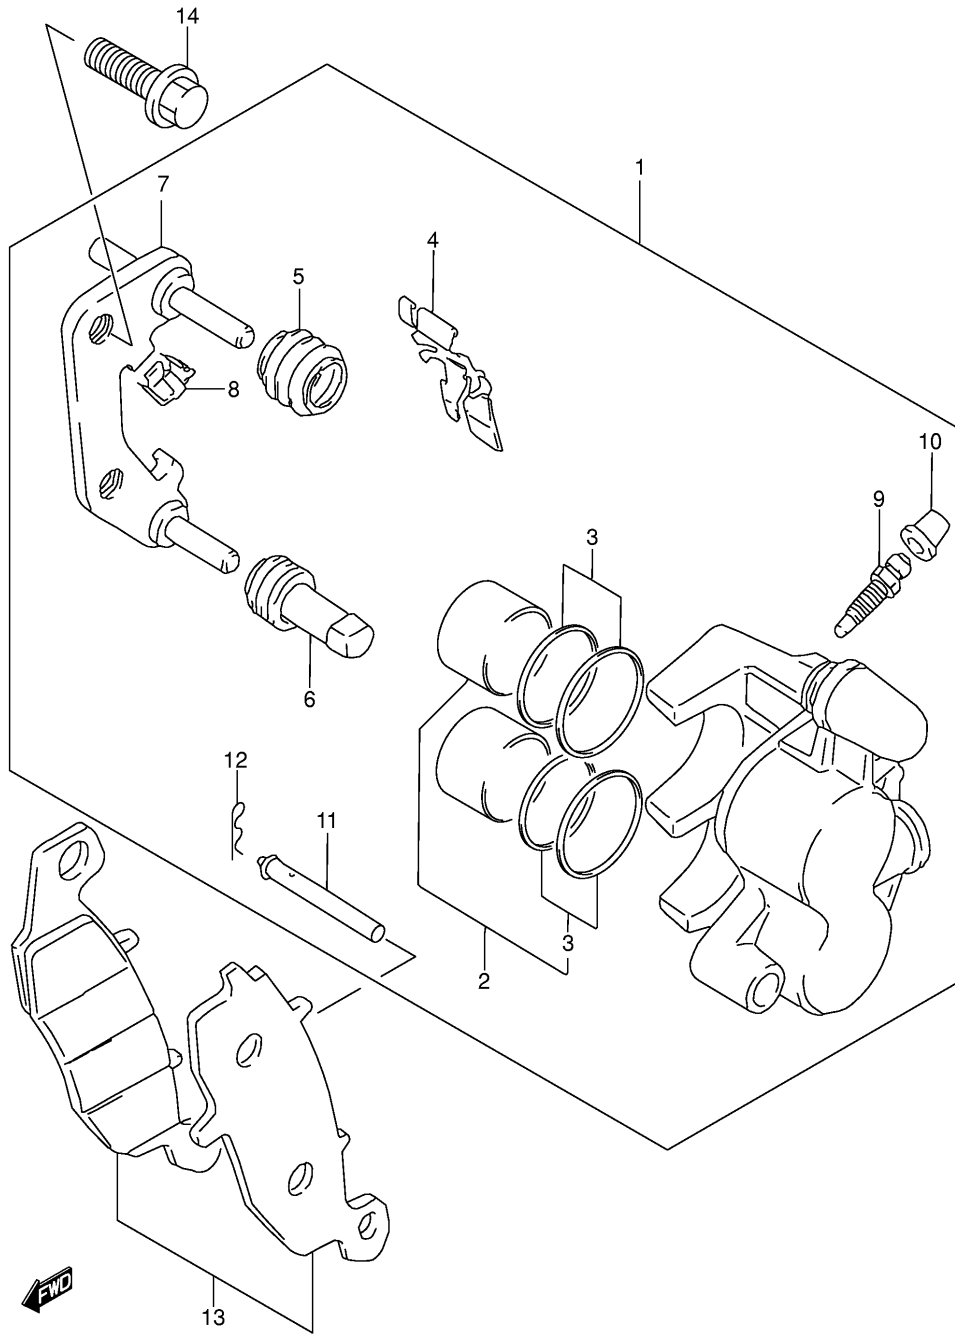 

Ref No	Part No	Description
1	59100-33D90-999	Caliper Assy, Front Rh
1	59300-33D90-999	Caliper Assy, Front Lh
2	59300-33831	. Piston Set
3	59300-33841	••• Seal Set, Piston
4	59115-33D00	. Spring Rh
4	59315-33D00	. Spring Lh
5	59112-44B00	. Boot
6	59313-36500	. Insulator
7	59150-33D01	. Carrier, Caliper, R
7	59350-33D01	. Carrier, Caliper, L
8	59116-33D00	. Guide
9	59121-18410	. Bleeder
10	55156-66310	. Cap
11	59141-44B01	. Pin
12	69142-45000	. Clip
13	59101-33830	Pad Set, Rh
13	59301-33830	Pad Set, Lh
14	01550-10303	Bolt


Ref No	Part No	Description
1	09360-10041	Bolt, Upper (10x1.00x22)
2	09360-10041	Bolt, Joint (10x1.00x22)
3	09360-10043	Bolt (10x1.00x36)
4	09360-10042	Bolt, Lower (10x1.25x22)
5	09161-10009	Washer (10x15x1.5)
6	59491-17E00	Joint, Brake Hose
7	01550-06163	Bolt
8	59480-08F10	Hose, Front Brake No.1
9	59240-08F00	Hose, Front Brake No.2 Rh
10	59440-08F00	Hose, Front Brake No.2 Lh
11	59268-45D00	Clamp, Brake Hose No.2
12	01550-06123	Bolt

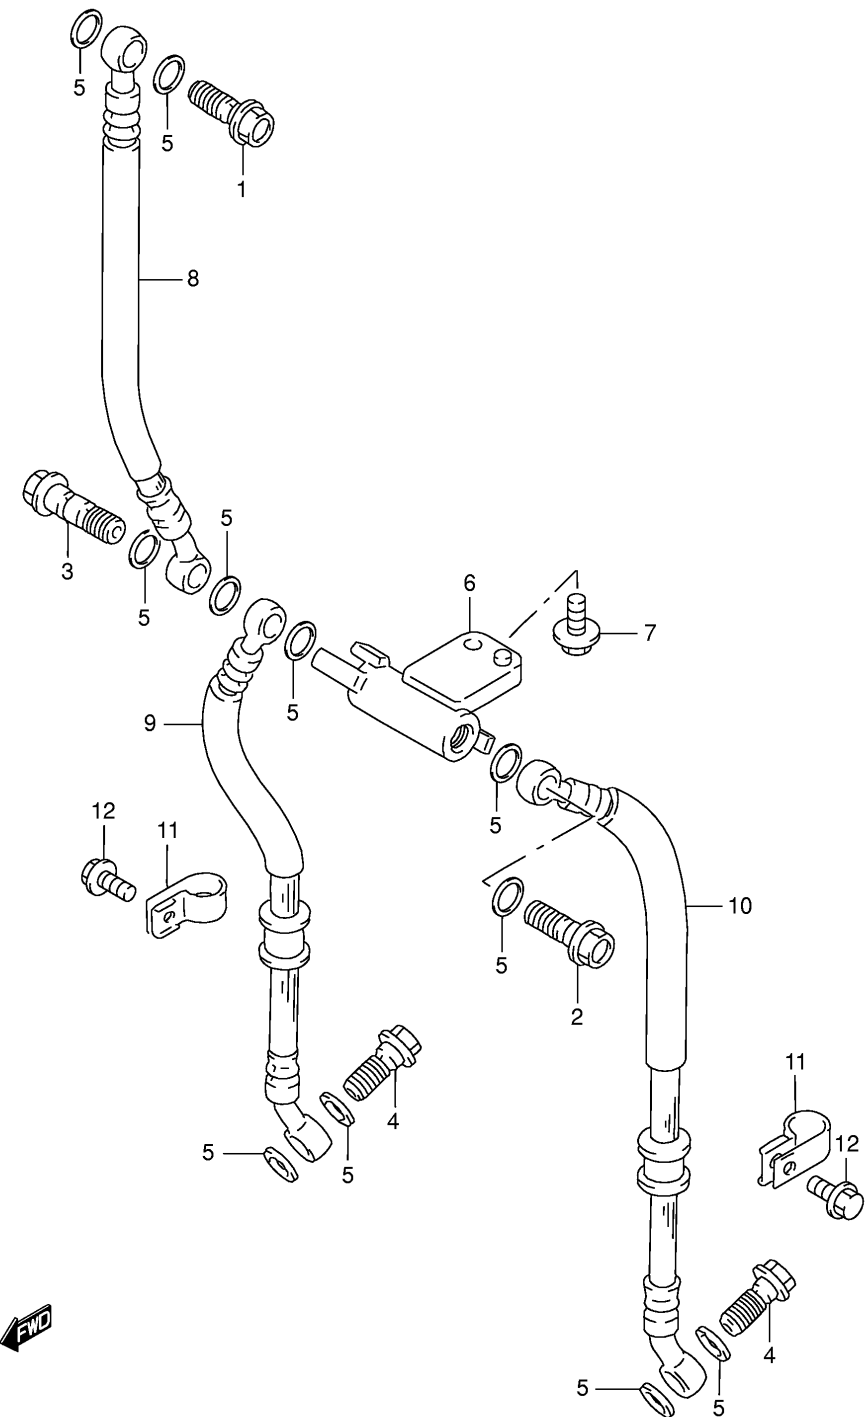 

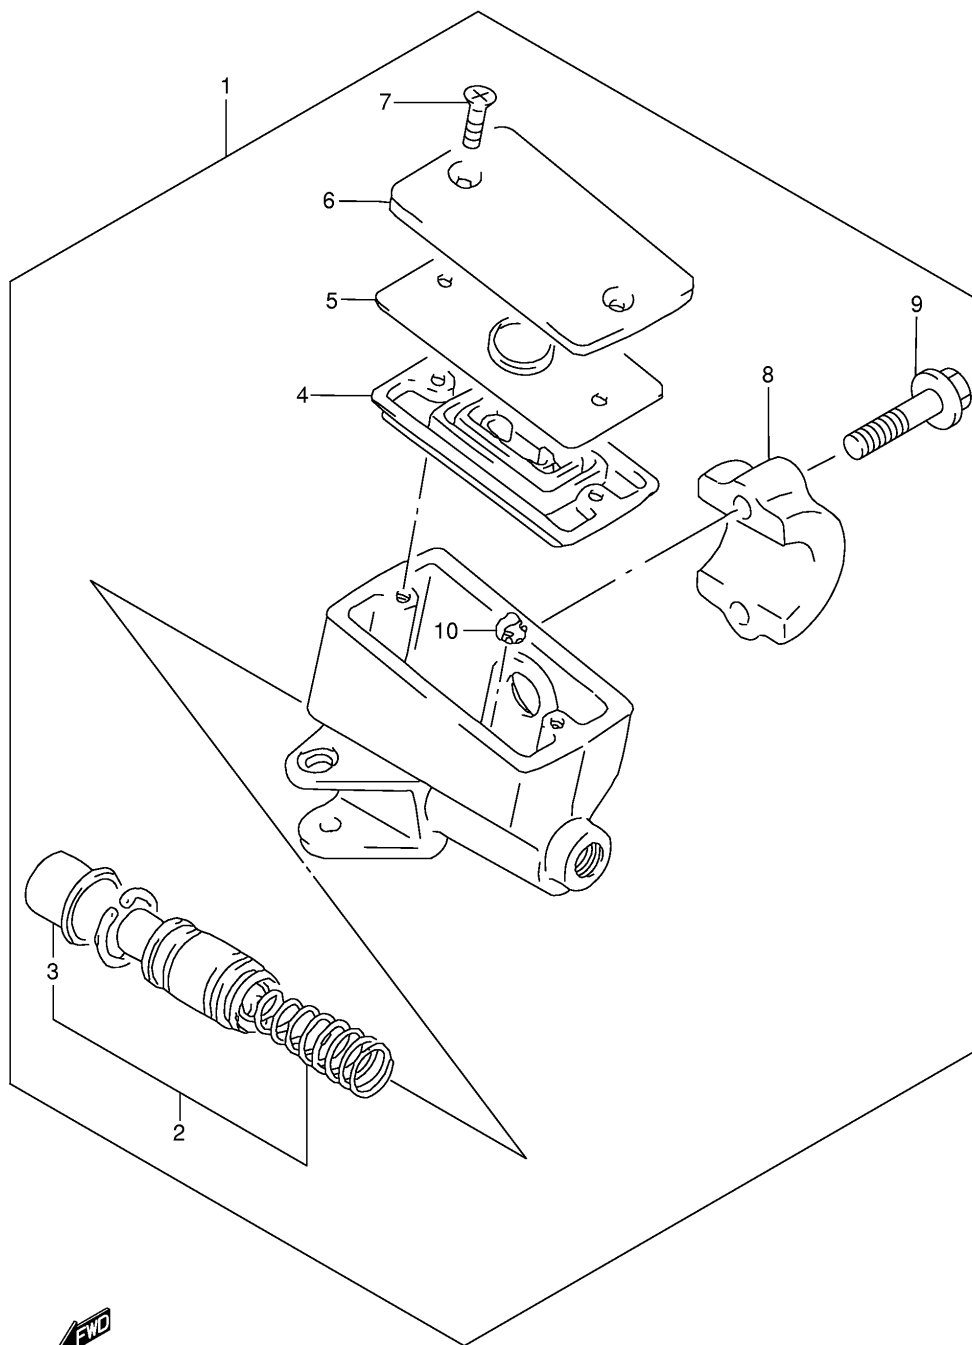 


Ref No	Part No	Description
1	59600-20C10	Cylinder Assy, Front Master
2	59600-45850	. Piston/cup Set
3	59666-44300	•• . Boot
4	59667-49460	. Diaphragm
5	59668-41C00	. Plate, Diaphragm
6	59669-41C00	. Cap
7	69689-49300	. Screw
8	59671-19B00	. Holder
9	59675-19C00	. Bolt, Holder (6x25)
10	59664-48B00	. Protector




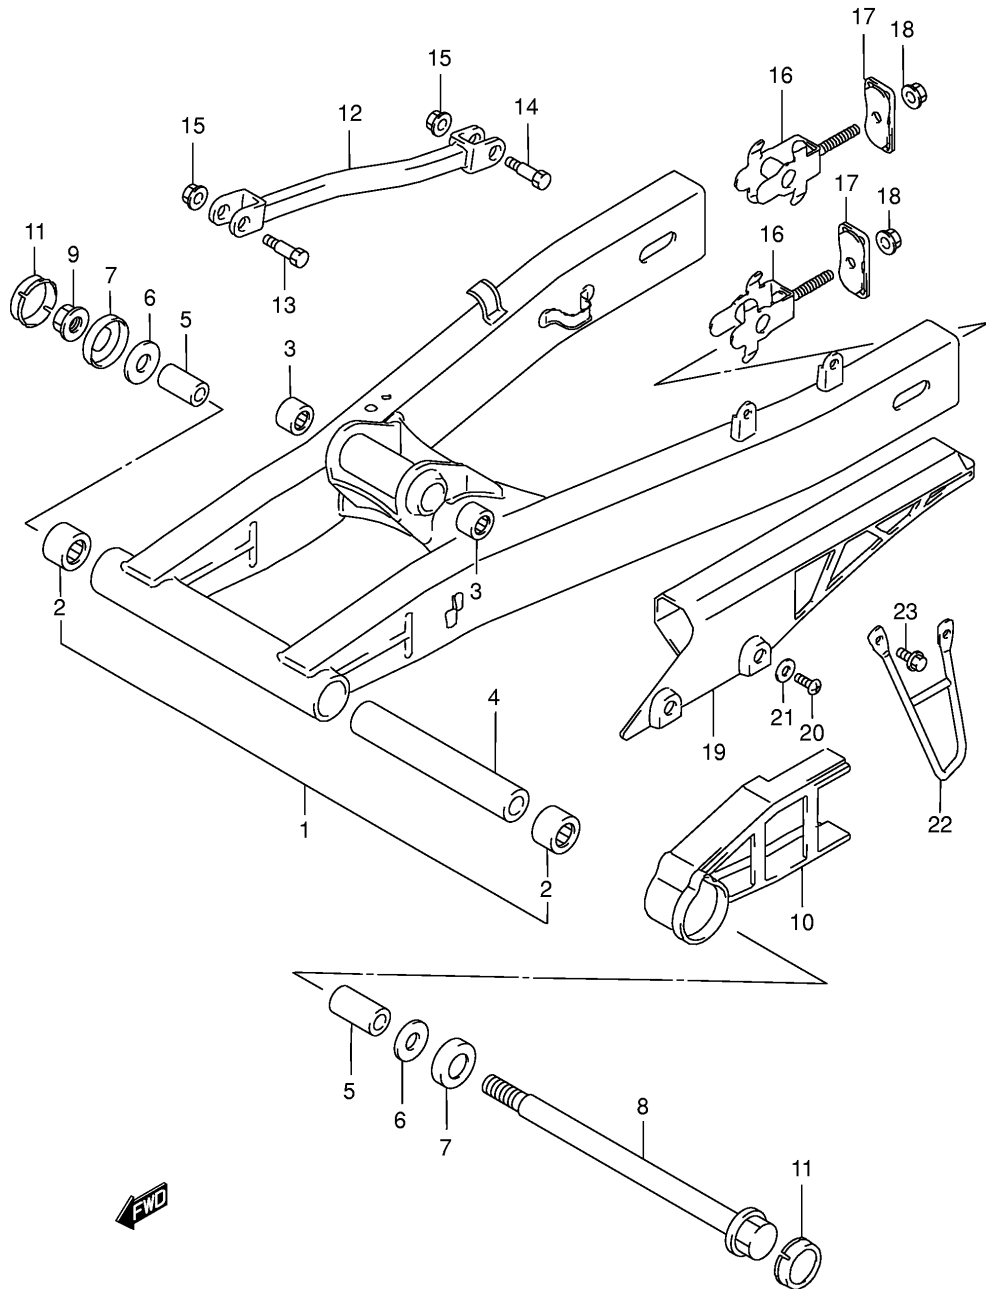 


Ref No	Part No	Description
1	61000-08F10-13L	Swinging Arm Assy, Rear (silver)
2	09263-22017	• . Bearing, Pivot (22x29x30)
3	09263-20071	• . Bearing, Rod (20x27x23.5)
4	61282-08F00	Spacer, Pivot Center
5	61251-38B00	Spacer, Pivot
6	08211-16341	Thrust Washer
7	61262-32410	Dust Seal
8	61211-08F00	Shaft, Pivot
9	08319-31143	Nut
10	61273-20C00	Buffer, Chain Touch Defense
11	61222-43400	Cap, Pivot
12	64310-08F00	Torque Link, Rear
13	09111-10051	Bolt, Front (10x39)
14	09100-10187	Bolt, Rear (10x34)
15	08319-31107	Nut
16	61410-08F00	Adjuster, Chain
17	61420-08F00	Plate, Adjuster Guide
18	08319-31088	Nut
19	61310-08F00	Case, Chain
20	02142-06123	Screw
21	09169-06026	Washer
22	61390-08F00	Guard, Chain
23	01547-06123	Bolt

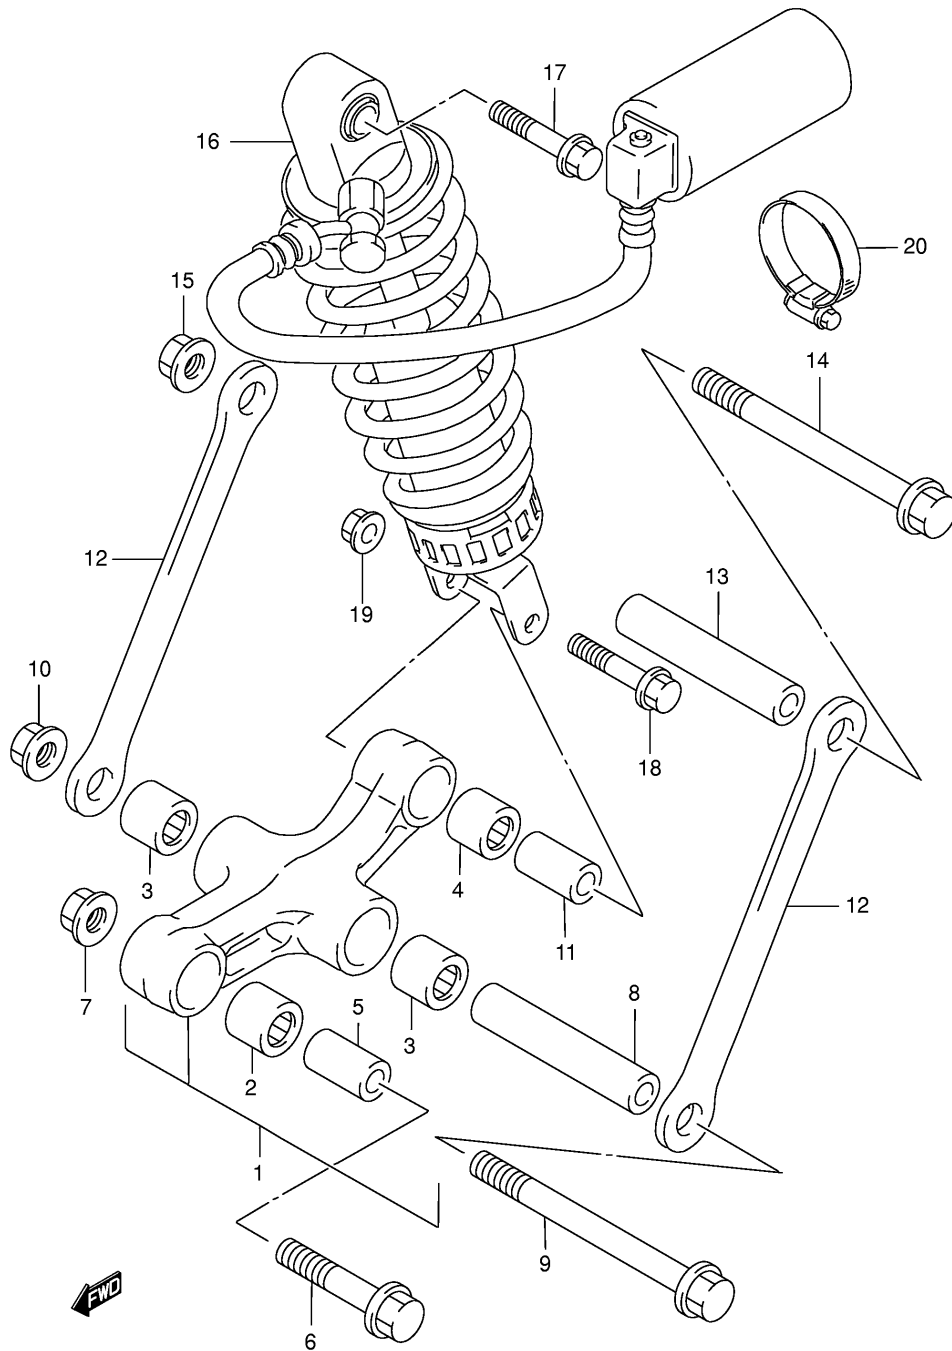 


Ref No	Part No	Description
1	62600-08810	Lever Set, Rear Cushion
2	09263-20073	. Bearing, Front (20x27x30)
3	09263-20071	. Bearing, Center (20x27x23.5)
4	09263-17034	. Bearing, Rear (17x24x26)
5	09180-14014	Spacer, Front (14x20x34)
6	09103-14012	Bolt, Front (14x62)
7	08319-31148	Nut
8	62317-40C10	Spacer, Center (14x20x94)
9	62658-40C10	Bolt, Center (14x124)
10	08319-31148	Nut
11	62684-40A10	Spacer, Rear
12	62641-08F00	Rod, Rear Cushion Lever
13	62317-40C10	Spacer, Rod (14x20x94)
14	62658-40C10	Bolt, Rod (14x124)
15	08319-31148	Nut
16	62100-08FA1	Absorber Assy, Rear Shock
17	09103-10213	Bolt, Upper (10x52)
18	09103-10086	Bolt, Lower (10x44)
19	08319-31103	Nut
20	09402-50511	Clamp, Tank

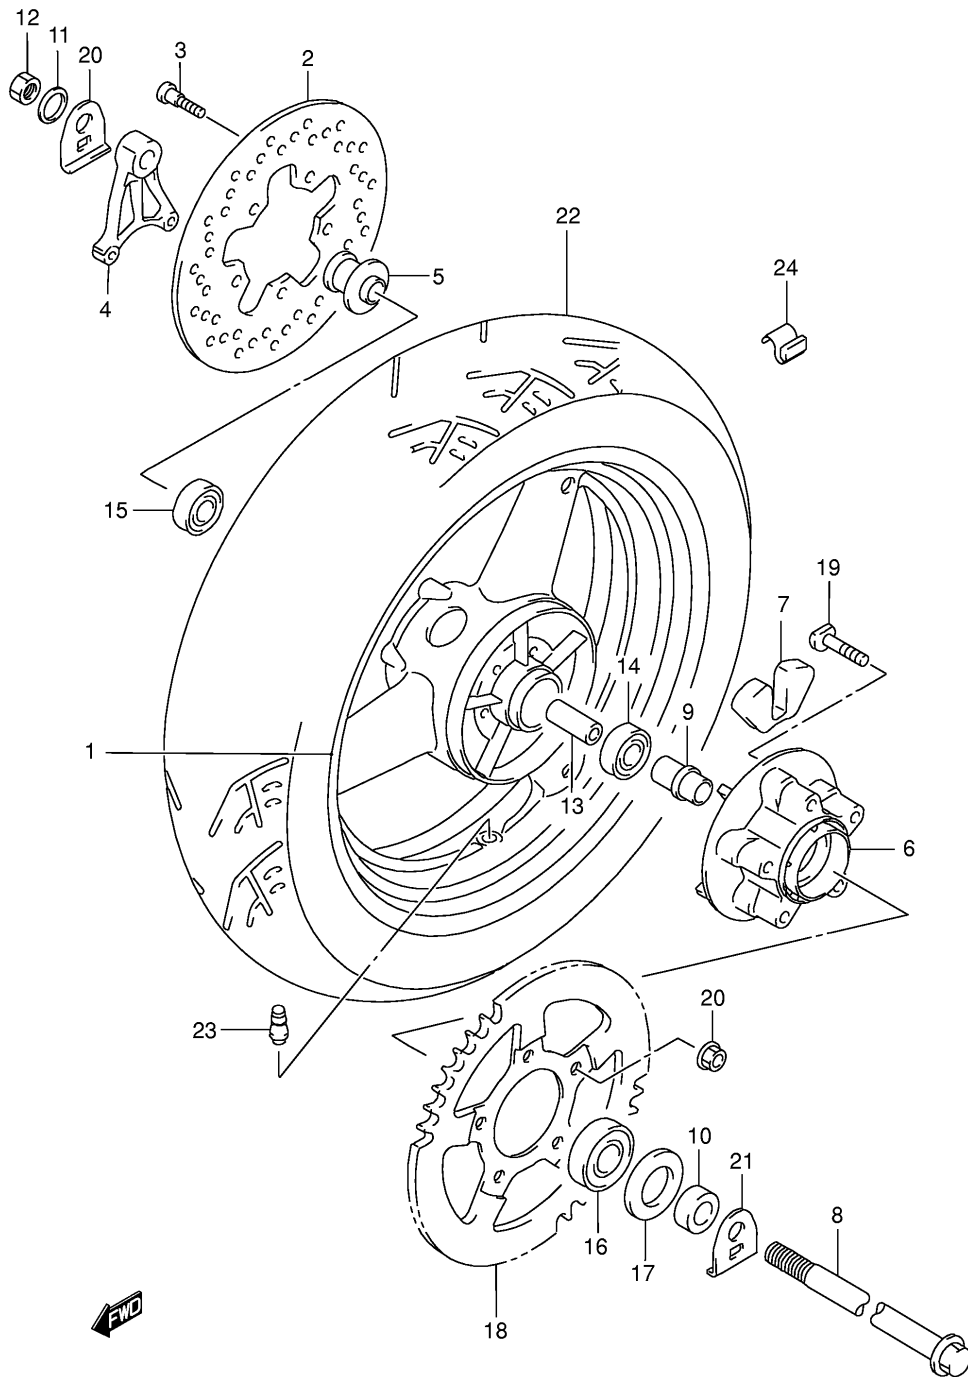 

Ref No	Part No	Description
1	64111-08F01-019	Wheel, Rear (17xmt4.50) Black
2	69211-21E00	Disc, Rear Brake
3	09106-08125	Bolt (8x33)
4	69721-33D00	Bracket, Rear Caliper
5	64740-19C00	Spacer, Rear Axle Rh
6	64611-33C00	Drum, Rear Sprocket
7	64651-27A01	Absorber, Rear Hub Shock
8	64711-08F00	Axle, Rear
9	64733-34C00	Retainer, Hub Bearing
10	64741-45D00	Spacer, Rear Axle Lh
11	09160-17050	Washer
12	08319-21168	Nut
13	09180-17067	Spacer, Bearing (17.5x25x88)
14	08143-63037	Bearing, Rr Hub, L
15	08123-63037	Bearing, Rr Hub, R
16	09262-25073	Bearing (25x62x17)
17	09285-35001	Oil Seal (35x62x8)
18	64511-20C21	Sprocket, Rear (nt:45)
19	09119-10043	Bolt (10x47)
20	08319-31107	Nut
21	61445-20C01	Washer, Chain Adjuster
22	65110-08F10	Tire, Rear,150/70 Zr17(69w) (dunlop)
23	43130-24A00	Valve Assy, Wheel Rim (tr412)
24	55411-17G00	Balancer, Wheel No.1
24	55412-17G00	Balancer, Wheel No.2
24	55413-17G00	Balancer, Wheel No.3

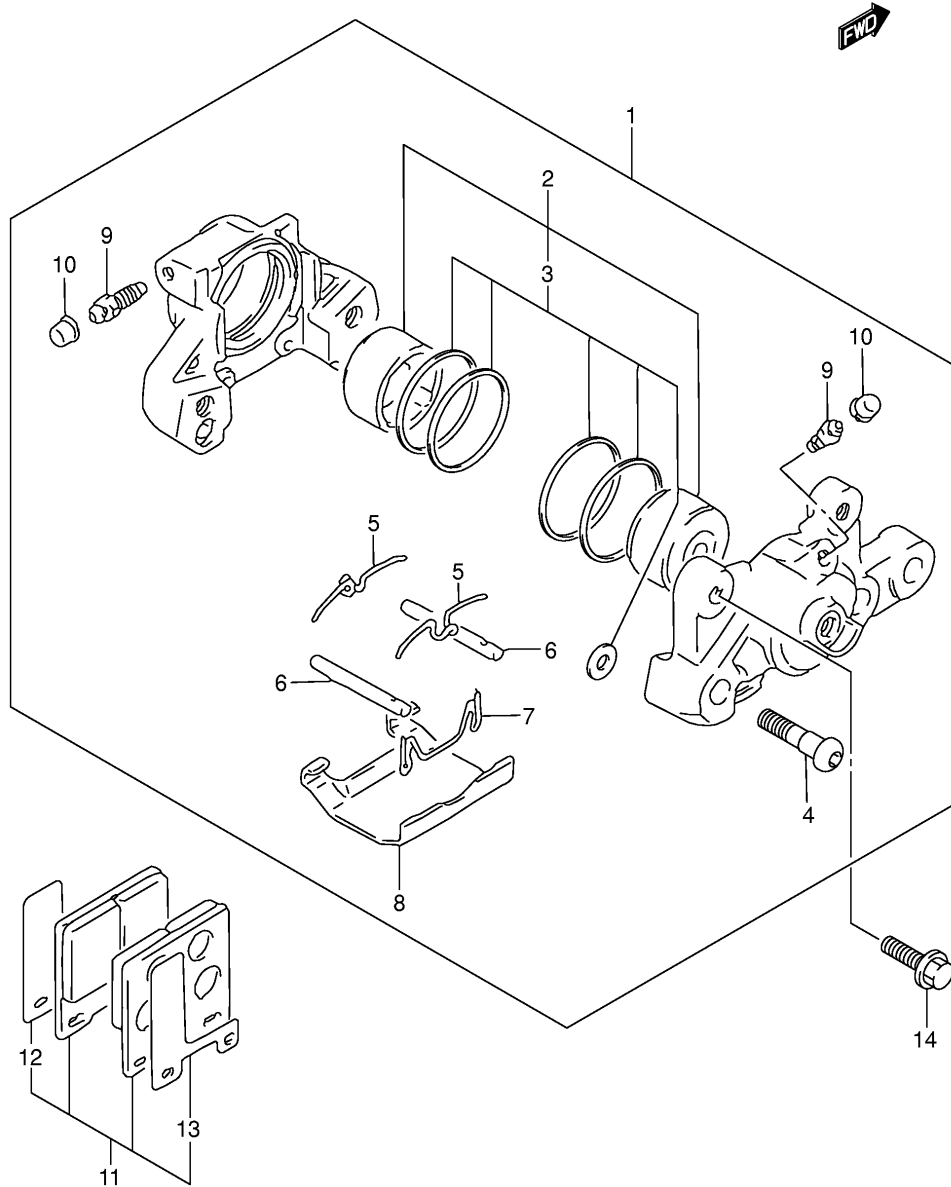 


Ref No	Part No	Description
1	69100-05CK0-999	Caliper Assy, Rear
2	69100-05851	. Piston Set
3	69100-32821	• . Seal Set, Piston
4	59145-05C50	. Bolt
5	59143-16700	. Spring
6	69141-05CK0	. Pin
7	69142-05CK0	. Clip
8	59151-16701	. Cover
9	59121-18410	. Bleeder
10	55156-66310	. Cap
11	69102-05870	Pad & Shim Set
12	59371-20C00	. Shim, Inner
13	59381-20C00	. Shim, Outer
14	01550-08303	Bolt

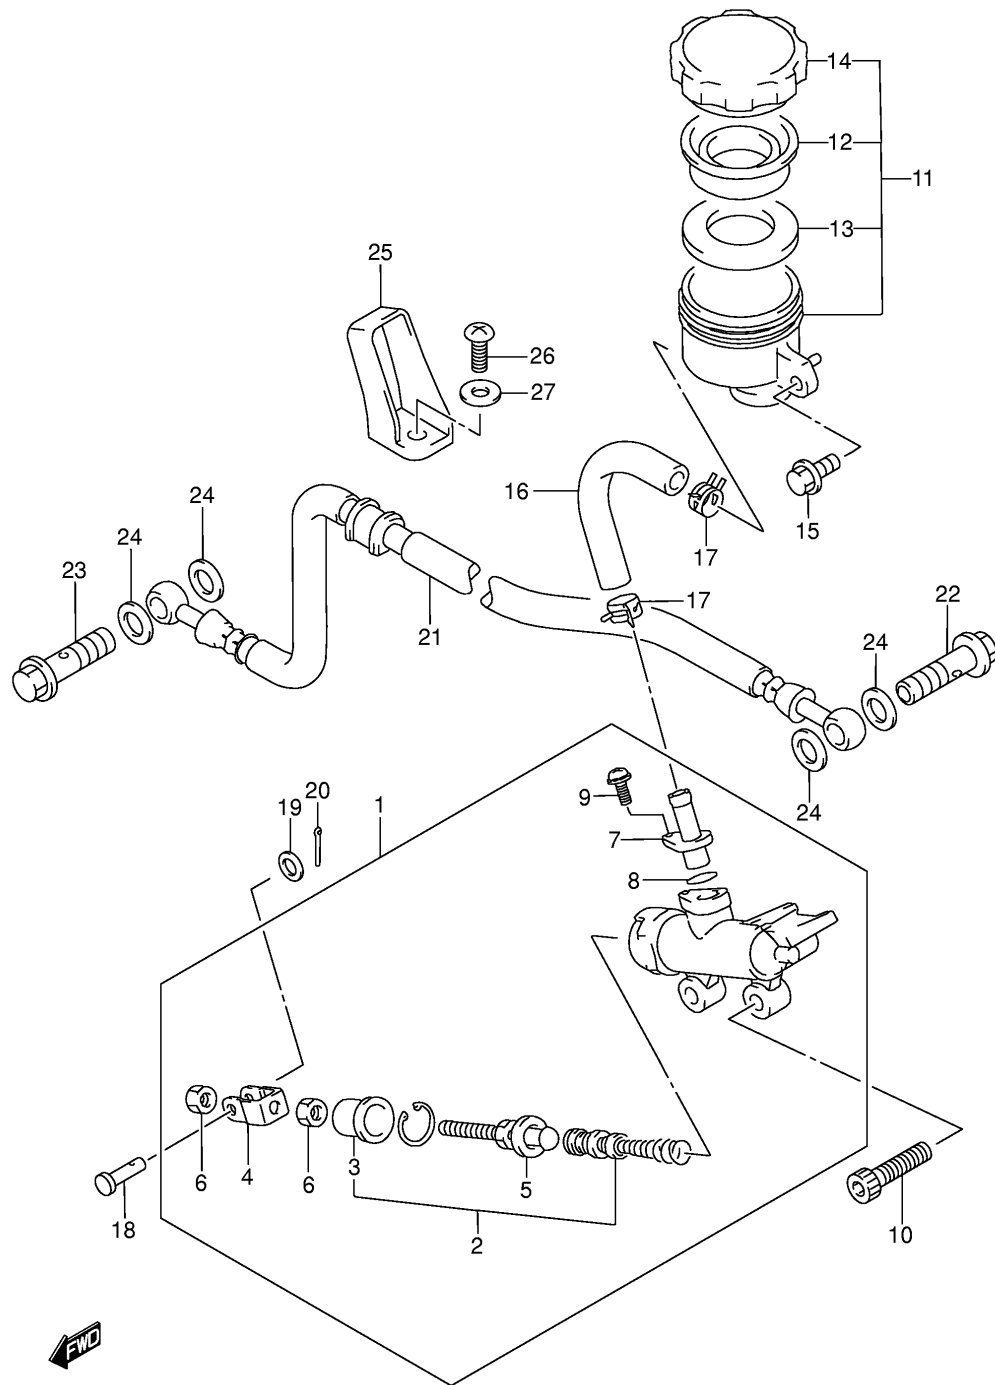 

Ref No	Part No	Description
1	69600-08F00	Cylinder Assy, Rear Master
2	69600-04820	. Piston/cup Set
3	69691-00A00	• • . Boot
4	69692-19A00	. Yoke
5	69670-19C00	. Rod, Push
6	69693-05A00	. Nut
7	69672-00A00	. Connector
8	69686-34200	. O Ring
9	02112-74123	. Screw
10	09106-06073	Bolt (6x16)
11	69740-08F00	Tank Assy, Reservoir
12	59667-18441	. Diaphragm
13	59668-18441	. Plate
14	59669-07D00	. Cap
15	01550-06123	Bolt
16	69731-08F00	Hose, Reservoir Tank
17	09401-13417	Clip
18	09200-06037	Pin
19	08322-01063	Washer
20	04111-20158	Cotter Pin
21	69480-08F00	Hose, Rear Brake
22	09360-10042	Bolt, Master (10x1.25x22)
23	09360-10041	Bolt, Caliper (10x1.00x22)
24	09161-10009	Washer
25	69243-06C00	Guide, Rear Brake
26	02142-06163	Screw
27	09169-06041	Washer



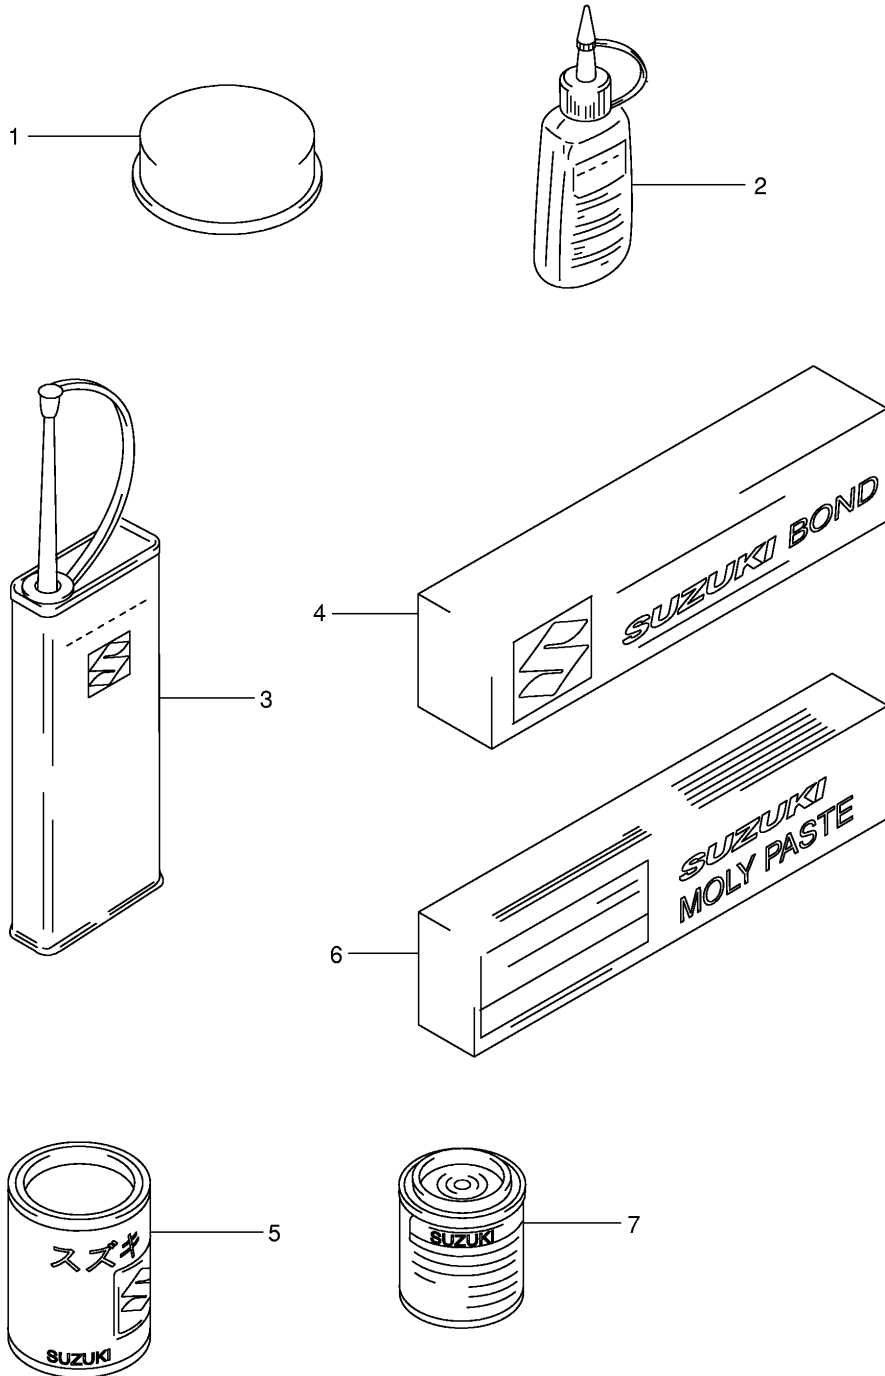 

Ref No	Part No	Description
1	99000-25110	Suzuki Pbc Grease
2	99000-32020	Thread Lock Super (1333b)
2	99000-32030	Thread Lock Super (1303b)
2	99000-32050	Thread Lock Super (1342)
2	99000-32100	Thread Lock Super (1305)
2	99000-32130	Thread Lock Super (1360)
3	99000-32040	Thread Lock Cement
4	99000-31140	Suzuki Bond (1207b)(black)
4	99000-31110	Suzuki Bond (1215)
5	99000-25030	Suzuki Super Grease
6	99000-25140	Suzuki Moly Paste
7	99000-10109-019	Paint (black)
7	99000-10209-13L	Paint (bright Silver Metallic)
7	99000-10209-YBA	Paint (pearl Deep Blue No.2)
7	99000-10209-YAR	Paint (pearl Deep Sea Blue)