 
 



Ref No	Part No	Description
1	11171-48B03	Cover, Cylinder Head
2	11173-06B02	Gasket, Head Cover No.1
3	11178-27A01	Gasket, Head Cover No.2
4	11179-27A02	Gasket, Head Cover No.3
5	09106-07009	Bolt (l:5.5)
6	09106-07010	Bolt (l:19)
7	09161-11008	Washer
8	09360-08009	Bolt, Union
9	07130-08123	Plug, Head Cover
10	09168-08008	Gasket
11	04221-08129	Pin
12	11176-31301	Cover, Breather
13	11177-48B00-H17	Gasket, Breather Cover
14	01550-06203	Bolt
15	11401-17830	Gasket Set

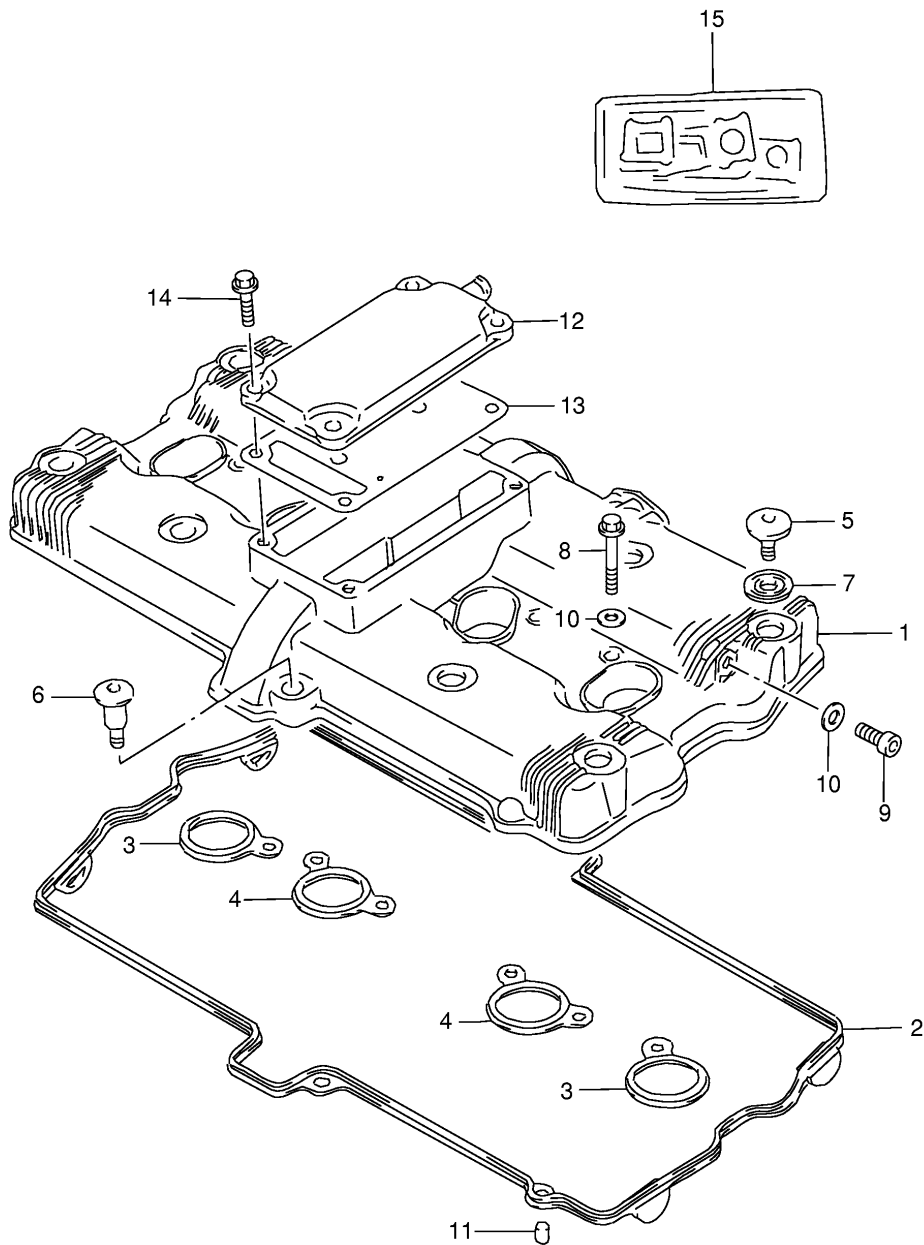




Ref No	Part No	Description
1	11100-20C02	Head Assy, Cylinder
1	11100-20C12	Head Assy, Cylinder
2	11116-06B70	• . Guide, Valve
3	09381-10004	• . Ring, Valve Guide
4	09103-06026	• . Bolt
5	09206-08001	• . Pin
6	11141-17C02	Gasket, Cylinder Head
7	11143-06B00	O Ring
8	04211-11189	Pin
9	01550-06253	Bolt
10	09159-10054	Nut
11	08316-10103	Nut
12	09168-10031	Gasket
13	09160-10060	Washer (10.5x22x2.3)
14	11131-27A00	Pipe, Oil No.1,2
15	11133-27A00	Pipe, Oil No.3
16	11135-17C10	Plate, Oil Pipe No.1
17	11137-17C01	Plate, Oil Pipe,no.2
18	01547-06123	Bolt
19	09482-00397	Spark Plug (ngk,jr9c)
20	13101-17C01	Pipe, Intake, Lh
21	13102-17C01	Pipe, Intake, Ml
22	13103-17C01	Pipe, Intake, Mr
23	13104-17C01	Pipe, Intake, Rh
24	09280-40010	• . O Ring (d:2.4,id:39.7)
25	09402-52208	Clamp
26	02112-16163	Screw
27	09248-14010	Plug, Cylinder Head
28	09168-14002	Gasket

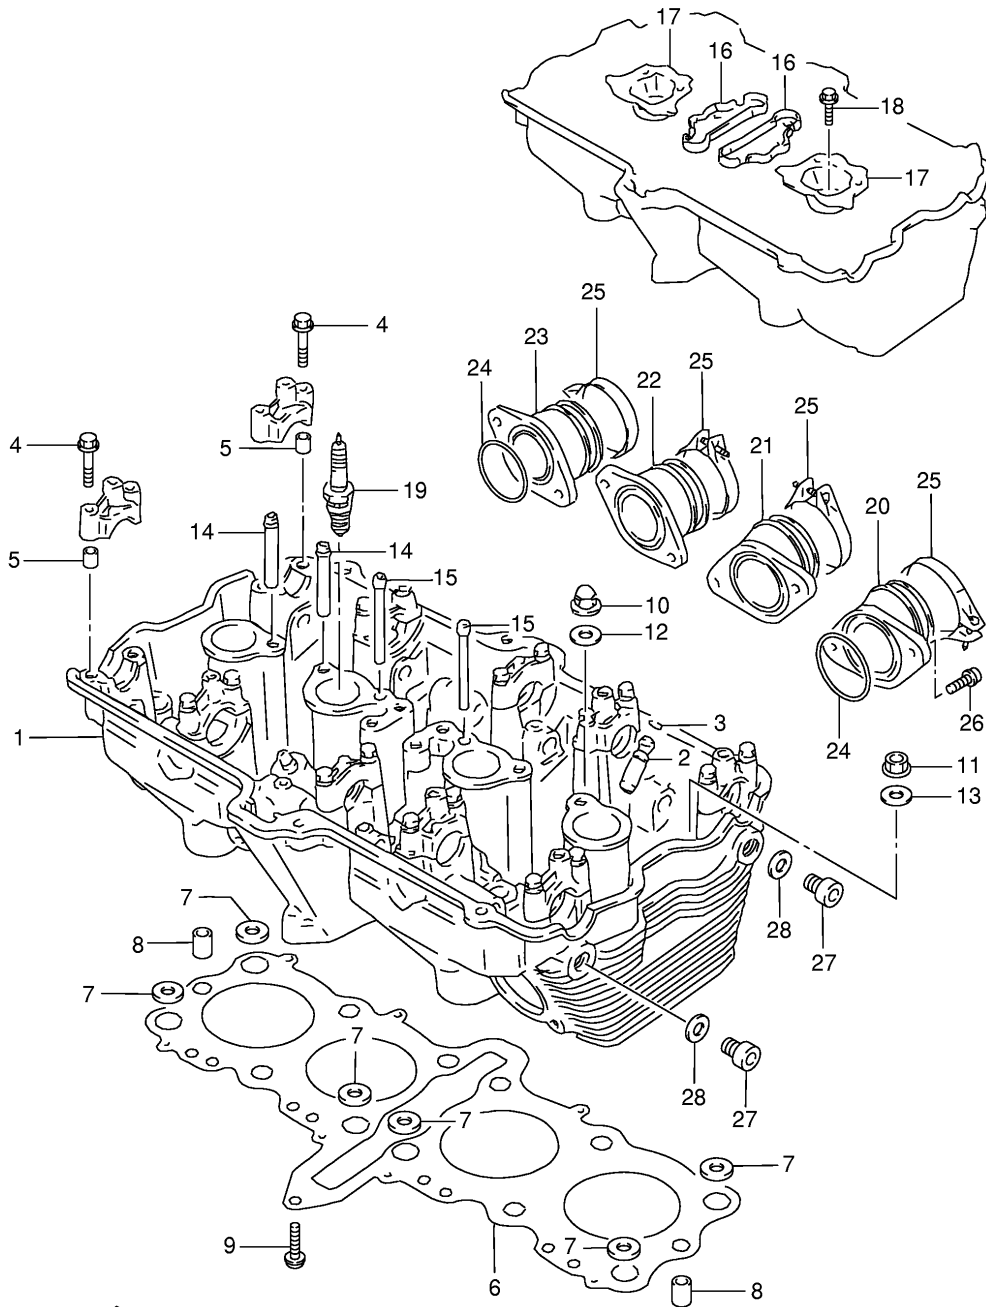

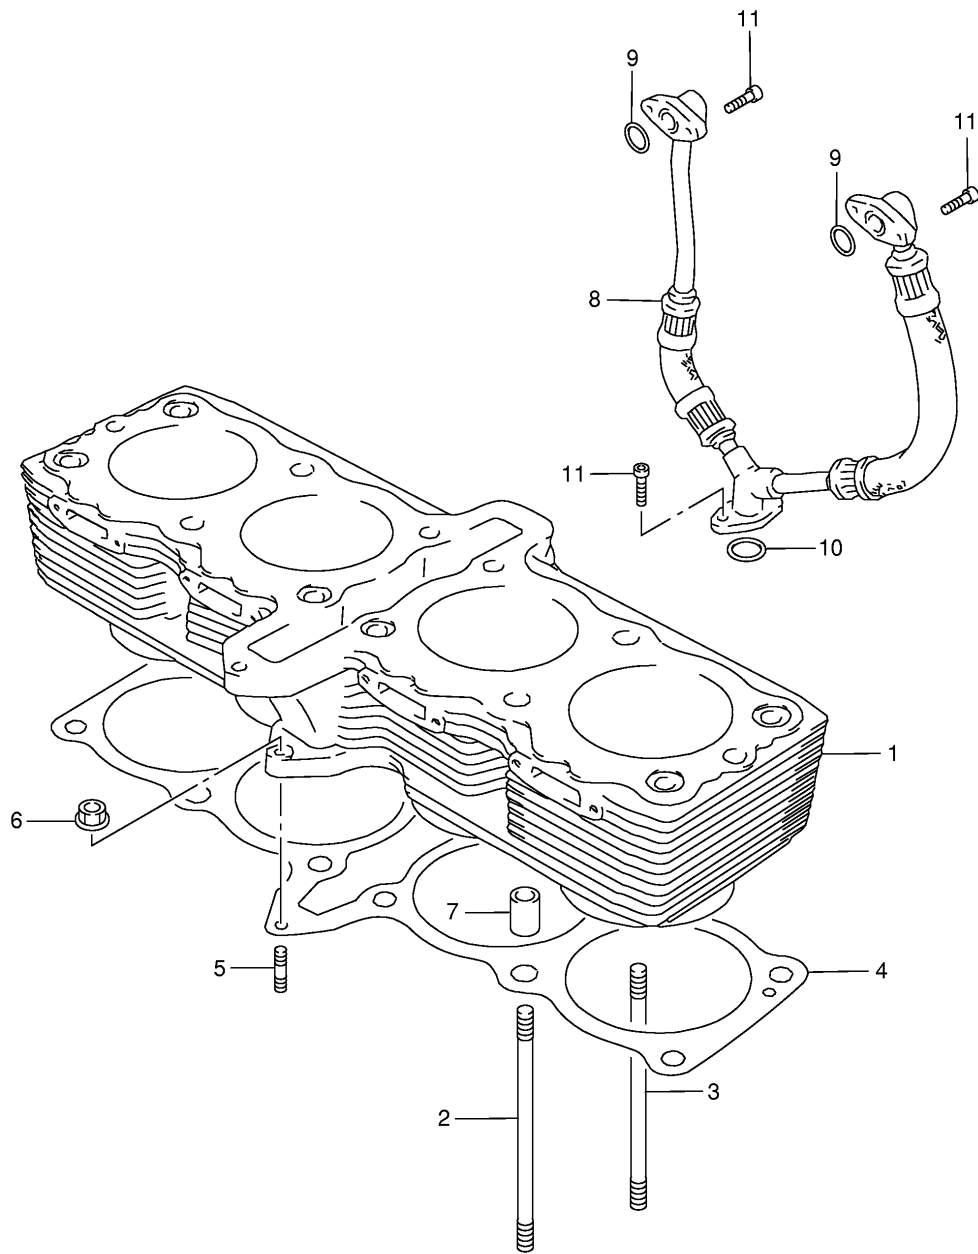 


Ref No	Part No	Description
1	11210-20C00	Cylinder
1	11210-20C10	Cylinder
2	09108-10097	Stud Bolt (l:144)
3	09108-10096	Stud Bolt (l:137)
4	11241-27A03	Gasket, Cylinder
5	01421-06203	Stud Bolt
6	08316-10063	Nut
7	09206-13017	Pin
8	11328-17C03	Hose, Oil Head Cooler
9	09280-14011	O Ring (d:2.5,id:13.8)
10	09280-15007	O Ring (d:2.4,id:15.8)
11	07130-06163	Bolt



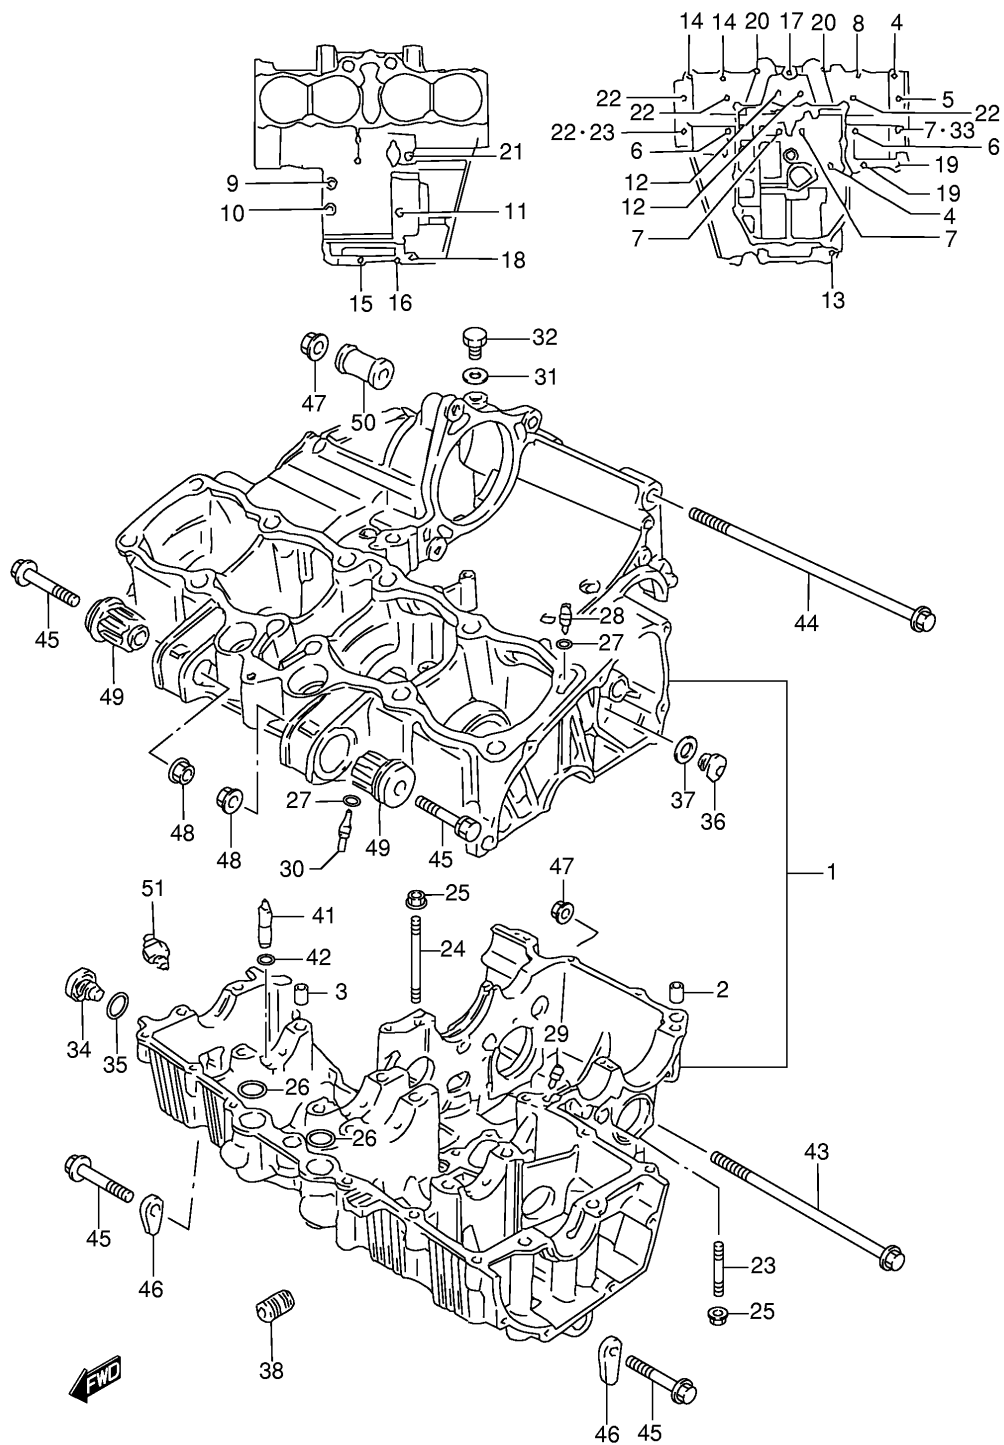 


Ref No	Part No	Description
1	11301-20821	Crankcase Set
2	09206-13004	. Pin
3	09206-11017	. Pin
4	09103-06163	. Bolt (6x105)
5	09103-08097	. Bolt (8x105)
6	09103-08182	. Bolt (8x125)
7	09103-08098	. Bolt (8x115)
8	01550-06353	. Bolt
9	07130-06403	. Bolt
10	07130-06503	. Bolt
11	07130-06653	. Bolt
12	07130-08653	. Bolt
13	01550-08603	. Bolt
14	01550-06353	. Bolt
15	01550-06403	. Bolt
16	01550-06407	. Bolt
17	01550-06503	. Bolt
18	01550-06603	. Bolt
19	01550-06553	. Bolt
20	01550-06703	. Bolt
21	01550-06803	. Bolt
22	09103-08105	. Bolt (8x95)
23	01421-06408	. Stud Bolt
24	01421-06608	. Stud Bolt
25	08316-10063	. Nut
26	09280-21008	. O Ring (d:2.5,id:21.0)
27	09280-04004	. O Ring (d:1.2,id:4.0)
28	09493-14002	. Jet, Oil Gallery Head
29	09493-24010	. Jet, Oil Gallery Gear Shift
30	09493-26007	. Jet, Oil Gallery Piston
31	09168-12002	. Gasket, Hole Plug
32	09247-12103	. Plug, Hole
33	09168-08021	. Gasket
34	09248-16003	. Plug, Oil Gallery
35	09280-17002	. O Ring (d:2.4,id:16.8)
36	09248-14005	. Plug, Oil Gallery
37	09168-14002	. Gasket
38	16591-06B00	. Union, Oil Filter Stand
39	12228-48B00-0E0	. Bearing, Thrust Rh (green)
40	12228-48B00-0C0	. Bearing, Thrust Lh (red)
40	12228-48B00-0E0	. Bearing, Thrust Lh (green)
40	12228-48B00-0H0	. Bearing, Thrust Lh (black)
41	16430-27A00	Valve Assy, Piston Oil Control
42	09280-05007	O Ring (d:1.2,id:4.7)
43	09103-10122	Bolt (10x130)
44	09103-10151	Bolt (10x175)
45	01580-10553	Bolt
46	09159-10020	Nut
47	09159-10058	Nut
48	08316-10103	Nut
49	11681-06B00	Bush
50	11610-20C00	Spacer (l:27)
51	37820-33D00	Switch, Oil Pressure

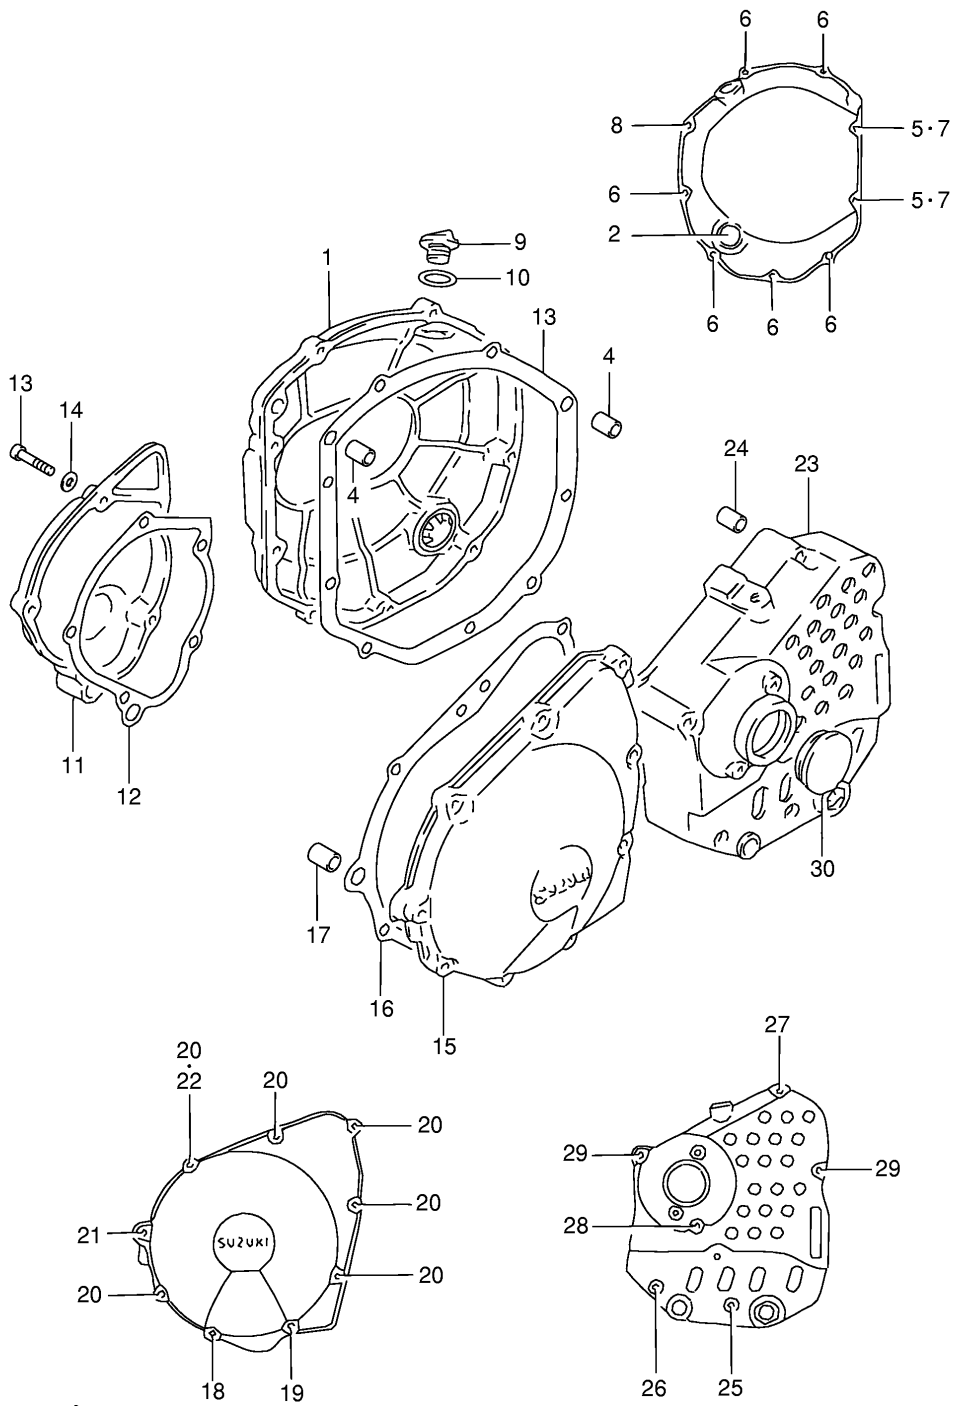 






Ref No	Part No	Description
1	11340-20C00	Cover, Clutch
2	11971-33210	• Lens, Oil Level
3	11482-27A20	Gasket, Clutch Cover
4	04211-09189	Pin
5	09168-06024	Gasket
6	07130-06253	Bolt
7	07130-06303	Bolt
8	07130-06353	Bolt
9	09259-20008	Plug, Engine Oil Filler
10	09280-17003	O Ring (d:3.1,id:16.8)
11	11381-48B01	Cover, Signal Generator
12	11491-27A30	Gasket, Signal Generator Cover
13	09106-06082	Bolt (6x23)
14	09168-06024	Gasket
15	11351-20C00	Cover, Starter Gear
16	11483-27A20	Gasket, Starter Gear Cover
17	09206-11017	Pin
18	07130-06163	Bolt
19	07130-06203	Bolt
20	07130-06253	Bolt
21	07130-06403	Bolt
22	09168-06024	Gasket
23	11361-20C02	Cover, Engine Sprocket
24	04211-09129	Pin
25	07130-06403	Bolt
26	07130-06303	Bolt
27	07130-06503	Bolt
28	07130-06653	Bolt
29	07130-06703	Bolt
30	09250-30003	Cap, Clutch Release



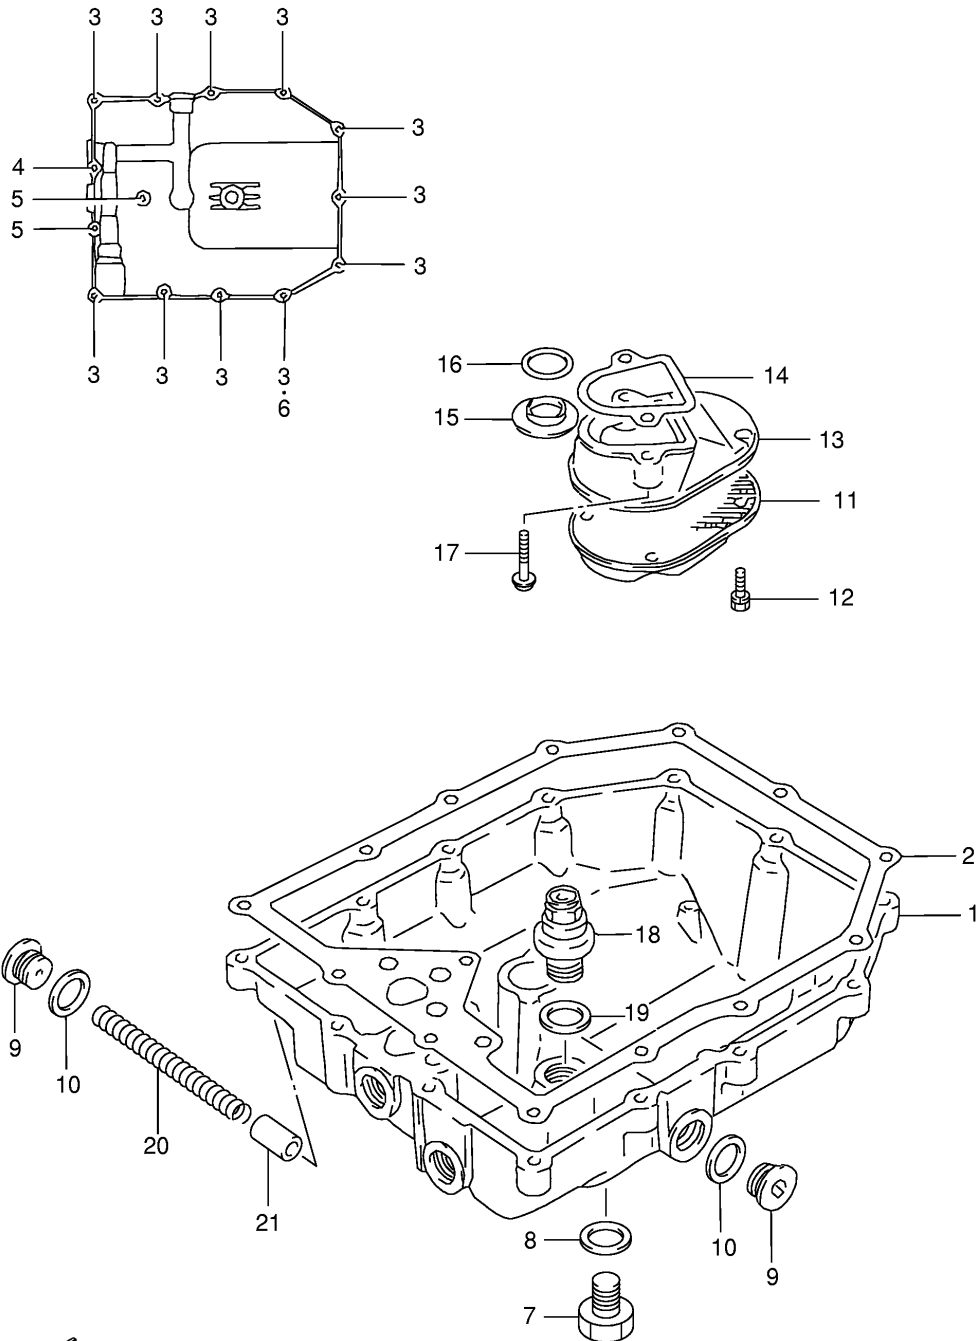 


Ref No	Part No	Description
1	11511-20C00	Pan, Oil
2	11489-27A20	Gasket, Oil Pan (na)
3	01547-06253	Bolt
4	01547-06503	Bolt
5	01547-06453	Bolt
6	09168-06024	Gasket
7	09247-14001	Plug, Oil Drain
8	09168-14002	Gasket
9	09248-16010	Plug, Oil Gallery
10	09168-16002	Gasket
11	16520-17C00	Strainer, Engine Oil
12	01570-06123	Bolt
13	16525-17C00	Protector, Strainer
14	16528-27A20	Gasket, Protector
15	16529-27A01	Gasket, Outlet
16	09280-18009	O Ring (d:3,2,id:17.8)
17	01550-06253	Bolt
18	16440-17C01	Regulator, Engine Oil
19	09168-16002	Washer
20	09440-09027	Spring
21	16442-34301	Plunger, Oil Control



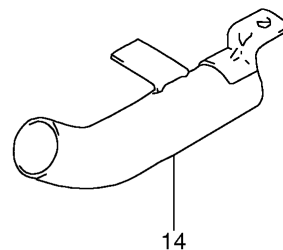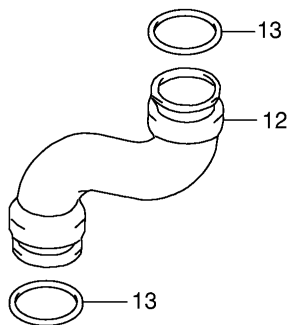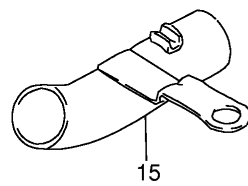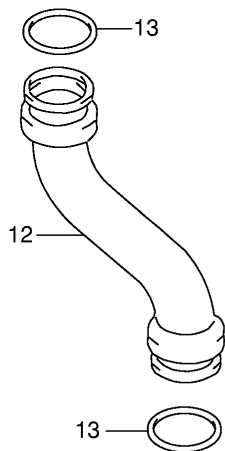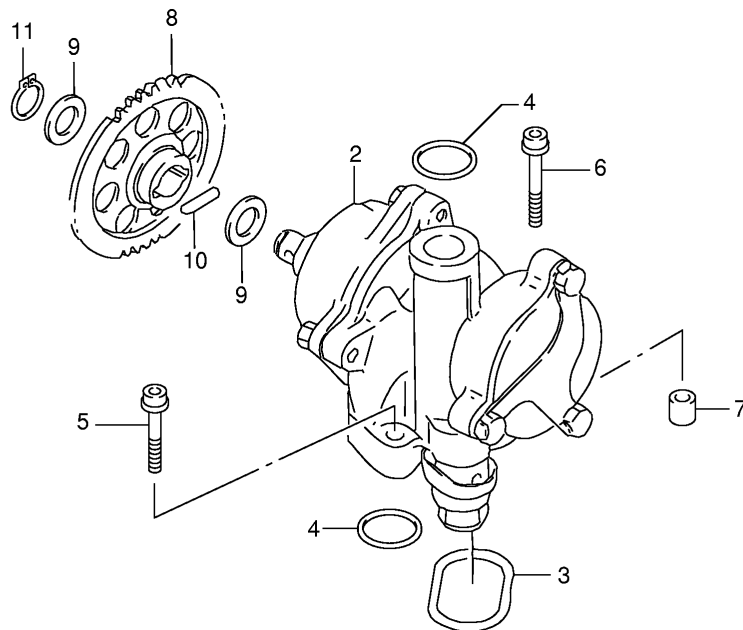     


Ref No	Part No	Description
1	16510-06B01	Filter, Engine Oil
2	16400-06B20	Pump Assy, Engine Oil
3	16491-27A01	O Ring, Oil Pump
4	09280-18009	O Ring (d:3.2,id:17.8)
5	07130-06303	Bolt
6	07130-06353	Bolt
7	04211-09129	Pin
8	16331-06B01-0B1	Gear, Oil Pump Driven
9	08221-12205	Washer
10	09261-05006	Pin
11	08331-31126	Circlip
12	16481-17C00	Pipe, Outlet
13	09280-22016	O Ring (d:3.7,id:21.7)
14	16530-27A02	Pipe, Oil Under, Lh
15	16540-27A02	Pipe, Oil Under, Rh



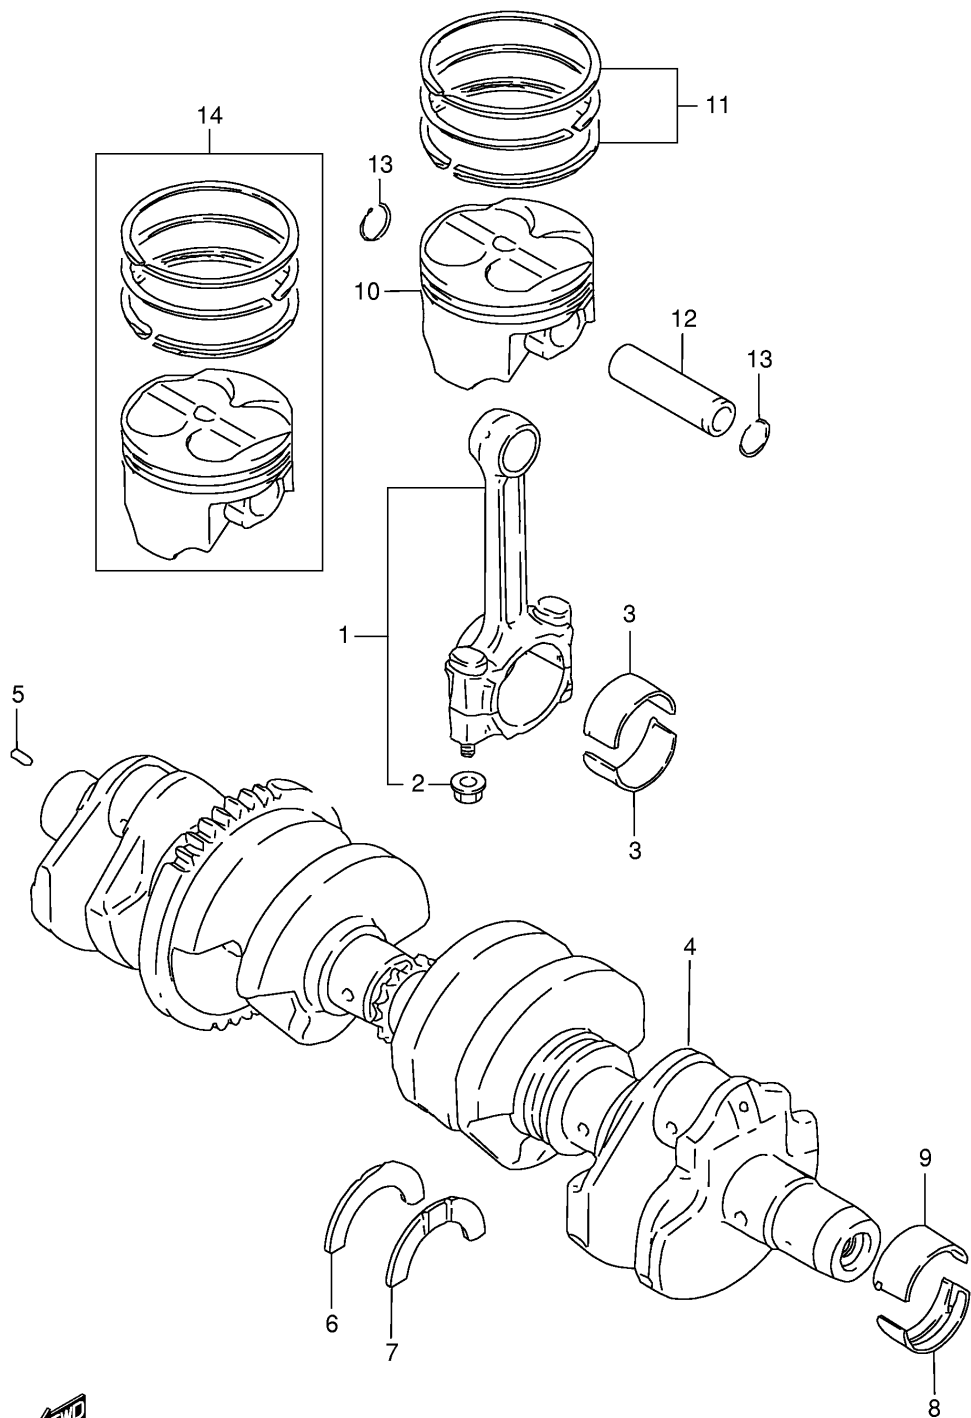 


Ref No	Part No	Description
1	12160-17C00	Rod Assy, Connecting
2	09159-09001	. . Nut
3	12164-31E00-0A0	Bearing, Crank Pin (green)
3	12164-31E00-0B0	Bearing, Crank Pin (black)
3	12164-31E00-0C0	Bearing, Crank Pin (brown)
3	12164-31E00-0D0	Bearing, Crank Pin (yellow)
4	12000-17840	Crankshaft Set
5	04221-04089	. . Pin
6	12228-48B00-0E0	. . Bearing, Thrust Rh (green)
7	12228-48B00-0C0	. . Bearing, Thrust Lh (red)
7	12228-48B00-0E0	. . Bearing, Thrust Lh (green)
7	12228-48B00-0H0	. . Bearing, Thrust Lh (black)
8	12229-06B00-0A0	Bearing, Crankshaft (green)
8	12229-06B00-0B0	Bearing, Crankshaft (black)
8	12229-06B00-0C0	Bearing, Crankshaft (brown)
8	12229-06B00-0D0	Bearing, Crankshaft (yellow)
9	12229-06B10-0A0	Bearing, Crankshaft (green)
9	12229-06B10-0B0	Bearing, Crankshaft (black)
9	12229-06B10-0C0	Bearing, Crankshaft (brown)
9	12229-06B10-0D0	Bearing, Crankshaft (yellow)
10	12111-20C11-0F0	Piston
10	12111-20C01-0F0	Piston
11	12140-20C10	Ring Set, Piston
11	12140-17C12	Ring Set, Piston
12	12151-17C00	Pin, Piston
13	09381-19001	Circlip
14	12100-20C11-050	Piston Set (os:0.5)
14	12100-20C11-100	Piston Set (os:1.0)
14	12100-20C00-050	Piston Set (os:0.5)
14	12100-20C00-100	Piston Set (os:1.0)



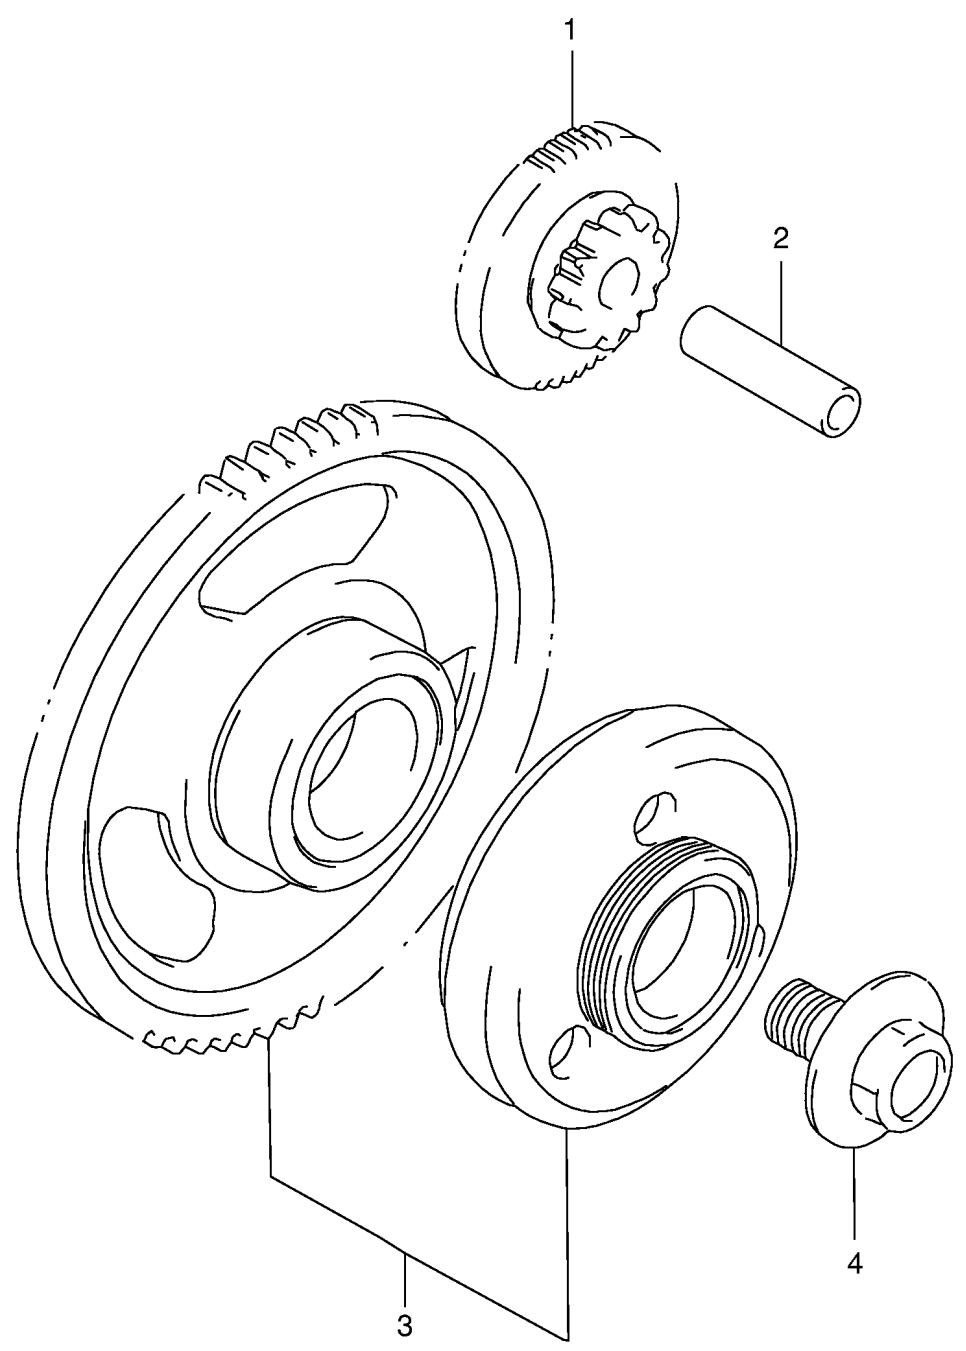 


Ref No	Part No	Description
1	12611-27A01	Gear, Starter Idle (nt:12/52)
2	09206-11014	Pin
3	12600-48811	Clutch Set, Starter
4	09103-14005	Bolt (14x21)



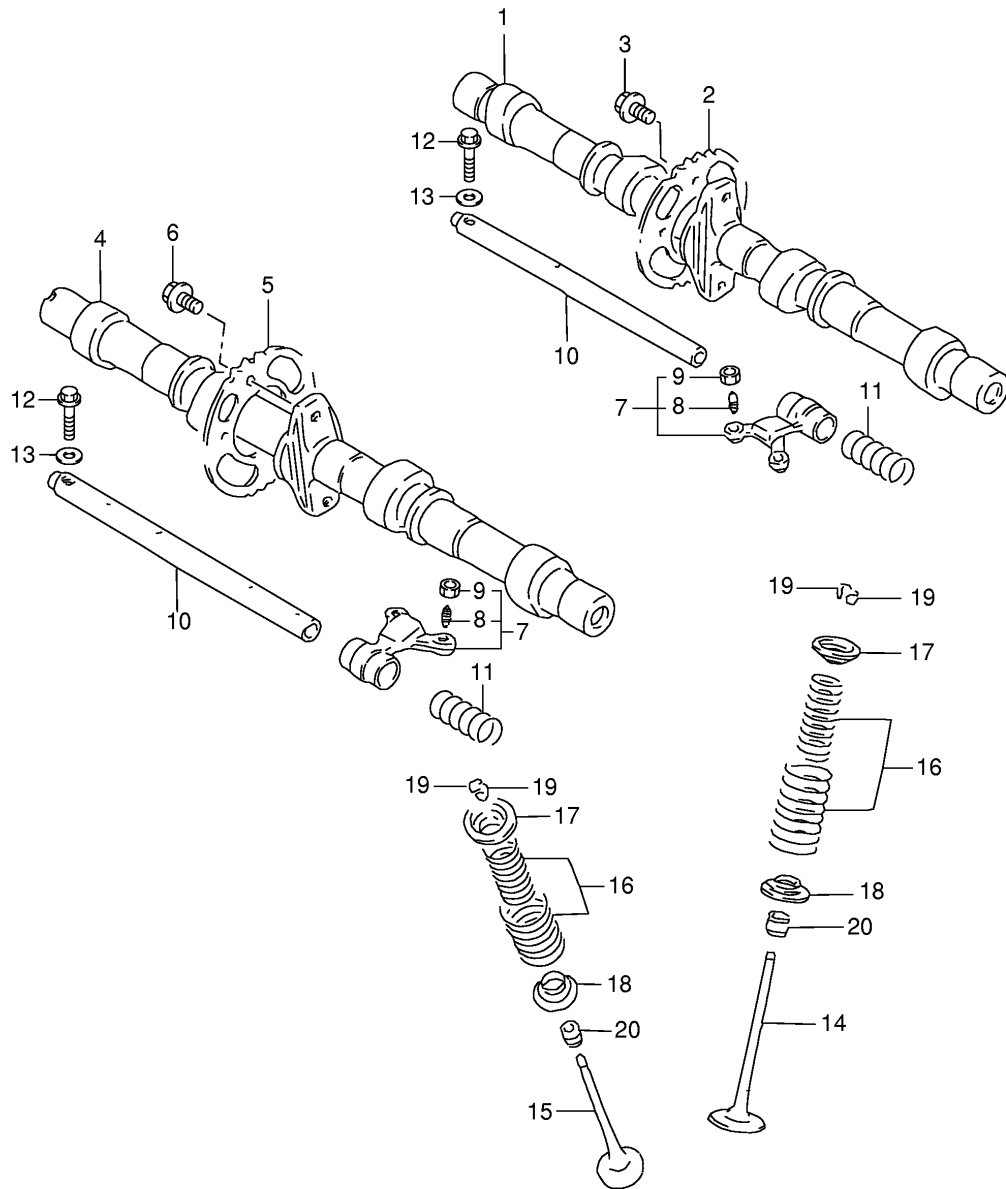 


Ref No	Part No	Description
1	12711-20C00	Cam Shaft, Intake
2	12741-17C01	Sprocket, Cam Shaft
3	09103-07001	Bolt (7x11.5)
4	12721-20C00	Cam Shaft, Exhaust
5	12741-17C01	Sprocket, Cam Shaft
6	09103-07001	Bolt
7	12840-27A01	Arm, Valve Rocker
8	12842-49201	• . Screw
9	12843-27A00	• . Nut
10	12861-27A00	Shaft, Valve Rocker Arm
11	09440-13014	Spring
12	01800-06303	Bolt
13	08322-01063	Washer
14	12911-17C02	Valve, Intake
15	12912-17C00	Valve, Exhaust
16	12920-17C00	Spring Set, Valve
17	12931-17C01	Retainer, Spring
18	12933-17C00	Seat, Spring
19	12932-27A00	Cotter, Valve
20	09289-05011	Oil Seal (5x10x8.7)



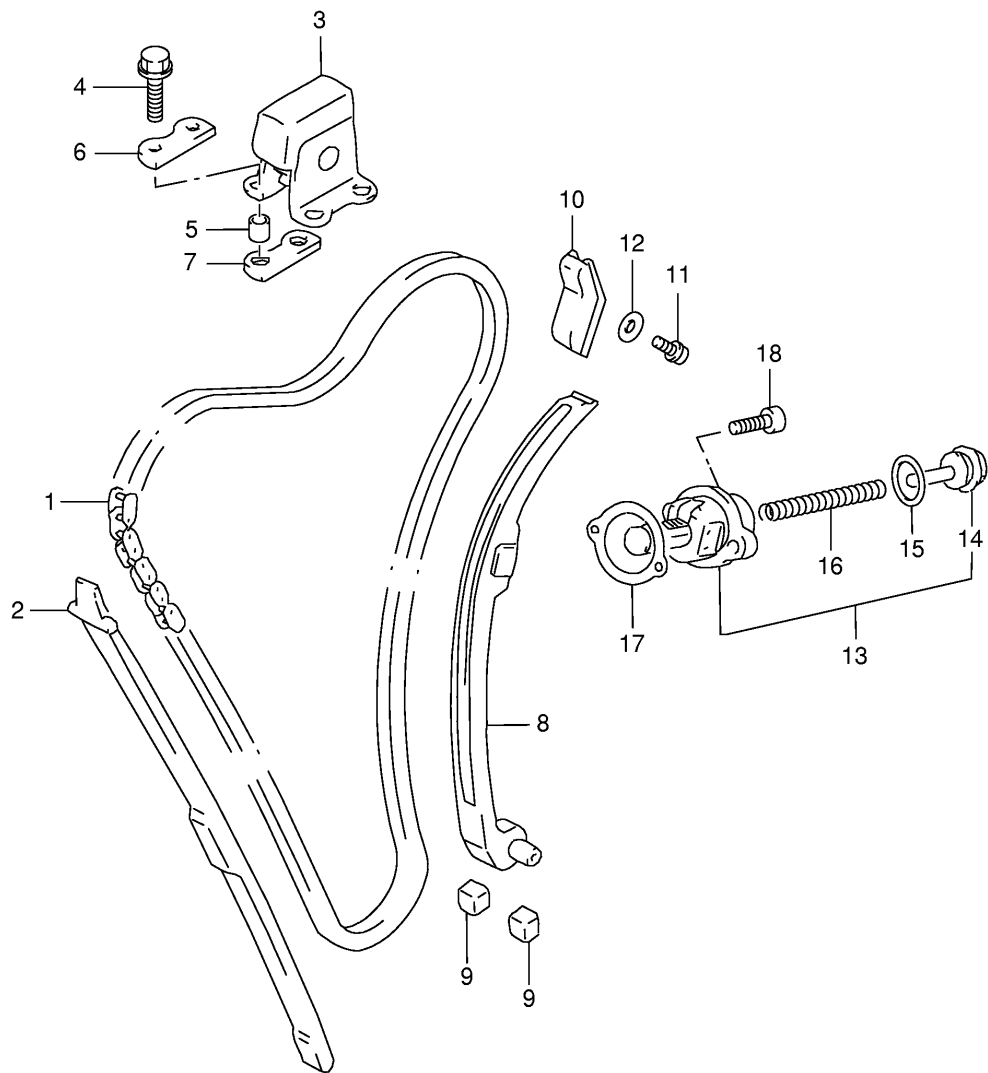 


Ref No	Part No	Description
1	12760-17C02	Chain, Cam Shaft Drive
2	12771-17C01	Guide, Cam Chain No.1
3	12780-40C00	Idler, Cam Chain
4	01550-06303	Bolt
5	09180-06317	Spacer, Cushion
6	12788-48B01	Cushion (t:5.2)
7	12788-48B11	Cushion (t:8.6)
8	12810-17C00	Tensioner, Cam Chain
9	12814-34200	Cushion
10	12791-17C00	Guide, Cam Chain No.2
11	02142-06103	Screw
12	09168-06023	Washer
13	12830-27A08	Adjuster Assy, Tensioner
14	12834-27A00	• . Plug
15	12832-27A00	• . Gasket
16	12833-27A00	• . Spring
17	12837-27A10	Gasket, Adjuster
18	07130-06253	Bolt



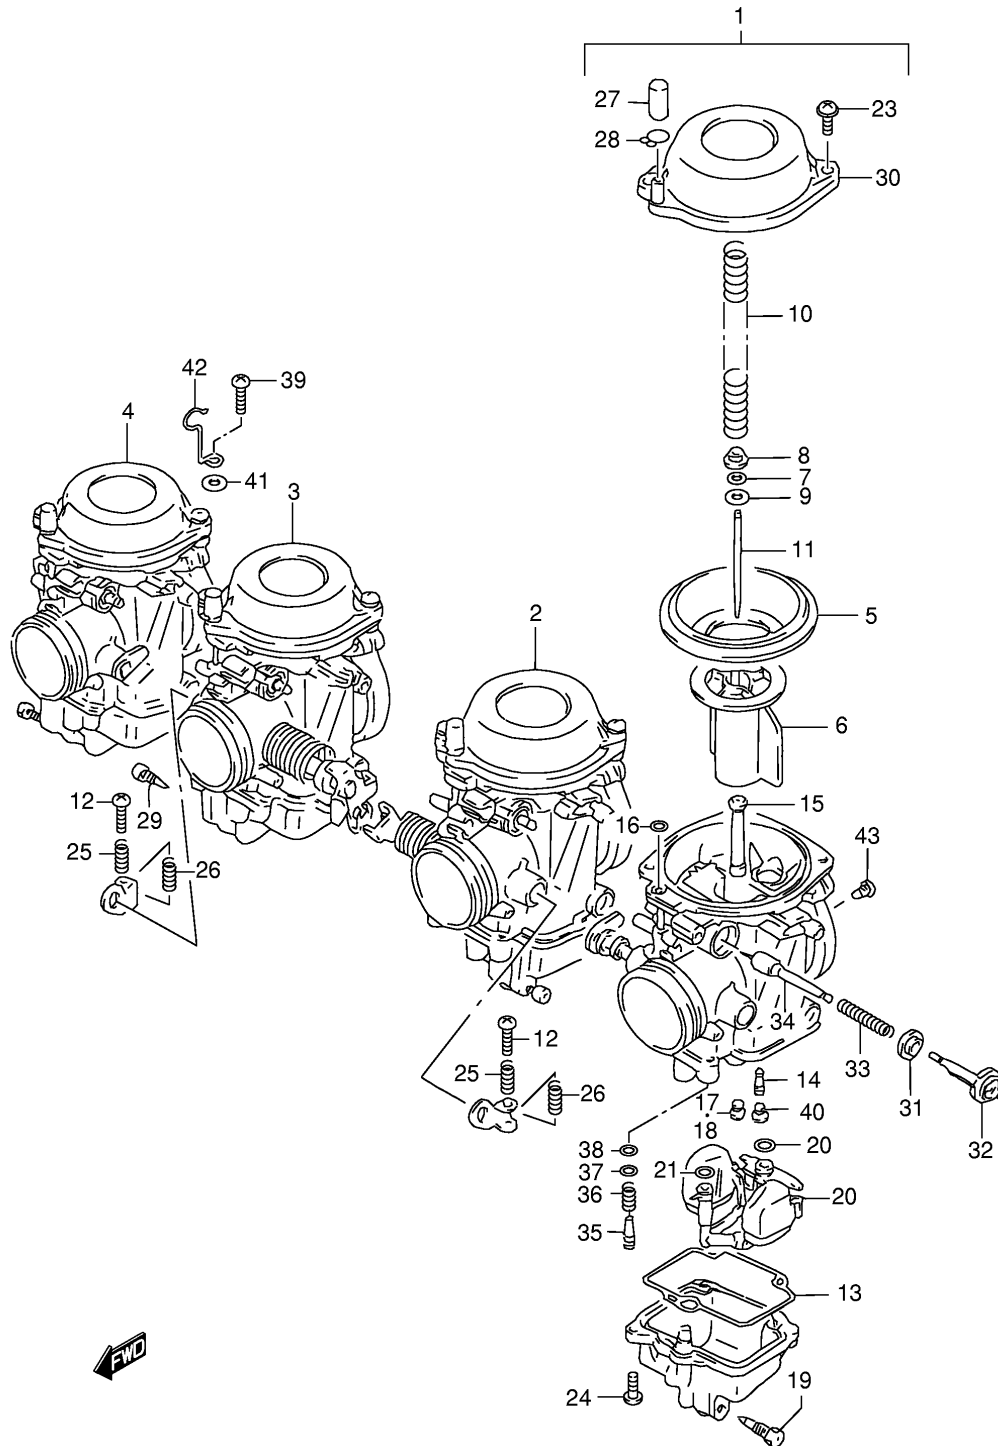 


Ref No	Part No	Description
1	13201-20CA0	Carburetor Assy, Lh
1	13201-20C50	Carburetor Assy, Lh
1	13201-20CD0	Carburetor Assy, Lh
1	13201-20C70	Carburetor Assy, Lh
1	13201-20C91	Carburetor Assy, Lh
2	13202-20CA0	Carburetor Assy, Ml
2	13202-20C50	Carburetor Assy, Ml
2	13202-20CD0	Carburetor Assy, Ml
2	13202-20C70	Carburetor Assy, Ml
2	13202-20C91	Carburetor Assy, Ml
3	13203-20CA0	Carburetor Assy, Mr
3	13203-20C50	Carburetor Assy, Mr
3	13203-20CD0	Carburetor Assy, Mr
3	13203-20C70	Carburetor Assy, Mr
3	13203-20C91	Carburetor Assy, Mr
4	13204-20CA0	Carburetor Assy, Rh
4	13204-20C50	Carburetor Assy, Rh
4	13204-20CD0	Carburetor Assy, Rh
4	13204-20C70	Carburetor Assy, Rh
4	13204-20C91	Carburetor Assy, Rh
5	13507-17C01	• Diaphragm
6	13501-17C00	• Valve, Piston
7	13394-31210	• E Ring
8	13382-42A00	• Ring
9	13387-44030	• Ring
10	13417-07C30	• Spring
10	13417-42A00	• Spring
11	13383-20C00	• Needle, Jet (5ez61-3)
11	13383-20C30	• Needle, Jet (5ez64-3)
12	13267-44B00	• Screw
13	13258-44B00	• Gasket, Float Chamber
14	09492-35010	• Jet, Pilot (37.5)
14	09492-32006	• Jet, Pilot (32.5)
15	09494-00630	• Jet, Needle (y-2)
15	09494-00633	• Jet, Needle (y-1)
16	13509-17C00	• O Ring
17	09491-21016	• Jet, Main (105)
17	09491-21014	• Jet, Main (107.5)
18	09491-21016	• Jet, Main (105)
18	09491-22016	• Jet, Main (110)
19	13247-24500	• Screw, Drain
20	13250-20C00	• Float/needle Valve Assy
20	13250-20C10	• Float/needle Valve Assy
21	13374-46710	• O Ring
22	13374-44080	• O Ring
23	02112-75163	• Screw
24	02112-05127	• Screw
25	13271-44B00	• Spring
26	13268-17C10	• Spring
27	13508-17C00	• Cap
28	13671-05A40	• Clip
29	13247-13A00	• Screw, Drain
30	13502-17C00	• Cover, Diaphragm
31	13418-17C00	• Cap, Starter



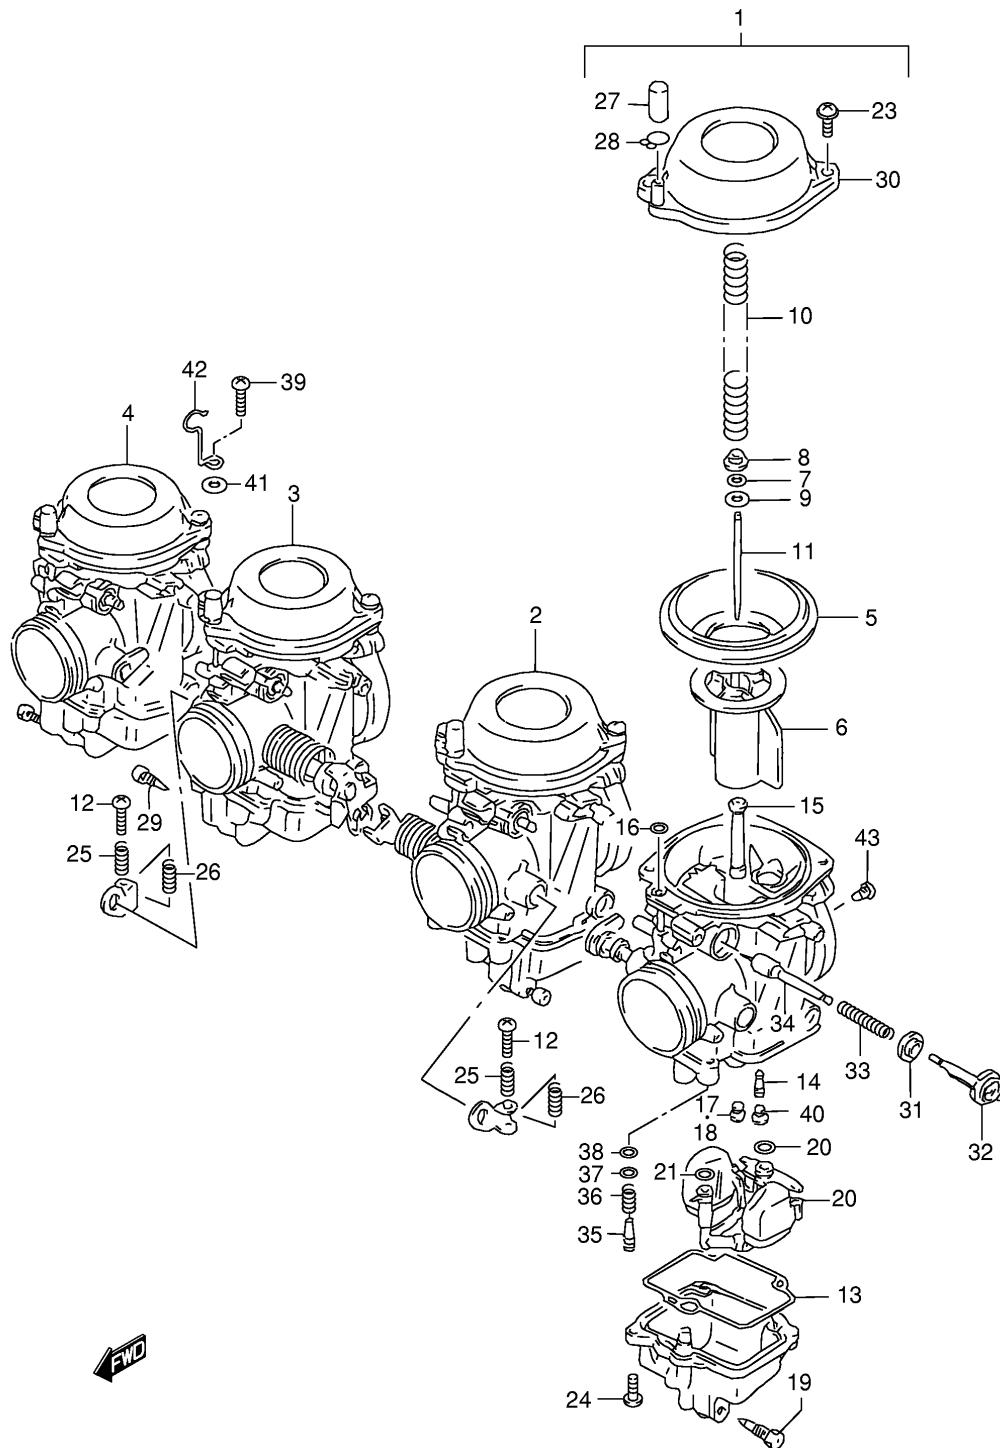 


Ref No	Part No	Description
32	13418-17C10	. . Holder
33	13417-09110	. . Spring
34	13411-20C00	. . Plunger Assy
35	13279-47070	. . Screw, Air (2.0)
35	13279-47070	. . Screw, Air (1 3/4)
35	13279-47070	. . Screw, Air (1 7/8)
36	13268-47070	. . Spring
37	13291-29900	. . Washer
38	13295-29900	. . O Ring
39	02112-05164	. . Screw
40	13357-34C00	. . Plug
41	08322-01053	. . Washer
42	13671-20C20	. . Clip
43	09493-27002	. . Jet, Air (1.35)



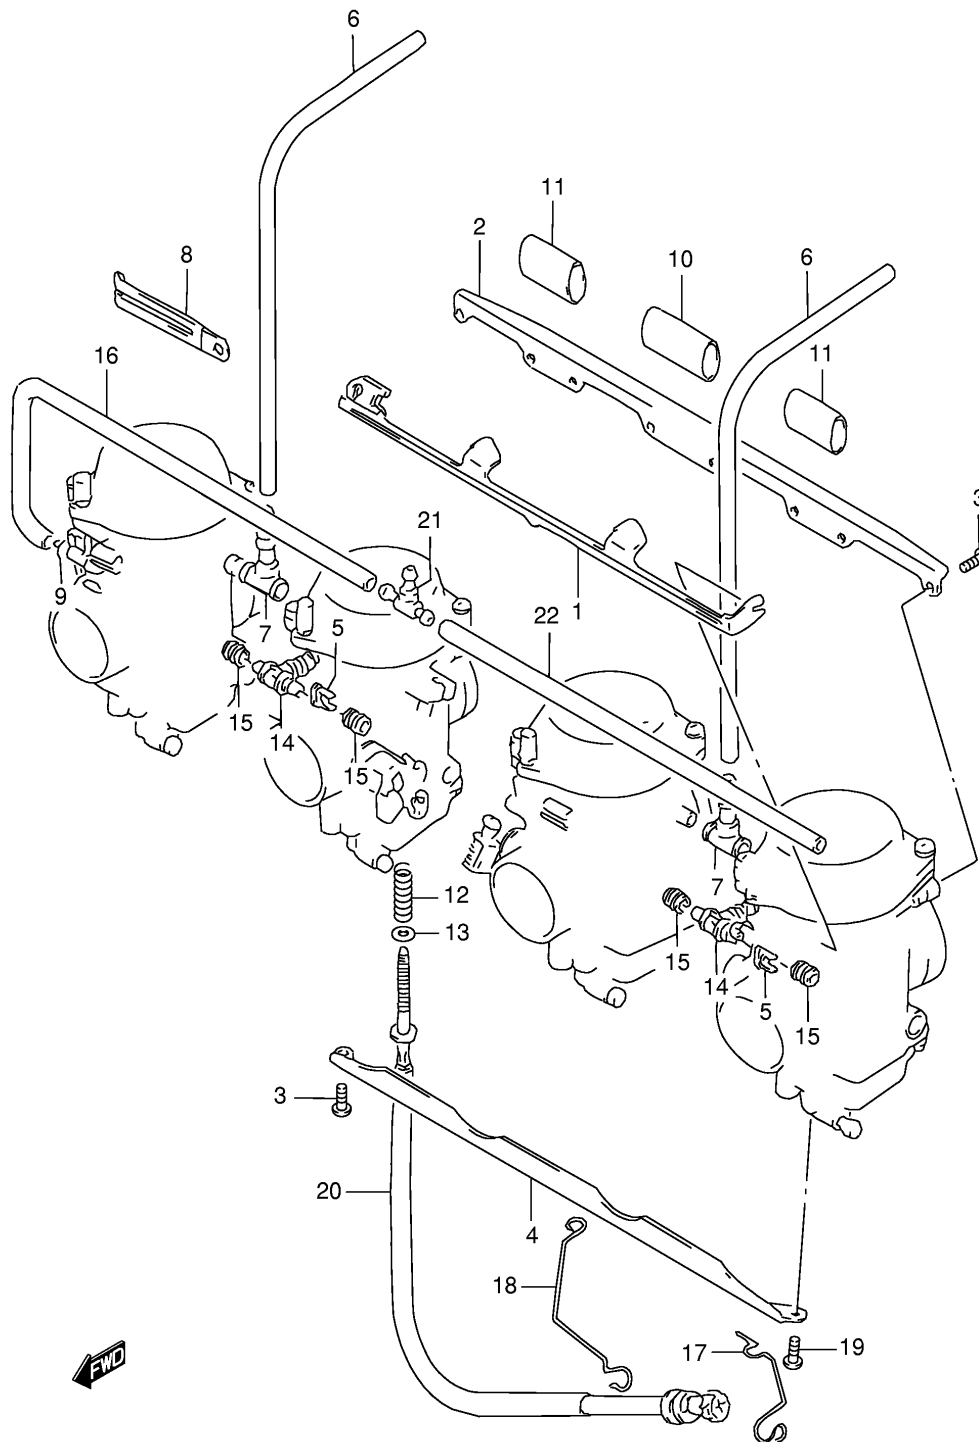 


Ref No	Part No	Description
1	13413-20C00	Lever
2	13628-17C10	Plate
3	02112-05127	Screw
4	13628-17C00	Plate
5	13439-17C00	Holder
6	09352-70103-600	Hose (7x10.2x600)
7	13684-20C10	Hose
8	09404-06431	Plate
8	09404-06433	Plate
9	09401-08410	Clip
10	13684-43440	Hose
11	13684-43440	Hose
12	13375-14D10	Spring
13	13427-38300	Washer
14	13685-44B00	Nipple
15	13673-44B00	Seal
16	13684-20C00	Hose (l:380)
17	13671-20C00	Clip
18	13671-20C10	Clip
19	13601-05148	Screw
20	13279-20C00	Adjuster
21	13685-48B00	Nipple
22	09352-50903-600	Hose (l:600->75)



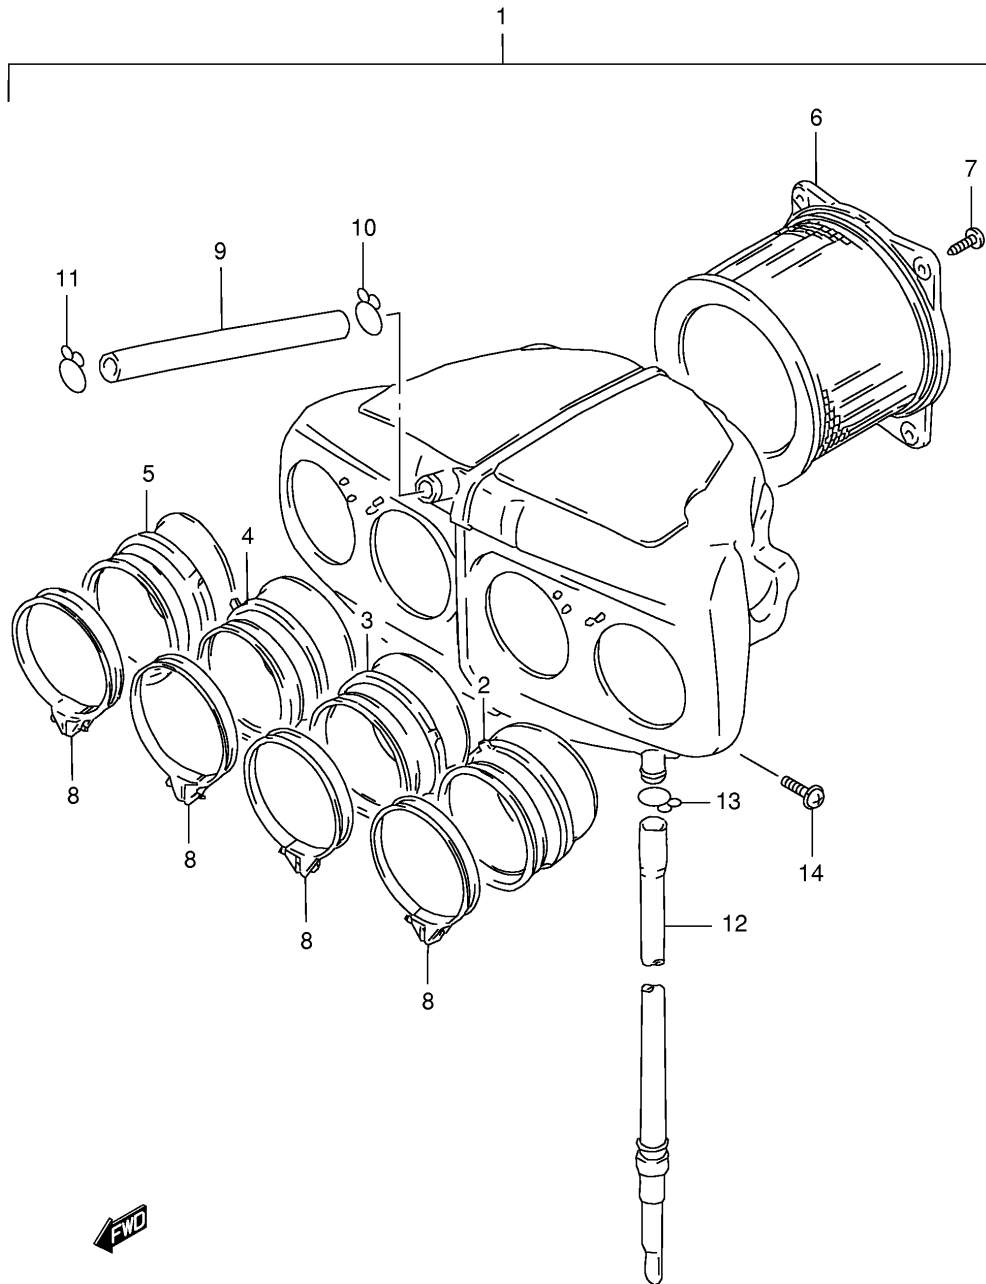 


Ref No	Part No	Description
1	13700-20C23	Cleaner Assy, Air
1	13700-20C03	Cleaner Assy, Air
2	13881-20C01	. Tube, Outlet Lh
3	13882-20C01	. Tube, Outlet Ml
4	13883-20C01	. Tube, Outlet Mr
5	13884-20C01	. Tube, Outlet Rh
6	13780-20C00	. Filter
7	02142-05123	. Screw
8	09402-66208	. Clamp
9	13853-19C00	. Tube, Breather
10	09401-16401	. Clip
11	09401-14301	. Clip
12	13870-11458	. Tube, Drain
13	09401-13409	. Clip
14	02112-76163	Screw

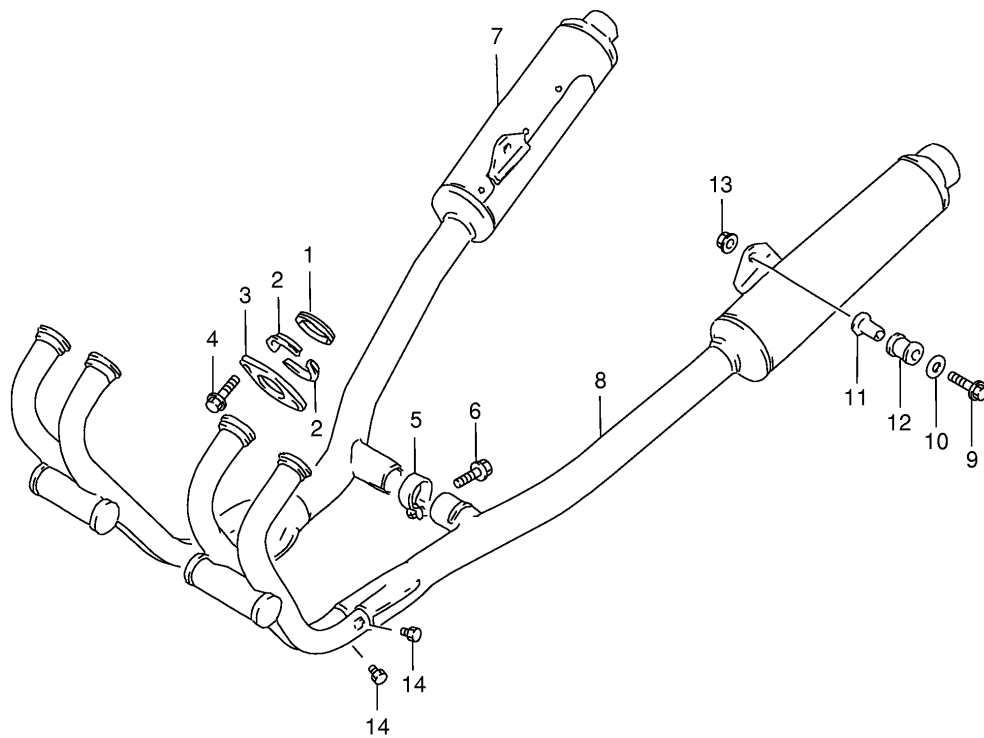 


Ref No	Part No	Description
1	14181-18C00	Gasket, Exhaust Pipe
2	14155-27A00	Plate, Exhaust Pipe
3	14182-26D00	Clamp, Exhaust Pipe
4	07120-08253	Bolt
5	14772-19C00	Clamp
6	01550-06253	Bolt
7	14305-20C50	Muffler Assy, Rh
7	14305-20C31	Muffler Assy, Rh
7	14305-20C41	Muffler Assy, Rh
8	14306-20C50	Muffler Assy, Lh
8	14306-20C31	Muffler Assy, Lh
8	14306-20C41	Muffler Assy, Lh
9	09103-08256	Bolt (8x55)
10	09160-08106	Washer
11	09180-08156	Spacer
12	09320-12049	Cushion
13	08316-20083	Nut
14	01550-06103	Bolt, Exhaust Drain



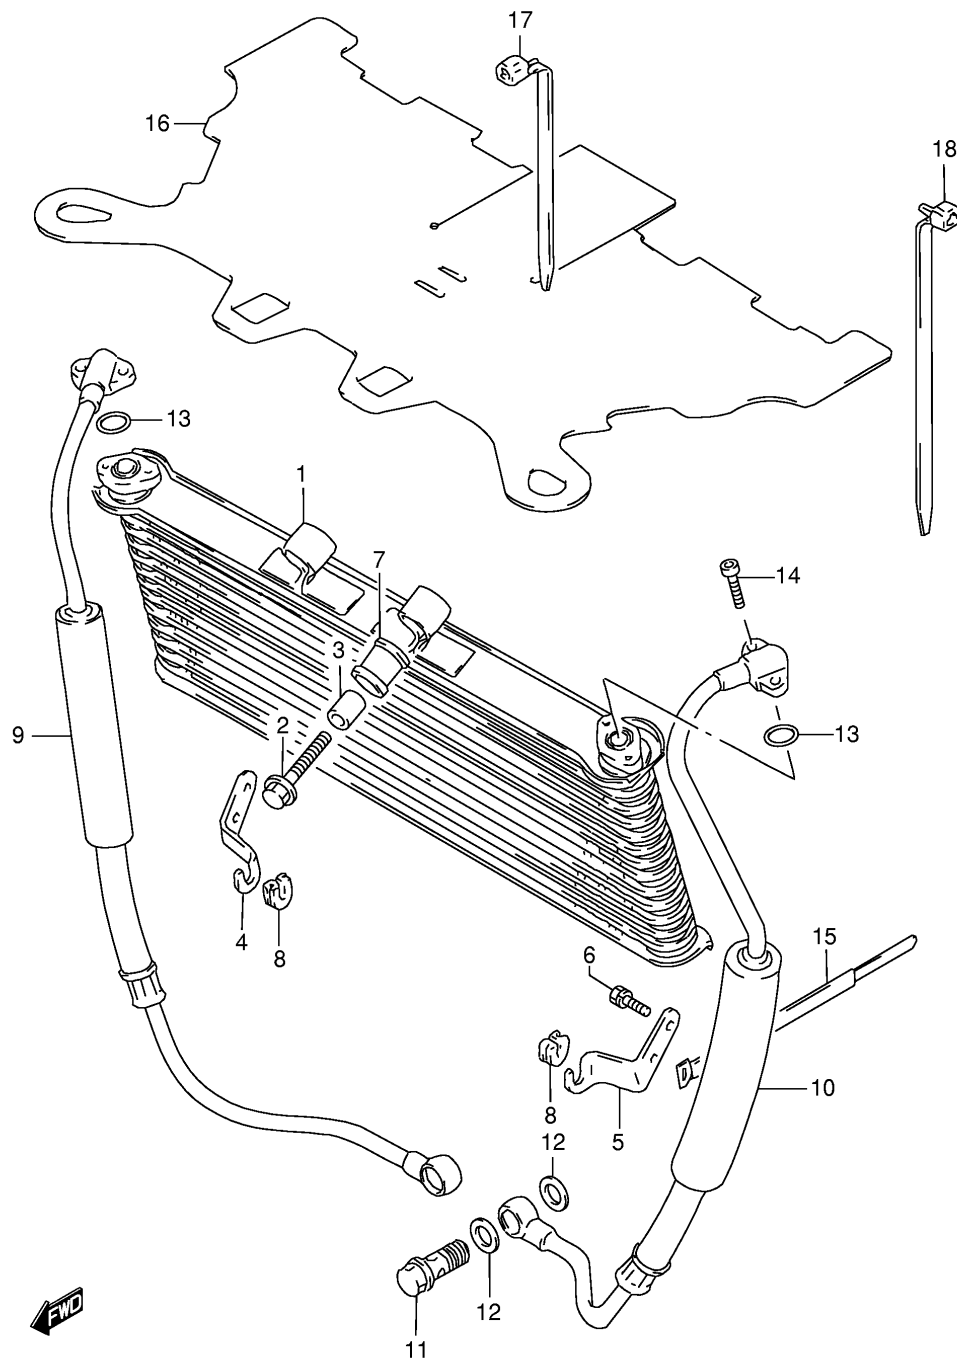 


Ref No	Part No	Description
1	16600-20C03	Cooler Assy, Oil
2	09118-08131	Bolt (8x40)
3	09180-08304	Spacer
4	16621-20C02	Bracket, Oil Cooler,rh
5	16622-20C02	Bracket, Oil Cooler,lh
6	01570-06163	Bolt
7	16629-27A01	Cushion, No.1
8	16628-27A00	Cushion, No.2
9	16460-20C03	Hose, Oil Cooler,rh
10	16470-20C03	Hose, Oil Cooler,lh
11	09360-16002	Bolt, Union
12	09168-16002	Gasket
13	09280-12008	O Ring (d:2.4,id:12.3)
14	07130-06163	Bolt
15	09407-25401	Clamp, Oil Hose
16	94451-20C00	Plate, Air Guide
16	94451-20C10	Plate, Air Guide
17	09407-18403	Clamp (l:165)
18	09407-25401	Clamp (l:235)

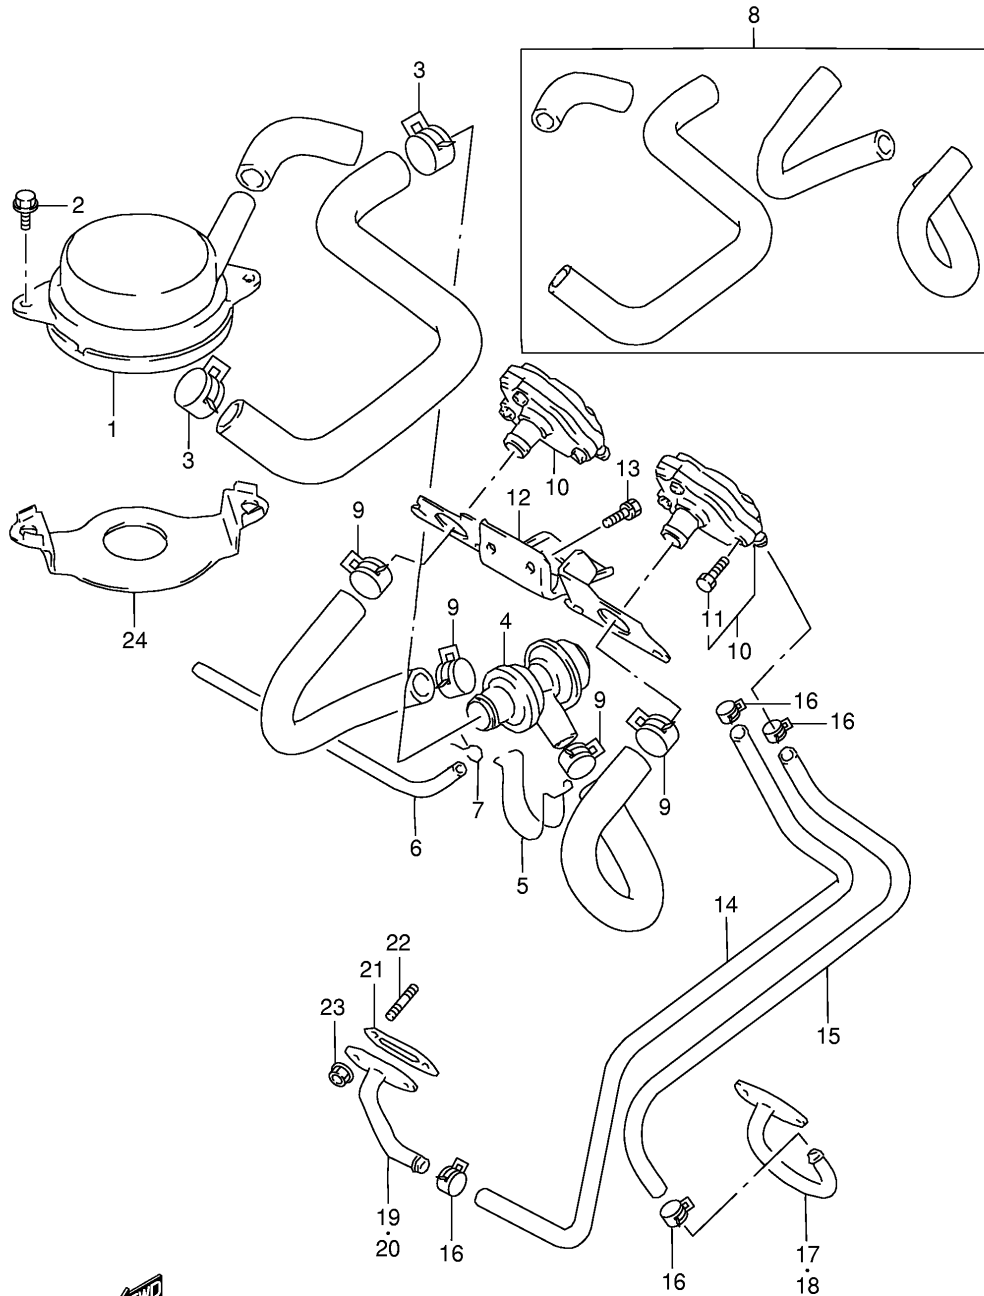 


Ref No	Part No	Description
1	18700-17C03	Cleaner Assy, 2nd Air
2	01580-06163	Bolt
3	09401-25402	Clip
4	18510-20C00	Valve Assy, Air Switching
5	18522-17C00	Clamp, Switching Valve
6	09359-45852-600	Hose, Vacuum
7	09401-07401	Clip
8	18420-19810	Hose Set, 2nd Air No.2
9	09401-21403	Clip
10	18450-48B00	Valve Assy, 2nd Air Reed
11	07130-05167	• Bolt
12	18470-19C01	Bracket, Reed Valve
13	01570-06163	Bolt
14	18446-20810	Hose, 2nd Air No.1 Inside
15	18446-20810	Hose, 2nd Air No.1 Outside
16	09401-13413	Clip
17	18410-20C00	Pipe, 2nd Air,no.1
18	18440-20C00	Pipe, 2nd Air,no.4
19	18420-20C00	Pipe, 2nd Air,no.2
20	18430-20C00	Pipe, 2nd Air,no.3
21	18441-17C10	Gasket, Air Pipe (na)
22	01421-06163	Stud Bolt
23	08316-10063	Nut
24	18761-41C00	Holder, 2nd Air Cleaner




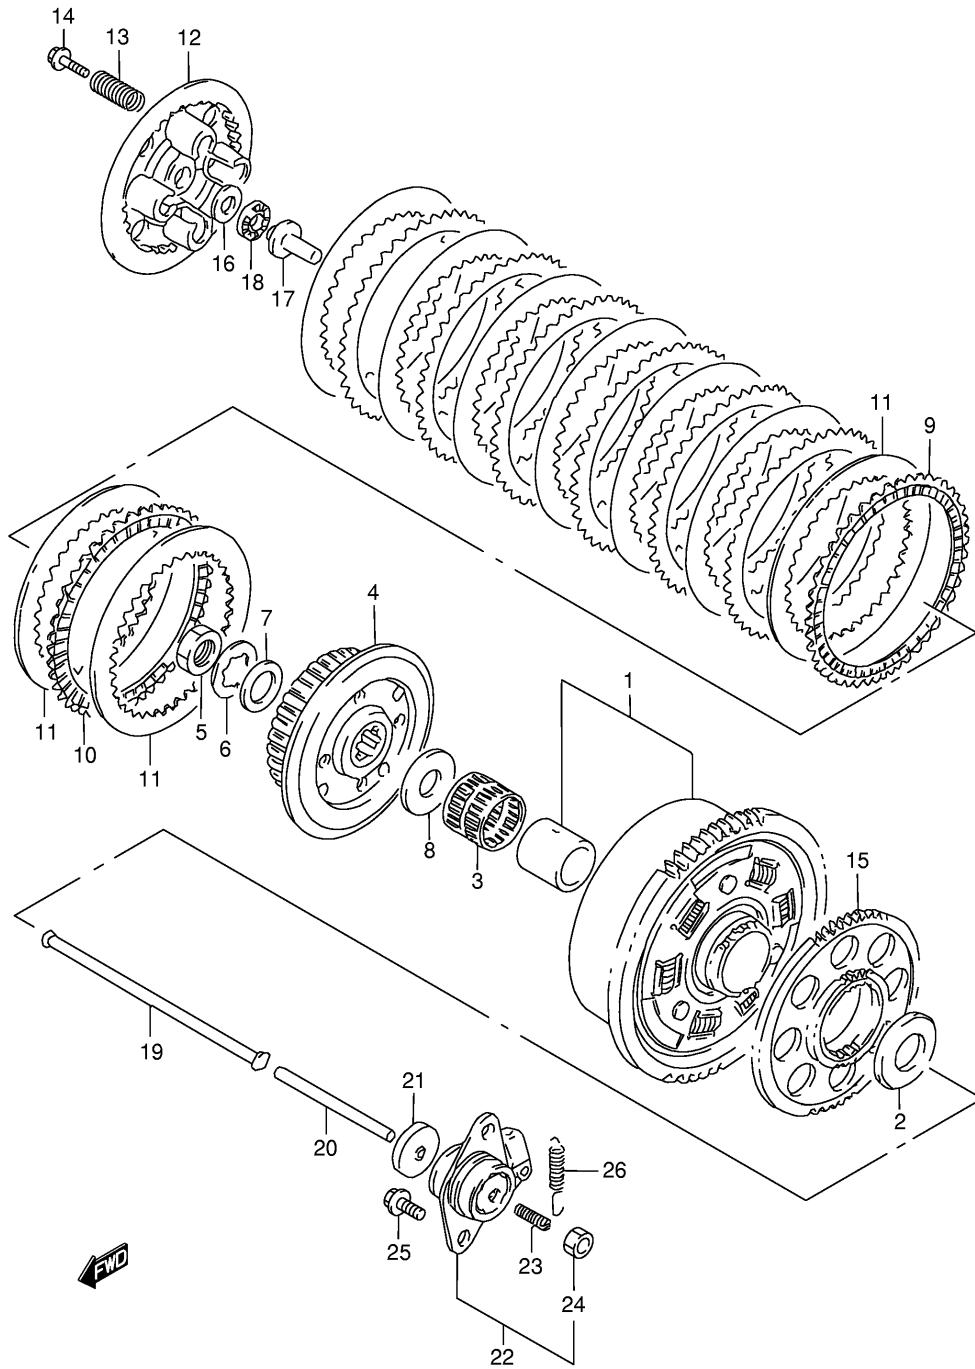 


Ref No	Part No	Description
1	21200-17834	Gear, Primary Driven (nt:74)
2	09160-25037	Washer
3	09263-35017	Bearing
4	21410-07D00	Hub, Sleeve
5	09140-24012	Nut
6	09167-25007	Washer
7	09164-24006	Washer, Wave
8	09160-25056	Washer (25x50x2.5)
9	21441-20C00	Plate, Drive (t:2.2)
10	21442-17C00	Plate, Clutch Drive,no.2
11	21451-17C00	Plate, Driven (t:1.6)
12	21462-17C01	Disc, Pressure
13	09440-20018	Spring
14	09116-06168	Bolt (6x16)
15	22721-17C01	Gear, Generator Drive (nt:30/64)
16	09160-15045	Washer (15.5x28x1)
17	23121-07A00	Piece, Clutch Push
18	09263-15003	Bearing (15x28x2)
19	23110-20C00	Rod, Clutch Push Rh
20	23111-31301	Rod
21	09285-06015	Oil Seal
22	23200-20C00	Screw, Clutch Release
23	09134-06010	. . Screw
24	08310-00067	. . Nut
25	01550-06163	Bolt
26	09443-07038	Spring

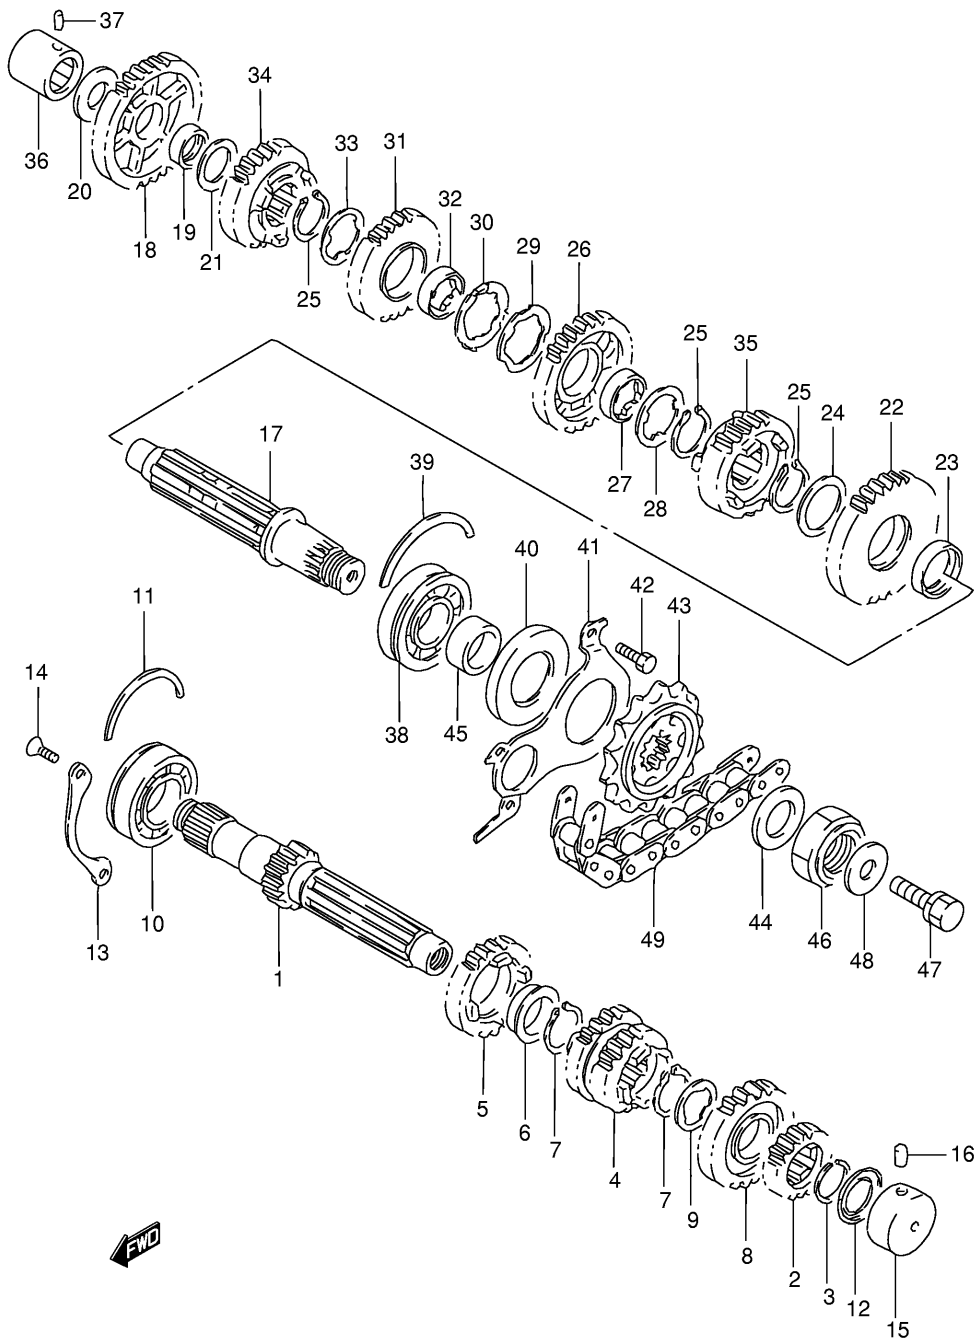 


Ref No	Part No	Description
1	24121-20C10	Countershaft (nt:12)
2	24221-27A01	Gear, 2nd Drive (nt:16)
3	09380-25013	Circlip
4	24231-27A00	Gear, 3/4th Drive (nt:17/20)
5	24251-27A01	Gear, 5th Drive (nt:22)
6	09301-25001	Bush
7	09380-25003	Circlip
8	24261-17C01	Gear, 6th Drive (nt:21)
9	09167-25012	Washer
10	09262-25105	Bearing, Rh (25x62x17)
11	09390-62012	C Ring (60.2x63.7x2)
12	09285-20006	Oil Seal
13	24741-27A00	Holder, Bearing
14	02122-06163	Screw
15	09263-20049	Bearing, Lh
16	04221-07129	Pin
17	24131-20C00	Driveshaft
18	24311-19C10	Gear, 1st Driven (nt:37)
19	09300-22008	Bush
20	08211-20341	Washer, Rh
21	08211-22341	Washer, Lh
22	24321-20C00	Gear, 2nd Driven (nt:33)
23	09300-28003	Bush
24	08211-28381	Washer
25	08331-31286	Circlip
26	24331-27A00	Gear, 3rd Driven (nt:28)
27	24332-27A00	Bush
28	09167-28001	Washer, Lh
29	09167-28002	Washer, Rh (t:1.5)
30	09169-28001	Washer, Rh (t:1.0)
31	24341-27A01	Gear, 4th Driven (nt:28)
32	24332-27A00	Bush
33	09167-28001	Washer, Rh
34	24351-27A00	Gear, 5th Driven (nt:27)
35	24361-20C00	Gear, 6th Driven (nt:23)
36	09263-20040	Bearing, Rh
37	04221-07209	Pin (l:20)
38	09262-25115	Bearing, Lh (25x62x17)
39	09390-62012	C Ring (60.2x63.7x2)
40	09283-34005	Oil Seal (34x62x6)
41	24751-27A01	Plate
42	01500-06123	Bolt
43	27510-17C10	Sprocket, Engine (nt:15)
44	08211-25402	Washer
45	09180-25091	Spacer
46	09159-20004	Nut
47	01570-06163	Bolt
48	08212-06222	Washer
49	27600-17C20-118	Chain, Drive

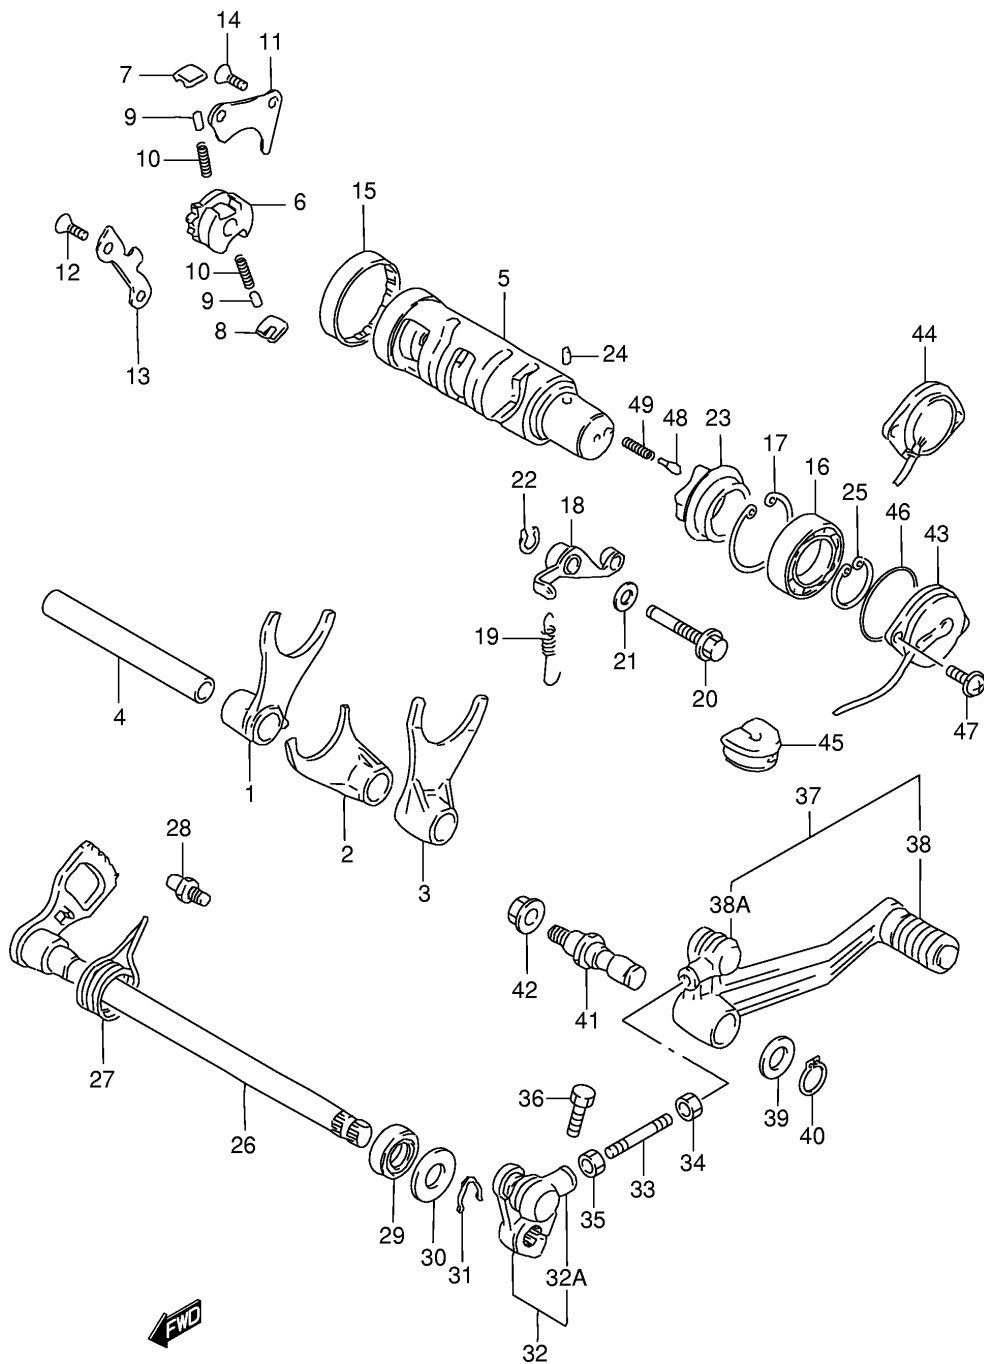 


Ref No	Part No	Description
1	25211-27A00	Fork, Gear Shifting No.1
2	25221-27A01	Fork, Gear Shifting No.2
3	25231-27A00	Fork, Gear Shifting No.3
4	25411-27A00	Shaft, Gear Shifting Fork
5	25310-27A02	Cam, Gear Shifting
6	25322-31302	Gear, Cam Driven
7	25323-34201	Pawl, No.1
8	25324-34201	Pawl, No.2
9	09261-05003	Pin
10	09440-04003	Spring
11	25331-31301	Lifter, Pawl
12	02122-06123	Screw
13	25341-27A00	Guide, Cam
14	02122-06123	Screw
15	09263-43001	Bearing, Rh
16	08113-69050	Bearing, Lh
17	08331-41426	Circlip
18	25350-27A00	Stopper, Cam
19	09443-09031	Spring
20	25353-27A00	Shaft, Stopper
21	09168-10002	Washer
22	08331-31086	Circlip
23	25381-38400	Plate, Stopper
24	04221-04069	Pin
25	08331-31256	Circlip
26	25510-19C01	Shaft, Gear Shifting
27	09444-26017	Spring
28	25671-01000	Stopper, Arm
29	09285-12002	Oil Seal (12x22x9)
30	09160-12020	Washer (12.5x27x1.6)
31	08331-31126	Circlip
32	25520-19C02	Arm, Gear Shift Link
32a	25526-47000	• Cover, Dust
33	25525-27A30	Rod, Gear Shift Link
34	09140-06011	Nut
35	08310-00067	Nut
36	01500-06257	Bolt
37	25600-19C04	Lever Assy, Gear Shifting
38	25652-20C00	• Rubber
38a	25526-47000	• Cover, Dust
39	09160-12011	Washer (12.5x20x1)
40	08331-31126	Circlip
41	25617-20A00	Shaft, Gear Shift Lever
42	08316-10103	Nut
43	37720-48B00	Body, Gear Shifting Switch
44	37720-20C00	Base Assy, Gear Shift Term
45	33885-27A01	Grommet, Lead Wire
46	09280-35006	O Ring (d:2.4,id:35.5)
47	02112-75163	Screw (5x16)
48	09209-05011	Contact
49	09440-04010	Spring

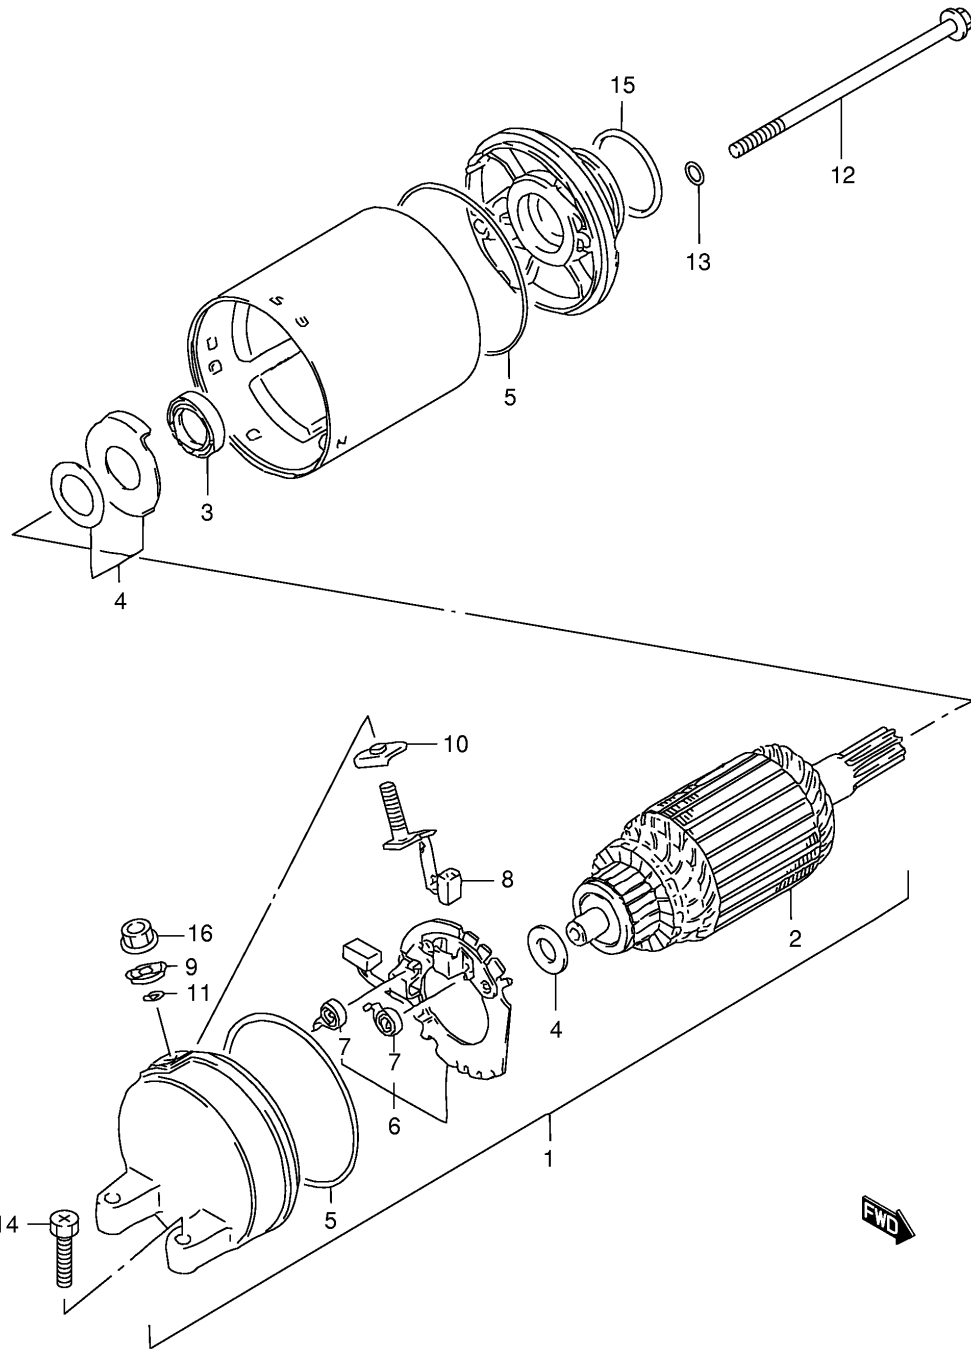 



Ref No	Part No	Description
1	31100-20C00	Motor, Starting
2	31310-27A01-H17	. Armature
3	31153-43400	. Oil Seal
4	31170-43400	. Shim Set
5	31264-44110	. O Ring
6	31132-27A01	. Brush Holder Assy
7	31135-65010	•• Spring
8	31130-38300	. Brush
9	31172-38300	. Bushing (a)
10	31171-38300	. Bushing (b)
11	31143-38300	. O Ring
12	31281-88C00	. Screw
13	31156-38300	. O Ring
14	09128-06024	Bolt
15	09280-24003	O Ring
16	08361-35068	Nut

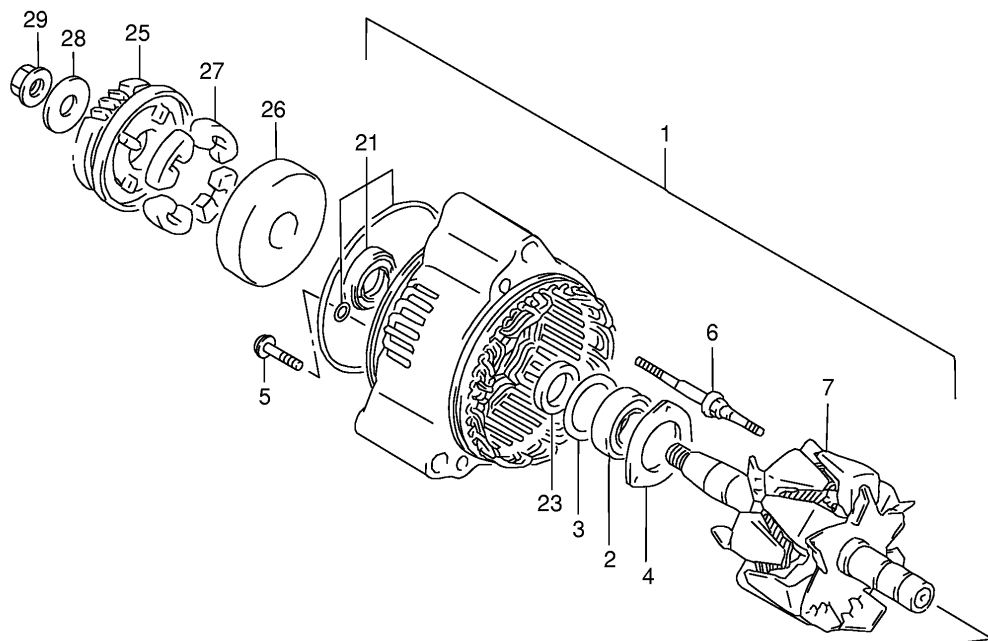 


Ref No	Part No	Description
1	31400-17C04	Alternator Assy
2	31612-06B00	. Bearing
3	31613-48B00	. Cover, Bearing
4	31585-48B00	. Retainer, Bearing
5	31586-48B00	. Screw, Bearing Retainer
6	31587-85250	. Stud Bolt
7	31710-48B04	. Rotor Assy
8	31613-82610	. Cover (1)
9	31612-48B00	. Bearing
10	31613-27A10	. Cover (2)
11	31611-48B00	. Frame, End
12	31621-27A00	. Holder, Rectifier
13	32500-27A00	. Regulator
14	31656-48B00	. Holder, Brush
15	31687-17E00	. Cover, Rectifier
16	31480-48B00	. Lead Wire
17	02112-04063	. Screw
18	31688-27A00	. Screw (5x17)
19	31614-48B00	. Cover
20	08316-10053	. Nut
21	31780-27X50	. Oil Seal Set
22	31687-17E00	. Bush
23	31776-06B00	. Spacer
24	01550-08903	Bolt
25	22730-20C00	Gear, Generator Driven (nt:30)
26	22733-27A04	Housing, Damper
27	21231-06B00	Damper
28	08211-10283	Washer
29	08316-20103	Nut

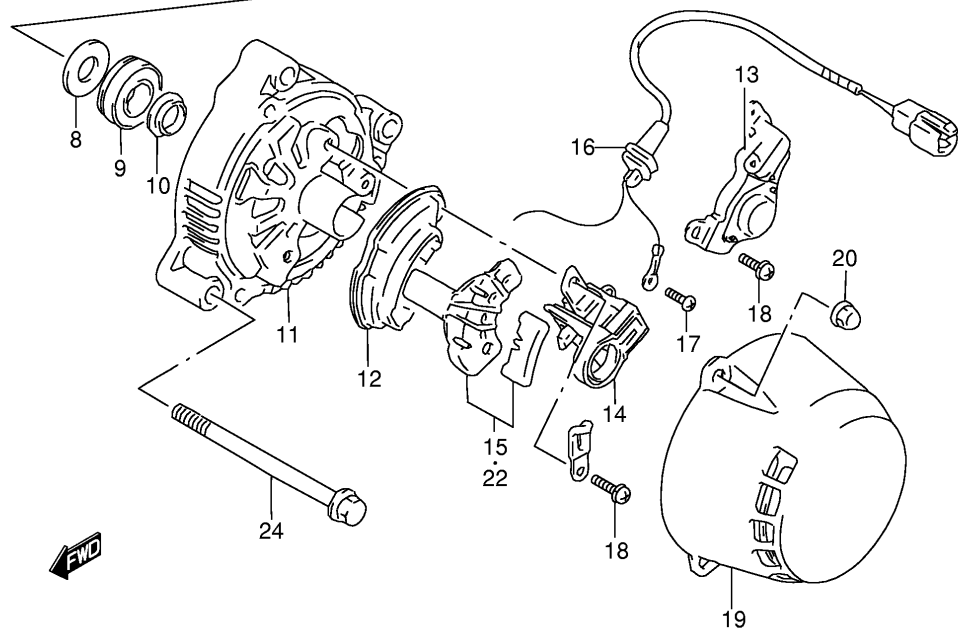 


Ref No	Part No	Description
1	32900-20C30	Igniter Unit
1	32900-20C50	Igniter Unit
2	02142-06123	Screw
3	33110-17C00	Signal Generator Assy
4	33120-19C20	Rotor, Signal
5	07130-08303	Bolt
6	02112-05103	Screw
7	09407-11401	Clamp (1:95)

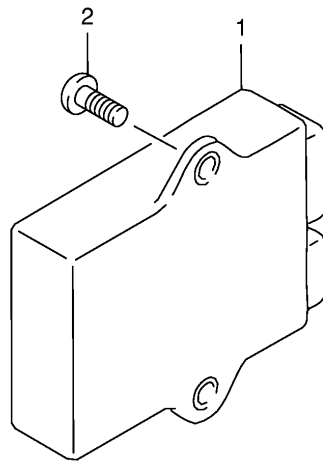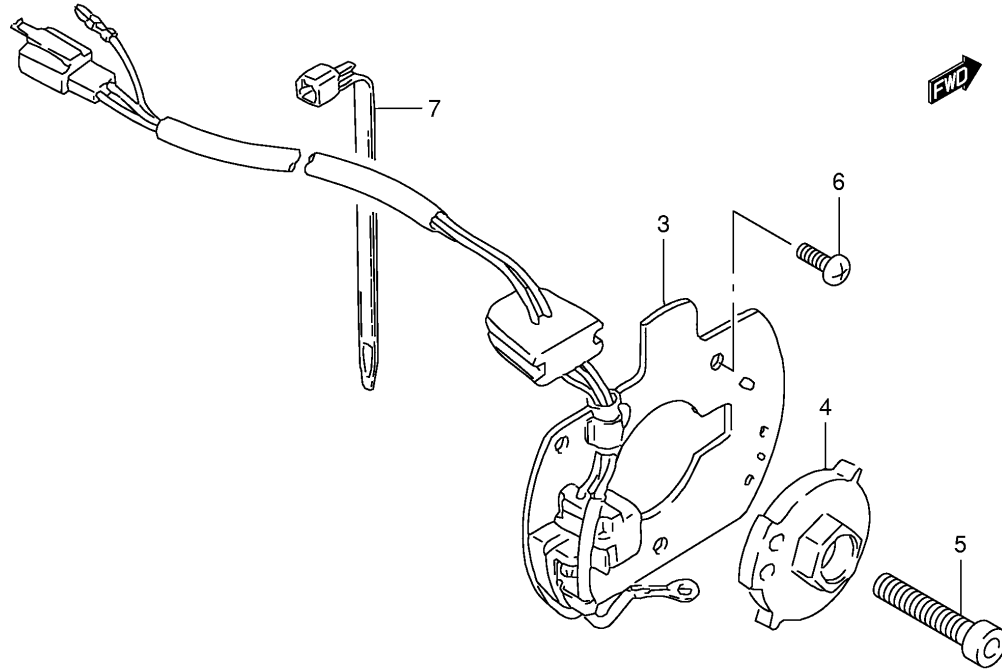  

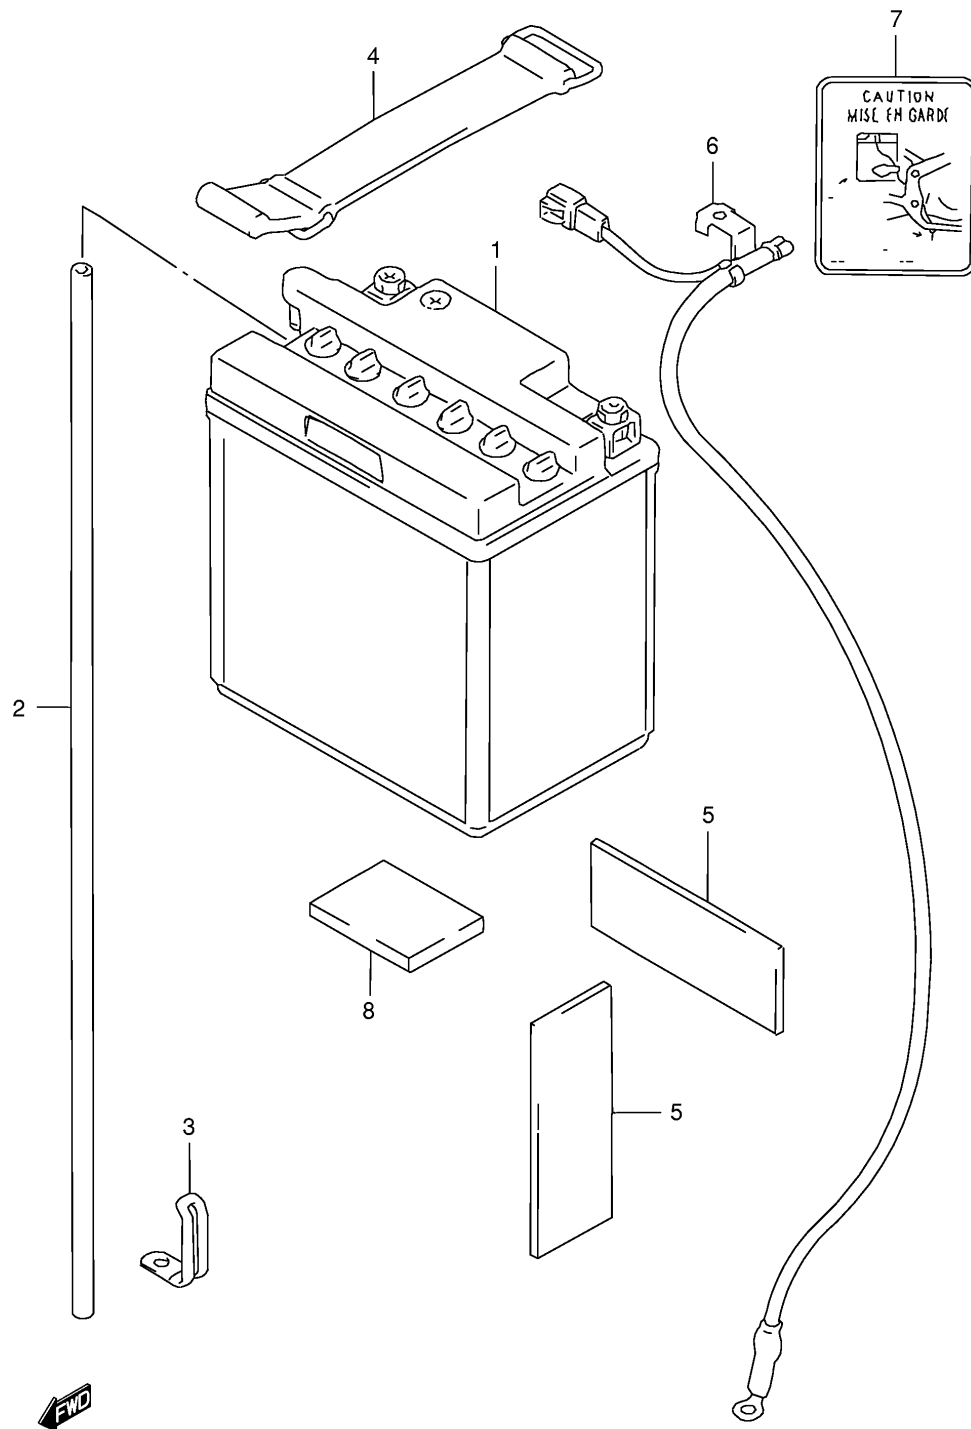 


**BATTERY**

 Ref No	Part No	Description
1	33610-05A10	Battery (12v,14ah)
2	33680-16A10	Hose, Battery Exhaust,l:780
3	09404-06206	Clamp
4	09462-00081	Band, Battery
5	33651-37000	Protector (170x95x3.0)
6	33860-44B01	Lead Wire, Battery (-)
7	33690-19C10	Plate, Battery Caution
8	33652-20C00	Protector (50x50x5.0)

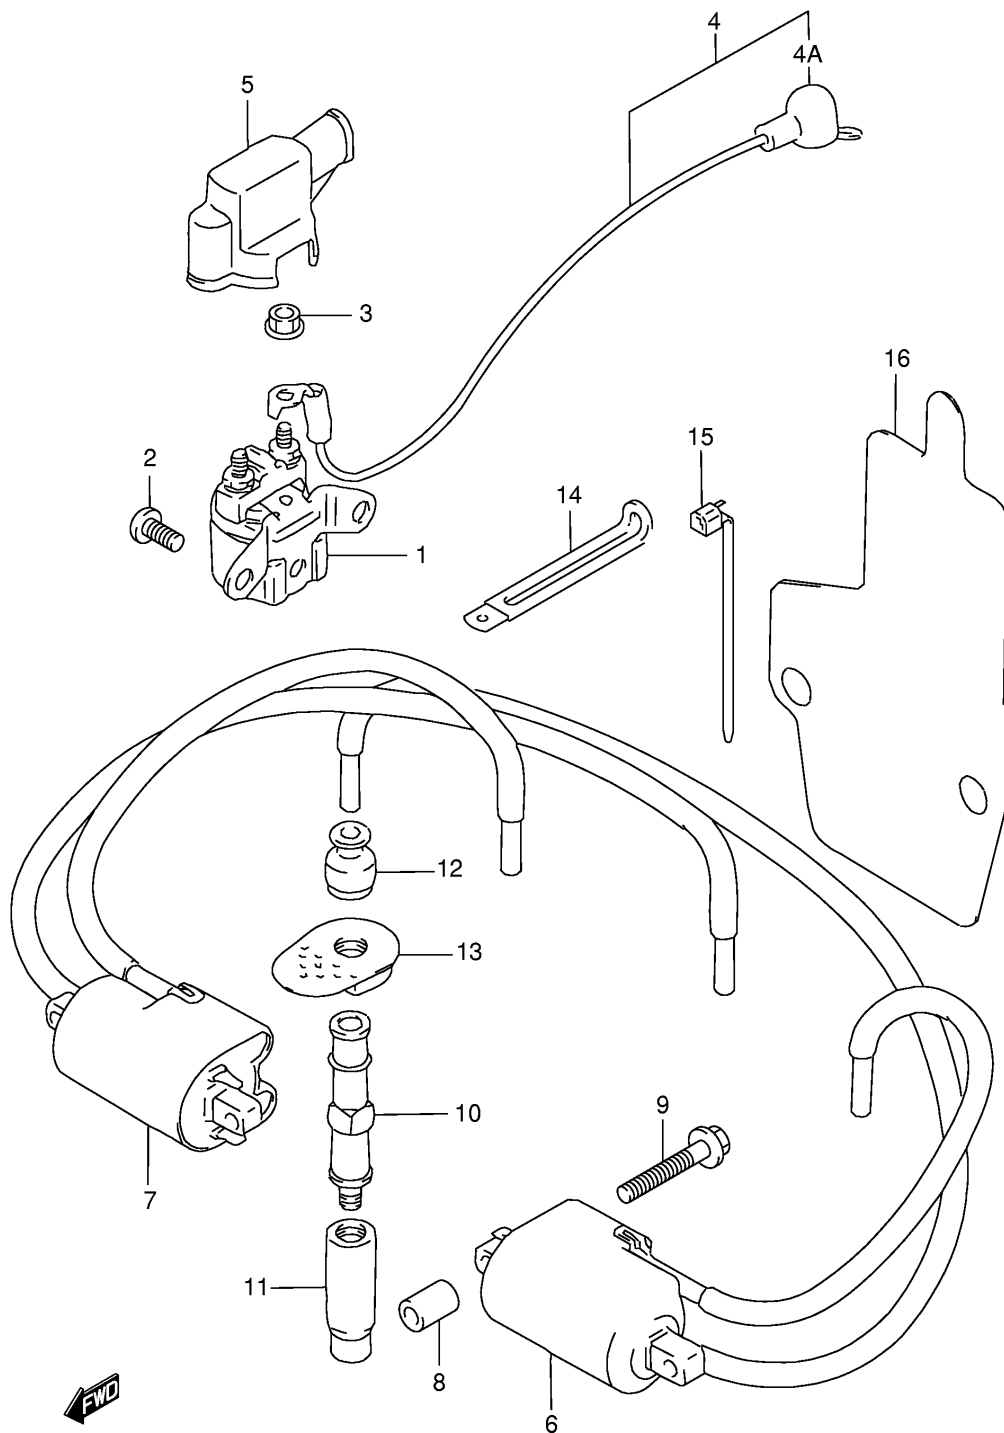


Ref No	Part No	Description
1	31800-49100	Relay, Starting Motor
2	02112-06103	Screw
3	08361-35068	Nut
4	33810-41C00	Lead Wire, Starting Motor
4a	31861-48B10	• . Cap, Starting
5	31861-10D10	Cap, Terminal
6	33410-19C00	Coil, Ignition,1-4
7	33420-19C00	Coil, Ignition,2-3
8	09180-06198	Spacer
9	01550-06453	Bolt
10	33510-20C02	Cap, Spark Plug
11	33541-20C00	Seal, Plug
12	33542-38B00	Seal, Hightension Cord
13	33543-48B00	Cover
14	09404-06431	Clamp (l:80)
15	09407-18403	Clamp (l:165)
16	33411-20C00	Cover, Ignition



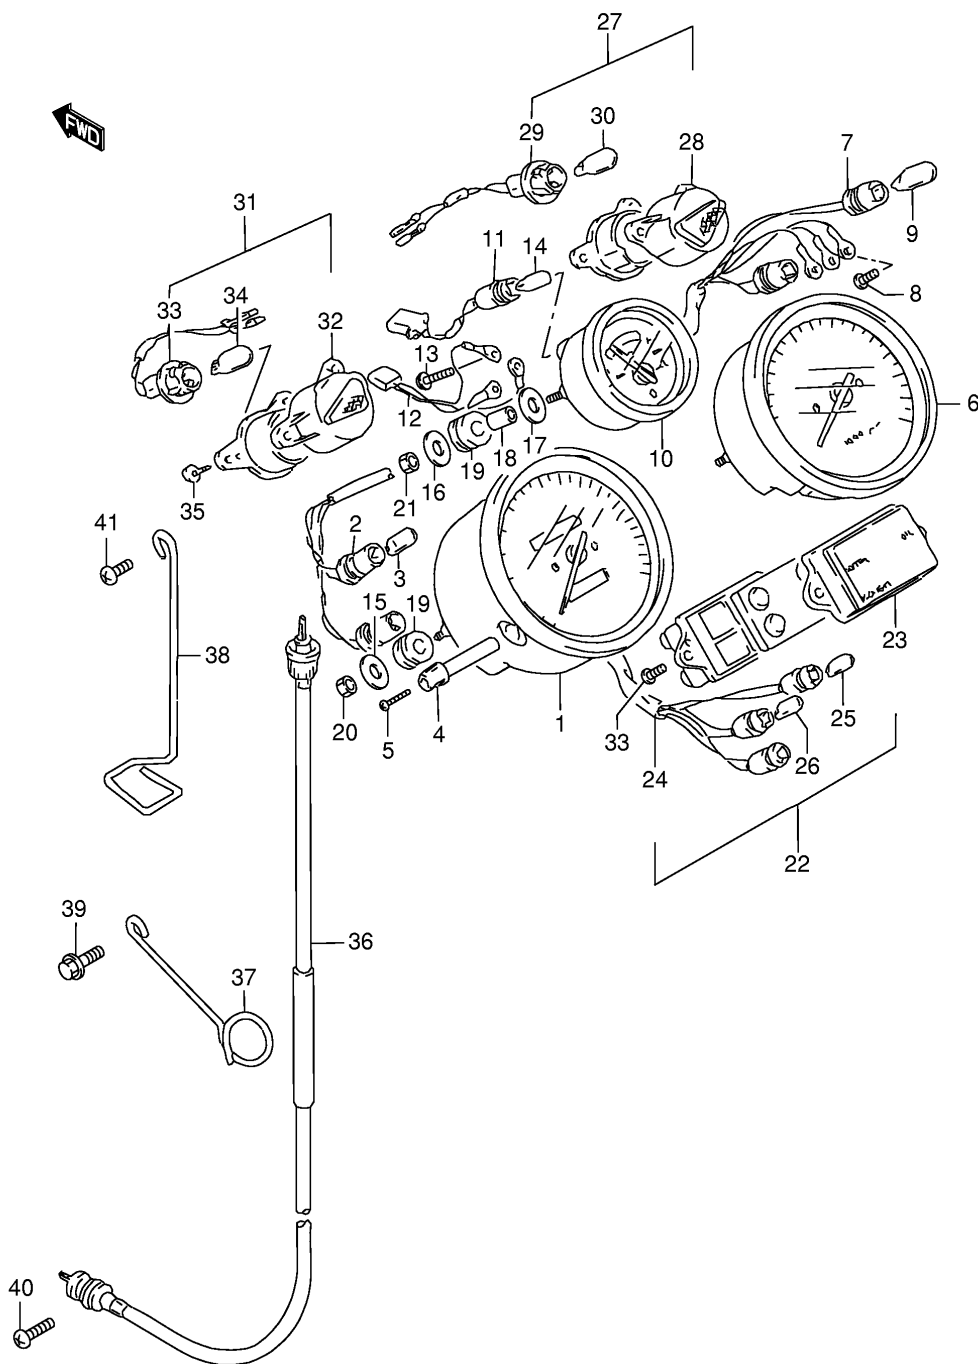 



Ref No	Part No	Description
1	34100-20C20	Speedometer (kilo)
2	34171-20C20	• Socket
3	09471-12077	• Bulb (12v,3w)
4	34124-20C00	Knob, Trip
5	09139-02003	Screw
6	34200-20C00	Tachometer
7	34275-20C00	• Socket
8	02112-33123	• Screw
9	09471-12077	• Bulb (12v,3w)
10	34300-20C00	Fuel Meter
11	34371-20C00	• Socket
12	34371-20C10	• Cord Assy
13	34383-09400	• Screw
14	09471-12108	• Bulb (12v,3w)
15	09160-05037	Washer (5.5x16x1.2)
16	09160-04014	Washer (4x16x1.2)
17	09161-08011	Washer (8.2x18x1.2)
18	09180-04014	Spacer (4.5x7.5x15)
19	34189-20C00	Cushion
20	08310-00053	Nut
21	08310-00043	Nut
22	36380-20C10	Box Assy, Pilot Lamp
23	36381-20C10	• Case, Upper
24	34170-20C10	• Socket
25	09471-12108	• Bulb (12v,1.7w)
26	09471-12103	• Bulb (12v,3w)
27	36340-20C10	Lamp Assy, Turnsignal Pilot Rh
28	36342-20C10	• Lens
29	35618-10B02	• Socket
30	09471-12082	• Bulb (12v,3.4w)
31	36350-20C10	Lamp Assy, Turnsignal Pilot Lh
32	36352-20C10	• Lens
33	35618-10B02	• Socket
34	09471-12082	• Bulb (12v,3.4w)
35	03541-04163	Screw
36	34910-19C01	Cable, Speedometer
37	34938-45100	Clamp, Cable
38	34938-34C01	Clamp, Cable
39	01550-06163	Bolt
40	02112-05163	Screw
41	02142-05123	Screw

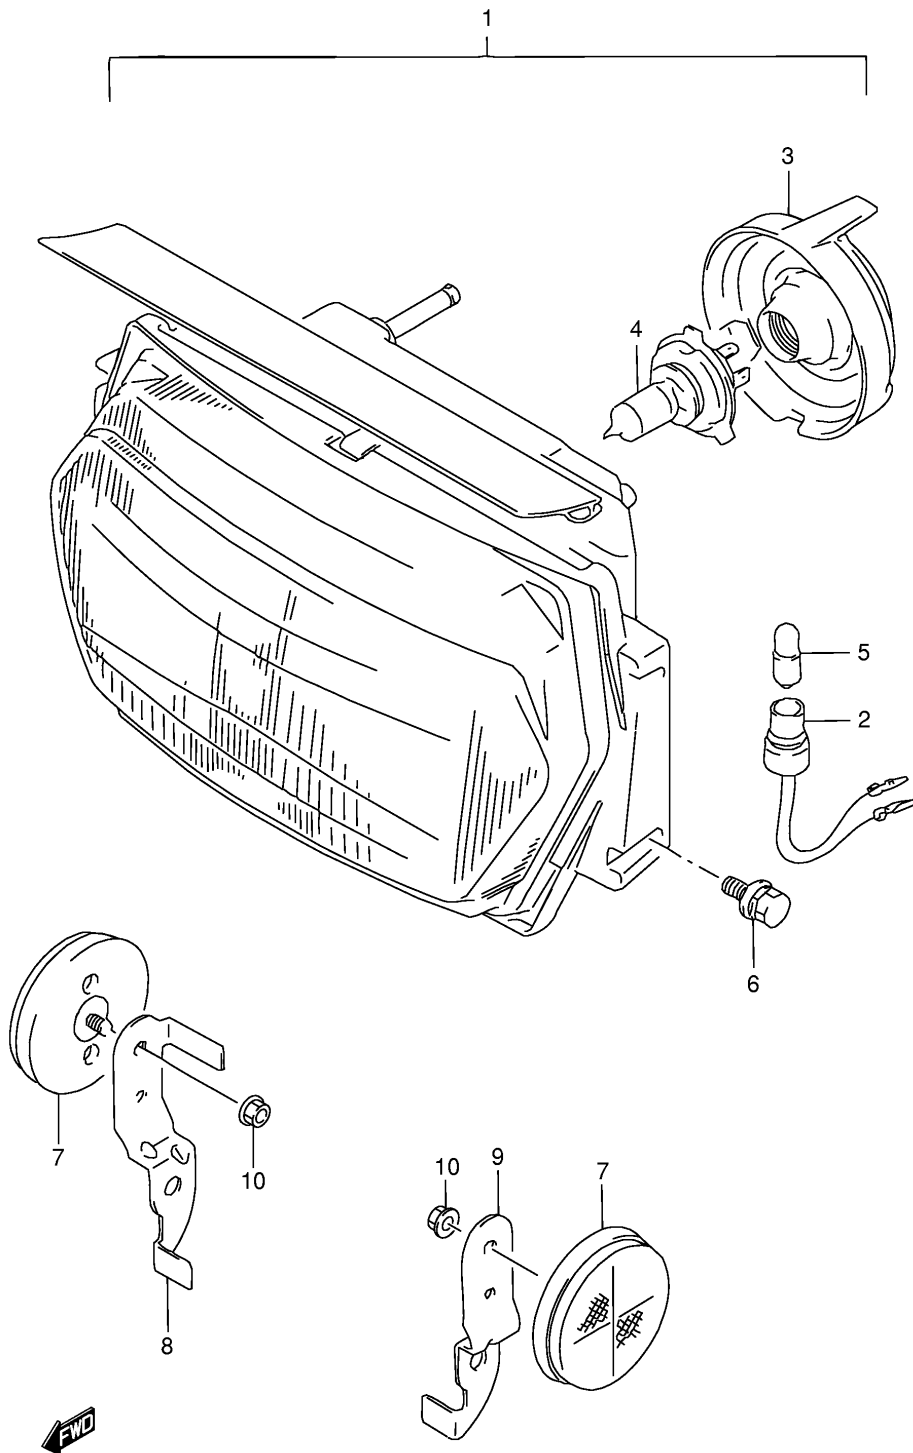 


Ref No	Part No	Description
1	35100-20C51-999	Headlamp Assy
1	35100-20C10-999	Headlamp Assy
2	36118-32B10	• . Socket
3	35173-48B00	• . Cover, Socket
4	09471-12060	Bulb (12v,60/55w)
5	09471-12063	Bulb (12v,4w)
6	01580-06203	Bolt
7	35950-14A00	Reflector, Front Side
8	35956-19C00	Bracket, Rh
9	35957-19C00	Bracket, Lh
10	08310-00053	Nut

Ref No	Part No	Description
1	35601-01D10	Lamp Assy, Front Turnsignal
2	35612-17C20	• Lens
3	35613-27A00	• Gasket
4	35623-27A00	• Tapping Screw
5	35725-40511	• Tapping Screw
6	35627-27A02	• Gasket
7	09471-12045	• Bulb (12v,21w)
8	35674-27A01	Grommet
9	08316-10103	Nut
10	35603-14D10	Lamp Assy, Rear Turnsignal
10	35603-14D20	Lamp Assy, Rear Turnsignal
11	35652-17C20	• Lens
12	35613-27A00	• Gasket
13	35623-27A00	• Tapping Screw
14	35725-40511	• Tapping Screw
15	35627-27A02	• Gasket
16	09471-12045	• Bulb (12v,21w)
17	38610-45D01	Relay Assy, Turnsignal

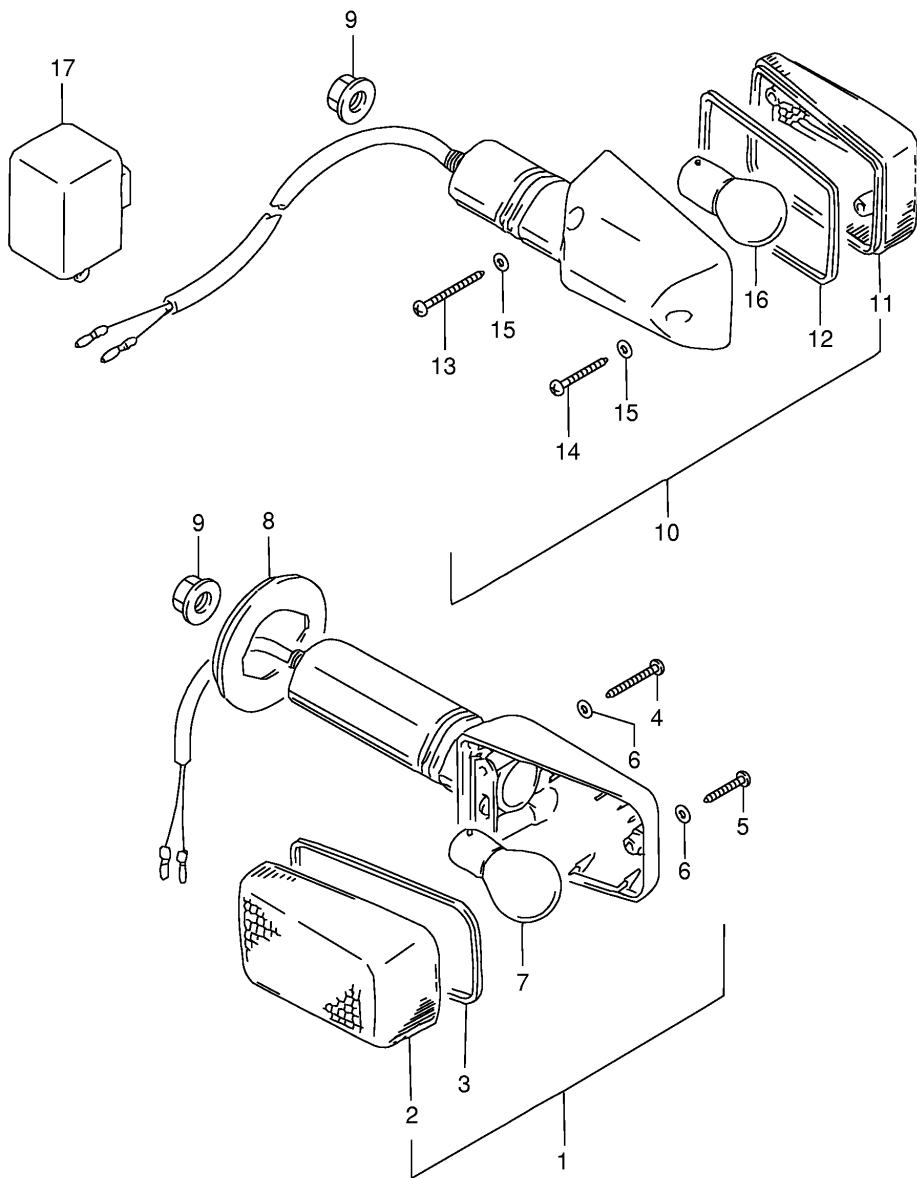 

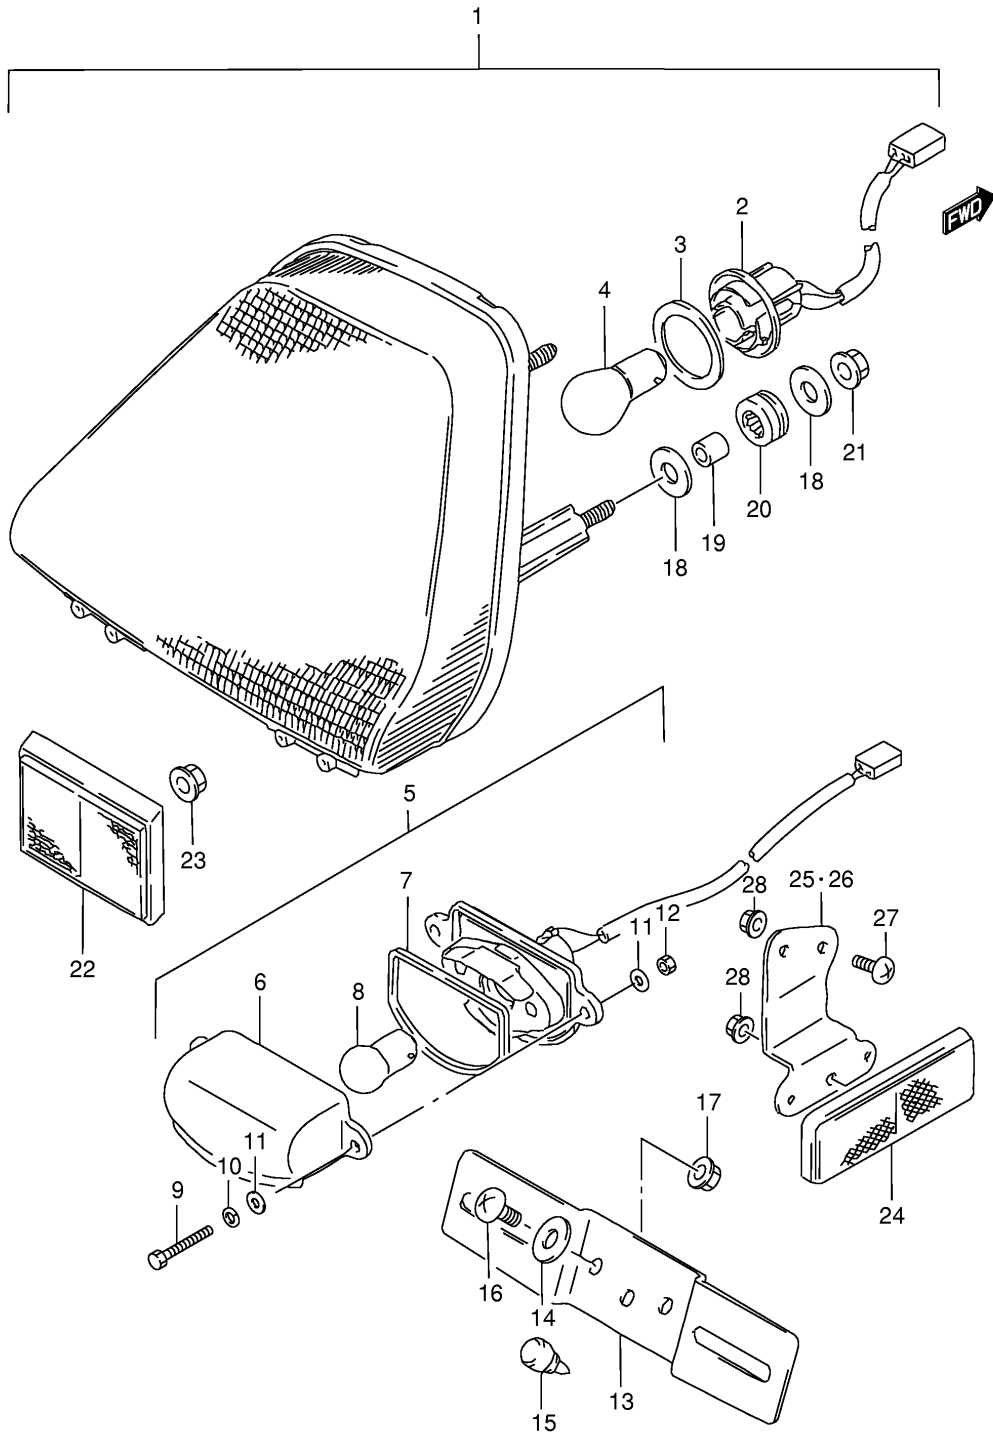 


Ref No	Part No	Description
1	35710-48C20	Lamp Assy, Rear Combination
2	35718-48B20	. . Socket
3	35764-48B20	. . Rubber
4	09471-12083	. . Bulb (12v,21/5w)
5	35910-48B20	. . Lamp Assy, License
6	35912-00A21	.. Lens, License Lamp
7	35913-04A00	.. Gasket
8	09471-12140	.. Bulb (12v,5w)
9	01104-04256	.. Bolt
10	08321-01043	.. Lock Washer
11	08322-01047	.. Washer
12	08310-00047	.. Nut
13	35927-44110	Bracket, License Plate
14	09160-06053	Washer (6.3x14x1.6)
15	09321-06023	Cushion
16	02112-06163	Screw
17	08316-10063	Nut
18	09160-06077	Washer (6.5x20x1.2)
19	09180-06248	Spacer (6.1x8x9.5)
20	09320-09009	Cushion
21	08316-10063	Nut
22	35970-48B00	Reflex Reflector, Rear
23	08316-10053	Nut
24	35950-43431	Reflector, Rear Side
25	35975-20C01	Bracket, Rh
26	35976-20C01	Bracket, Lh
27	02142-05123	Screw
28	08310-00053	Nut

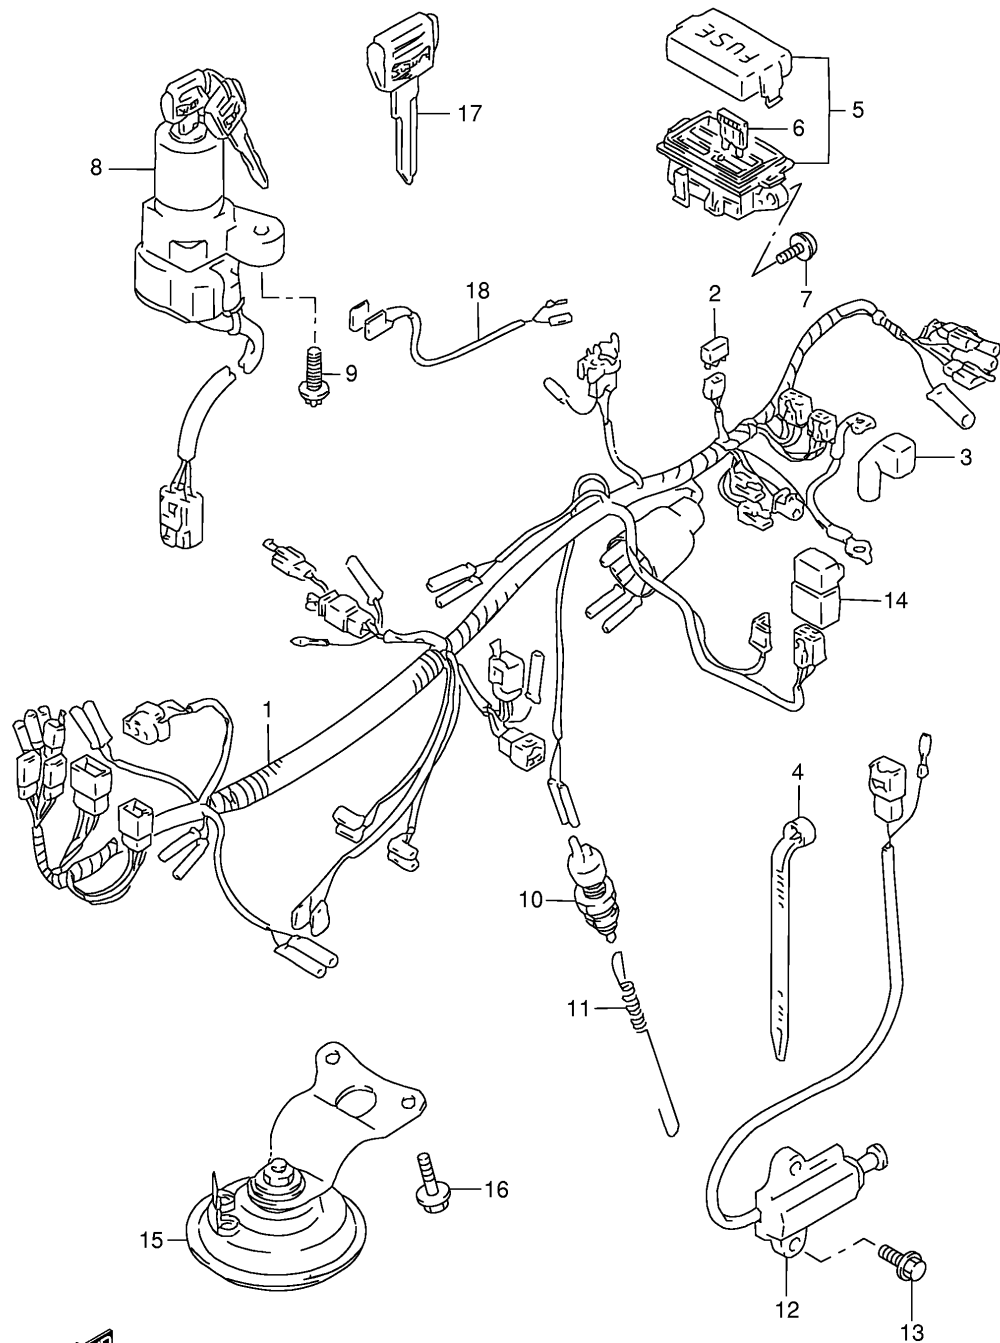 


Ref No	Part No	Description
1	36610-20C60	Harness, Wiring
2	36611-38A00	• . Diode
3	33624-43500	• . Cap, Battery Plus Terminal
4	09407-11401	Clamp (l:95)
4	09407-14403	Clamp (l:125)
4	09407-18403	Clamp (l:165)
5	36740-10D10	Fuse Box Assy
6	09481-10101	• . Fuse (10a)
6	09481-25101	• . Fuse (25a)
7	02142-06163	Screw
8	37100-26D02	Switch Assy, Ignition
8	37100-26D11	Switch Assy, Ignition
9	09139-06026	Bolt
10	37740-24A00	Switch Assy, Stop Lamp
11	09443-06005	Spring
12	37840-44X50	Switch Assy, Side Stand
13	01550-06203	Bolt
14	38740-24X50	Relay Assy, Side Stand
15	38500-19C01	Horn Assy
16	01550-06163	Bolt
17	37146-26D10	Key, Blank
18	36852-19D00	Wire, Clutch Switch



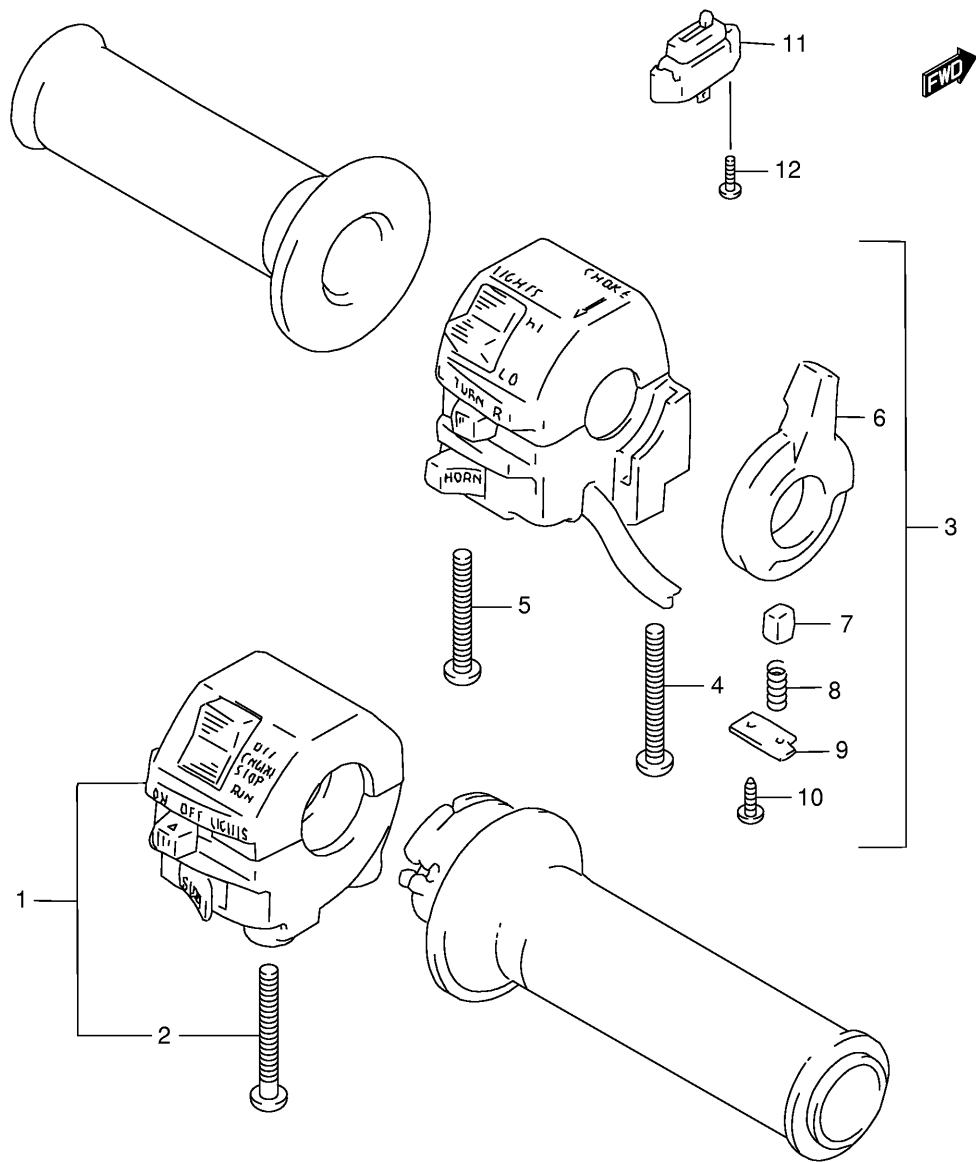 


Ref No	Part No	Description
1	37200-17C04	Switch Assy, Handle Rh
1	37200-17C33	Switch Assy, Handle Rh
2	02112-05455	. . Screw
3	37400-32B01	Switch Assy, Handle Lh
4	02112-05455	. . Screw
5	02112-05403	. . Screw
6	37481-30B01	. . Lever, Choke
7	37482-30B00	. . Piece, Slide
8	37483-30B00	. . Spring
9	37486-30B00	. . Plate
10	03511-04123	. . Screw
11	37560-38A00	Switch Assy, Clutch
12	37564-26E00	Screw

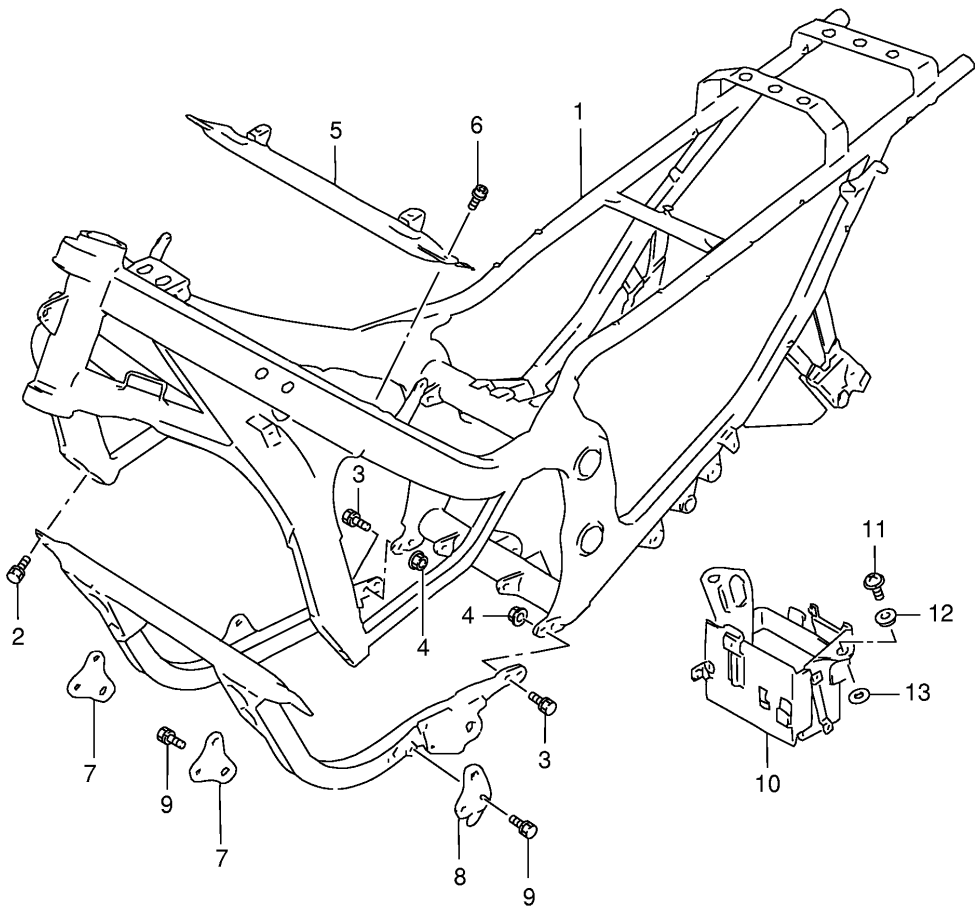 


Ref No	Part No	Description
1	41101-20850-019	Frame Set (black)
2	01570-08253	. Bolt, Upper
3	01550-08303	. Bolt, Lower
4	08319-31085	. Nut
5	41750-34C00	Tube, Frame Brige
6	09103-08266	Bolt
7	41911-19C00-019	Plate, No.1 (black)
8	41940-20C00-019	Plate, No.2 (black)
9	01570-08163	Bolt
10	41540-20C01	Holder, Battery
11	01570-06303	Bolt
12	09320-08021	Cushion
13	09169-06065	Spacer



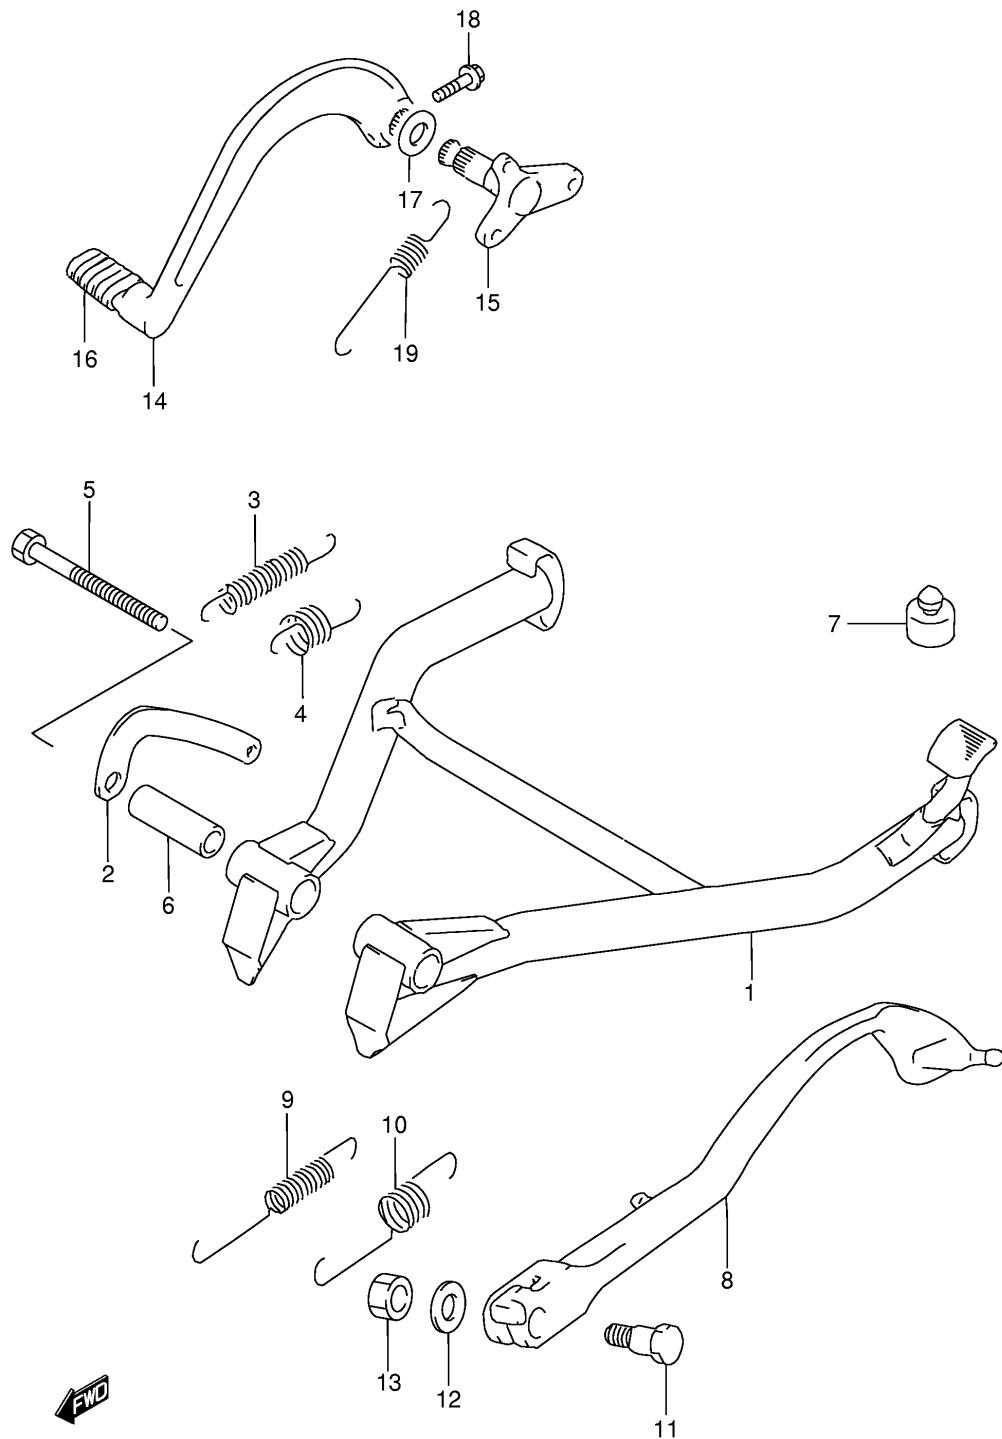 


Ref No	Part No	Description
1	42100-19843	Stand Set, Center
2	42251-19C00	• . Hook, Spring
3	09443-15039	• . Spring, Inner
4	09443-22009	• . Spring, Outer
5	01580-10603	• . Bolt
6	09180-10040	• . Spacer
7	09321-10017	• . Cushion
8	42310-19C01	Stand, Prop
9	09443-12036	Spring, No.1
10	09443-19010	Spring, No.2
11	09111-10036	Bolt
12	08221-12224	Shim
13	09159-10097	Nut
14	43110-19C02	Pedal, Brake
15	43120-19C00	Arm, Brake Pedal Rod
16	43151-04701	Rubber
17	43212-04A00	Washer, Brake Boss
18	01547-06253	Bolt
19	09443-13028	Spring



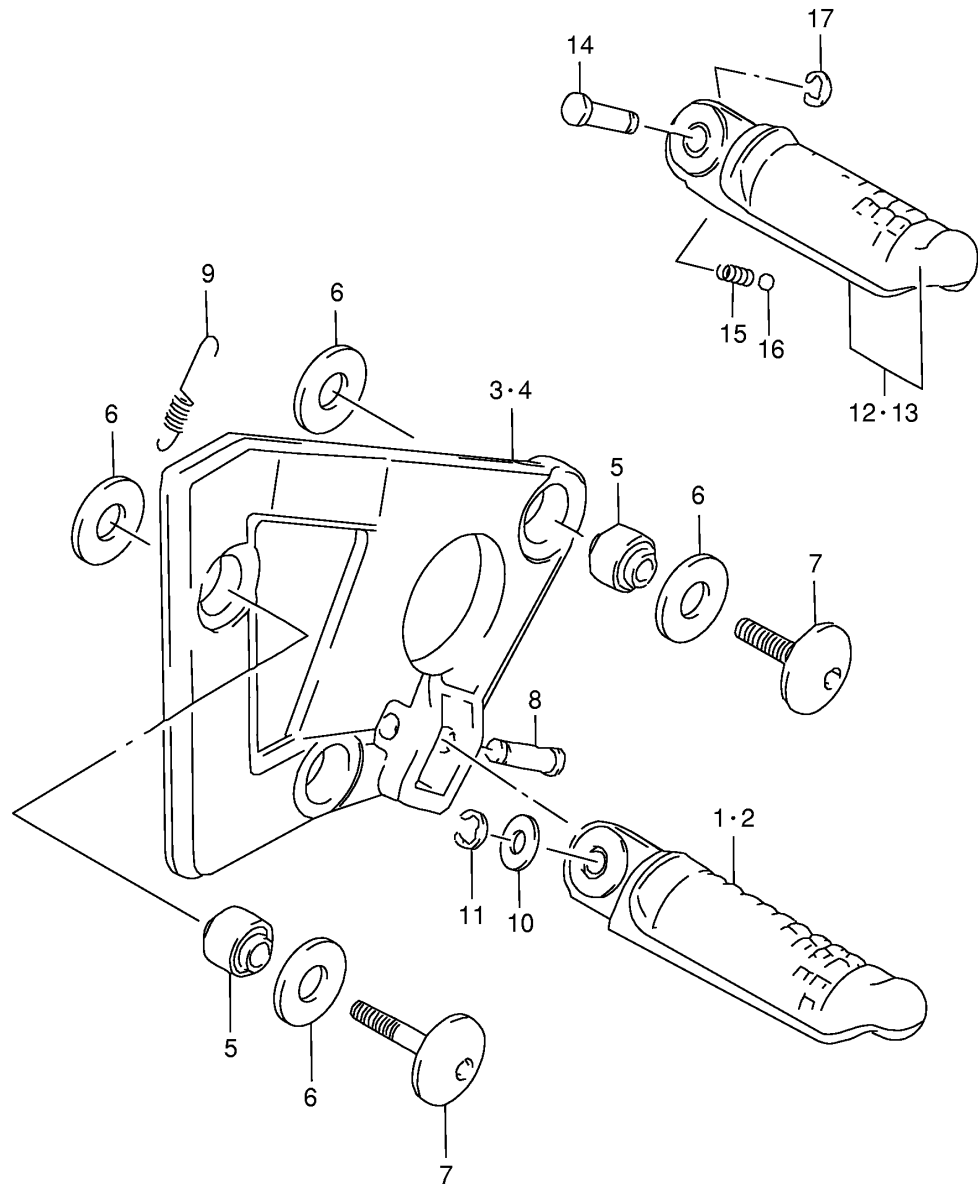 


Ref No	Part No	Description
1	43510-19C01	Footrest Assy, Front Rh
2	43520-19C01	Footrest Assy, Front Lh
3	43517-20C01	Holder, Front Footrest Rh
4	43527-20C01	Holder, Front Footrest Lh
5	09319-08036	Bush, Holder
6	09161-12009	Washer, Holder
7	09106-08080	Bolt
8	09208-08010	Pin
9	09443-10037	Spring
10	08322-01083	Washer
11	08332-11063	E Ring
12	43610-20C00	Bar, Pillion Footrest Rh
13	43710-20C00	Bar, Pillion Footrest Lh
14	09208-08011	Pin
15	09440-05005	Spring
16	06111-07004	Ball
17	08332-11063	E Ring



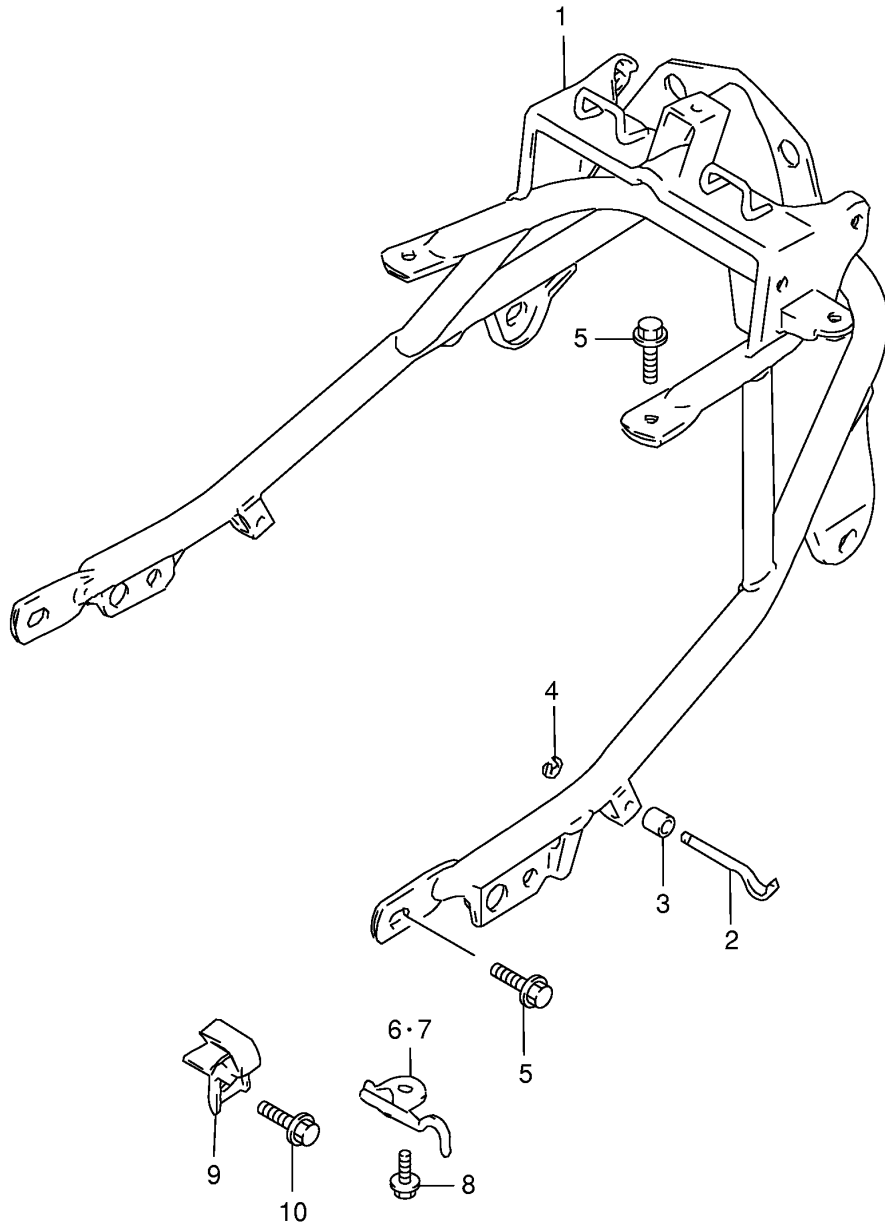 


Ref No	Part No	Description
1	41580-20C02	Bar, Rear Lamp
2	41625-34A01	Rod, Grip
3	41626-33401	Spacer
4	08332-11043	E Ring
5	01550-08203	Bolt
6	41620-20C02	Rod, Grip Rh
7	41630-20C02	Rod, Grip Lh
8	01580-08163	Bolt
9	95720-20C00	Holder, Helmet
10	01570-06163	Bolt



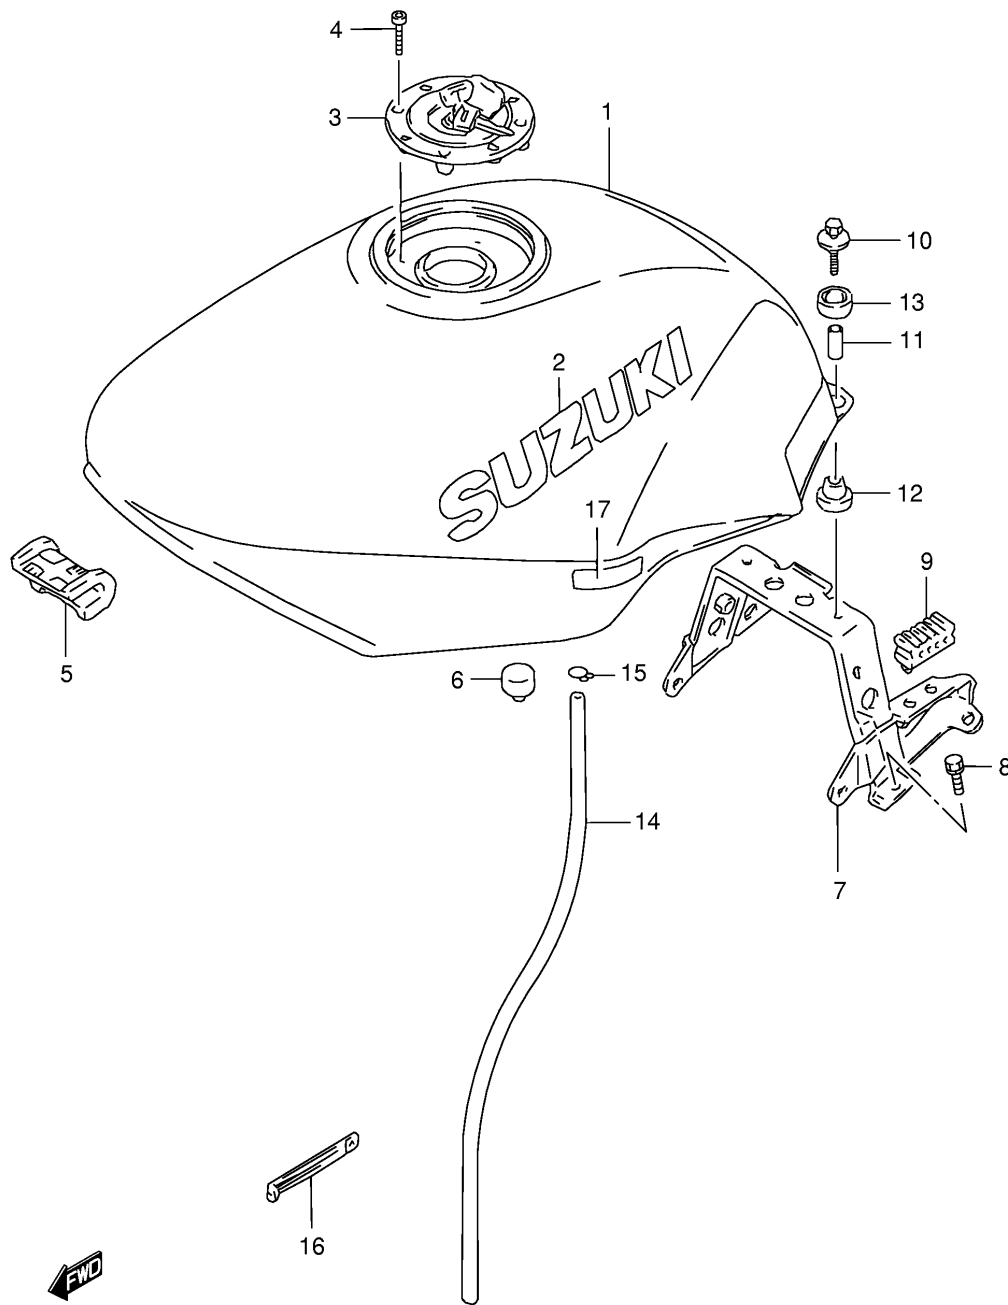 


Ref No	Part No	Description
1	44100-43C30-22U	Tank Assy, Fuel (maroon)
1	44100-43C30-33J	Tank Assy, Fuel (black)
1	44100-43C40-22U	Tank Assy, Fuel (maroon)
1	44100-43C40-33J	Tank Assy, Fuel (black)
2	68111-12C00-17U	• Emblem (gray)
3	44201-01832	Cap Set, Fuel Tank
4	09106-05017	Bolt
5	44511-19C00	Cushion, Fuel Tank Front
6	09321-10011	Cushion, Fuel Tank Side
7	44550-19C00	Bracket, Rear
8	09137-06017	Bolt, Rear Bracket
9	45149-31300	Cushion, Fuel Tank Side Rear
10	09116-06172	Bolt, Rear
11	09180-06271	Spacer
12	09320-10038	Cushion, Rear Lower
13	09320-14017	Cushion, Rear Upper
14	44423-19C00	Hose, Water Drain
15	09401-08401	Clip
16	09404-08420	Clamp
17	32851-10D00	Protector, Fuel Tank

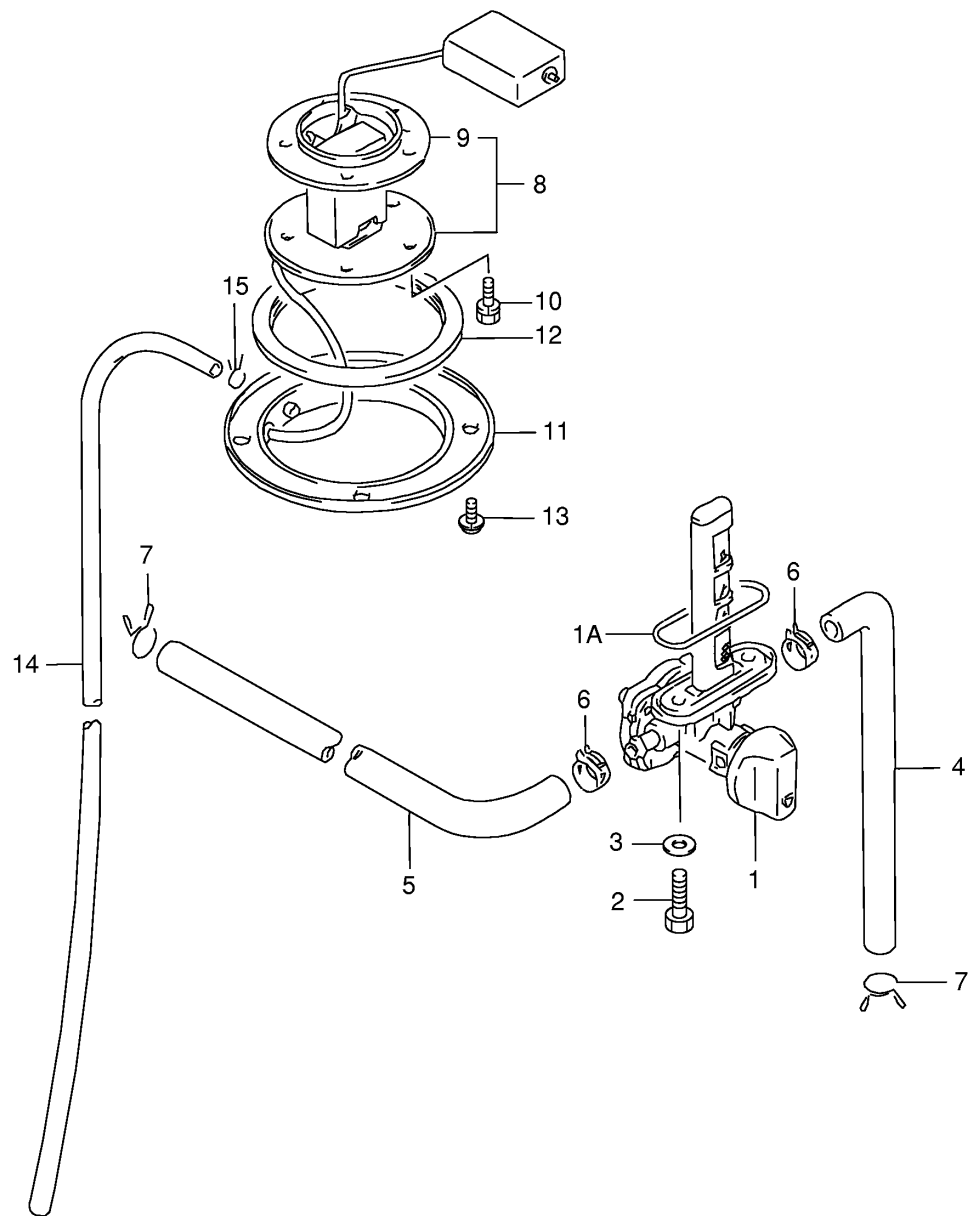 


Ref No	Part No	Description
1	44300-20C00	Cock, Fuel
1a	44348-49170	• O Ring
2	09128-06057	Bolt
3	09168-06026	Gasket
4	09343-07502	Hose, Fuel No.1
5	09343-07503	Hose, Fuel No.2
6	09401-11407	Clip
7	09401-12403	Clip, Fuel Hose No.2
8	34810-20C00	Guage Assy, Fuel Level
9	34825-45100	• Gasket
10	09117-05003	Bolt
11	34885-40A00	Plate, Fuel Drain
12	34888-40A00	Gasket
13	09137-05004	Bolt
14	09352-50823-00B	Hose, Drain (l:2000->70)
15	09401-08401	Clip



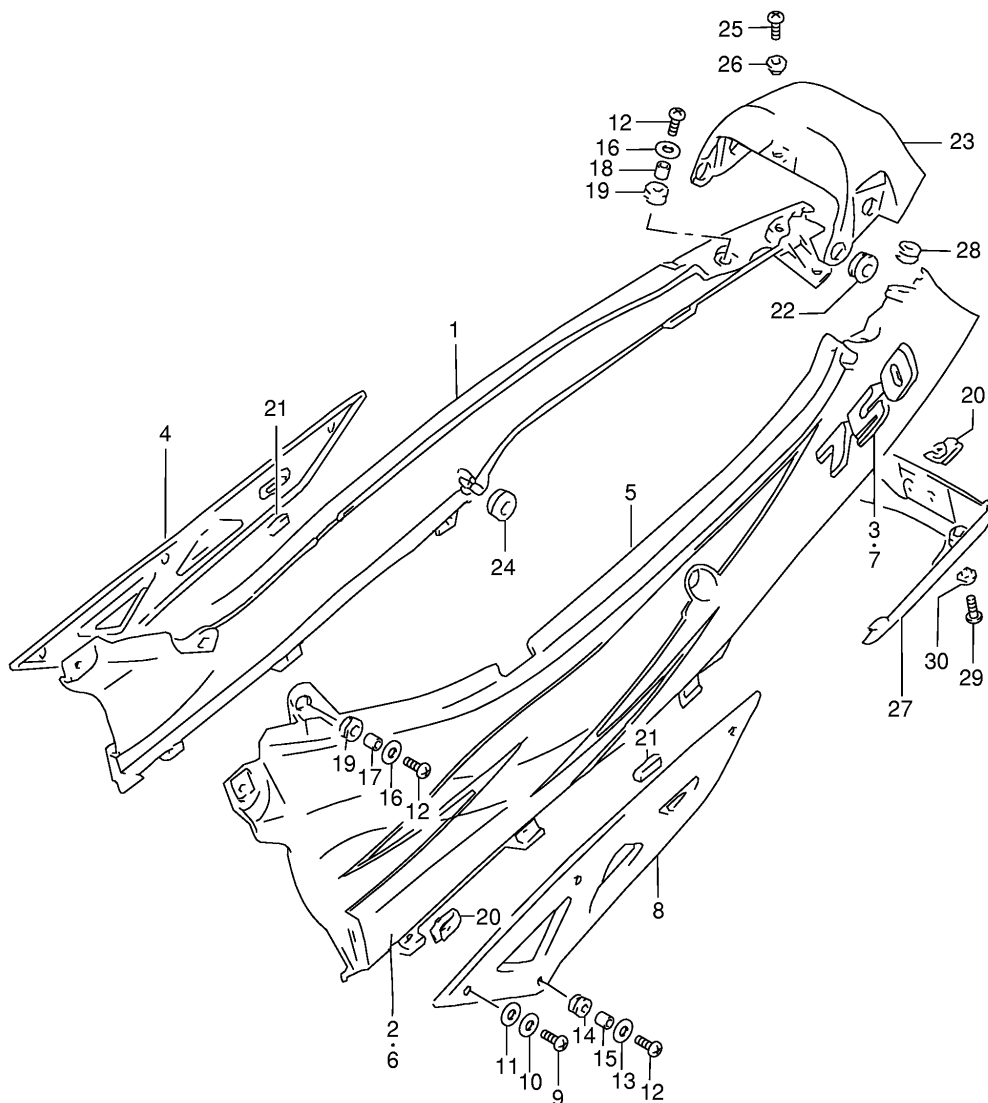 


Ref No	Part No	Description
1	47110-21CA0-22U	Cover, Frame Rh (maroon)
1	47110-21CA0-33J	Cover, Frame Rh (black)
2	68135-21C10-G2P	. . Tape, Rh
2	68135-21C10-G2N	. . Tape, Rh
3	68131-21C40-G2S	. . Emblem
3	68131-21C40-G2R	. . Emblem
4	47131-20C00	Cover, Frame Lower Rh
5	47210-21CA0-22U	Cover, Frame Lh (maroon)
5	47210-21CA0-33J	Cover, Frame Lh (black)
6	68145-21C10-G2P	. . Tape, Lh
6	68145-21C10-G2N	. . Tape, Lh
7	68131-21C40-G2S	. . Emblem
7	68131-21C40-G2R	. . Emblem
8	47231-20C00	Cover, Frame Lower Lh
9	09120-06005	Screw, Lower Cover No.1
10	09160-06003	Washer
11	09161-05016	Cushion
12	09139-06030	Screw, Lower Cover No.2
13	09160-06054	Washer
14	09320-08013	Cushion
15	09180-06092	Spacer
16	09160-06057	Washer
17	09180-06038	Spacer, Front
18	09180-06263	Spacer, Rear
19	09320-09016	Cushion
20	47153-19C01	Plate, Fitting
21	47161-20C00	Cushion, Lower
22	09308-16006	Cushion, Pillion Rider
23	47311-20C01-22U	Cover, Frame Center (maroon)
23	47311-20C01-33J	Cover, Frame Center (black)
24	09320-08018	Cushion, Center Boss
25	02142-06103	Screw, Center Cover
26	09169-06037	Washer
27	47321-20C00	Cover, Frame Rear
28	94433-26B00	Cushion, Rear Box
29	02142-06163	Screw, Rear Cover
30	09169-06037	Washer



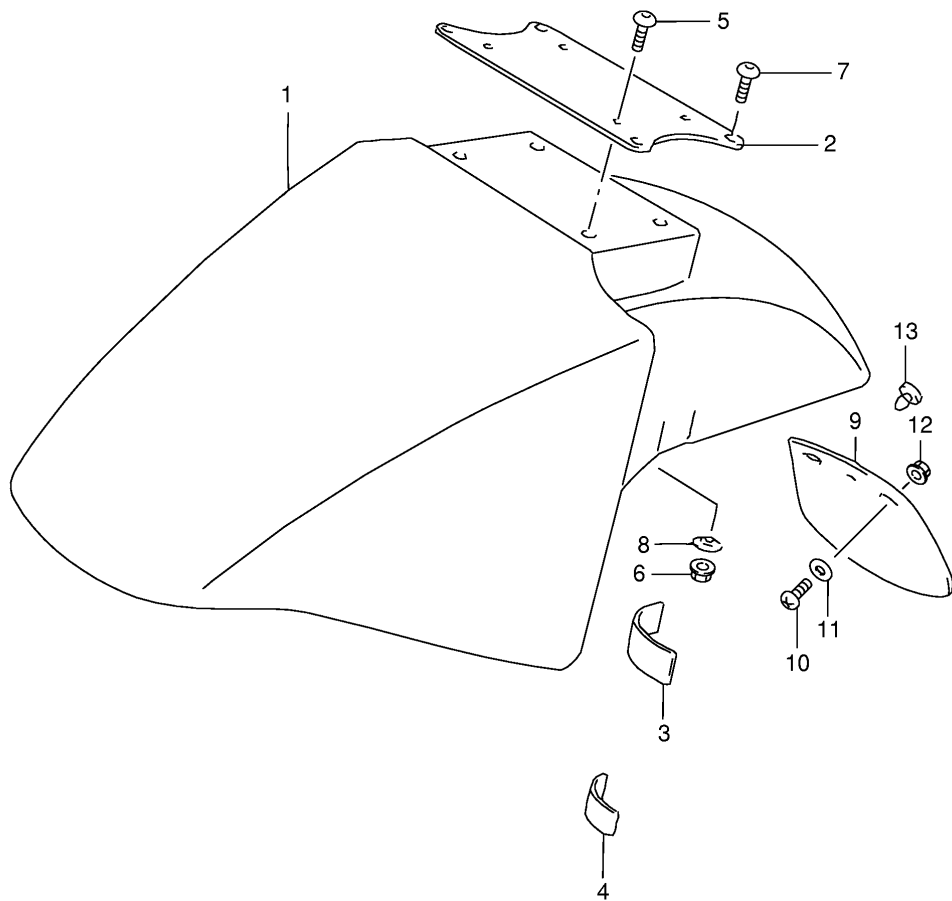 


Ref No	Part No	Description
1	53111-20C00-33J	Fender, Front (black)
1	53111-20C00-22U	Fender, Front (maroon)
1	53111-20C10-33J	Fender, Front (black)
1	53111-20C10-22U	Fender, Front (maroon)
2	53114-01D00	Brace, Front Fender
3	53145-19C00	Cushion
4	53146-20C00	Cushion, Under
5	09139-05022	Screw, Brace
6	09159-05026	Nut
7	09139-06027	Screw, Fender
8	09169-05010	Washer
9	53311-19C00	Mud Flap, Front Fender
10	02142-05123	Screw
11	09160-05501	Washer
12	08313-20053	Nut
13	09250-06012	Plug



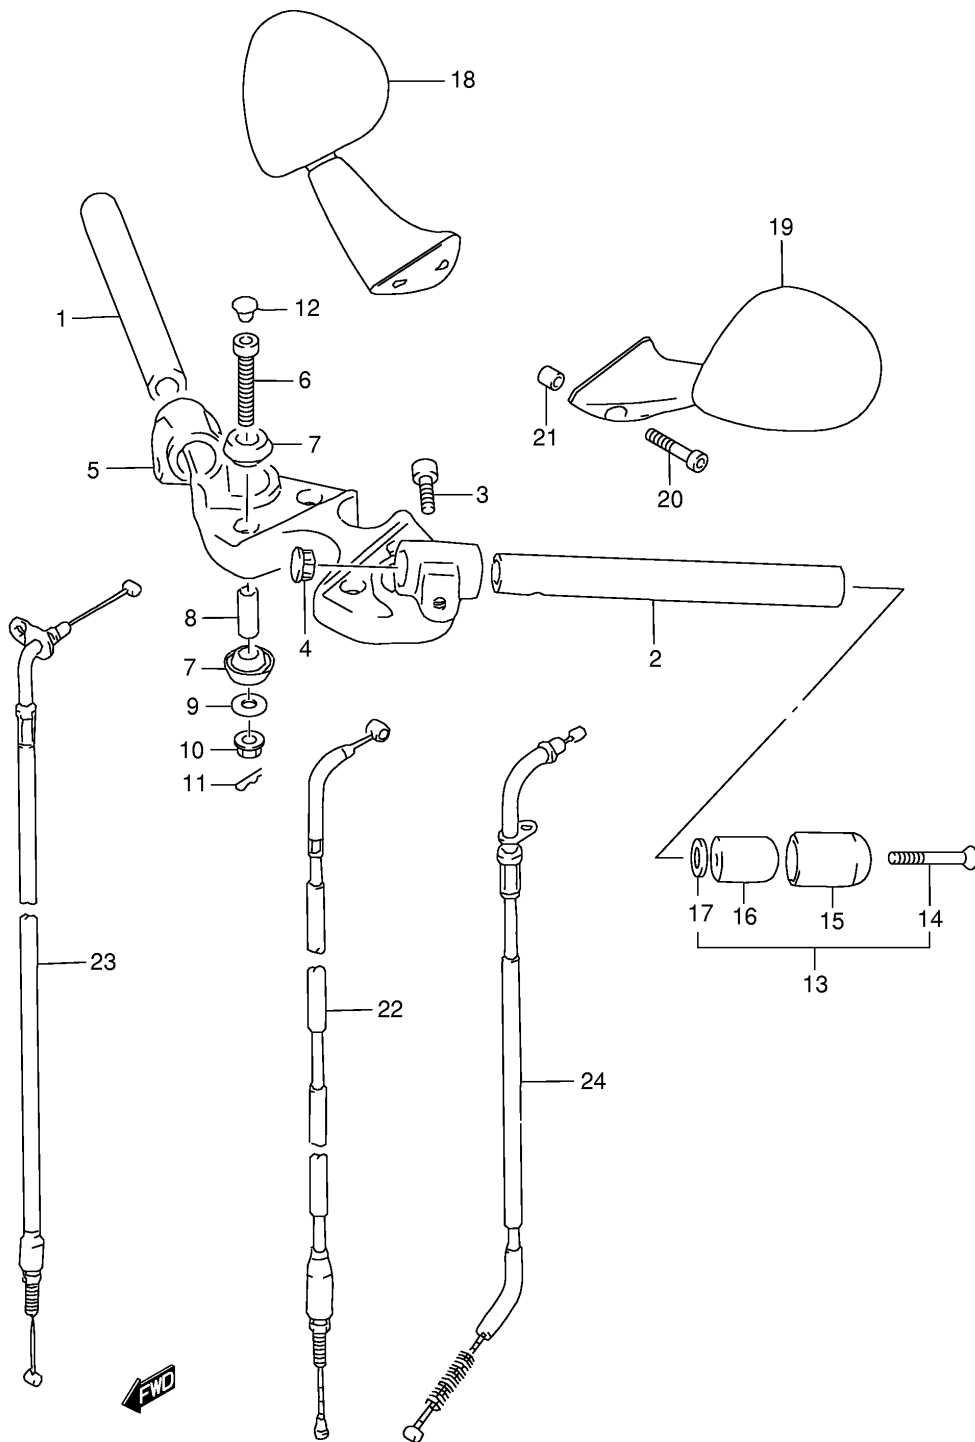 


Ref No	Part No	Description
1	56110-20C00	Handlebar, Rh
2	56150-20C00	Handlebar, Lh
3	07130-08303	Bolt
4	57215-33400	Cap
5	56211-20C20	Holder, Handlebar (silver)
6	09106-10054	Bolt
7	56240-42A00	Cushion
8	56243-20C00	Spacer
9	09160-10094	Washer
10	08319-31105	Nut
11	09385-10005	Clip
12	09250-06008	Cap
13	56200-01831	Balancer Set
14	02122-06603	• . Screw
15	56274-49310	• . Cap
16	56271-49310	• . Balancer
17	56275-34401	• . Spacer
18	56500-19C00	Mirror Assy, Rear View,rh
18	56500-19C10	Mirror Assy, Rear View,rh
18	56500-19C20	Mirror Assy, Rear View,rh
19	56600-19C00	Mirror Assy, Rear View,lh
19	56600-19C10	Mirror Assy, Rear View,lh
19	56600-19C20	Mirror Assy, Rear View,lh
20	07130-06403	Bolt
21	09180-06255	Spacer
22	58200-20C00	Cable Assy, Clutch
23	58300-20C00	Cable Assy, Throttle
24	58410-20C02	Cable, Starter

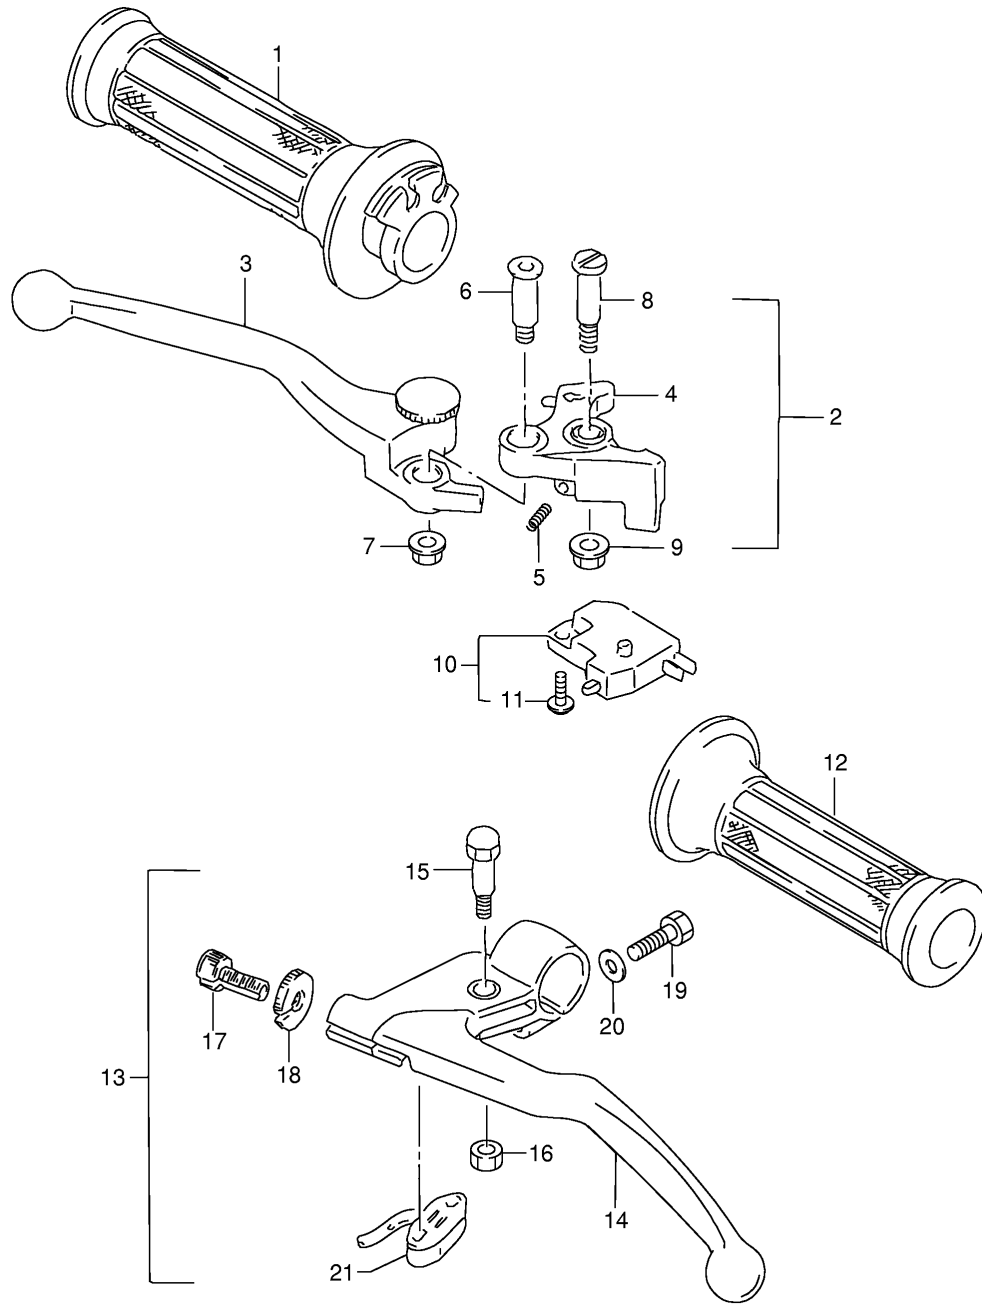 


Ref No	Part No	Description
1	57110-49501	Grip, Throttle
2	57300-40C01	Lever Assy, Brake
3	57420-32C00	• . Lever, Adjust
4	57430-40C00	• . Knocker
5	57438-32C00	•• . Spring
6	57437-32C01	• . Bolt
7	08319-31065	• . Nut
8	57431-17C00	• . Bolt, Lever
9	08316-10063	• . Nut
10	57460-17C00	Switch Assy, Stop
11	57465-17C00	• . Screw
12	57211-49500	Grip, Lh
13	57500-19C11	Lever Assy, Clutch
14	57620-19C01	• . Lever
15	57431-49110	• . Bolt
16	08319-21065	• . Nut
17	57441-44400	• . Adjuster
18	57442-44400	• . Nut
19	01204-06204	• . Bolt
20	08322-01063	• . Washer



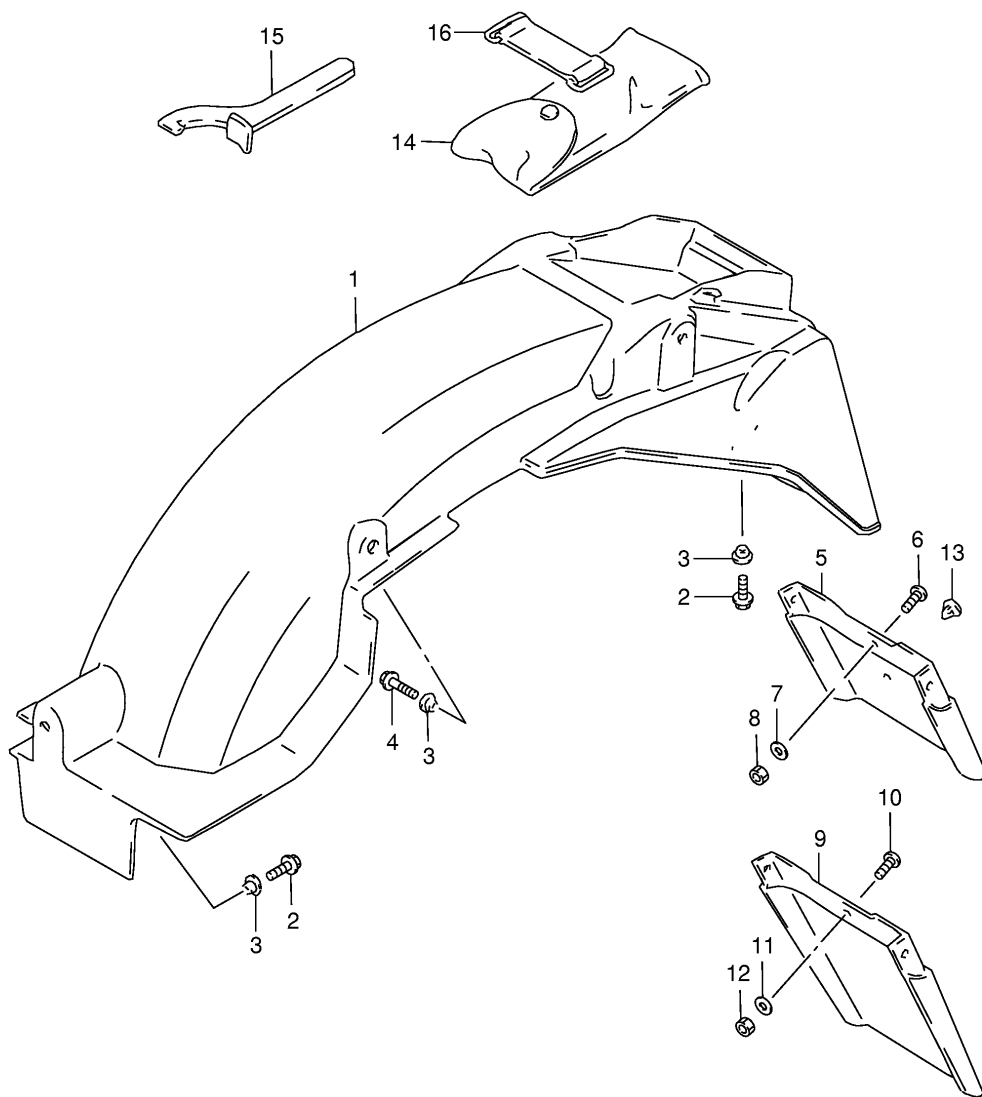 


Ref No	Part No	Description
1	63111-20C00	Body, Rear Fender
1	63111-20C20	Body, Rear Fender
1	63111-20C50	Body, Rear Fender
2	01550-06103	Bolt
3	09169-06037	Washer
4	01550-06203	Bolt, Side
5	63311-48B21	Extension, Rear Fender
6	02142-06123	Screw
7	09160-06019	Washer
8	08319-21066	Nut
9	63331-48B12	Mud Guard
10	02142-06123	Screw
11	09160-06019	Washer
12	08319-21066	Nut
13	09409-07320	Clip
14	09800-21017	Tool Assy
15	09822-00005	Clamp, Wrench
16	09462-00034	Band, Tool



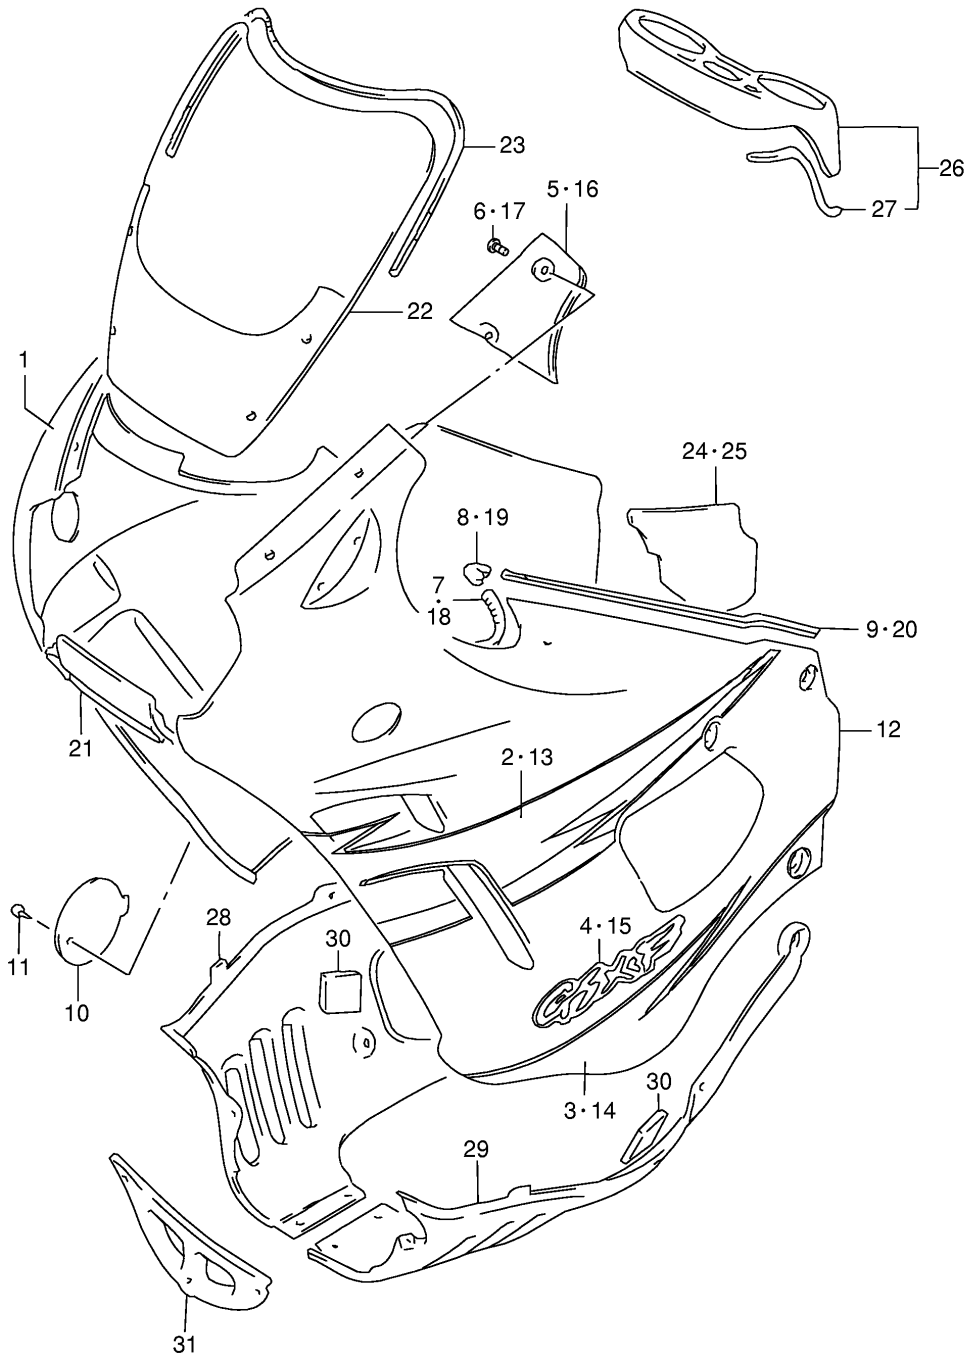 


Ref No	Part No	Description
1	94401-21CN0-33J	Cover, Cowling Rh (black)
1	94401-21CN0-22U	Cover, Cowling Rh (maroon)
2	68685-21C10-G2T	. Tape, Side Upper Rh
2	68685-21C10-G2U	. Tape, Side Upper Rh
3	68686-21C20-G2N	. Tape, Side Lower Rh
3	68686-21C20-G2P	. Tape, Side Lower Rh
4	68681-21C50-G2R	. Emblem
4	68681-21C50-G2S	. Emblem
5	94433-19C01-33J	. Cover, Meter Rh (black)
5	94433-19C01-22U	. Cover, Meter Rh (maroon)
6	03541-04103	. Screw
7	94631-49310	. Molding, Front (l:1000->00)
8	94438-19C00	. Joint
9	94635-19C00	. Molding, Rear
10	94435-19C01-33J	. Lid, Oil (black)
10	94435-19C01-22U	. Lid, Oil (maroon)
11	09139-06030	. Screw
12	94402-21CN0-33J	Cover, Cowling Lh (black)
12	94402-21CN0-22U	Cover, Cowling Lh (maroon)
13	68695-21C10-G2T	. Tape, Side Upper Lh
13	68695-21C10-G2U	. Tape, Side Upper Lh
14	68696-21C20-G2N	. Tape, Side Lower Lh
14	68696-21C20-G2P	. Tape, Side Lower Lh
15	68681-21C50-G2R	. Emblem
15	68681-21C50-G2S	. Emblem
16	94443-19C01-33J	. Cover, Meter Lh (black)
16	94443-19C01-22U	. Cover, Meter Lh (maroon)
17	03541-04103	. Screw
18	94631-49310	. Molding, Front (l:1000->00)
19	94438-19C00	. Joint
20	94635-19C00	. Molding, Rear
21	94421-19C01-33J	Panel, Center (black)
21	94421-19C01-22U	Panel, Center (maroon)
22	94610-20C60	Screen, Window
23	94631-18D01	Molding (l:800->00)
24	94576-20C00	Cushion, Rh
25	94586-20C00	Cushion, Lh
26	94420-20C02	Cover, Meter
27	94635-20C00	. Molding
28	94471-19C00-17U	Cover, Under Rh (gray)
28	94471-19C00-33J	Cover, Under Rh (black)
29	94481-19C00-17U	Cover, Under Lh (gray)
29	94481-19C00-33J	Cover, Under Lh (black)
30	94475-48B10	Cushion
31	94475-19C01	Cover, Front



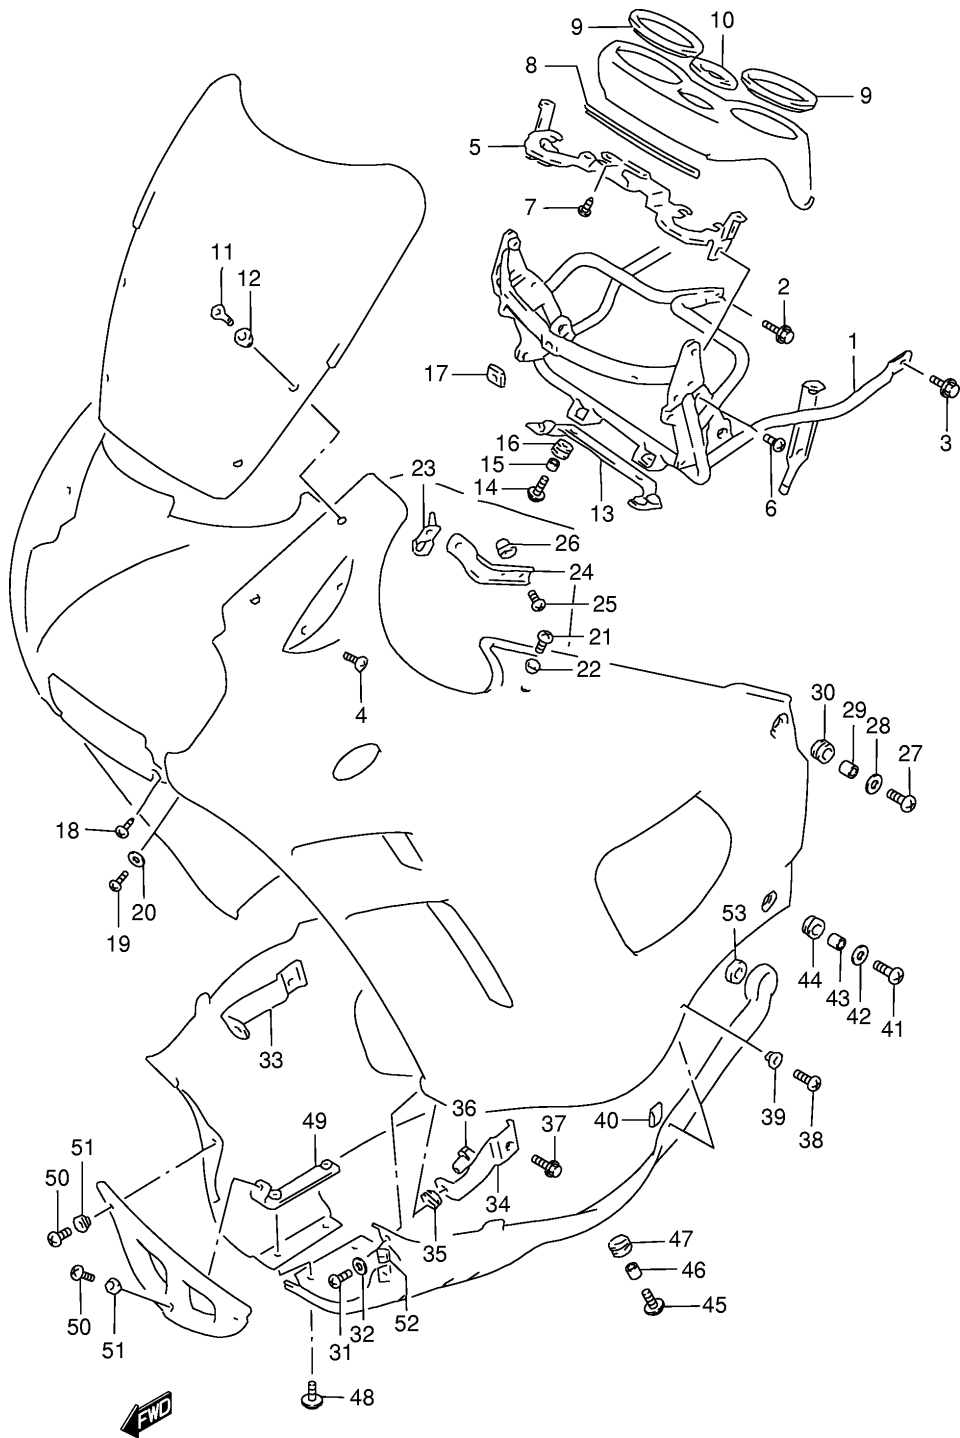 


Ref No	Part No	Description
1	94510-20C20	Brace, Cowling
1	94510-20C30	Brace, Cowling
2	09103-08266	Bolt (8x20)
3	01550-06123	Bolt
4	02142-06123	Screw
5	94520-20C00	Plate, Meter
6	02142-06123	Screw
7	03541-05083	Screw
8	94527-19C00	Molding, Meter
9	94426-20C00	Cushion, Speedometer
10	94427-20C00	Cushion, Fuel Meter
11	09139-05022	Screw (5x16)
12	09161-05002	Washer
13	94460-19C00	Plate, Center
14	09136-06081	Screw (6x20)
15	09180-06286	Spacer
16	09320-10015	Cushion
17	94638-19C00	Cushion, Screen
18	02142-05123	Screw
19	09139-06029	Screw, Front (6x25)
20	09160-06006	Washer
21	09139-06030	Screw, Upper (6x16)
22	09161-06021	Washer
23	94560-19C00	Bracket, Upper Rh
24	94570-19C00	Bracket, Upper Lh
25	02142-06253	Screw
26	94573-19C00	Nut
27	09139-06029	Screw (6x25)
28	09160-06006	Washer
29	09180-06263	Spacer
30	09320-09016	Cushion
31	09139-06042	Screw, Front (6x30)
32	09160-06006	Washer
33	94531-19C00	Bracket, Under,rh
34	94532-19C00	Bracket, Under,lh
35	09320-10015	Cushion
36	94590-19C00	Nut
37	01580-06163	Bolt
38	09139-05025	Screw (5x14)
39	09161-05017	Washer
40	94484-32B00	Nut
41	09139-06029	Screw, Rear (6x25)
42	09160-06006	Washer
43	09180-06116	Spacer
44	09320-09016	Cushion
45	09136-06081	Screw, Lower (6x20)
46	09180-06263	Spacer
47	09320-09016	Cushion, Lower
48	02142-05163	Screw, Lower
49	94580-19C00	Bracket, Lower
50	02142-05163	Screw
51	09161-05017	Washer
52	94484-32B00	Nut
53	94639-20C00	Cushion, Under,rear



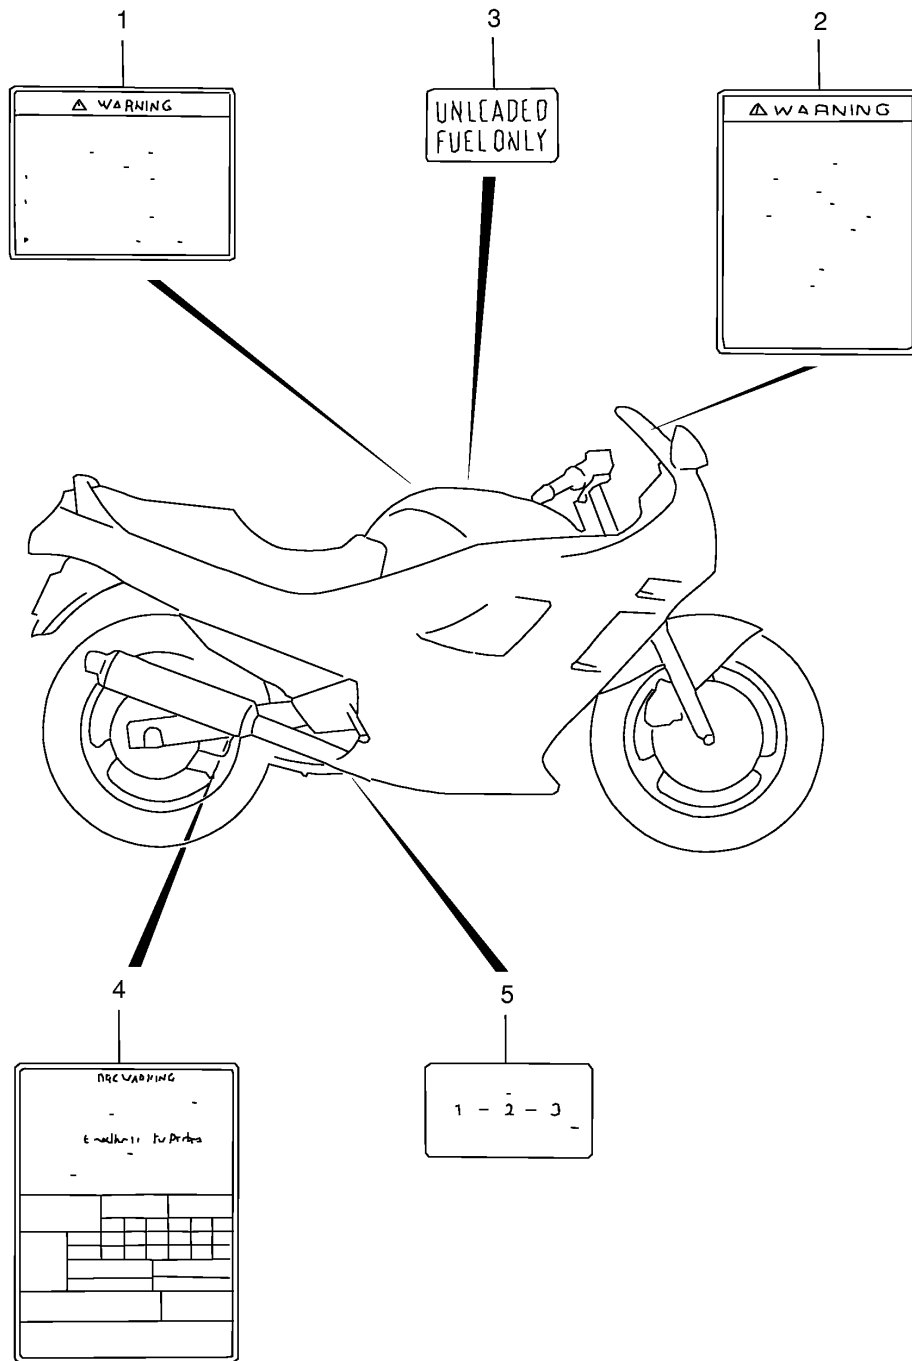 


Ref No	Part No	Description
1	68319-33E30	Label, Warning Safety (french)
1	68319-33E20	Label, Warning Safety (german)
1	68319-33E00	Label, Warning Safety (english)
1	68319-33E40	Label, Warning Safety (italian)
1	68319-33E50	Label, Warning Safety (spanish)
1	68319-33E70	Label, Warning Safety (dutch)
1	68319-33E80	Label, Warning Safety (potuguese)
2	68612-48B10	Label, Warning Screen
2	68612-48B20	Label, Warning Screen
2	68612-48B00	Label, Warning Screen
3	86932-73060	Label, Fuel Caution
4	68332-20C30	Label, Tire Air
4	68332-20C10	Label, Tire Air
5	68341-20C00	Label, Rear Shock
6	99011-20C58-042	Manual, Owner's

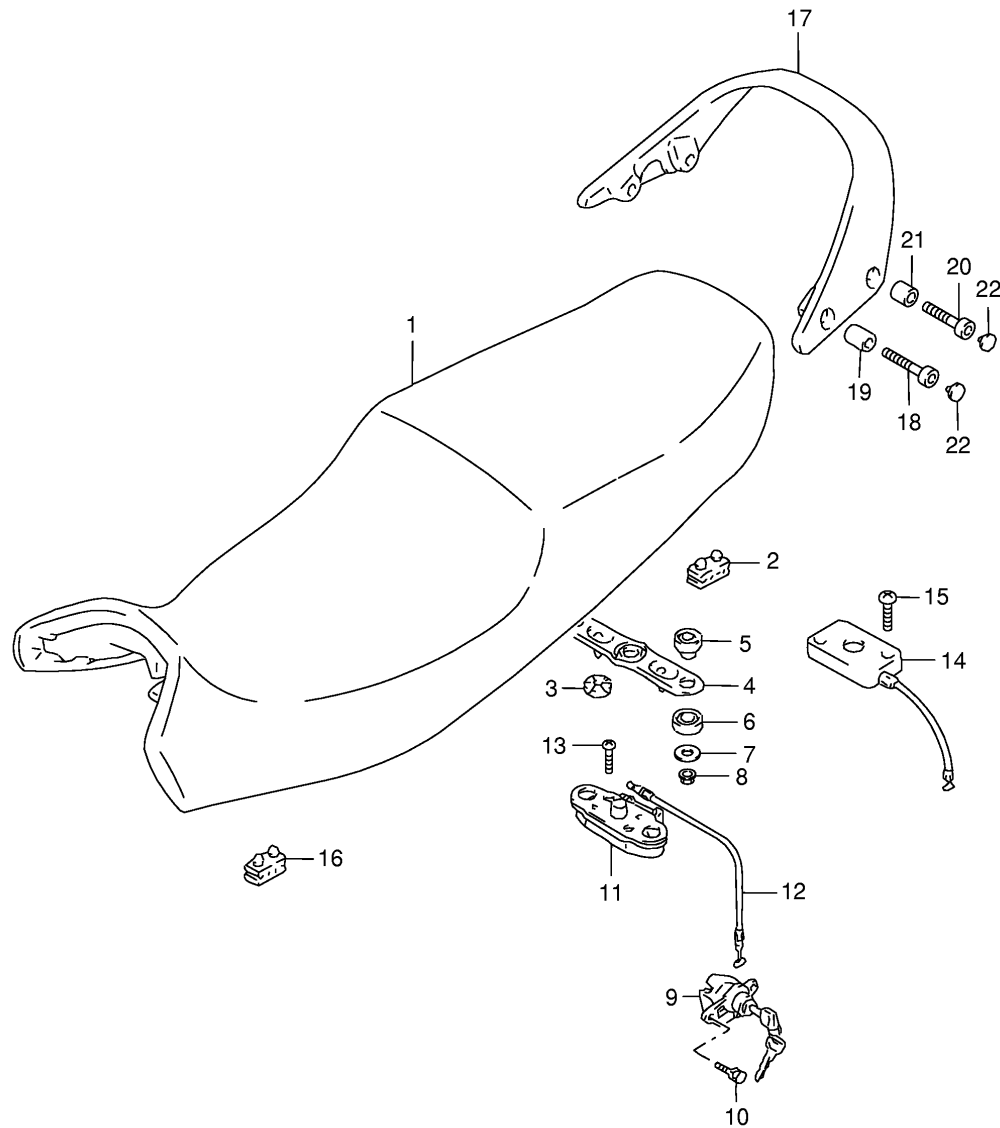 


Ref No	Part No	Description
1	45100-20C21-58R	Seat Set (black)
2	45149-31300	. Cushion
3	45213-13601	. Cushion, Boss
4	45210-48B20	. Striker, Seat Lock
5	09320-10038	. Cushion, Striker Upper
6	09320-14017	. Cushion, Striker Lower
7	08212-06201	. Washer
8	08316-20063	. Nut
9	45700-19840	Lock Set, Seat
10	01570-06163	Bolt
11	45220-20A01	Bracket, Seat Support Rear
12	45280-20C00	Cable, Seat Lock
13	02122-06303	Screw
14	45220-06C00	Bracket, Seat Support Rear
15	02122-06203	Screw
16	45149-31300	Cushion, Seat Front
17	46211-20C00-019	Handle, Pillion Rider (black)
18	07130-08403	Bolt, Front (8x40)
19	09180-08111	Spacer, Front (8.1x16x17)
20	07130-08303	Bolt, Rear (8x30)
21	09180-10144	Spacer, Rear (10.2x16x12)
22	09250-06004	Cap




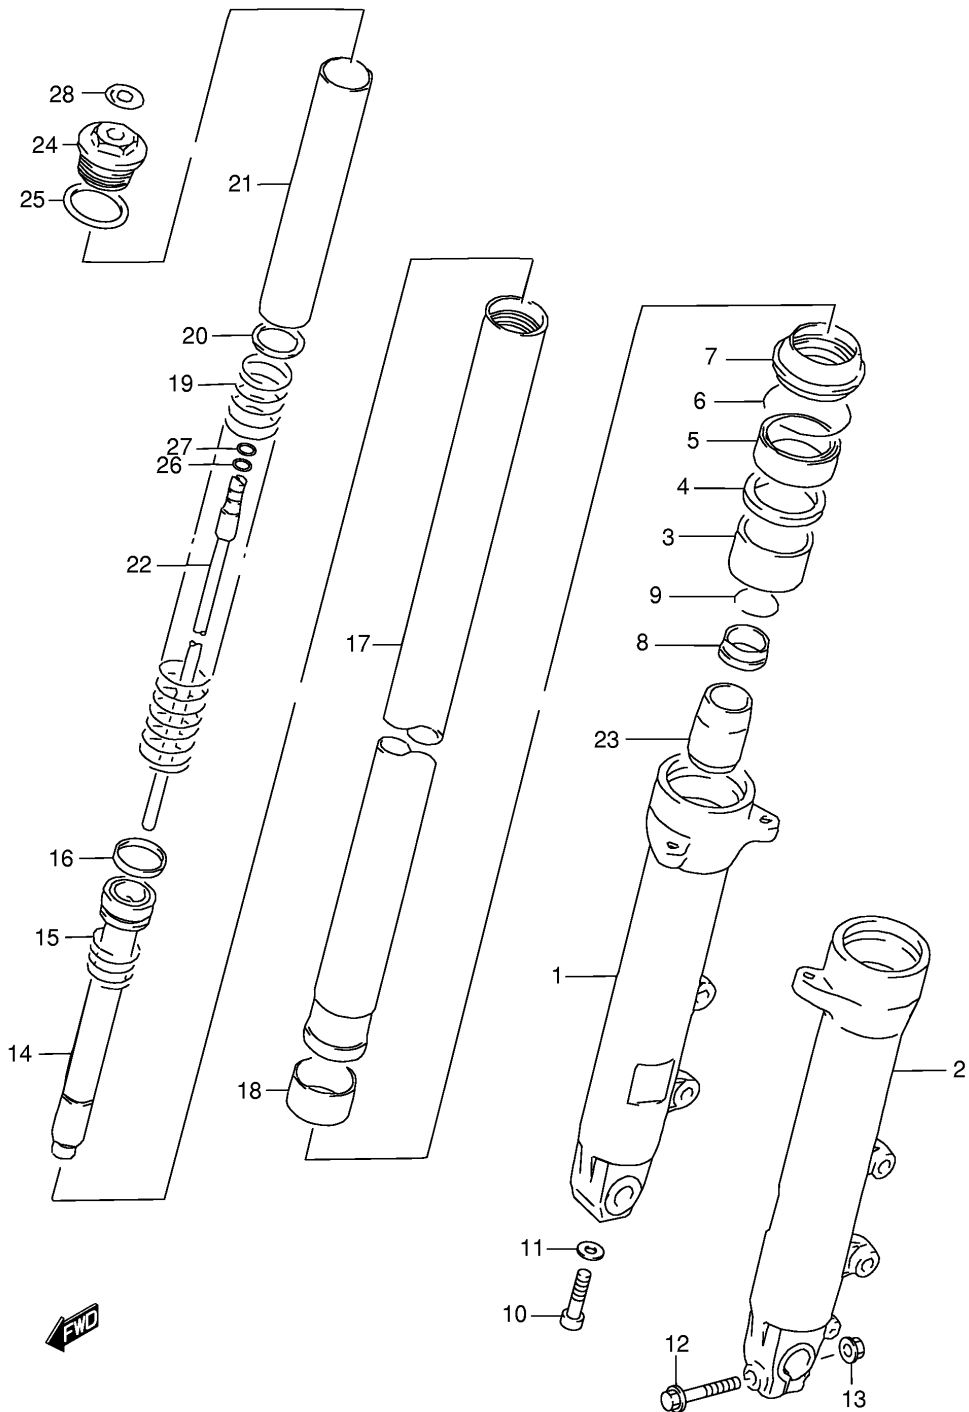 

Ref No	Part No	Description
	51103-20C30	Damper Assy, Front Fork Rh
	51104-20C30	Damper Assy, Front Fork Lh
	51103-20C20-13L	Damper Assy, Front Fork Rh (silver)
	51104-20C20-13L	Damper Assy, Front Fork Lh (silver)
1	51130-20C20-13L	. Tube, Outer Rh (silver)
2	51140-20C20-13L	. Tube, Outer Lh (silver)
3	51152-48B31	. Bush, Guide
4	51168-38B00	. Spacer, Seal
5	51153-08D00	. Oil Seal
6	51556-38B00	. Ring, Stopper
7	51571-47D50	. Dust Seal
8	51197-20C10	. Valve, Oil Lock Piece
9	52277-20C10	. Ring, Stopper
10	51147-48130	. Bolt, Lower
11	51148-36011	. Gasket
12	01550-08507	. Bolt, Lh
13	08316-10087	. Nut, Lh
14	51194-20C20	. Pipe, Seat Under
15	51177-48B31	. Spring, Rebound
16	51196-19C00	. Ring, Piston
17	51110-20C20	. Tube, Inner
18	51121-48B31	. Bush, Slide
19	51171-20C20	. Spring, Main
20	51192-19C00	. Joint, Spring
21	51176-34C00	. Spacer, Spring
22	52111-20C20	. Rod, Inner
23	51195-20C30	. Piece, Oil Lock
23	51195-48B31	. Piece, Oil Lock
24	51351-20C20	. Bolt, Fork
25	51117-12C00	. O Ring
26	09280-06005	. O Ring
27	51169-20C20	. Ring, Stopper
28	51149-20C20	. Lable

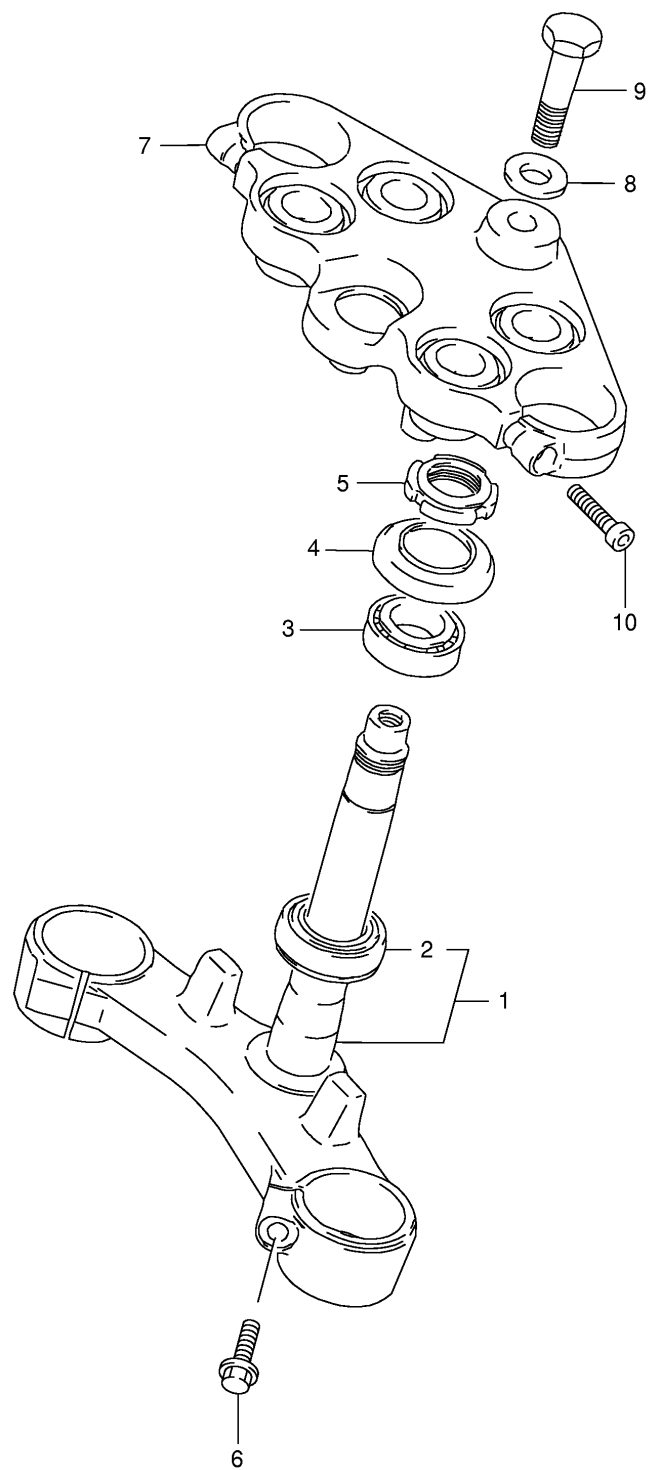 


Ref No	Part No	Description
1	51410-19C20	Stem, Steering
2	09265-30009	• . Bearing
3	09265-25019	Bearing, Upper
4	51643-49002	Dust Seal
5	51631-28000	Nut, Steering Stem
6	01550-10403	Bolt, Lower
7	51311-20C00	Head, Steering Stem
8	51356-43530	Washer
9	51352-20C00	Bolt, Upper
10	07130-08303	Bolt, Upper Side

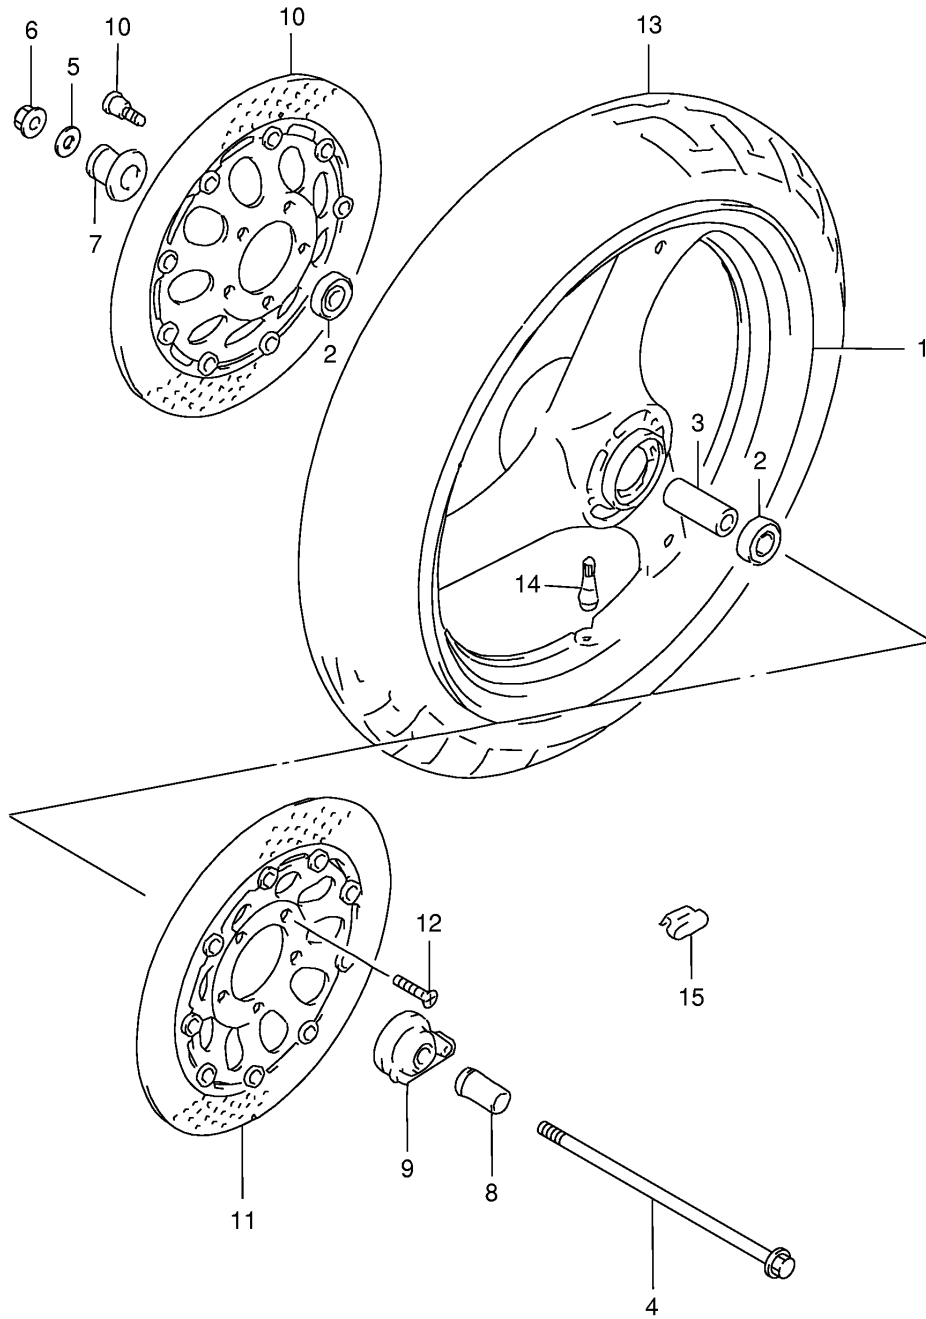 


Ref No	Part No	Description	
1	54111-34C00-12R	Wheel, Front (mt3.00x17)	(silver)
2	08123-63027	Bearing	
3	09180-15011	Spacer (15.3x21.7x63)	
4	54711-19C00	Axle, Front	
5	08322-01127	Washer	
6	09159-12028	Nut	
7	54740-33410	Spacer, Bearing Rh	
8	54741-19C00	Spacer, Axle Lh	
9	54600-30B02	Box Assy, Speedometer Gear	
10	59210-32C31	Disc, Front Brake Rh	(silver/black)
11	59220-32C31	Disc, Front Brake Lh	(silver/black)
12	09106-08125	Bolt (8x33)	
13	55110-20CB0	Tire, Front (110/80v17 V250)	(metzeler)
14	43130-24A11	Valve Assy, Wheel Rim Tr412	
15	55411-00A00	Balancer (10g)	
15	55412-00A01	Balancer (20g)	



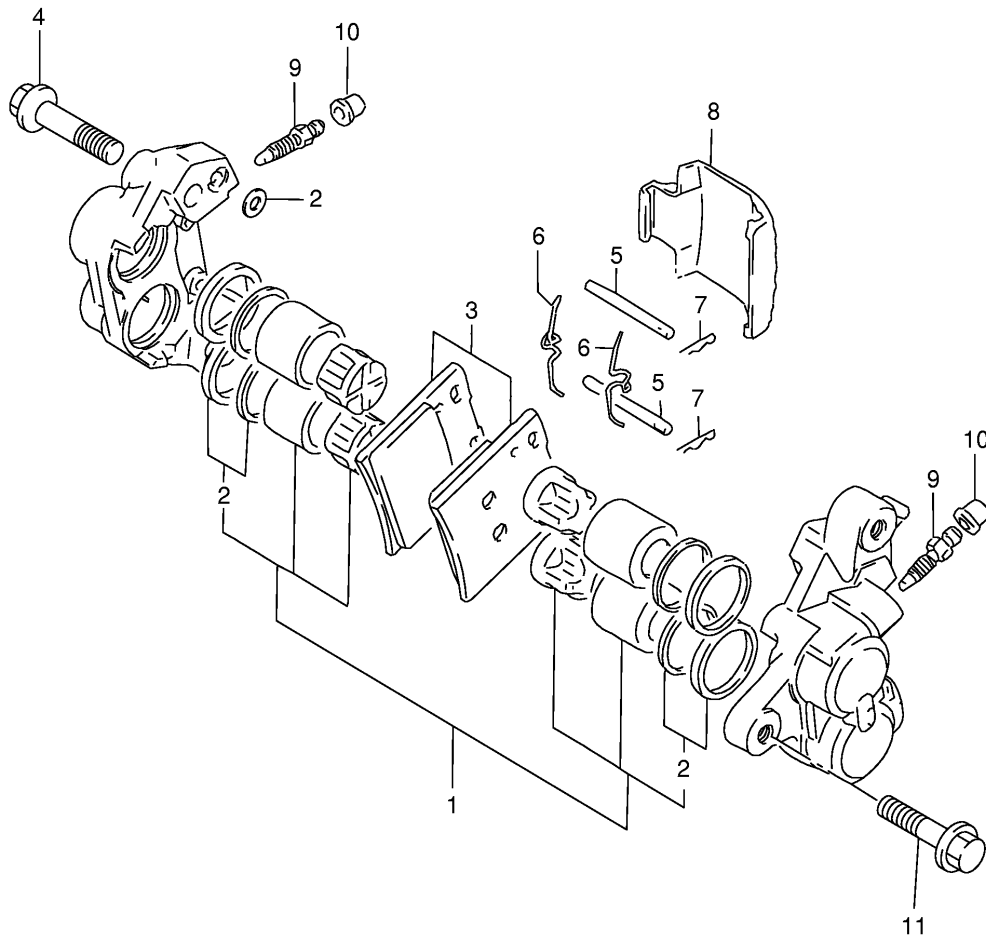 


Ref No	Part No	Description
	59100-20C02	Caliper Assy, Front Rh
	59300-20C02	Caliper Assy, Front Lh
1	59100-19841	• . Piston Set
2	59100-19830	• . Seal Set, Piston
3	59100-20820	• . Pad Set
4	59145-16700	• . Bolt
5	69141-45000	• . Pin
6	69143-45001	• . Spring
7	69142-45000	• . Clip
8	59151-04A01	• . Cover
9	59121-18410	• . Bleeder
10	55156-66310	• . Cap
11	01550-08353	Bolt



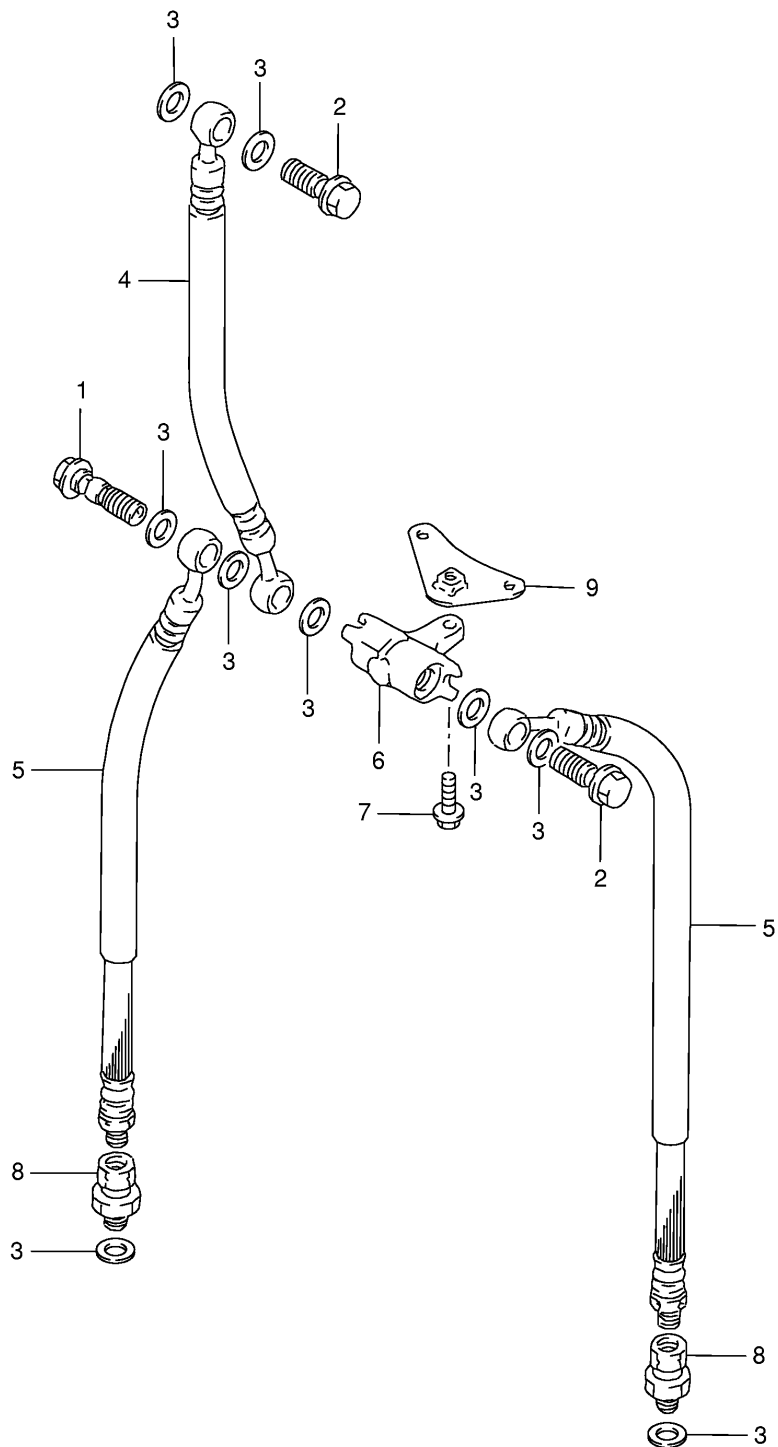 


Ref No	Part No	Description
1	09360-10043	Bolt (10x1.00x36)
2	09360-10041	Bolt (10x1.00x22)
3	09161-10009	Washer (10x15x1.5)
4	59480-20C01	Hose, Front Brake No.1
5	59240-19C10	Hose, Front Brake No.2
6	59491-45001	Joint, Brake Hose
7	01550-06203	Bolt
8	59290-43500	Adaptor, Brake Hose
9	59390-19C00	Plate, Joint

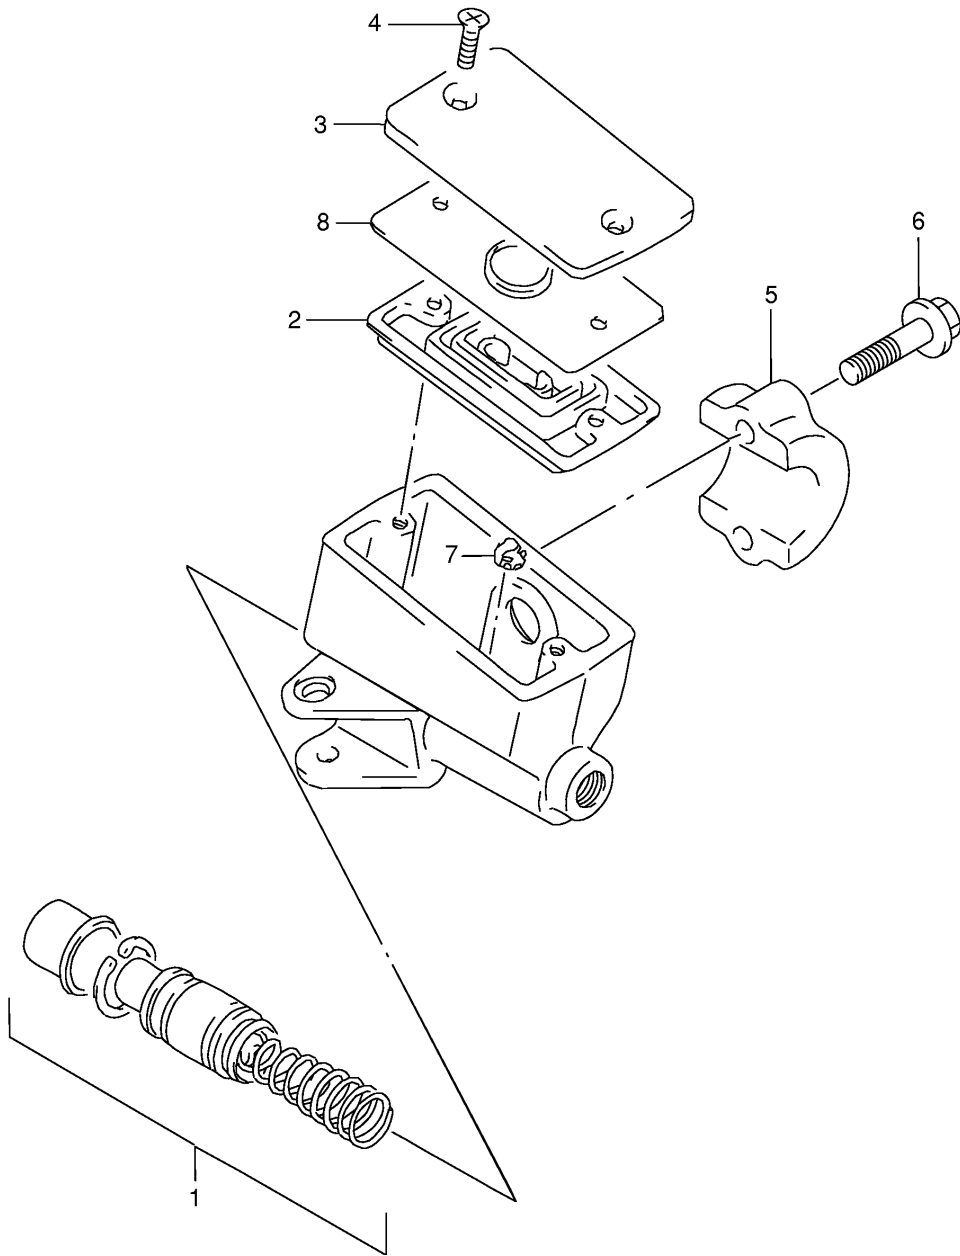 


Ref No	Part No	Description
	59600-20C10	Cylinder Assy, Front Master
1	59600-45850	• . Piston/cup Set
2	59667-49460	• . Diaphragm
3	59669-41C00	• . Cap
4	69689-49300	• . Screw
5	59671-19B00	• . Holder
6	59675-19C00	• . Bolt, Holder
7	59664-48B00	• . Protector
8	59668-41C00	• . Plate



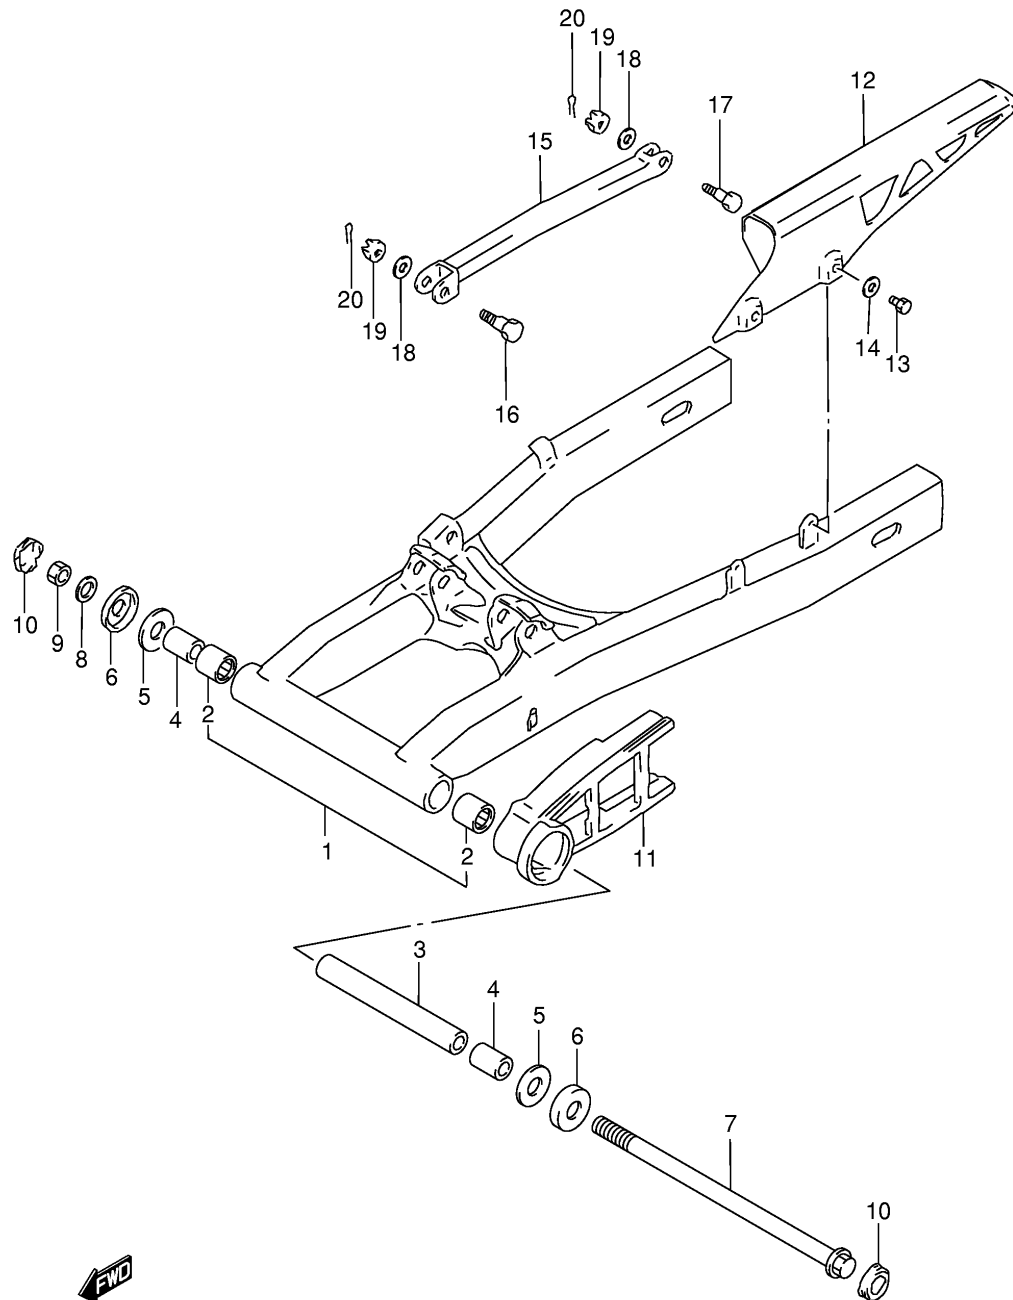 


Ref No	Part No	Description
1	61000-20C02-13L	Swinging Arm Assy, Rear (silver)
2	09263-22017	• . Bearing
3	61282-20C00	Spacer, Center
4	61251-38B00	Spacer, Pivot Bearing
5	08211-16341	Washer
6	61262-32410	Dust Seal, Pivot Shaft
7	61211-20C00	Shaft, Swinging Arm Pivot
8	09160-14015	Washer
9	09159-14019	Nut
10	61222-43400	Cap, Swinging Arm Pivot
11	61273-20C00	Buffer, Chain Touch Defense
12	61310-27A01	Case, Chain
13	02142-06123	Screw
14	09169-06026	Washer
15	64310-20C00-019	Torque Link, Rear (black)
16	09111-10016	Bolt, Front (10x41)
17	09101-10036	Bolt, Rear (10x35)
18	09160-10069	Washer
19	08314-40103	Nut
20	04111-20208	Pin, Cotter




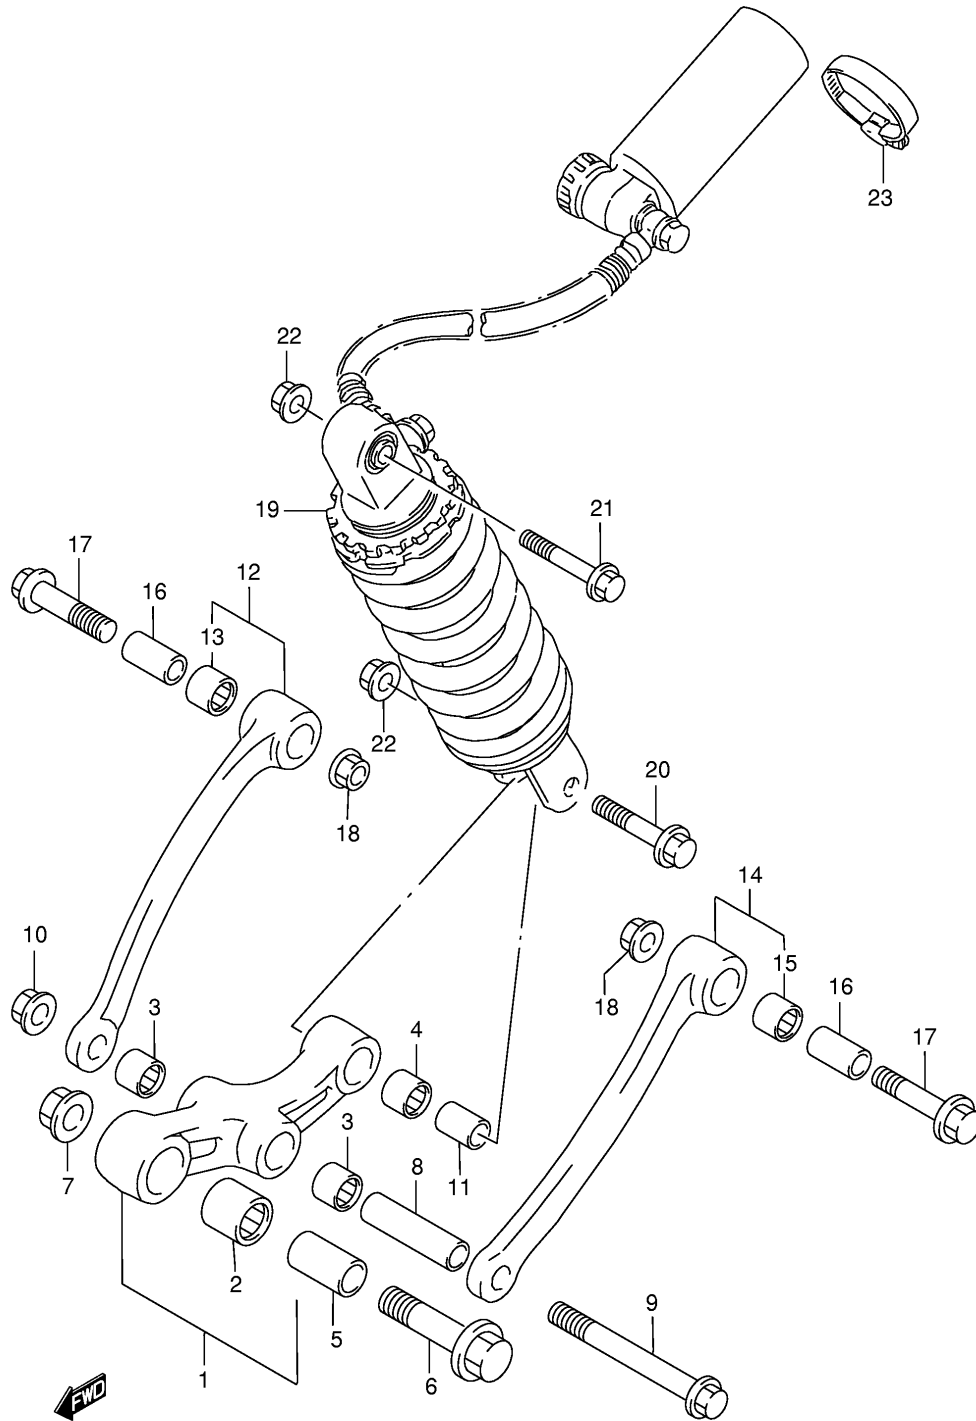 

Ref No	Part No	Description
1	62600-19830	Lever Set, Rear Cushion
2	09263-20070	• . Bearing, Front
3	09263-17037	• . Bearing
4	09263-17034	• . Bearing, Rear
5	09180-14014	Spacer, Front (14x20x34)
6	09103-14012	Bolt, Front (14x62)
7	08319-31145	Nut
8	09180-12121	Spacer, Center (12x17x60)
9	09103-12034	Bolt, Center (12x96)
10	08319-31125	Nut
11	62684-40A10	Spacer, Rear
12	62601-20810	Rod Set, Rear Cushion,rh
13	09263-17034	• . Bearing
14	62601-20820	Rod Set, Rear Cushion,lh
15	09263-17034	• . Bearing
16	09180-12120	Spacer, Rod (12x17x29)
17	09103-12035	Bolt (12x52)
18	08319-31125	Nut
19	62100-20C13	Absorber Assy, Rear Shock
20	09103-10101	Bolt, Lower (10x54)
21	09103-10213	Bolt, Upper (10x52)
22	08319-31105	Nut
23	09402-50511	Clamp

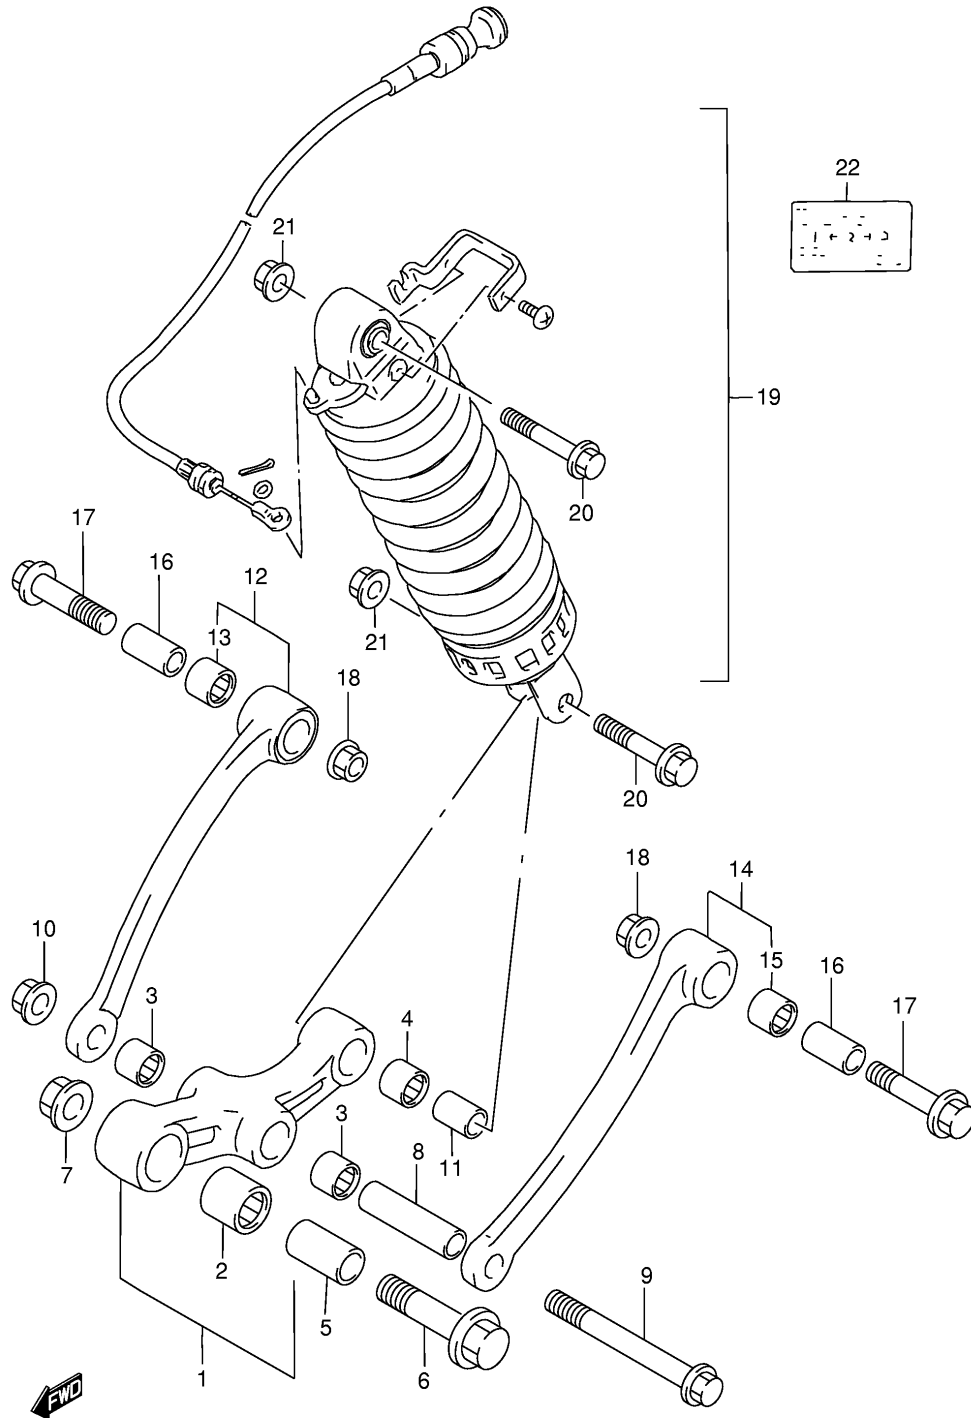 


Ref No	Part No	Description
1	62600-19830	Lever Set, Rear Cushion
2	09263-20070	• . Bearing, Front
3	09263-17037	• . Bearing
4	09263-17034	• . Bearing, Rear
5	09180-14014	Spacer, Front (14x20x34)
6	09103-14012	Bolt, Front (14x62)
7	08319-31145	Nut
8	09180-12121	Spacer, Center (12x17x60)
9	09103-12034	Bolt, Center (12x96)
10	08319-31125	Nut
11	62684-40A10	Spacer, Rear
12	62601-20810	Rod Set, Rear Cushion,rh
13	09263-17034	• . Bearing
14	62601-20820	Rod Set, Rear Cushion,lh
15	09263-17034	• . Bearing
16	09180-12120	Spacer, Rod (12x17x29)
17	09103-12035	Bolt (12x52)
18	08319-31125	Nut
19	62100-20C02	Absorber Assy, Rear Shock
20	09103-10197	Bolt (10x52)
21	08319-31105	Nut
22	68341-20C00	Label, Damping Adjuster

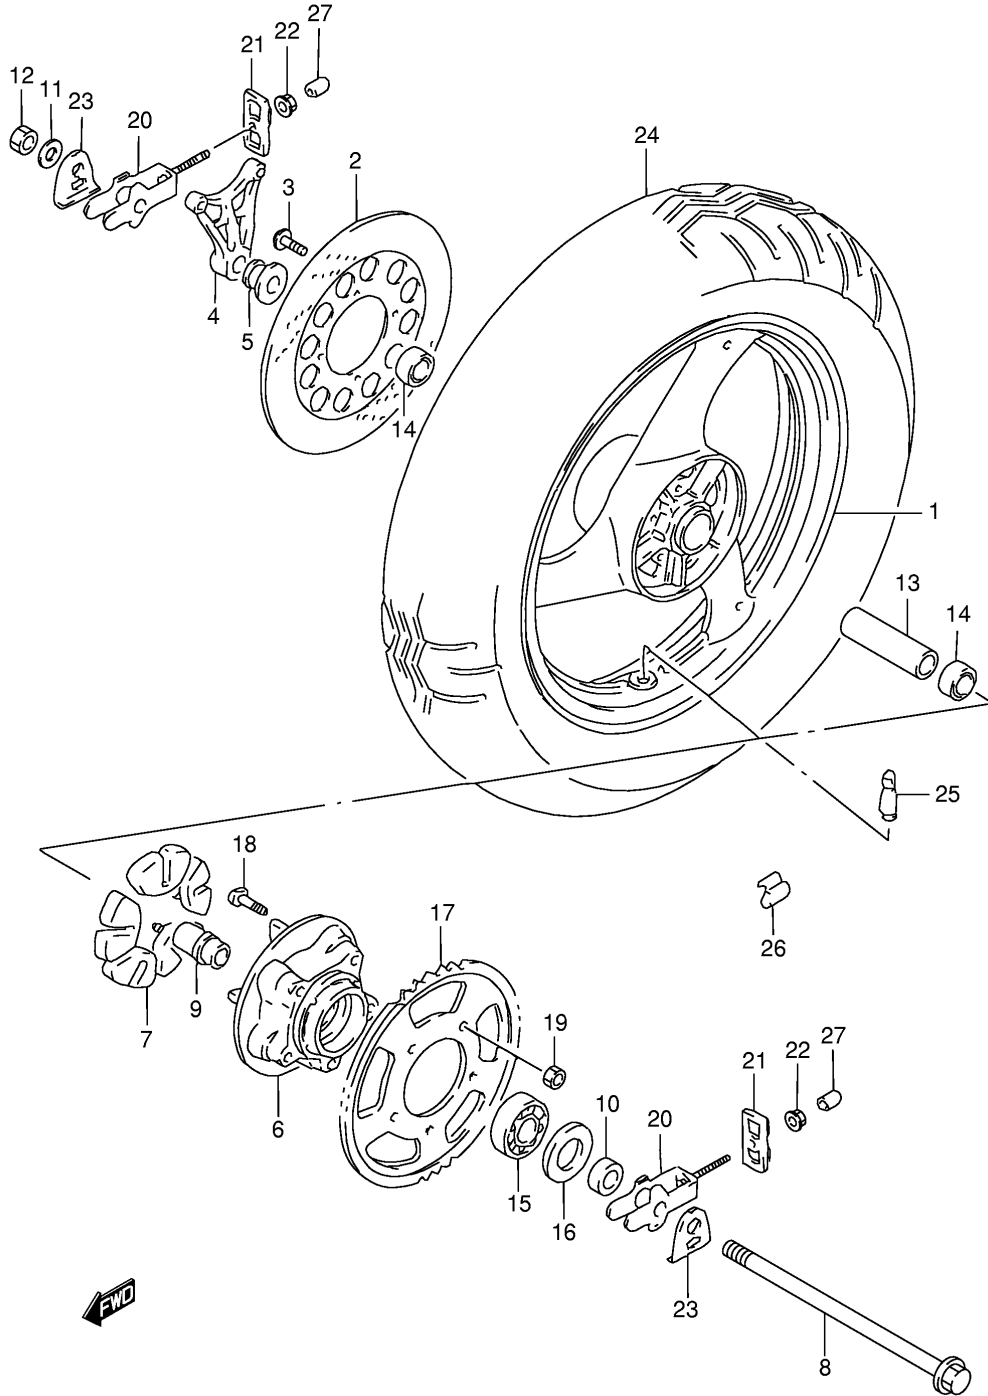 


Ref No	Part No	Description
1	64111-34C00-12R	Wheel, Rear (mt3.50x17) Silver
2	69211-01D00	Disc, Rear Brake
3	09106-08131	Bolt
4	69721-43400	Bracket, Caliper
5	64740-19C00	Spacer, Rear Axle,rh
6	64611-17C01	Drum, Rear Sprocket
7	64651-27A01	Absorber, Rear Hub Shock
8	64711-19C00	Axle, Rear
9	64733-34C00	Retainer, Drum
10	64751-34C00	Spacer, Rear Axle,lh
11	09160-17013	Washer
12	08319-21168	Nut
13	09180-17067	Spacer, Bearing (17.5x25x88)
14	08143-63037	Bearing
15	09262-25073	Bearing (25x62x17)
16	09285-35001	Oil Seal (35x62x8)
17	64511-20C11	Sprocket, Rear (nt:47)
18	09119-10037	Bolt
19	08319-31107	Nut
20	61410-20C02	Adjuster, Chain
21	61421-20C01	Plate, Guide (white)
22	08319-31087	Nut
23	61445-20C01	Washer, Chain Adjuster
24	65110-20CB0	Tire, Rear (150/70vb17 V250)
25	43130-24A11	Valve Assy, Wheel Rim Tr412
26	55411-00A00	Balancer (10g)
26	55412-00A01	Balancer (20g)
27	61442-33300	Cap

 Metzeler

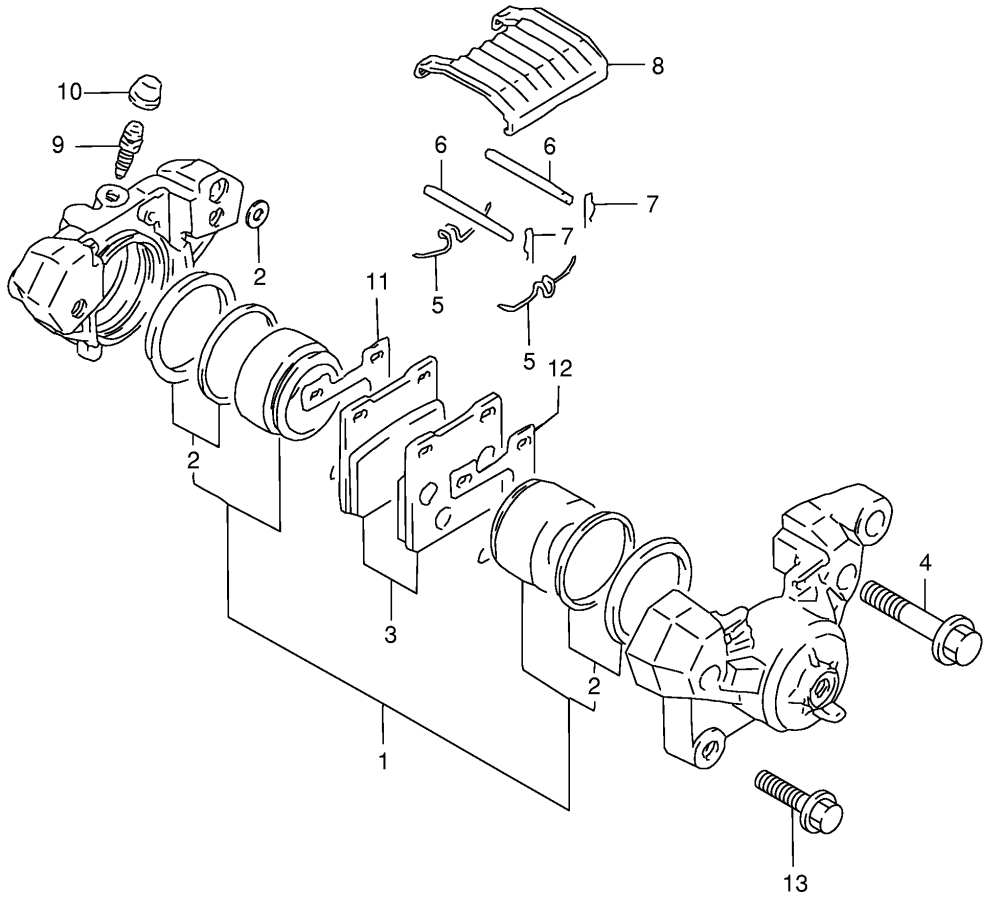

Ref No	Part No	Description
	69100-01D03	Caliper Assy, Rear
1	69100-32810	• Piston Set
2	69100-32820	• Seal Set, Piston
3	69100-20810	• Pad Set
4	59145-16700	• Bolt
5	59143-16700	• Spring
6	69141-45000	• Pin
7	69142-45000	• Clip
8	59151-16701	• Cover
9	59121-18410	• Bleeder
10	55156-66310	• Cap
11	59371-20C00	• Shim, Inner
12	59381-20C00	• Shim, Outer
13	01550-08303	Bolt

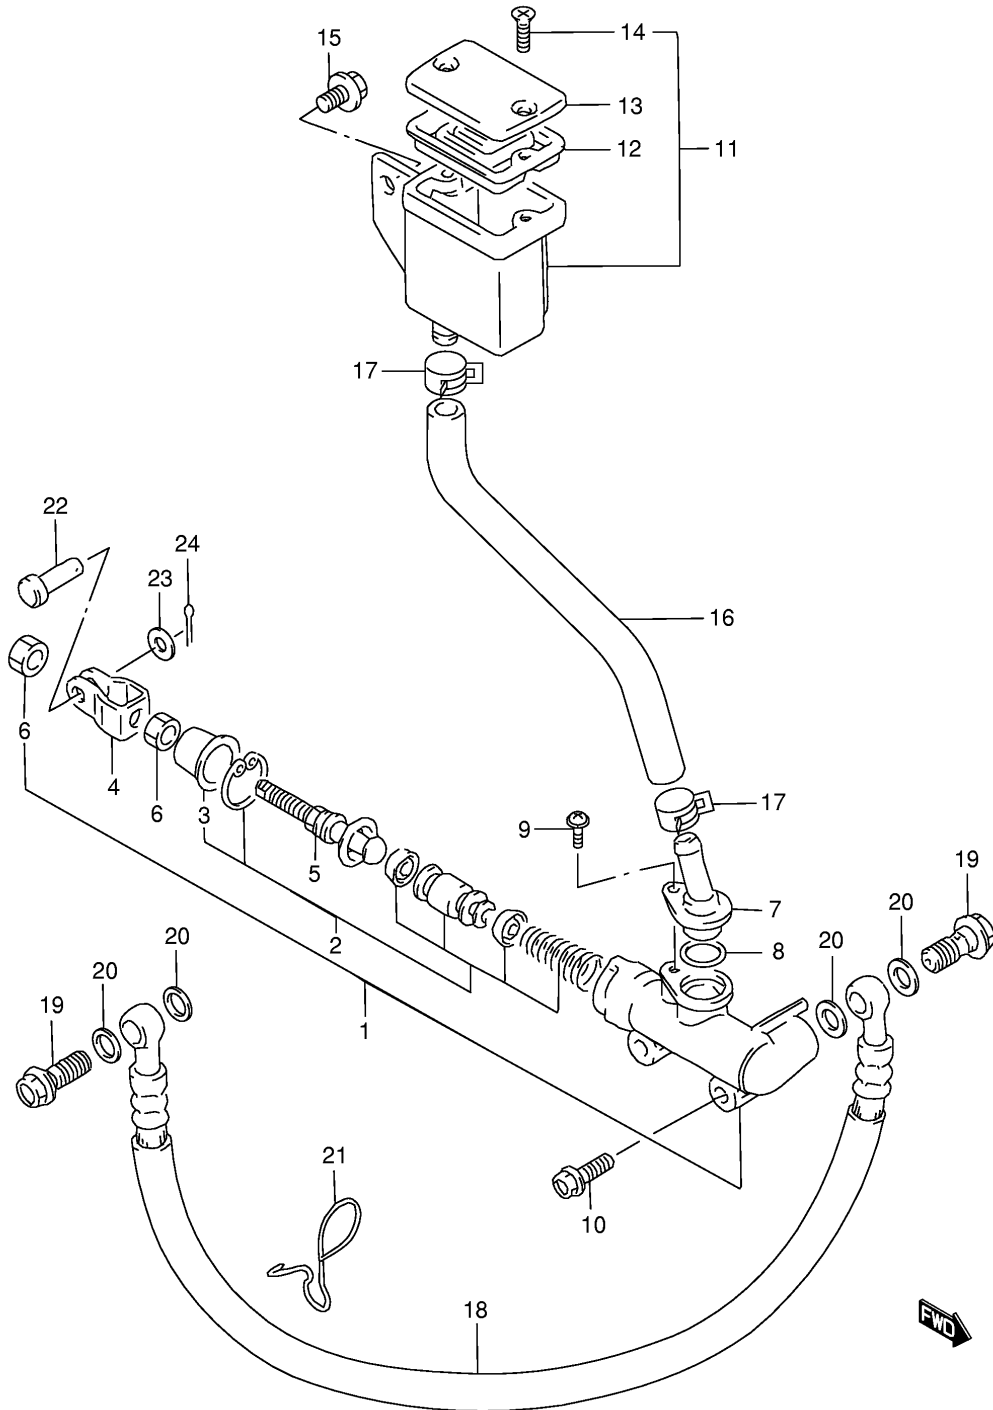 

Ref No	Part No	Description
1	69600-19C00	Cylinder Assy, Rear Master
2	69600-04820	• . Piston / Cap Set
3	69691-00A00	•• .. Boot
4	69692-19A00	• . Yoke
5	69670-19C00	• . Rod, Push
6	69693-05A00	• . Nut
7	69672-20A00	• . Connector
8	69686-34200	• . O Ring
9	02112-74123	• . Screw
10	07130-06163	Bolt
11	69740-24A01	Tank Assy, Rear Reservoir
12	59667-04700	• . Diaphragm
13	59669-05D00	• . Cap
14	69689-04A00	• . Screw
15	01550-06123	Bolt
16	69731-20C00	Hose, Reservoir
17	09401-13413	Clamp
18	69480-20C10	Hose, Rear Brake
19	09360-10041	Bolt (10x1.00x22)
20	09161-10009	Washer (10x15x1.5)
21	69243-19C00	Guide, Brake Hose
22	09200-06037	Pin
23	08322-01063	Washer
24	04111-20158	Cotter Pin