



**FIG.1**

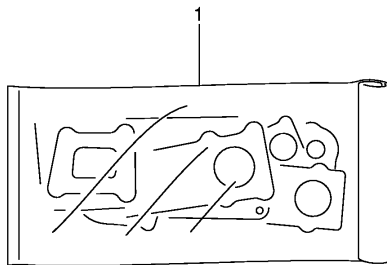


Ref No	Part No	Description
1	11400-15880	Gasket Set
2	11141-15H00	. Gasket, Cylinder Head
3	11173-24F00	. Gasket, Cylinder Head Cover No.1
4	11178-15H00	. Gasket, Cylinder Head Cover No.2
5	11241-15H00	. Gasket, Cylinder
6	11482-24F00	. Gasket, Clutch Cover (na)
7	11483-24F00	. Gasket, Magneto Cover
8	11485-24F00	. Gasket, Gear Shift Cover (na)
9	11489-24F01	. Gasket, Oil Pan
10	11491-24F01	. Gasket, Starter Clutch Cover
11	11492-24F00	. Gasket, Start Idle Gear Cap
12	12837-02H00	. Gasket, Tensioner Adjuster
13	14181-22D01	. Gasket, Exhaust Pipe
14	11191-27E00	. Washer

**FIG.2**

Ref No	Part No	Description
1	11170-15H00	Cover, Cylinder Head
2	11173-24F00	Gasket, Head Cover No.1
3	11178-15H00	Gasket, Head Cover No.2
4	09106-07021	Bolt (7x17.5)
5	11191-27E00	Washer

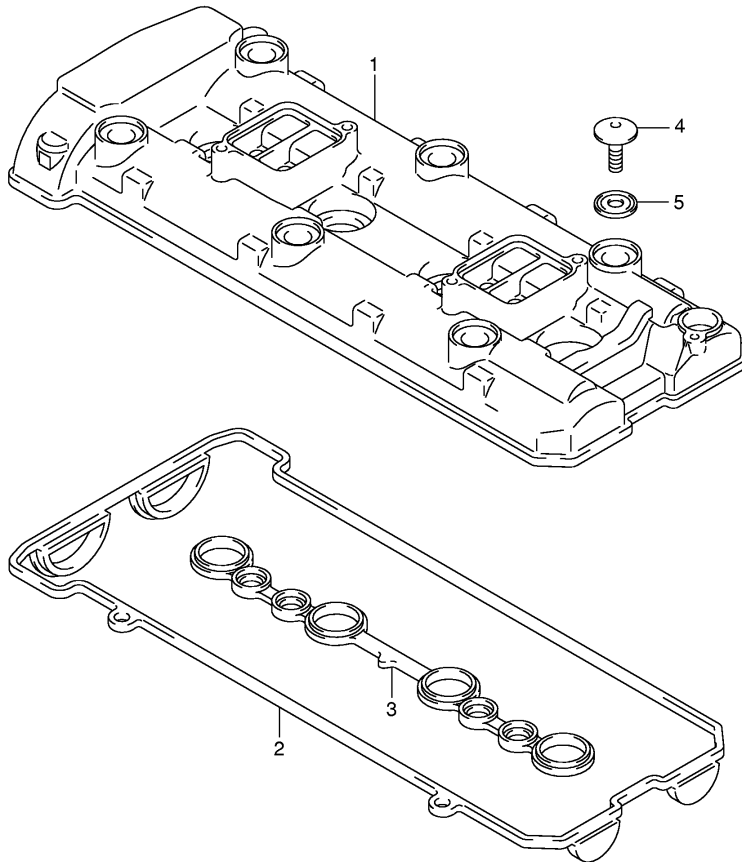


**FIG.3**

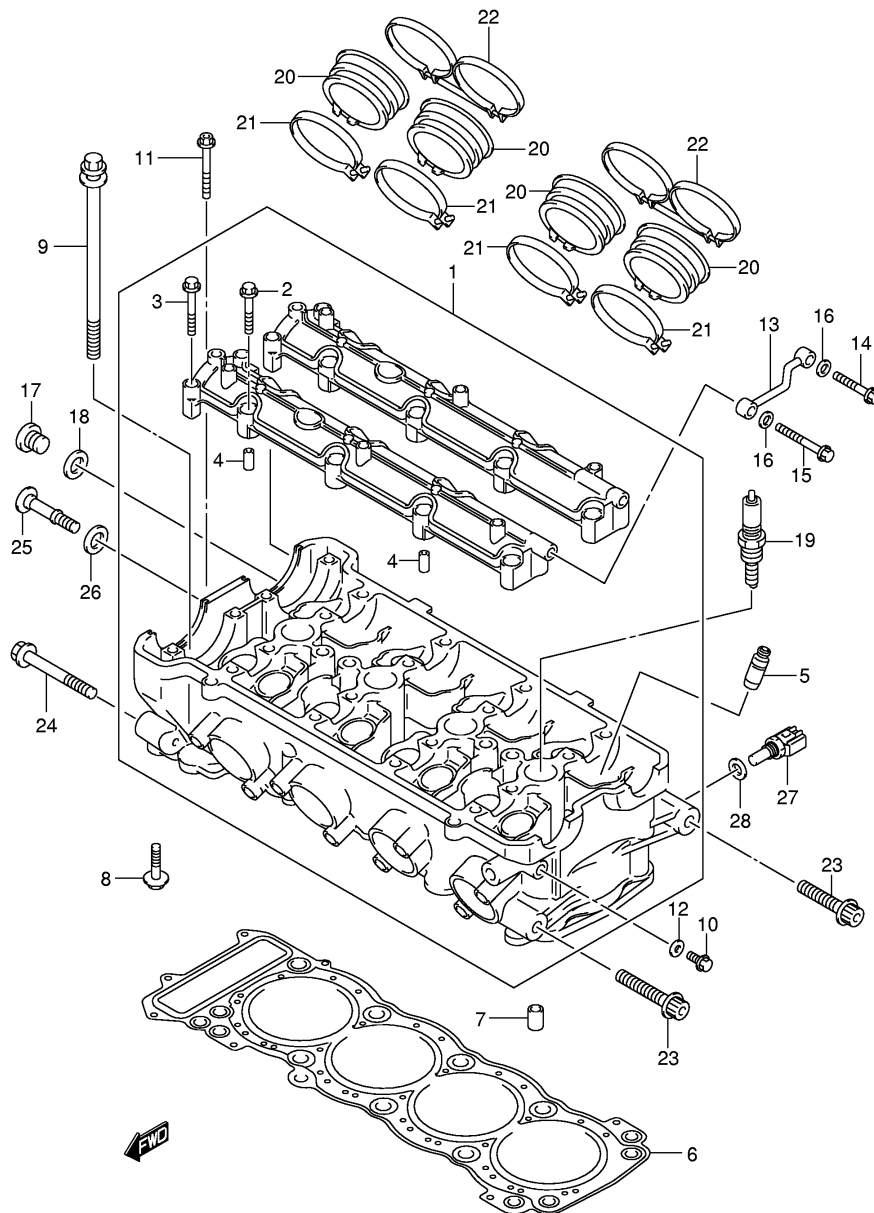

Ref No	Part No	Description
1	11100-15H00	Head Assy, Cylinder
2	09103-06026	• Bolt (6x39)
3	09103-06165	• Bolt (6x45)
4	09206-08007	• Pin
5	11115-15H70	Guide, Valve (os:0.3)
6	11141-15H00	Gasket, Cylinder Head
7	04211-11169	Pin
8	01550-0630B	Bolt
9	11117-15H00	Bolt
10	09103-06222	Bolt, Oil Gallery
11	07120-0655B	Bolt, Cylinder Head
12	09168-06023	Gasket
13	11131-33E00	Pipe, Oil
14	01550-0635B	Bolt (6x35)
15	01550-0645B	Bolt (6x45)
16	08322-0106B	Washer
17	09248-16012	Plug
18	09168-16009	Gasket
19	09482-00558	Spark Plug (ngk,cr9eia-9)
19	09482-00557	Spark Plug (denso,iu27d)
19	09482-00556	Spark Plug (ngk,cr8eia-9)
19	09482-00560	Spark Plug (ngk,cr10eia-9)
19	09482-00555	Spark Plug (denso,iu24d)
19	09482-00559	Spark Plug (denso,iu31d)
20	13111-15H00	Pipe, Intake No.1
21	09402-60208	Clamp
22	13170-15H10	Clamp
23	09106-10069	Bolt, Eng Mounting (10x45)
24	09106-10084	Bolt, Eng Mounting (10x60)
25	11161-33E00	Bolt, Cyl Head Side Face
26	11191-13E00	Washer
27	13650-49X00	Sensor, Water Temperature
28	09168-12017	Gasket

GSX1300RK8 E03 E28\_003  
 CYLINDER HEAD-C


**FIG.4**

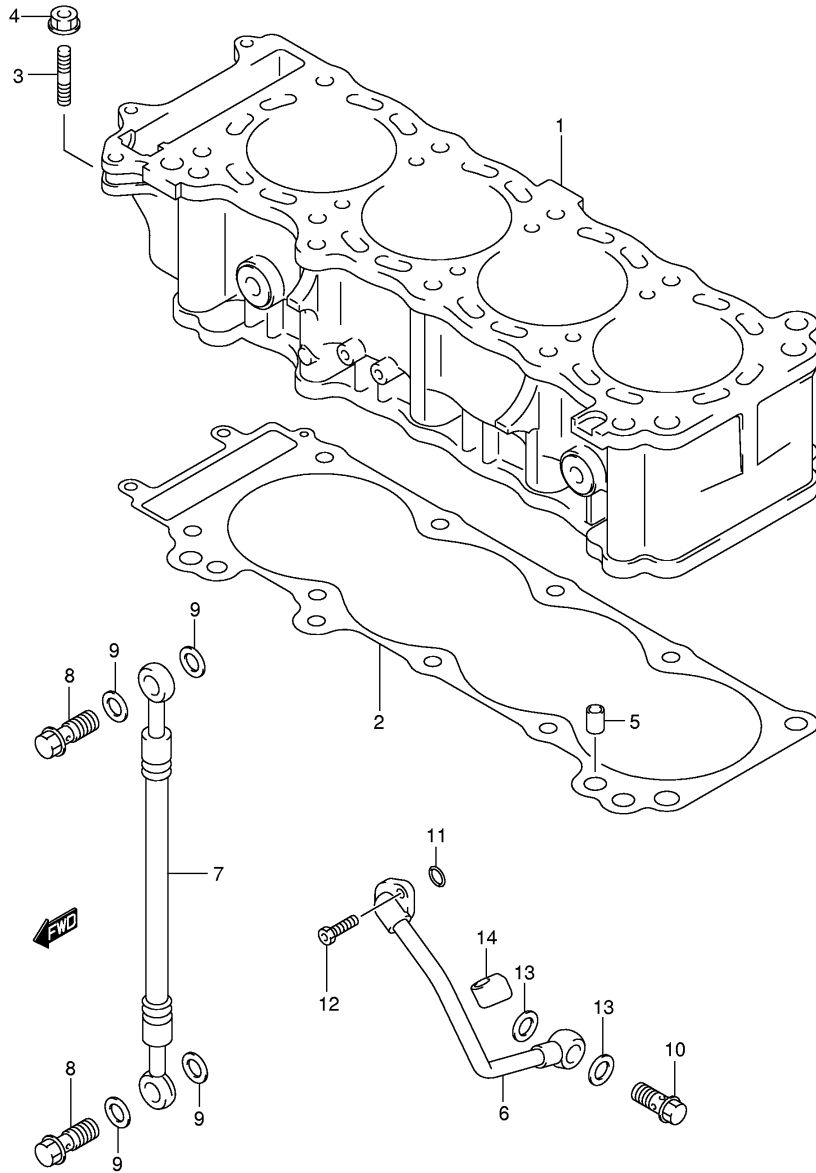

Ref No	Part No	Description
1	11210-15H00-0F0	Cylinder
2	11241-15H00	Gasket
3	01421-0625B	Stud Bolt
4	08316-1006B	Nut
5	04211-11169	Pin
6	11280-24F00	Pipe, Crankcase Oil
7	11282-24F00	Hose, Oil
8	09360-10062	Bolt, Cylinder Head Hose Union
9	09168-10007	Gasket
10	09360-14012	Bolt, Oil Pipe Union
11	09280-12012	O Ring, Oil Pipe
12	09106-06073	Bolt, Oil Pipe (6x16)
13	09168-14015	Gasket, Oil Pipe (14x20x1.5)
14	11283-24F00	Cushion, Crankcase Oil Pipe

GSX1300RK8 E03 E28\_004  
 CYLINDER-C


**FIG.5**

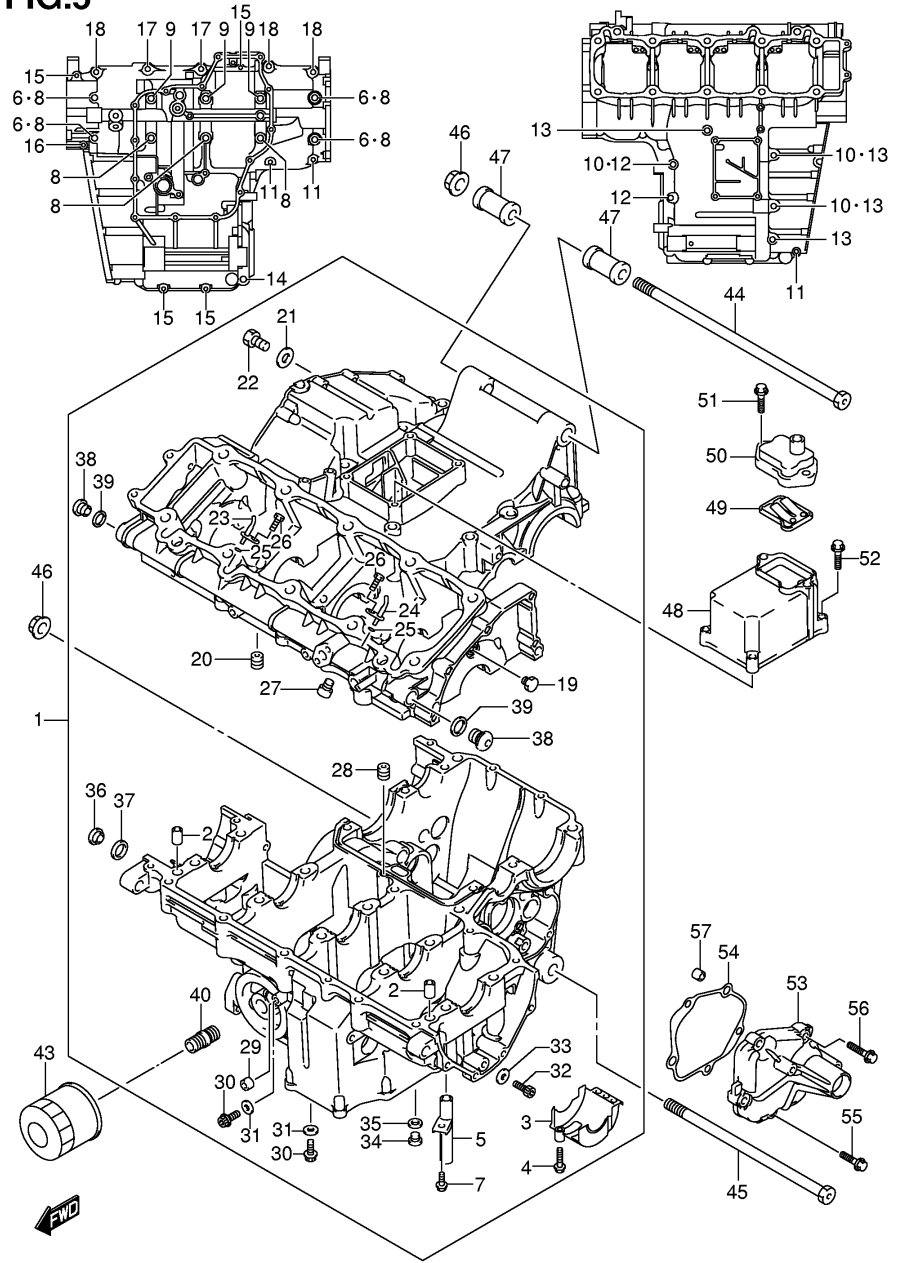

Ref No	Part No	Description
1	11301-24860	Crankcase Set
2	11319-33E50	. Pin
3	11323-24F10	. Separator, Oil
4	01547-0625A	. Bolt
5	11328-24F00	. Union, Breather Oil
6	09168-10031	. Gasket, Crankcase Bolt (10.2x20x2.3)
7	01547-0612A	. Bolt, Breather Union
8	09103-09008	. Bolt (9x95)
9	09103-09010	. Bolt (9x115)
10	09168-08016	. Gasket
11	01547-0650A	. Bolt
12	01550-0865A	. Bolt
13	01550-0880A	. Bolt
14	01550-1060A	. Bolt
15	01547-0640A	. Bolt
16	01547-0660A	. Bolt
17	09103-08155	. Bolt (8x50)
18	09103-08355	. Bolt (8x60)
19	11393-33E01	. Jet, Magneto Cooling
20	09493-20012	. Jet, T/m Cooling
21	09168-06023	. Gasket, T/m Cooling
22	07120-0612B	. Plug, T/m Cooling
23	11390-34E00	. Jet, Piston Cooling Rh
24	11390-34E10	. Jet, Piston Cooling Lh
25	09280-04004	. O Ring
26	09106-06075	. Bolt
27	09106-06076	. Plug, Piston Jet Oil Gallery
28	09493-36006	. Jet, T/m Oil 180
29	11532-46E00	. Jet, Oil Gallery
30	07120-0612B	. Plug, Oil Gallery
31	09168-06023	. Gasket
32	07130-0816B	. Plug, Oil Gallery
33	09168-08016	. Gasket (8.2x14x1)
34	09248-10010	. Plug, Oil Gallery
35	09168-10002	. Gasket (9.9x14x0.3)
36	09248-16012	. Plug, Oil Gallery (16x8)
37	09168-16002	. Gasket (16x22x2)
38	09248-14005	. Plug (14x12)
39	09168-14002	. Gasket (13.8x18.8x0.4)
40	16591-06B01	. Union, Oil Filter Stand
41	12228-24F00-0D0	. Bearing, Crank Thrust (green)
42	12228-24F00-0A0	. Bearing, Crank Thrust (red)
42	12228-24F00-0B0	. Bearing, Crank Thrust (black)
42	12228-24F00-0C0	. Bearing, Crank Thrust (blue)
42	12228-24F00-0D0	. Bearing, Crank Thrust (green)
42	12228-24F00-0E0	. Bearing, Crank Thrust (yellow)
42	12228-24F00-0F0	. Bearing, Crank Thrust (white)
43	16510-03G00-X07	Filter Assy, Engine Oil
44	09103-12066	Bolt (12x320)
45	09103-12067	Bolt (12x240)
46	09159-12054	Nut
47	11611-24F00	Spacer, Engine Mount
48	11331-15H00	Cover, Breather
49	13150-01H00	Valve Assy, Breather Reed

GSX1300RK8 E03 E28\_005  
 CRANKCASE-C


**FIG.5**

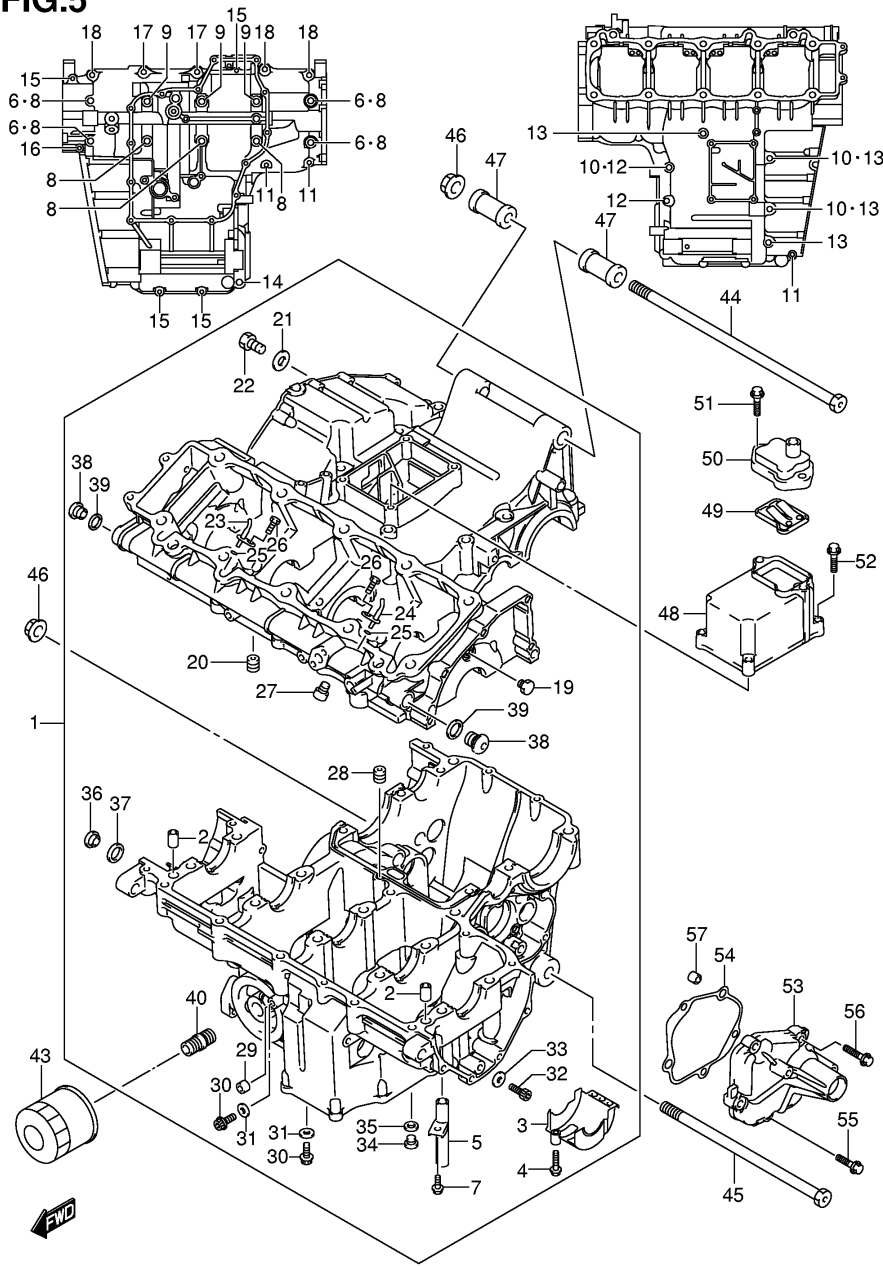

Ref No	Part No	Description
50	11372-21H00	Cover, Reed Valve
51	01547-0620A	Bolt
52	01547-0630A	Bolt
53	11383-15H00	Cover, Gear Shift
54	11485-24F00	Gasket
55	01547-0625A	Bolt
56	01547-0635A	Bolt
57	04211-09149	Pin

GSX1300RK8 E03 E28\_005  
 CRANKCASE-C


**FIG.6**

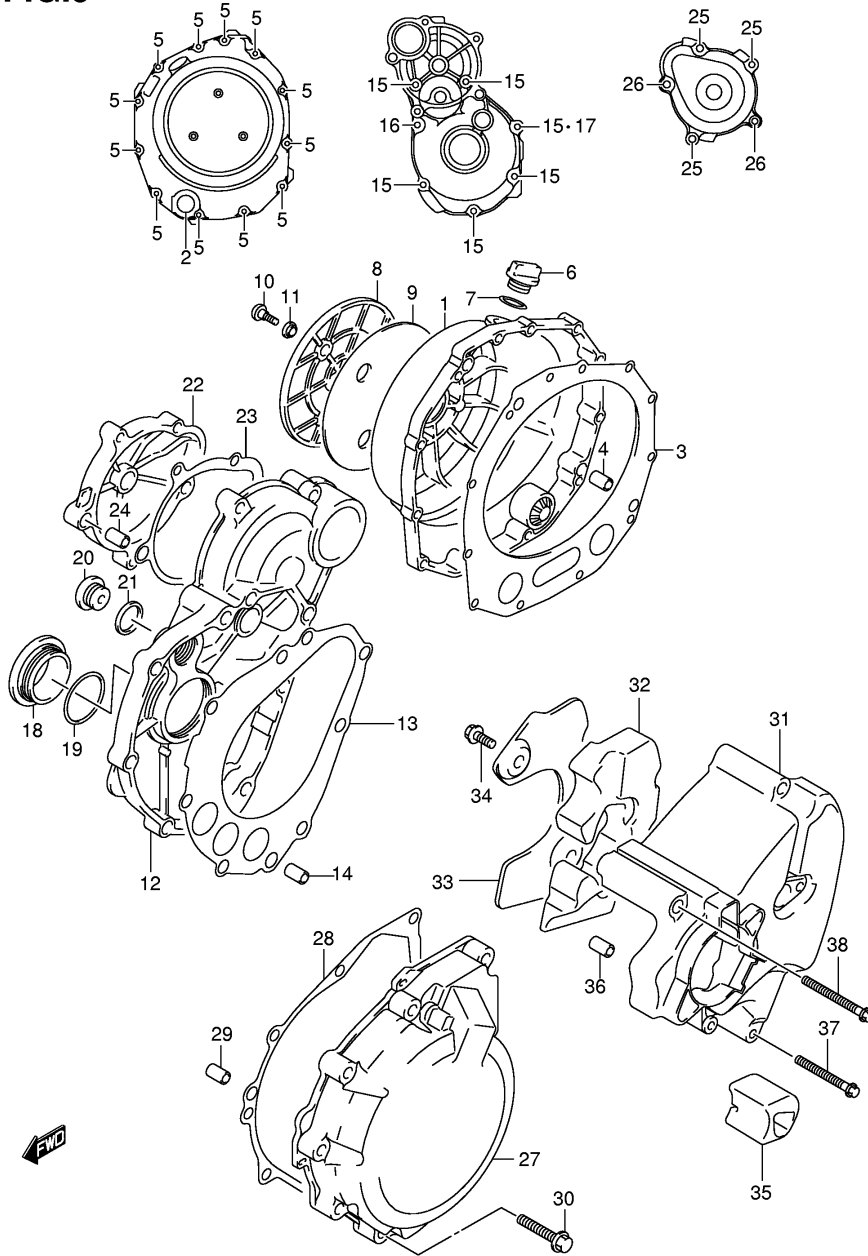

Ref No	Part No	Description
1	11340-24F01	Cover, Clutch
2	11971-33210	• . Lens, Oil Level
3	11482-24F00	Gasket, Clutch Cover
4	04211-09189	Pin
5	09103-06213	Bolt (6x30)
6	11971-25D00	Plug, Engine Oil Filler
7	09280-17003	O Ring (d:3.1,id:16.8)
8	11371-24F00	Cover, Clutch Outer
9	11372-24F00	Cushion, Clutch Outer Cover
10	09139-06107	Screw
11	11373-24F00	Washer, Cl Outer Cover Screw
12	11380-24F20	Cover, Starter Clutch
13	11491-24F01	Gasket, Starter Clutch Cover
14	04211-09149	Pin
15	09103-06212	Bolt (6x25)
16	09103-06214	Bolt (6x35)
17	09168-06023	Gasket
18	09259-36021	Plug, Shaft Hole
19	09280-33004	O Ring (d:3.1,id:32.7)
20	09248-16012	Plug, Tdc (16x8)
21	09168-16002	Gasket
22	11382-24F20	Cap, Starter Idle Gear
23	11492-24F00	Gasket, Starter Idle Gear Cap
24	04211-09149	Pin
25	09103-06212	Bolt (6x25)
26	09103-06214	Bolt (6x35)
27	11351-24F00	Cover, Magneto
28	11483-24F00	Gasket, Magneto Cover
29	04211-09149	Pin
30	09103-06213	Bolt (6x30)
31	11361-15H00	Cover, Engine Sprocket
32	11362-15H00	Damper, Engine Sprocket Cover
33	11363-15H00	Plate, Engine Sprocket Cover
34	09103-06172	Bolt
35	11364-15H00	Protector, Engine Sprkt Cover
36	04211-09149	Pin
37	09103-06216	Bolt (6x55)
38	09103-06239	Bolt (6x65)

GSX1300RK8 E03 E28\_006  
 CRANKCASE COVER-C


**FIG.7**

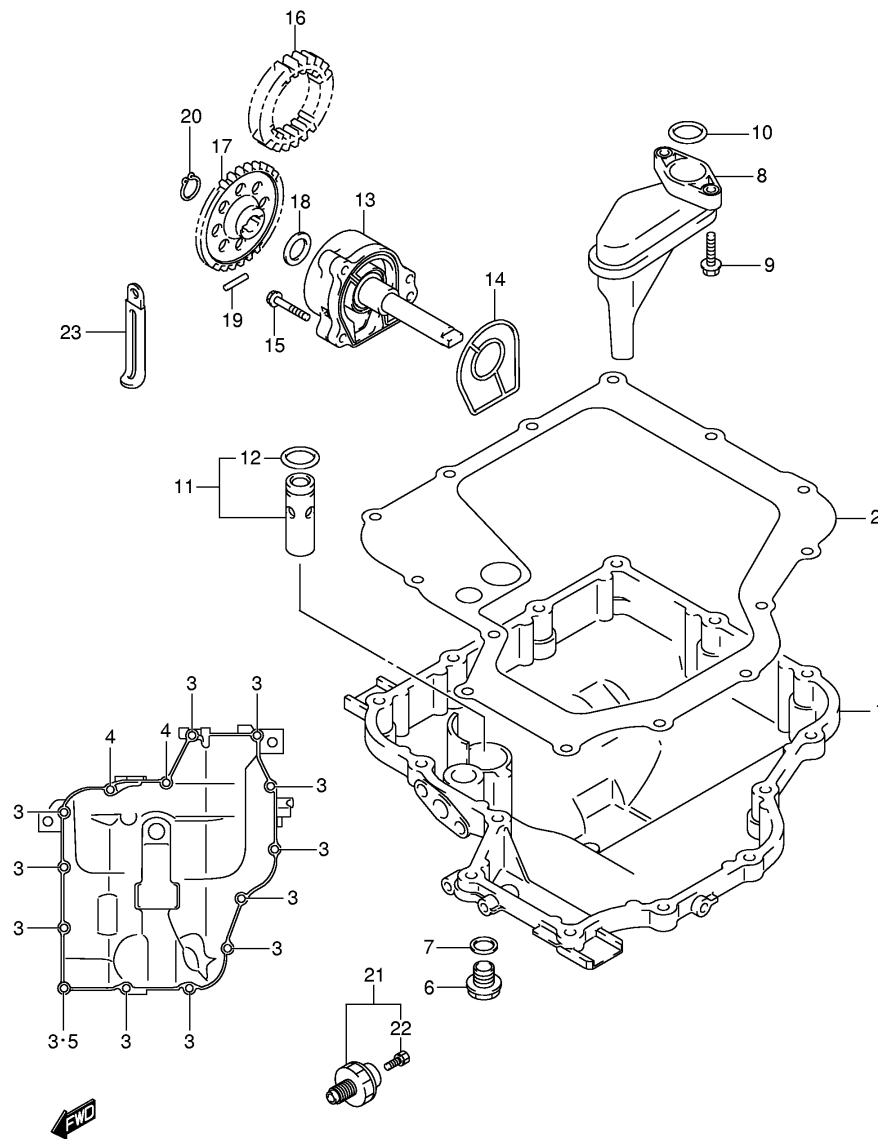

Ref No	Part No	Description
1	11511-24F10	Pan, Oil
2	11489-24F01	Gasket, Oil Pan
3	01547-0630A	Bolt
4	01547-0640A	Bolt
5	09168-06023	Gasket (5.8x13x1.2)
6	09247-14036	Plug, Oil Drain
7	09168-14002	Gasket
8	16520-24F00	Strainer, Engine Oil
9	01550-0620A	Bolt
10	09280-19008	O Ring (d:2.62,id:20.3)
11	16440-24F00	Valve Assy, Oil Relief
12	09280-13004	• O Ring
13	16400-24F01	Pump Assy, Engine Oil
14	16491-24F00	O Ring
15	01547-0630A	Bolt
16	16321-33E10	Gear, Oil Pump Drive (nt:34)
17	16331-33E00	Gear, Oil Pump Driven (nt:37)
18	09181-12158	Washer
19	09261-05006	Pin
20	08331-31126	Circlip
21	37820-33D10	Switch Assy, Oil Pressure
22	37822-33D00	• Bolt
23	09404-06429	Clamp


GSX1300RK8 E03 E28\_007  
 OIL PAN/OIL PUMP-C

**FIG.8**

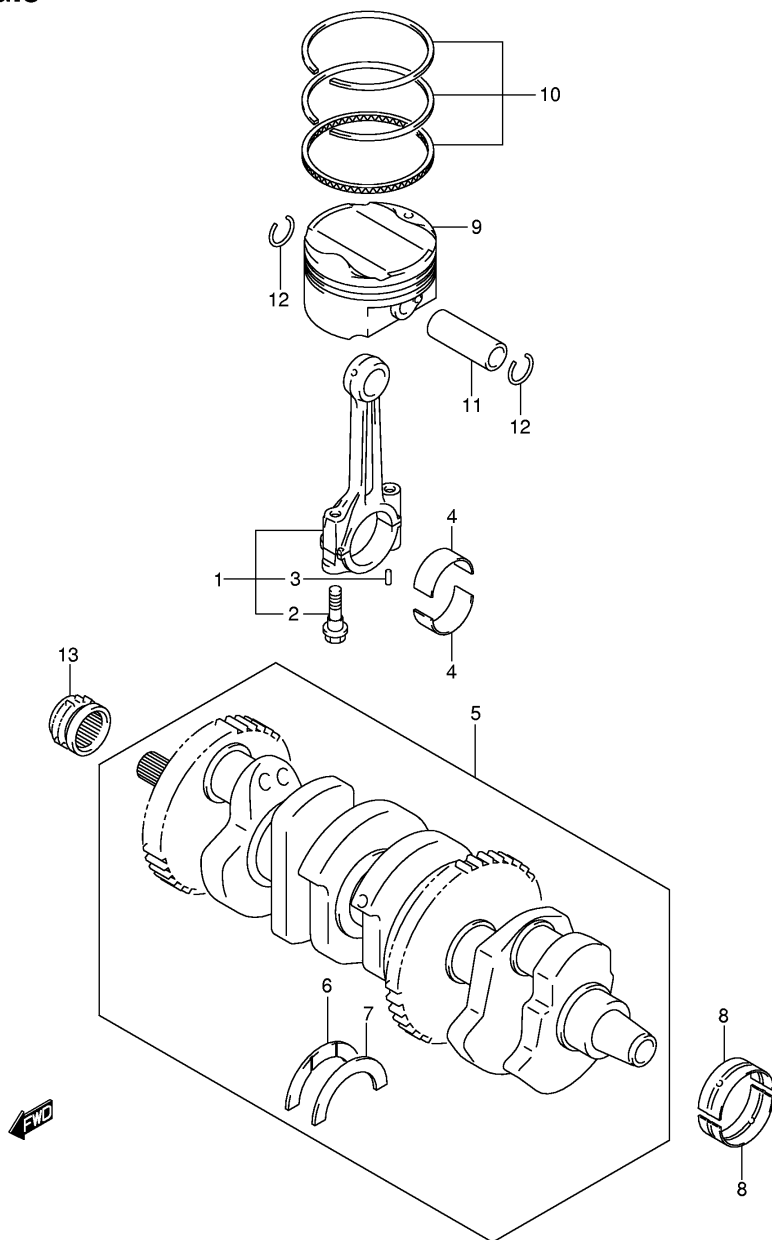


Ref No	Part No	Description
1	12160-15H00	Rod Assy, Connecting
2	12163-24F10	• Bolt
3	04221-04089	• Pin, Connrod
4	12164-46E01-0A0	Bearing, Crank Pin (green)
4	12164-46E01-0B0	Bearing, Crank Pin (black)
4	12164-46E01-0C0	Bearing, Crank Pin (brown)
4	12164-46E01-0D0	Bearing, Crank Pin (yellow)
5	12000-15810	Crankshaft Set
6	12228-24F00-0D0	• Bearing, Thrust Rh (green)
7	12228-24F00-0A0	• Bearing, Thrust Lh (red)
7	12228-24F00-0B0	• Bearing, Thrust Lh (black)
7	12228-24F00-0C0	• Bearing, Thrust Lh (blue)
7	12228-24F00-0D0	• Bearing, Thrust Lh (green)
7	12228-24F00-0E0	• Bearing, Thrust Lh (yellow)
7	12228-24F00-0F0	• Bearing, Thrust Lh (white)
8	12229-15H00-0A0	Bearing, Crankshaft (green)
8	12229-15H00-0B0	Bearing, Crankshaft (black)
8	12229-15H00-0C0	Bearing, Crankshaft (brown)
8	12229-15H00-0D0	Bearing, Crankshaft (yellow)
8	12229-15H00-0E0	Bearing, Crankshaft (blue)
9	12111-15H00-0F0	Piston
10	12140-15H00	Ring Set, Piston
11	12151-07D00	Pin, Piston
12	09381-18003	Circlip
13	12731-24F10	Sprocket, Cam Chain

**FIG.9**

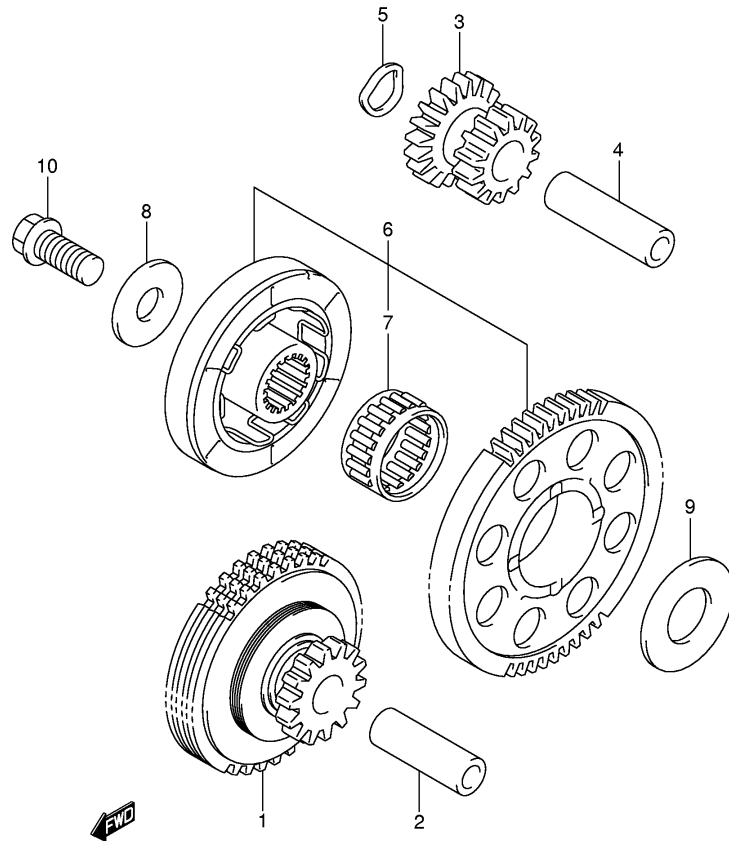


Ref No	Part No	Description
1	12600-24F00	Limiter Assy, Starter Idle Gear
2	12615-24F00	Pin
3	12612-24F00	Gear, Starter Idle No.2 (nt:16/14)
4	12151-05200	Pin
5	09164-14008	Washer
6	12600-24861	Clutch Set, Starter
7	09263-28031	• . Bearing
8	08211-10285	Washer
9	08211-20403	Washer
10	09103-10189	Bolt (10x23)

**FIG.10**

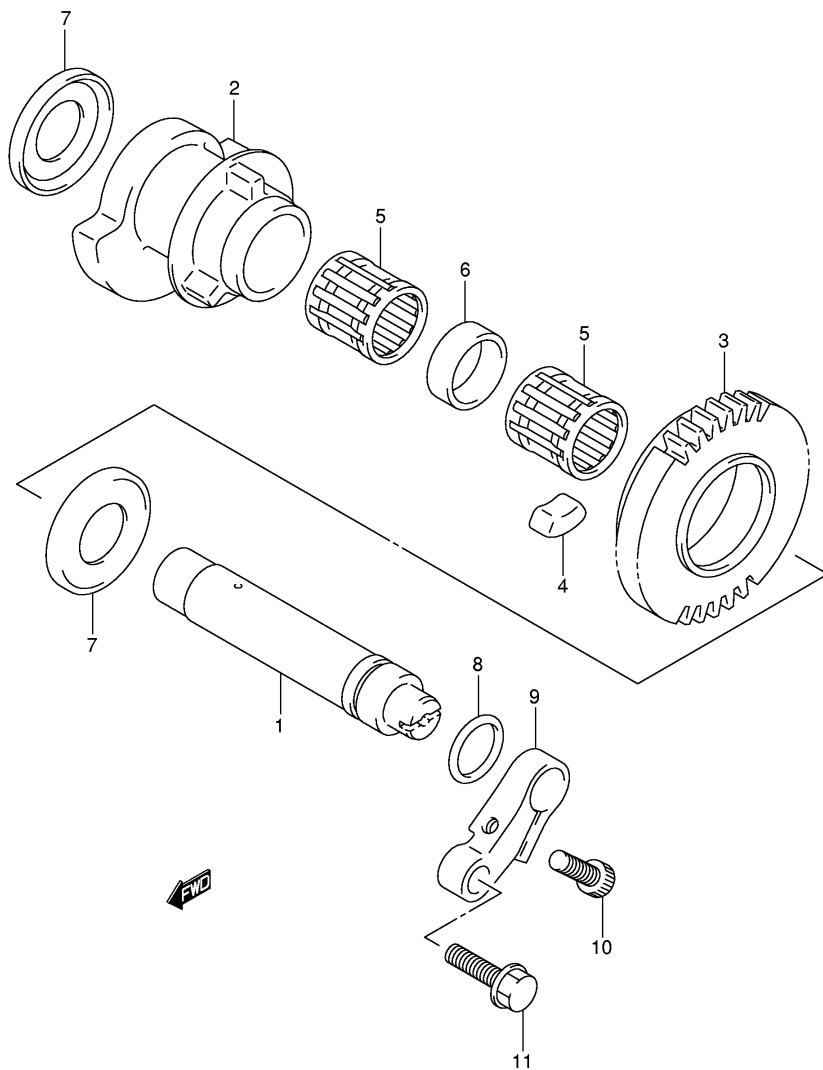


Ref No	Part No	Description
1	12650-24F01-0F0	Shaft, Crank Balancer
2	12654-24F00-0F0	Balancer, Crank
3	12666-24F00	Gear, Crank Balancer
4	12686-24F00	Damper, Balancer Gear
5	09263-19015	Bearing
6	09180-19014	Spacer
7	09169-21001	Washer
8	09280-17007	O Ring, Lh (d:1.9,id:16.8)
9	12681-26D01	Arm, Balancer Shaft
10	07130-0620B	Bolt
11	09103-06286	Bolt (6x20)

**FIG.11**

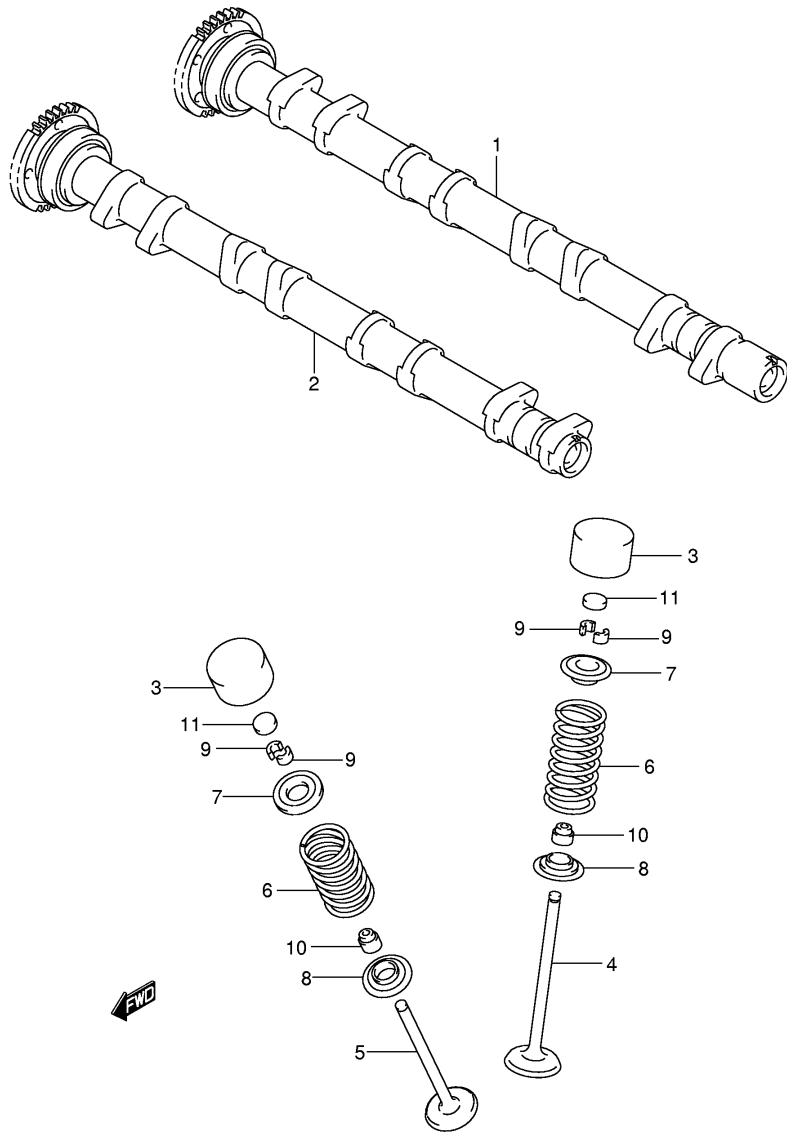

Ref No	Part No	Description
1	12710-15H00	Camshaft, Intake
2	12720-15H00	Camshaft, Exhaust
3	12891-02F00	Tappet
4	12911-15H00	Valve, Intake
5	12912-15H00	Valve, Exhaust
6	12921-15H00	Spring, Valve
7	12931-02F10	Retainer, Valve Spring
8	12933-38400	Seat, Valve Spring
9	12932-24F00	Cotter, Valve
10	09289-05011	Oil Seal (4.5x10x8)
11	12892-41C00-230	Shim, Tappet (t:2.30)
11	12892-41C00-235	Shim, Tappet (t:2.35)
11	12892-41C00-240	Shim, Tappet (t:2.40)
11	12892-41C00-245	Shim, Tappet (t:2.45)
11	12892-41C00-250	Shim, Tappet (t:2.50)
11	12892-41C00-255	Shim, Tappet (t:2.55)
11	12892-41C00-260	Shim, Tappet (t:2.60)
11	12892-41C00-265	Shim, Tappet (t:2.65)
11	12892-41C00-270	Shim, Tappet (t:2.70)
11	12892-41C00-275	Shim, Tappet (t:2.75)
11	12892-41C00-280	Shim, Tappet (t:2.80)
11	12892-41C00-285	Shim, Tappet (t:2.85)
11	12892-41C00-290	Shim, Tappet (t:2.90)
11	12892-41C00-295	Shim, Tappet (t:2.95)
11	12892-41C00-300	Shim, Tappet (t:3.00)
11	12892-41C00-305	Shim, Tappet (t:3.05)
11	12892-41C00-310	Shim, Tappet (t:3.10)
11	12892-41C00-315	Shim, Tappet (t:3.15)
11	12892-41C00-320	Shim, Tappet (t:3.20)
11	12892-41C00-325	Shim, Tappet (t:3.25)
11	12892-41C00-330	Shim, Tappet (t:3.30)
11	12892-41C00-335	Shim, Tappet (t:3.35)
11	12892-41C00-340	Shim, Tappet (t:3.40)
11	12892-41C00-345	Shim, Tappet (t:3.45)
11	12892-41C00-350	Shim, Tappet (t:3.50)
12	12800-41810	Shim Set, Tappet Inc.ref.no.11-5~11-25 (5pcs.each) & No.13
13	99000-69471	• . Case, Tappet Shim


**FIG.12**

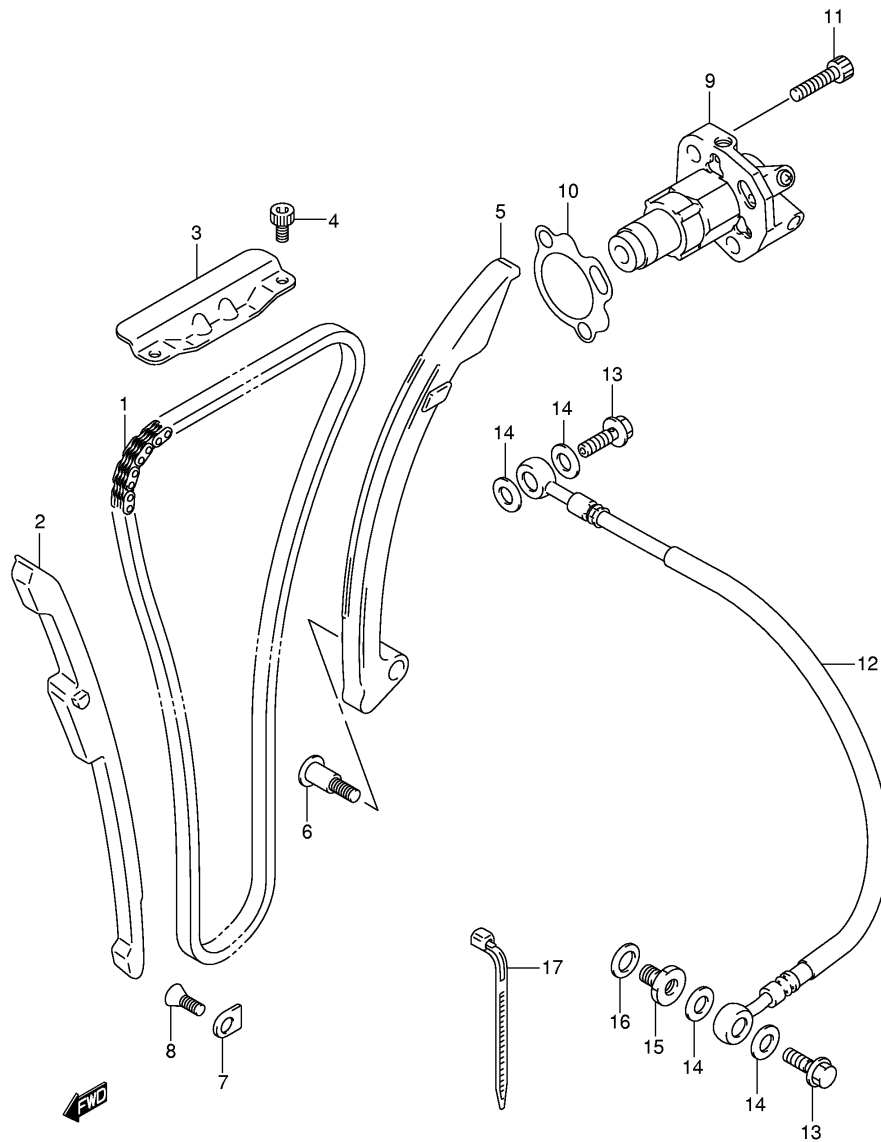

Ref No	Part No	Description
1	12760-24F00	Chain, Cam Shaft Drive (128le)
2	12771-15H00	Guide, Cam Chain No.1
3	12782-24F01	Guide, Cam Chain No.2
4	07130-0612B	Screw
5	12811-15H00	Tensioner, Cam Chain
6	12812-31G00	Bolt
7	12773-24F00	Retainer, Cam Chain Guide No.1
8	02122-0612B	Screw
9	12830-15H00	Adjuster Set, Tensioner
10	12837-02H00	Gasket, Tnsn Adjuster
11	07130-0625B	Bolt
12	12835-15H00	Hose, Cam Chain Tensioner
13	12838-15H00	Bolt
14	09168-08034	Gasket
15	12839-15H00	Plug
16	09168-14002	Gasket
17	09407-18402	Clamp


GSX1300RK8 E03 E28\_012  
 CAM CHAIN-C

**FIG.13**

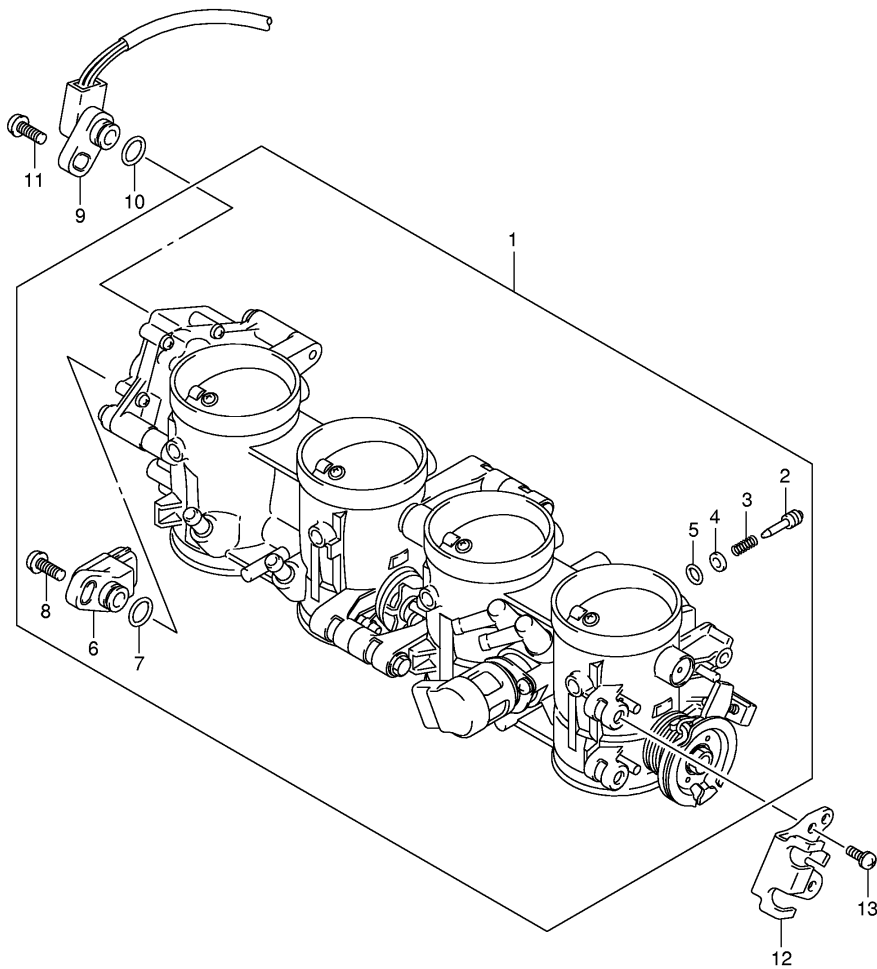

Ref No	Part No	Description
1	13406-15H00	Throttle Body
1	13406-15H10	Throttle Body
2	13269-18G00	. Screw, Air Adjust
3	13271-43E00	. Spring, Air Screw
4	13291-26E00	. Washer
5	13295-26E00	. O Ring
6	13580-18G00	. Sensor Assy, Main
7	13575-40F00	. O Ring
8	13605-40F00	. Screw
9	13580-40F30	Sensor Assy, Sub
10	13575-40F00	O Ring
11	13605-40F00	Screw
12	13565-15H00	Plate, Stay
13	13601-21H00	Screw


**FIG.14**

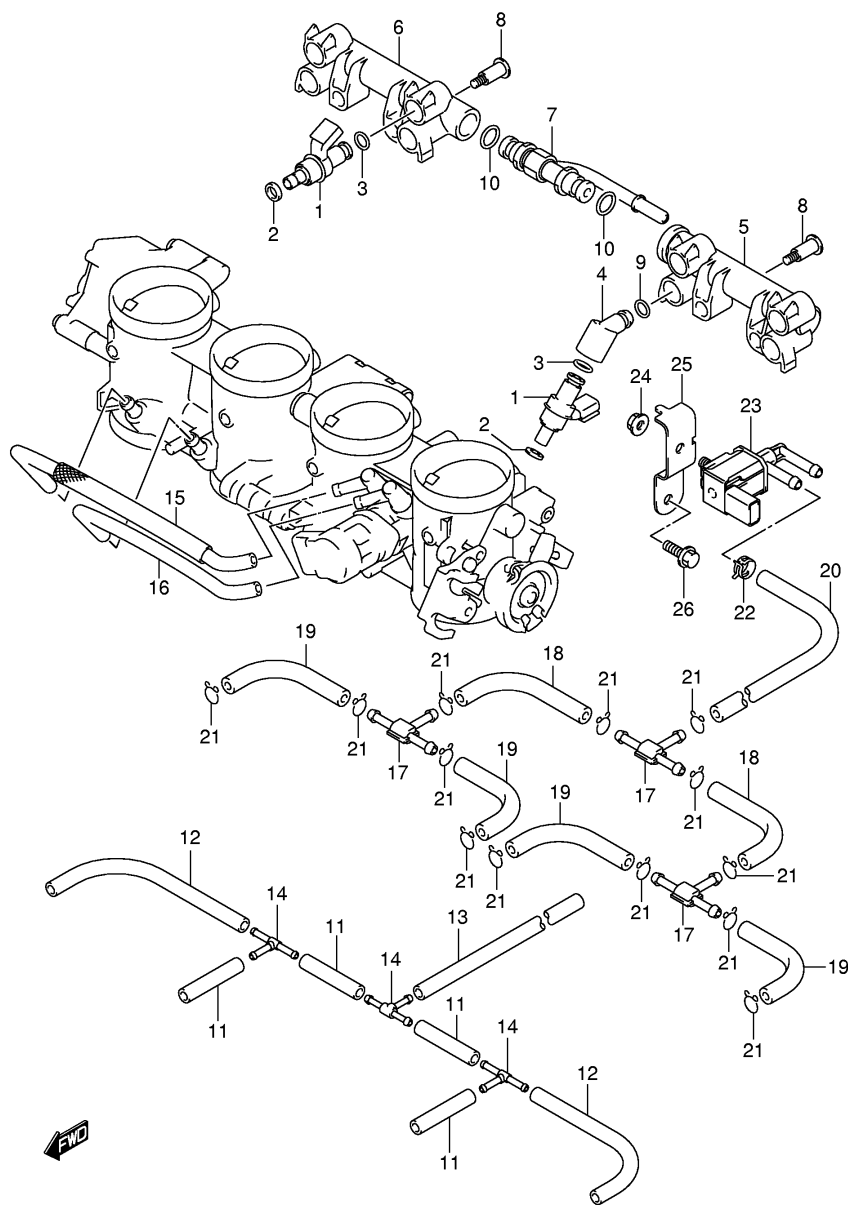

Ref No	Part No	Description
1	15710-21H00	Injector Assy
2	15722-21H00	O Ring
3	15721-21H00	O Ring
4	13473-21H00	Pipe, Fuel
5	13474-21H00	Pipe, Fuel
6	13474-21H10	Pipe, Fuel
7	13473-21H10	Pipe, Fuel
8	13601-35F00	Screw
9	15721-24F00	O Ring
10	15721-10G00	O Ring
11	13697-24F00	Hose, Rubber (l:35)
12	13697-24F20	Hose, Rubber (l:100)
13	13697-35F00	Hose, Rubber (l:170)
14	13471-24F30	T Joint
15	13680-21H10	Tube, Rubber
16	13698-21H00	Tube, Rubber
17	13685-36E50	T Joint
18	13683-21H20	Hose
19	13683-21H10	Hose
20	13683-15H00	Hose
21	13693-24F00	Clip
22	09401-10411	Clip
23	18117-52G10	Valve, Caniseter Purge
24	08316-1006B	Nut
25	13165-15H00	Bracket
26	01550-0610A	Bolt

GSX1300RK8 E03 E28\_014  
 THROTTLE BODY HOSE/JOINT-C


**FIG.15**

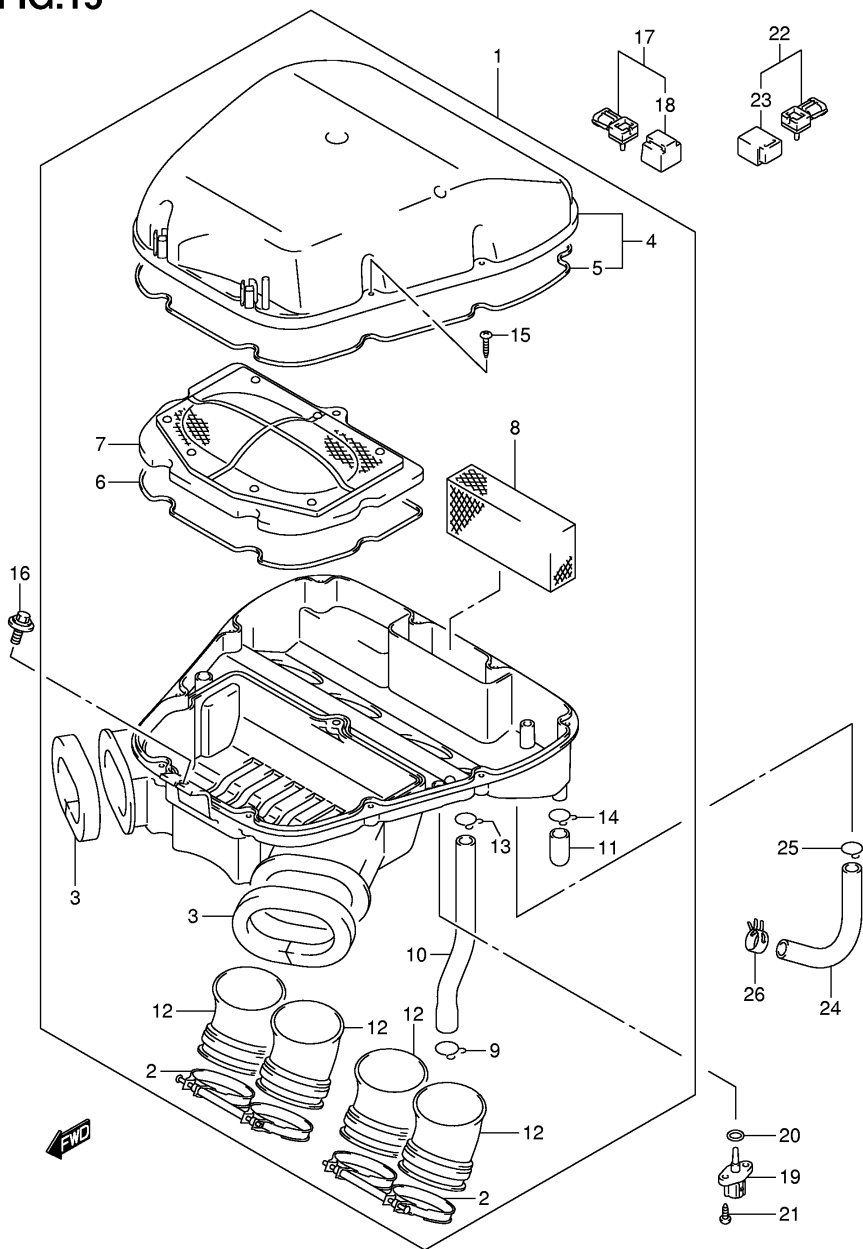

Ref No	Part No	Description
1	13700-15H00	Cleaner Assy, Air
2	13170-15H10	. . Clamp
3	13736-15H00	. . Cushion, Duct
4	13740-15H00	. . Cap, Air Cleaner
5	13746-15H00	•• . Gasket, Cap
6	13756-15H00	. . Gasket, Case
7	13780-15H00	. . Filter Assy
8	13788-15H00	. . Filter, Breather
9	09401-16401	. . Clip
10	13853-15H00	. . Tube, Breather
11	13859-41B10	. . Plug
12	13882-41G00	. . Tube, Outlet
13	09401-14301	. . Clip
14	09401-14301	. . Clip
15	03541-0525B	. . Screw
16	09116-06130	Bolt
17	15630-29G20	Sensor, Boost
18	15625-29G10	. . Cover
19	13650-14G10	Sensor, Air Temperature
20	13655-14G10	. . O Ring
21	03511-0516A	Screw
22	15630-29G10	Sensor, Air Pressure
23	15625-29G00	. . Cover
24	13697-15H00	Hose, Isc Valve
25	09401-15101	Clip
26	09401-16403	Clip

GSX1300RK8 E03 E28\_015  
 AIR CLEANER-C


**FIG.16**

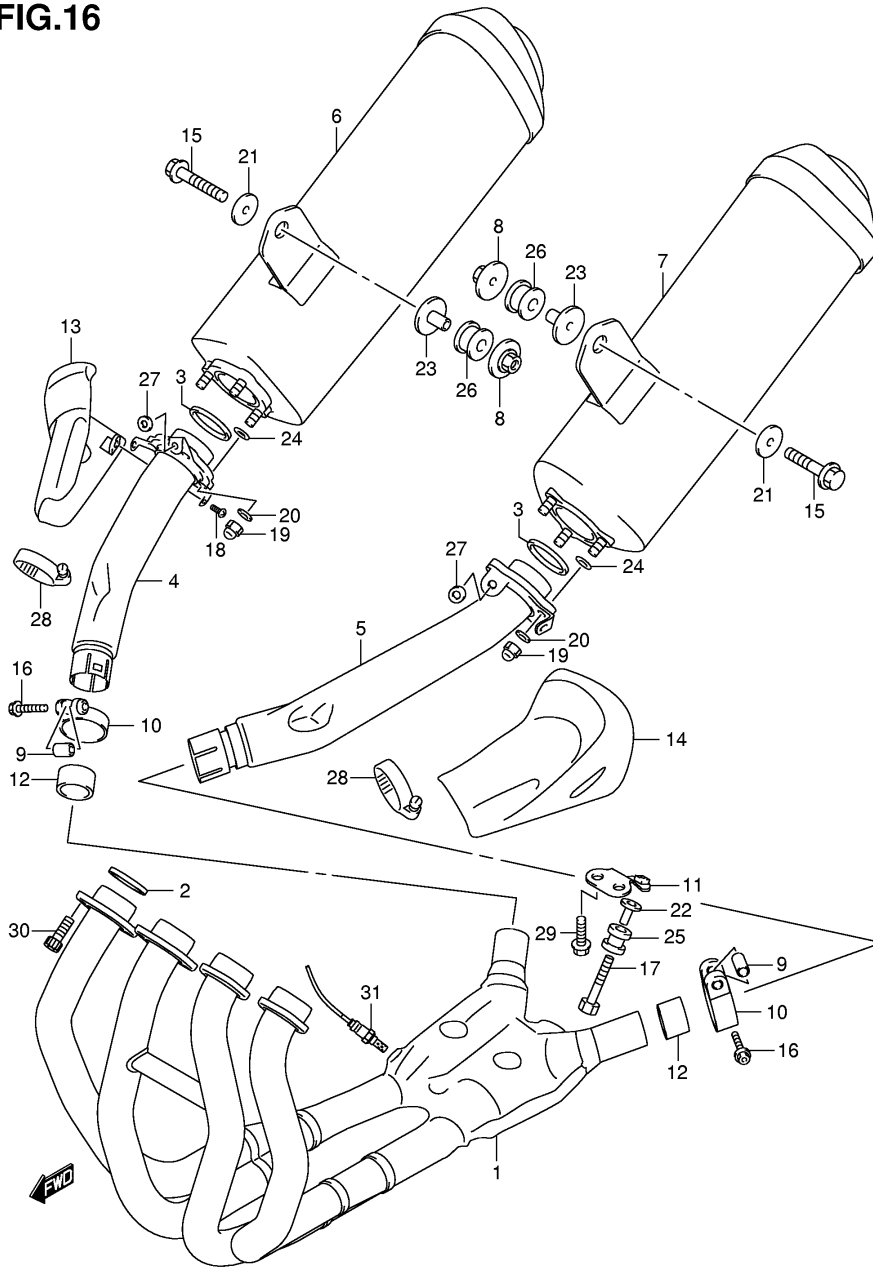

Ref No	Part No	Description
1	14100-15H00	Pipe, Exhaust
2	14181-22D01	Gasket
3	14181-33E00	Gasket, Joint
4	14230-15H00	Pipe, Joint Rh
5	14240-15H00	Pipe, Joint Lh
6	14310-15H00	Body, Muffler Rh
7	14340-15H00	Body, Muffler Lh
8	14414-15H00	Nut
9	14458-45G10	Spacer
10	14459-15H00	Clamp
11	14770-15H00	Bracket
12	14771-15H00	Connector
13	14780-15H00	Cover, Front Rh
14	14790-15H00	Cover, Front Lh
15	09103-08358	Bolt
16	09103-08392	Bolt
17	09118-08152	Bolt
18	09139-06027	Screw
19	09159-08116	Nut
20	09160-08059	Washer
21	09160-08142	Washer
22	09180-08152	Spacer
23	09180-08216	Spacer
24	09280-08012	O Ring
25	09320-12048	Cushion
26	09320-12049	Cushion
27	09321-10018	Cushion
28	09402-70503	Clamp
29	01550-0820A	Bolt
30	07130-0825A	Bolt
31	18213-15H00	Sensor, Oxygen

GSX1300RK8 E03 E28\_016  
 MUFFLER-C


**FIG.17**

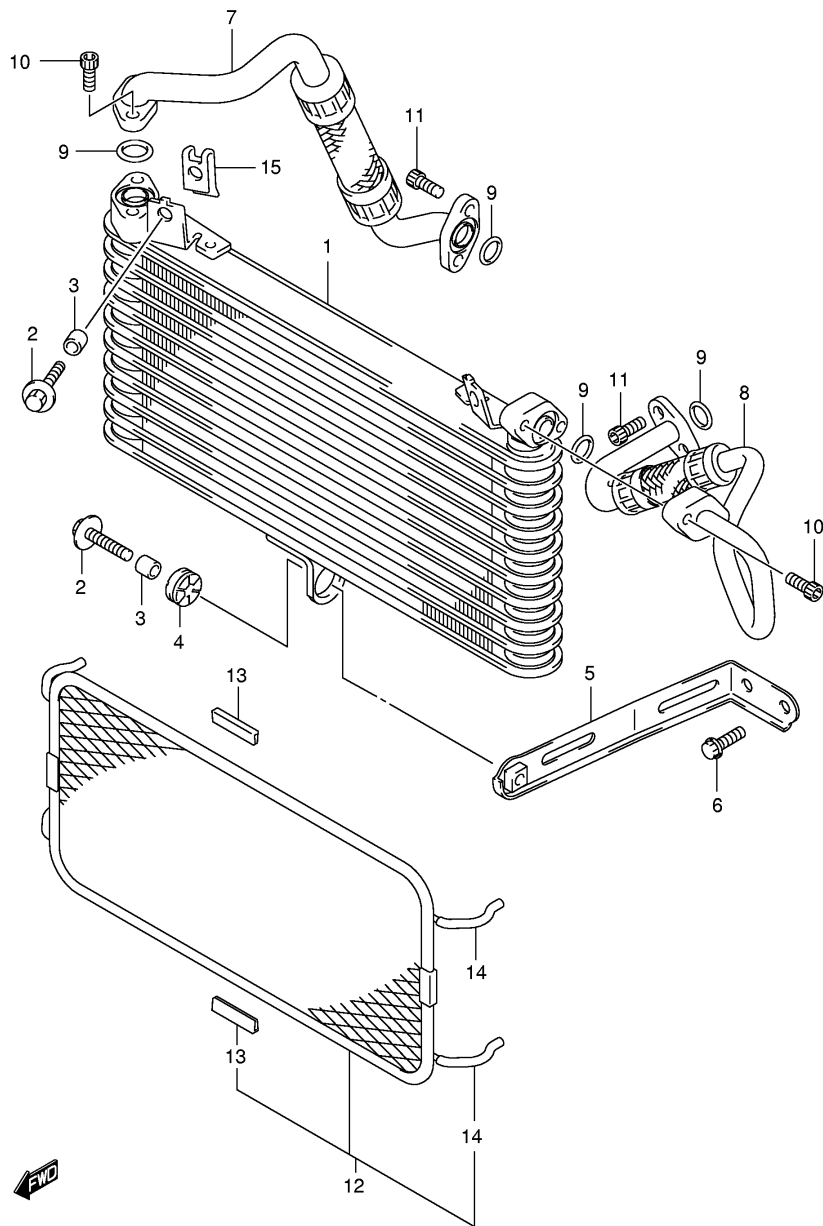

Ref No	Part No	Description
1	16600-15H10	Cooler Assy, Oil
2	09118-06097	Bolt (6x25)
3	09180-06290	Spacer
4	09320-10051	Cushion
5	16640-24F00	Bracket, Oil Cooler
6	01550-0612A	Bolt
7	16460-15H00	Hose, Oil Cooler Rh
8	16470-15H00	Hose, Oil Cooler Lh
9	09280-15015	O Ring (d:2.4,id:16.0)
10	09106-06096	Bolt (6x16)
11	09106-06073	Bolt (6x16)
12	16650-15H00	Guard, Oil Cooler
13	17765-09F00	• . Protector, Ctr
14	09352-30503-600	• . Hose (3x5x600)
15	17802-14F00	Nut

GSX1300RK8 E03 E28\_017  
 OIL COOLER-C


**FIG.18**

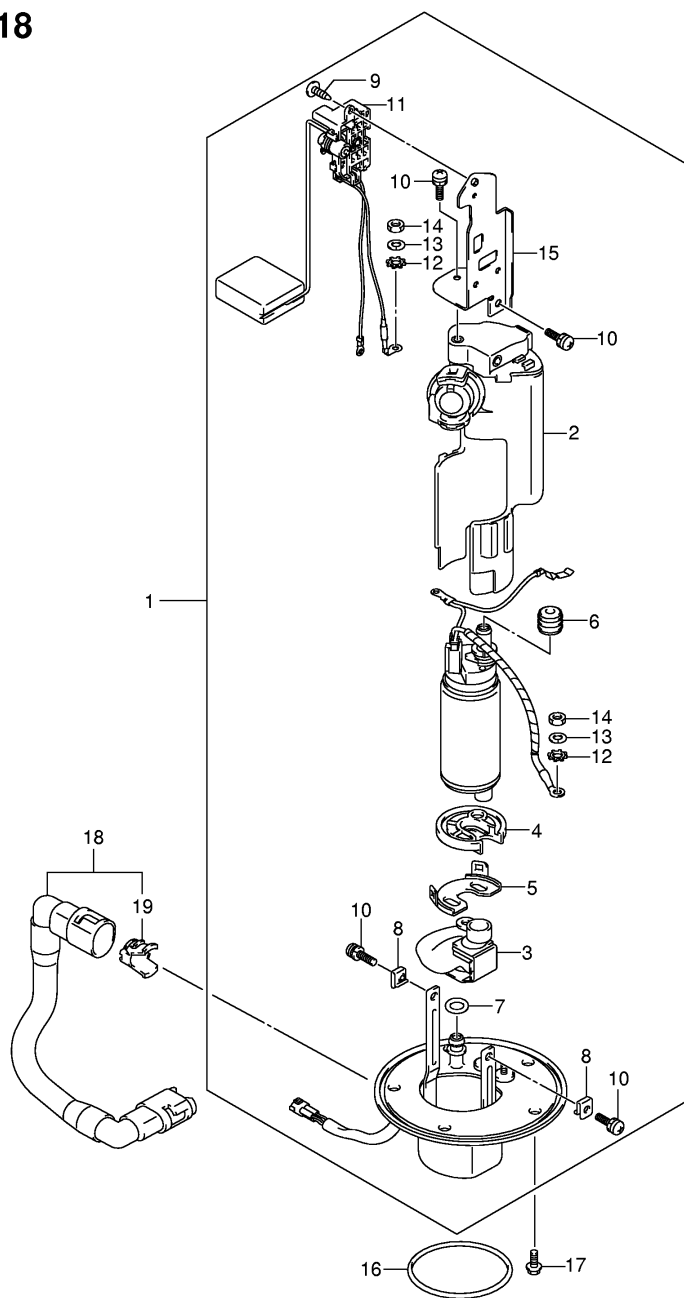

Ref No	Part No	Description
1	15100-15H00	Pump Assy, Fuel
2	15410-41G00	. Filter Assy, Fuel
3	15420-44G00	. Strainer, Fuel Pump
4	15111-35F00	. Cushion, Fuel Pump
5	15112-42F00	. Holder, Fuel Pump
6	15114-35F00	. Bush, Fuel Pump
7	15113-35F00	. O Ring
8	15115-35F00	. Nut
9	15116-06G10	. Screw
10	15116-35F10	. Screw
11	34810-15H00	. Gauge Assy, Fuel Level
12	15171-35F00	. Washer
13	15172-35F00	. Spring Washer
14	15173-35F00	. Nut
15	15181-15H00	. Bracket, Fuel Gauge
16	15201-35F00	O Ring
17	07120-0612A	Bolt
18	15810-15H00	Hose, Fuel
19	15815-35F00	. Retainer


GSX1300RK8 E03 E28\_018  
 FUEL PUMP-C

**FIG.19**

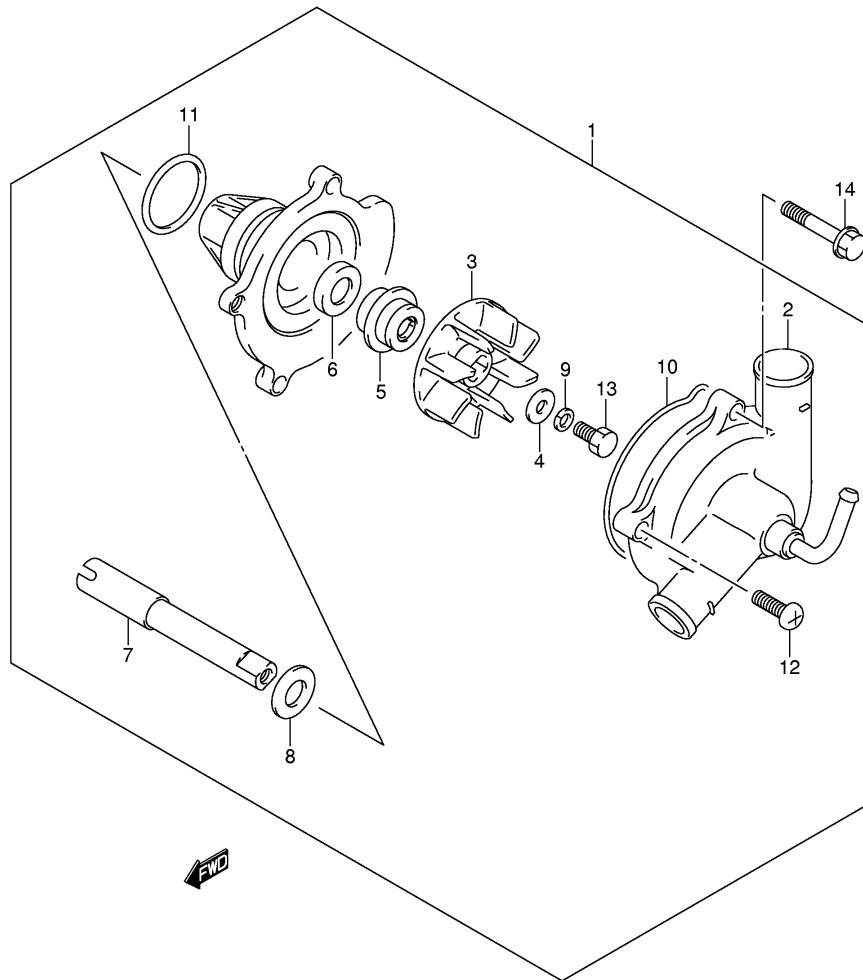


Ref No	Part No	Description
1	17400-24F10	Pump Assy, Water
2	17411-24F00	. Case
3	17491-17E01	. Impeller
4	09168-06025	. Gasket
5	17470-02F10	. Seal, Mechanical
6	17461-48G00	. Oil Seal
7	17511-24F10	. Shaft
8	17432-07G00	. Washer
9	09164-06006	. Lock Washer
10	17418-33400	. O Ring
11	17435-33400	. O Ring
12	02112-0616A	. Screw
13	09100-06099	. Bolt (6x13)
14	01547-0635A	Bolt

**FIG.20**

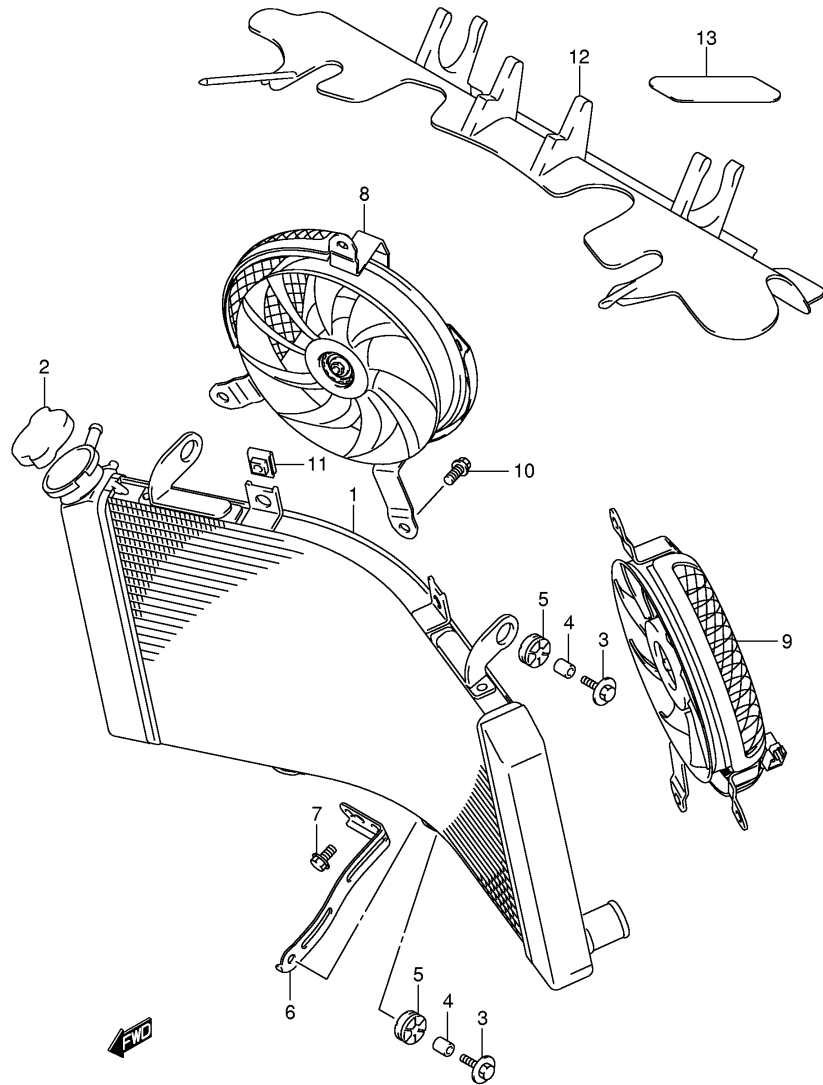

Ref No	Part No	Description
1	17710-15H00	Radiator Assy, Water
2	17730-12C20	Cap
3	09118-06097	Bolt (6x25)
4	09180-06290	Spacer
5	09320-10051	Cushion
6	17750-24F00	Bracket, Radiator Lower
7	01550-0612A	Bolt
8	17810-15H00	Fan Assy, Radiator Rh
9	17820-15H00	Fan Assy, Radiator Lh
10	17711-40F00	Bolt
11	17712-40F00	Nut
12	17771-15H00	Shield, Heat
13	63131-10F00	Tape, Heat Shield


**FIG.21**

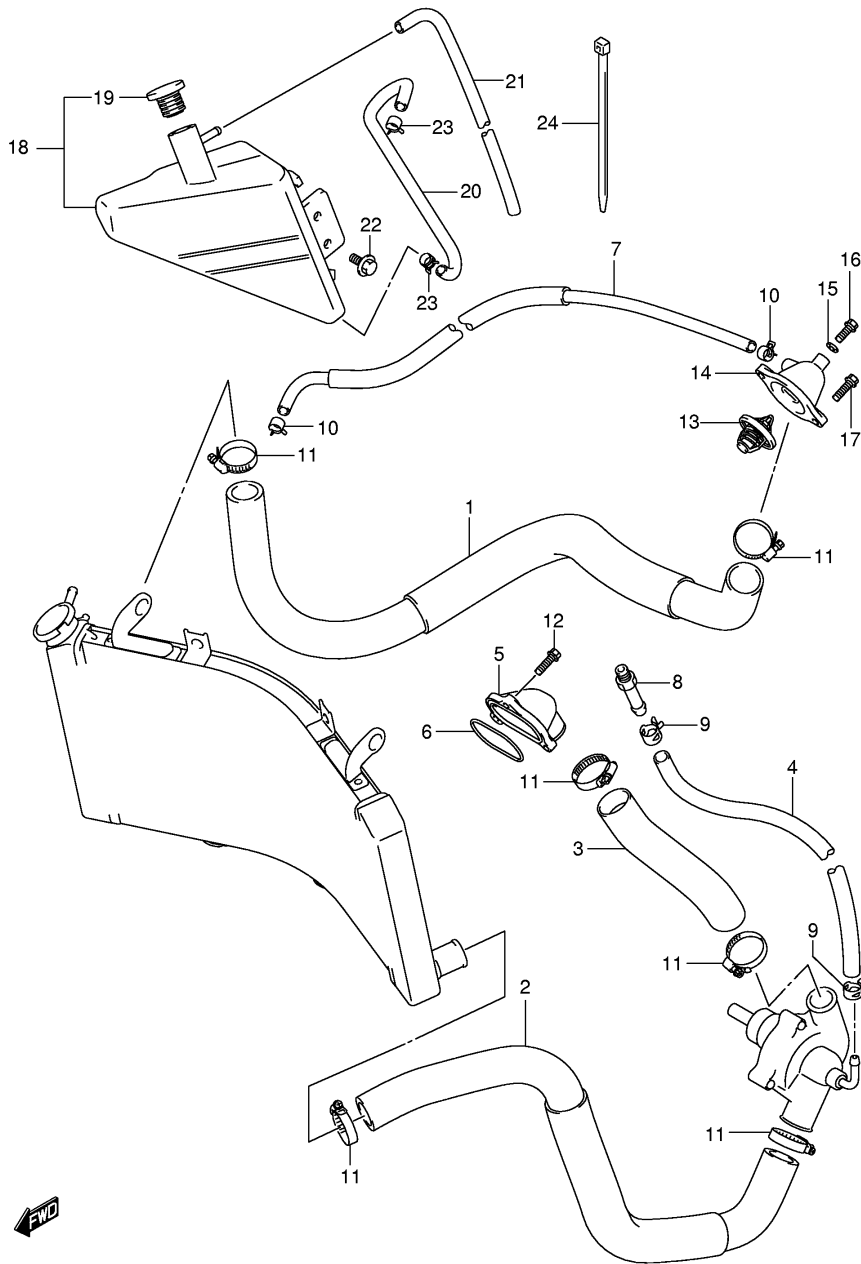

Ref No	Part No	Description
1	17851-15H00	Hose, Radiator Inlet
2	17852-15H00	Hose, Radiator Outlet
3	17853-24F00	Hose, Cylinder Inlet
4	17854-24F00	Hose, Water Bypass
5	17861-33E20	Connector
6	17863-33E00	O-ring
7	17855-15H00	Hose, Water Air Bleed
8	09362-09011	Union, Bypass
9	09401-12409	Clip
10	09401-10409	Clip
11	09402-38512	Clamp
12	01547-0620A	Bolt
13	17670-15H00	Thermostat, Water
14	17661-35F00	Cover, Thermostat
15	09168-06026	Gasket
16	17568-50F00	Bolt
17	01547-0620A	Bolt
18	17910-15H00	Tank Assy, Reservoir
19	17931-02FA0	• . Cap
20	17981-15H00	Hose, Reserver Tank Inlet
21	17982-15H00	Hose, Reserver Tank Overflow
22	09111-06085	Bolt (6x12)
23	09401-08411	Clip
24	09407-14407	Clamp

GSX1300RK8 E03 E28\_021  
 RADIATOR HOSE-C


**FIG.22**

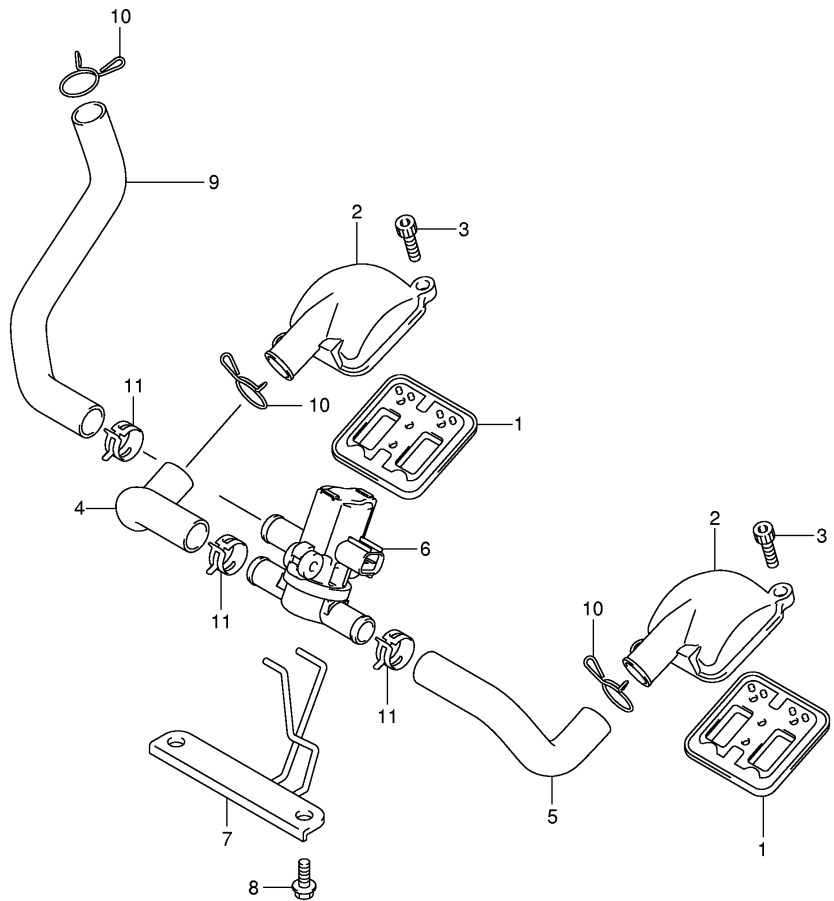

Ref No	Part No	Description
1	18450-35F30	Valve Assy, 2nd Air Reed
2	18531-15H00	Cover
3	09106-06073	Bolt (6x16)
4	18461-15H00	Hose, 2nd Air Valve Rh
5	18471-15H00	Hose, 2nd Air Valve Lh
6	18510-29G30	Valve Assy, Air Cut
7	18610-15H00	Bracket
8	09103-06283	Bolt (6x16)
9	18711-15H00	Hose, 2nd Air Cleaner
10	09401-17201	Clip
11	09401-17401	Clip




**FIG.23**

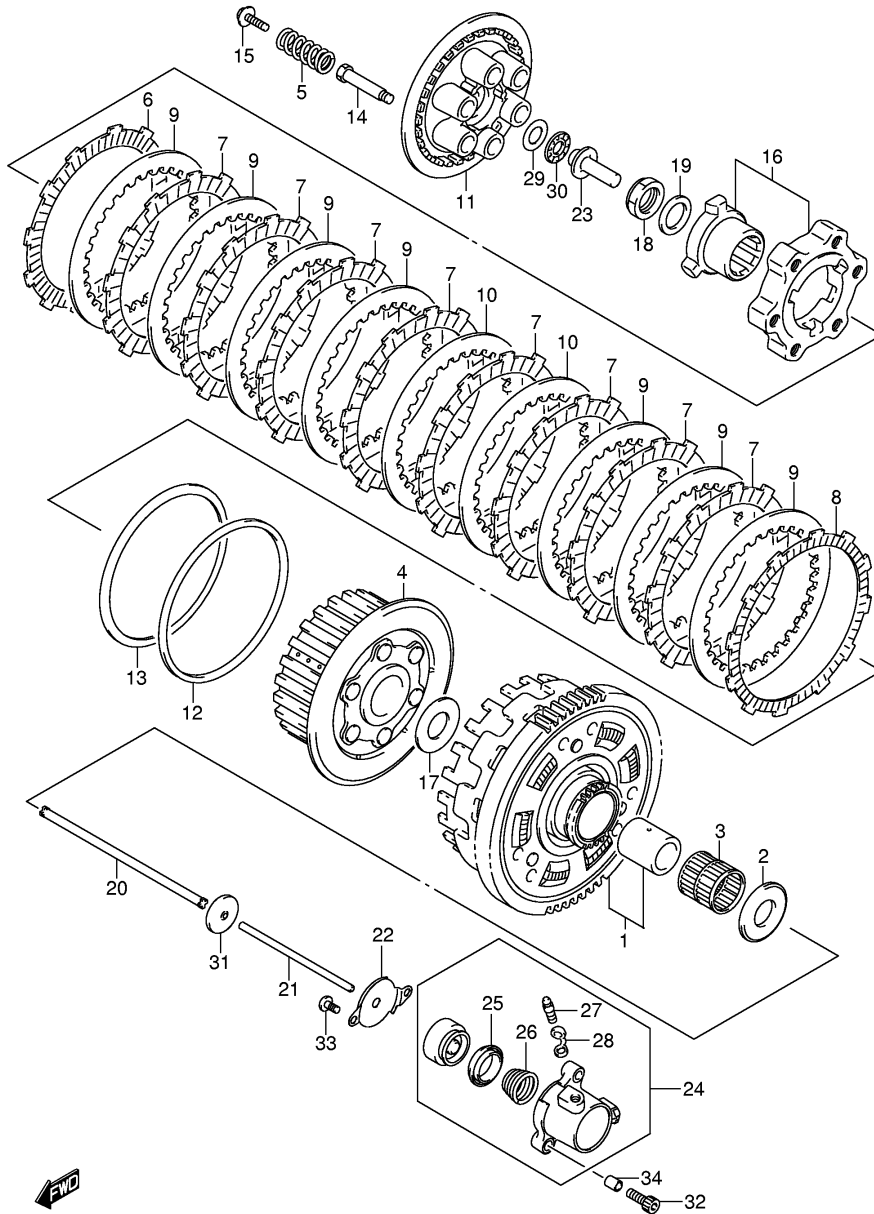

Ref No	Part No	Description
1	21200-24810	Gear Assy, Primary Driven
2	09160-25073	Washer, Pri Driven Gear
3	09263-35013	Bearing, Primary Driven
4	21410-24F00	Hub, Clutch Sleeve
5	21413-24F30	Spring, Clutch
6	21441-24F10	Plate, Clutch Drive No.2
7	21441-24F30	Plate, Clutch Drive No.1
8	21442-24F00	Plate, Clutch Drive No.3
9	21451-24F00	Plate, Clutch Driven No.1
10	21451-24F10	Plate, Clutch Driven No.2
11	21462-24F00	Disc, Clutch Pressure
12	21471-24F00	Seat, Wave Washer
13	21472-06G00	Washer, Clutch Plate Wave
14	21481-24F30	Bolt, Clutch Spring Support
15	21482-24F30	Bolt, Clutch Spring
16	21610-02F12	Cam Set, Clutch
17	09160-25056	Washer, Clutch Sleeve Hub
18	09159-24010	Nut, Clutch Sleeve Hub
19	09164-24006	Washer, Clutch Sleeve Hub
20	23110-24F00	Rod, Clutch (l:195.5)
21	23111-26D00	Rod, Clutch Push (l:132.5)
22	23117-46E00	Cover, Clutch Rise Cyl
23	23121-31E00	Piece, Clutch Push
24	23160-15H00	Cylinder, Clutch Release
25	23163-10F00	. Cup
26	23164-10F00	. Spring
27	59121-01A00	. Bleeder
28	59122-01A00	. Cap, Bleeder
29	09160-15045	Washer, Clutch Push Piece
30	09263-15003	Bearing, Clutch Push Piece
31	09285-06015	Seal, Clutch Push Rod Oil
32	07130-0625A	Bolt, Clutch Release Cylinder
33	02112-0610A	Screw, Cyl Cover
34	04211-09129	Pin, Clutch


GSX1300RK8 E03 E28\_023  
 CLUTCH-C

**FIG.24**

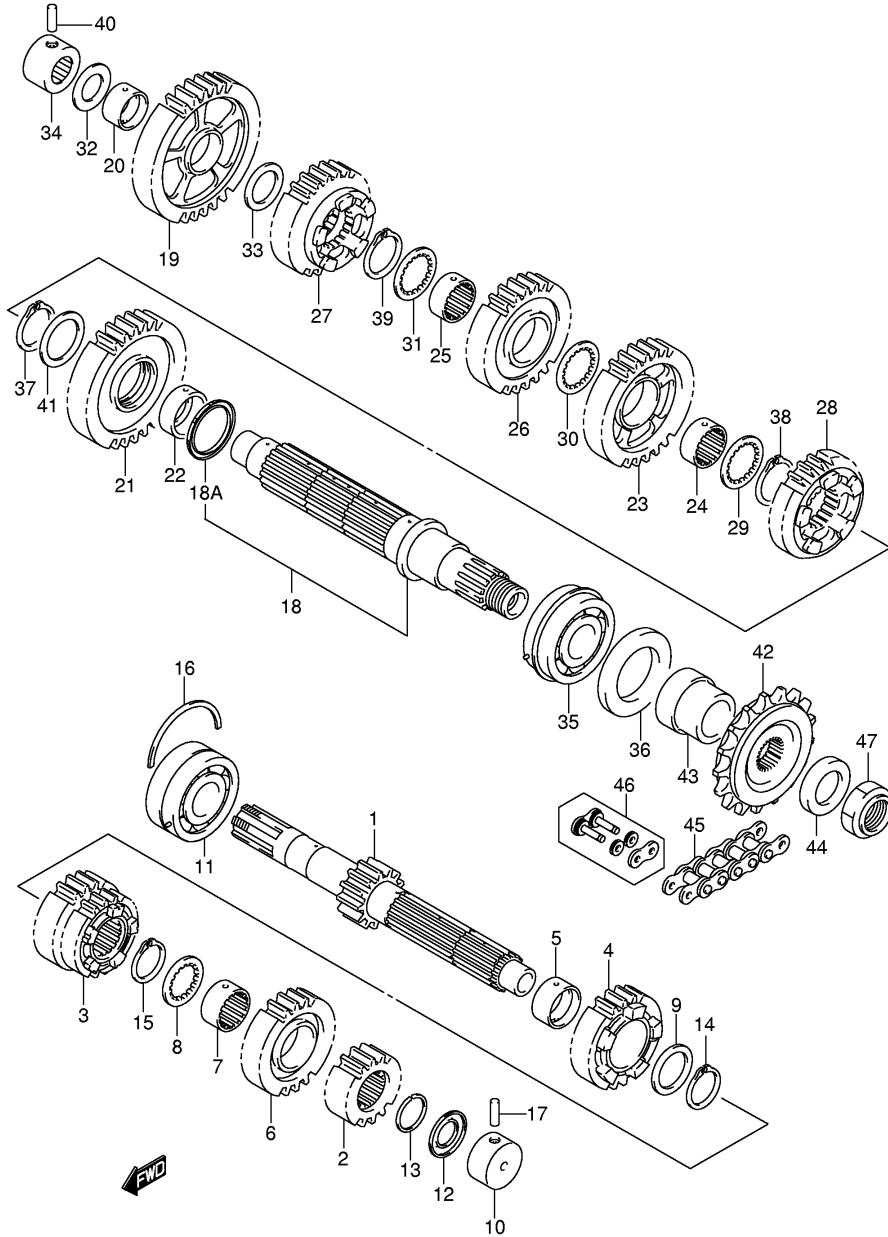

Ref No	Part No	Description
1	24120-24F00	Shaft, Cntr (nt:13)
2	24221-15H00	Gear, 2nd Drive (nt:16)
3	24231-15H00	Gear, 3rd & 4th Drive
4	24251-15H00	Gear, 5th Drive (nt:22)
5	24252-24F10	Bush, 5th Drive Gear
6	24261-15H00	Gear, 6th Drive (nt:23)
7	24262-24F10	Bush, 6th Drive Gear
8	09167-27003	Washer, 6th Drive Gear
9	09181-27014	Washer, 5th Drive Gear
10	09263-20085	Bearing, Cntr Shaft, L
11	09267-25012	Bearing, Cntr Shaft, R
12	09285-20006	Seal, Oil
13	09380-27004	Circlip, 2nd Drive Gear
14	09380-27006	Circlip, 5th Drive Gear
15	09380-27006	Circlip, 6th Drive Gear
16	09390-62012	C Ring, Cntr Shaft Brg, R
17	04221-07209	Pin, Cntr Shaft Brg, L
18	24130-15H00	Shaft, Drive
18a	24136-48G01	• . Ring, Drive Shaft Friction
19	24311-15H00	Gear, 1st Driven (nt:34)
20	24312-24F10	Bush, 1st Driven Gear
21	24321-15H00	Gear, 2nd Driven (nt:31)
22	24322-48G00	Bush, 2nd Driven Gear
23	24331-15H00	Gear, 3rd Driven (nt:29)
24	24332-24F10	Bush, 3rd Driven Gear
25	24332-24F10	Bush, 4th Driven Gear
26	24341-15H00	Gear, 4th Driven (nt:27)
27	24351-15H00	Gear, 5th Driven (nt:25)
28	24361-15H00	Gear, 6th Driven (nt:24)
29	09167-30008	Washer, 3rd Driven Gear
30	09167-30008	Washer, 3rd & 4th Drive
31	09167-30008	Washer, 4th Driven Gear
32	09181-20251	Washer, 1st Driven Gear
33	09181-24005	Washer, 1st Driven Gear
34	09263-20040	Bearing, Drive Shaft, R
35	09267-30011	Bearing, Drive Shaft, L
36	09283-42018	Seal, Drive Ahaft Oil
37	09380-30009	Circlip, 2nd Driven Gear
38	09380-30009	Circlip, 3rd Driven Gear
39	09380-30009	Circlip, 4th Driven Gear
40	04221-07209	Pin, Drive Shaft Brg, R
41	08211-30405	Washer, 2nd Driven Gear
42	27510-15H00	Sprocket, Engine (nt:18)
43	27531-15H00	Spacer, Engine Sprocket No.1
44	27532-15H00	Spacer, Engine Sprocket No.2
45	27600-24F60-118	Chain Assy, Drive
46	27620-24F60	Joint Set, Driven
47	09159-22008	Nut, Engine Sprocket


**FIG.25**

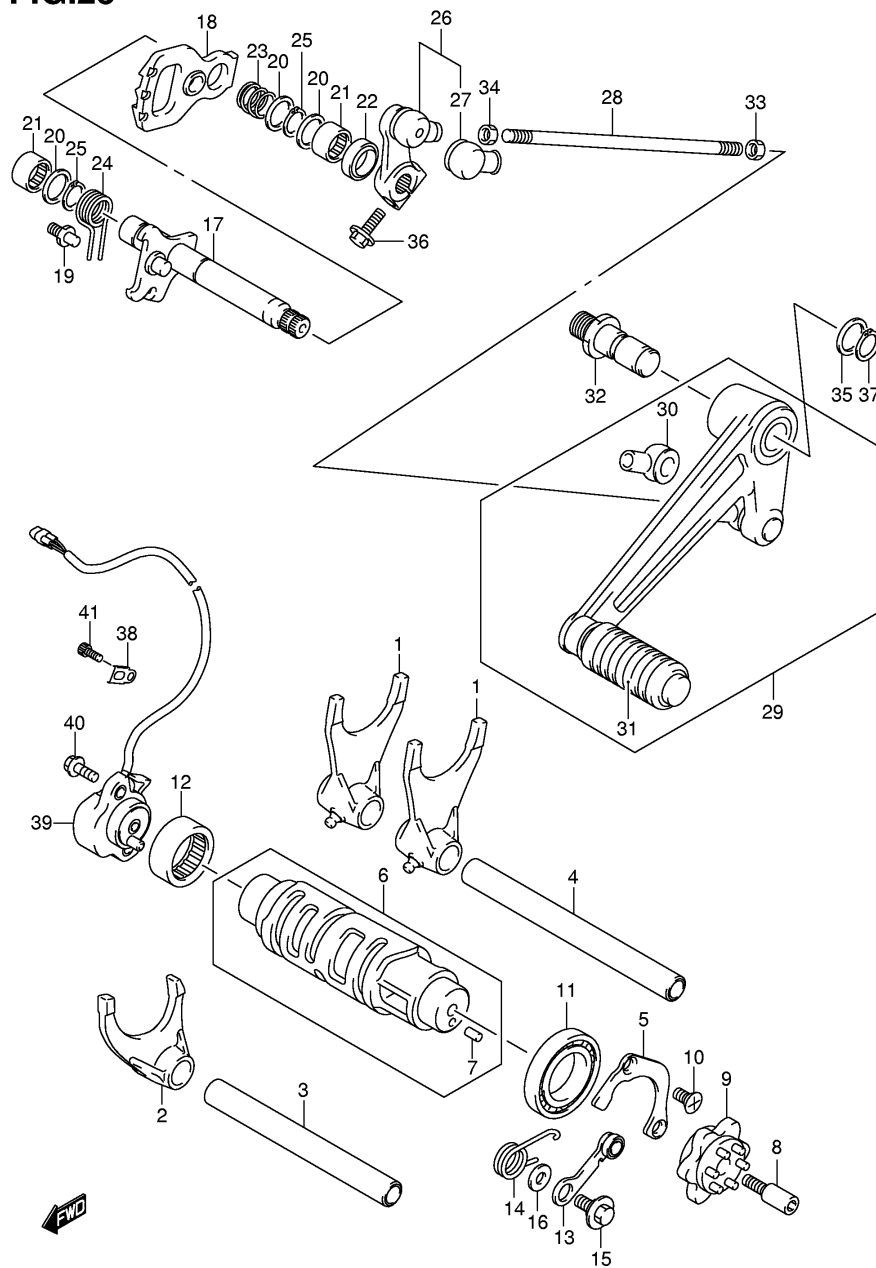

Ref No	Part No	Description
1	25211-24F20	Fork, Gear Shift No.1
2	25231-24F20	Fork, Gear Shift No.3
3	25411-24F00	Shaft, Gear Shift No.2
4	25411-38B01	Shaft, Gear Shift No.1
5	24741-24F10	Retainer, Shift Cam Bearing
6	25310-24F00	Cam, Gear Shift
7	04221-04089	• . Pin, Shift Cam Plate
8	25312-42F00	Stopper, Shift Cam Drive Plate
9	25381-13E00	Plate, Gear Shift Cam
10	09126-06011	Screw, Shift Cam Bearing
11	09262-25006	Bearing, Gear Shift Cam
12	09263-25018	Bearing, Gear Shift, Cam, R
13	25350-24F00	Stopper, Shift Cam
14	25355-24F00	Spring, Shift Cam Stopper
15	09111-06041	Bolt, Shift Cam Stopper
16	08211-06141	Washer, Cam Stopper Thrust
17	25510-15H00	Shaft, Gear
18	25512-06G10	Plate, Gear Shift Cam Drive
19	25671-01011	Stopper, Gear Shift Arm
20	09181-14167	Washer, Gear Shift Shaft, R
21	09263-14027	Bearing, Gear Shift Shaft
22	09283-14006	Seal, Gear Shift Shaft Oil
23	09440-17009	Spring, Gear Shift Plate
24	09444-20001	Spring, Shift Shaft Return
25	08331-31146	Circlip, Gear Shift Shaft
26	25520-40F00	Arm, Gear Shift Link
27	25526-47000	• . Cover, Dust
28	25525-19F00	Rod, Gear Shift Link (L:150)
29	25600-17G00	Lever Assy, Gea Shift
30	25526-47000	• . Cover, Dust
31	25652-20C00	• . Rubber, Gear Shift Pedal
32	25617-03F10	Shaft, Gear Shift Lever
33	09140-06020	Nut, Gear Shift Link Rod
34	09140-06025	Nut, Gear Shift Link Rod, L
35	09160-12011	Washer, Gear Shift Lever
36	01500-0625A	Bolt, Gear Shift
37	08331-3112A	Circlip, Gear Shift Lever
38	31497-45000	Clamp, Gr Posn Snsr Lead
39	37730-15H00	Sensor Assy, Gear Position
40	07120-0516A	Bolt, Gr Posn Snsr
41	07130-0510B	Bolt, Clamp

GSX1300RK8 E03 E28\_025  
 GEAR SHIFTING-C


**FIG.26**

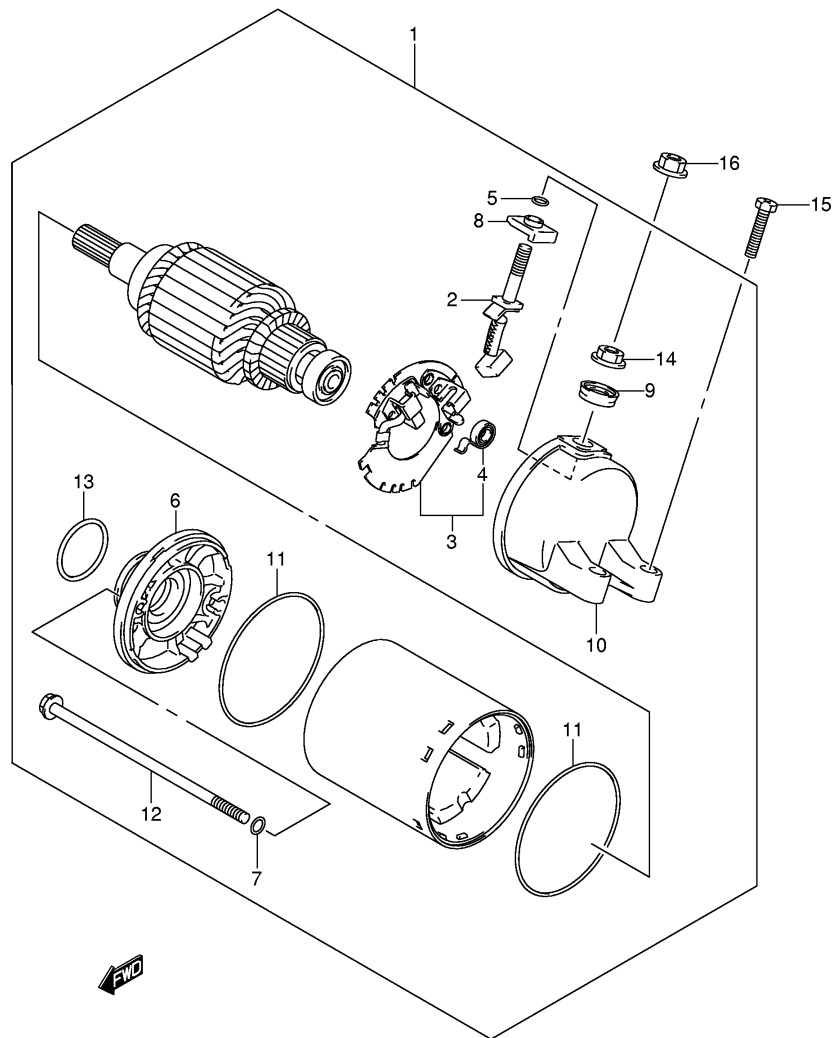


Ref No	Part No	Description
1	31100-15H00	Motor Assy, Starting
2	31130-38300	• . Brush (+)
3	31132-27A01	• . Holder, Brush
4	31135-65010	•• .. Spring
5	31143-38300	• . O Ring
6	31150-49500	• . Housing Assy, Starting
7	31156-38300	• . O Ring
8	31171-38300	• . Bush, B
9	31172-38300	• . Bushing
10	31175-15H00	• . Frame, Starter End
11	31264-44110	• . O Ring
12	31281-88C00	• . Bolt, Through
13	09280-24003	• . O Ring (dd:3,id:24.5)
14	08310-00067	• . Nut
15	09128-06024	Bolt, Starting Motor (6x25)
16	08361-3506A	Nut, Starting Motor Term

**FIG.27**

Ref No	Part No	Description
1	32101-24F20	Stator Assy, Magneto
2	32102-24F20	Rotor Assy, Magneto
3	32371-24F00	Clamp, Magneto Lead
4	09103-12028	Bolt, Magneto Rotor (12x30)
5	09160-12036	Washer, Magneto Rotor
6	07130-0512B	Bolt, Sensor
7	07130-0635B	Bolt, Magneto Stator
8	09420-04008	Key, Magneto Rotor

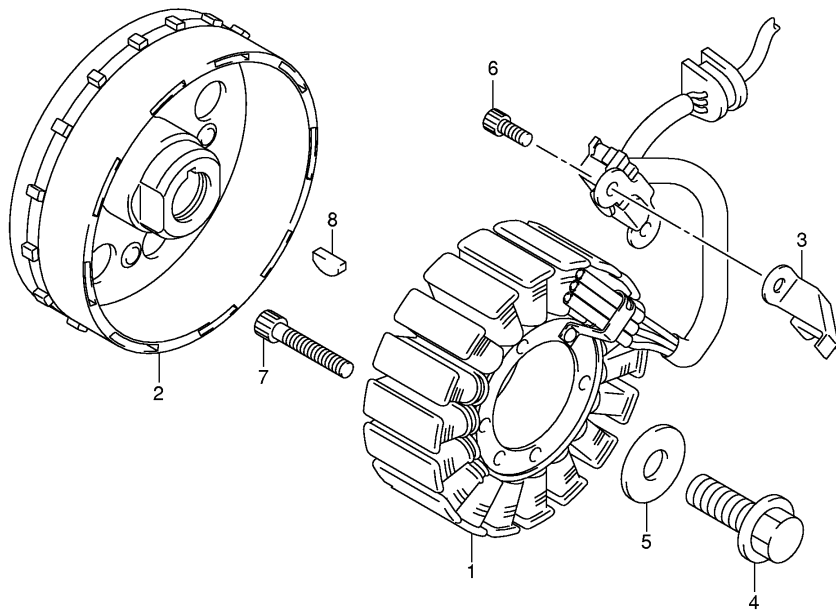

**FIG.28**

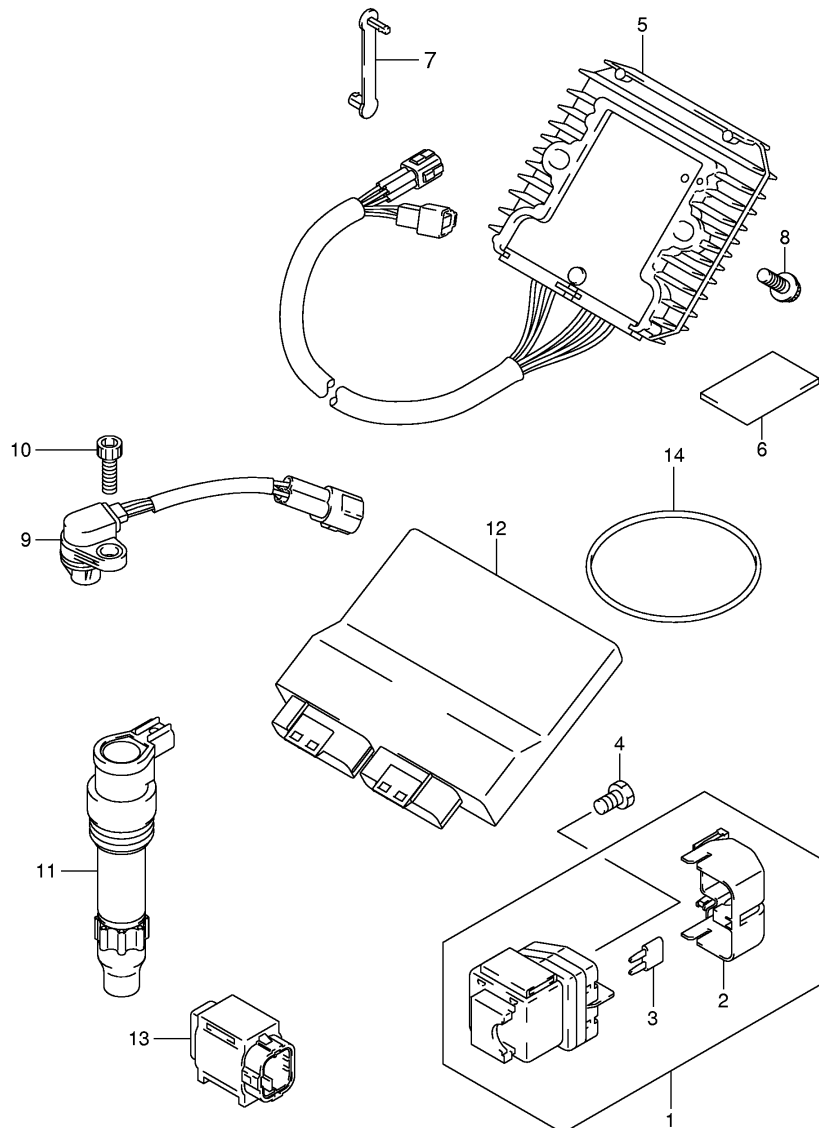


Ref No	Part No	Description
1	31800-44G00	Relay Assy, Starting Motor
2	31861-38G00	• . Cover, Rectifier
3	09481-30501	• . Fuse (30a)
4	09128-06013	Bolt, Starting Motor (6x8)
5	32800-15H10	Rectifier Assy
6	33652-36000	Protector (30x50x3)
7	36651-48E00	Clamp, Rectifier Lead
8	02162-0625A	Bolt, Rectifier
9	33220-01H00	Sensor Assy, Cam Position
10	07130-0616A	Bolt, Cam Position Sensor
11	33410-24F10	Coil Assy, Ignition
12	32920-15H10	Control Unit, Fi
12	32920-15H20	Control Unit, Fi
13	33960-06G10	Sensor Assy, Fuel Cut
14	09280-76005	Band, Fi (d:3.5,id:76)




**FIG.29**

Ref No	Part No	Description
1	33610-17E10	Battery Assy
2	33652-16G00	Protector, Battery
3	33652-36000	Protector, Battery
4	33810-15H00	Wire, Starter Motor Lead
5	33820-15H00	Wire, Starter Plus Lead
6	33624-16G00	• . Cap, Battery Plus
7	33860-15H00	Wire, Battery Minus Lead

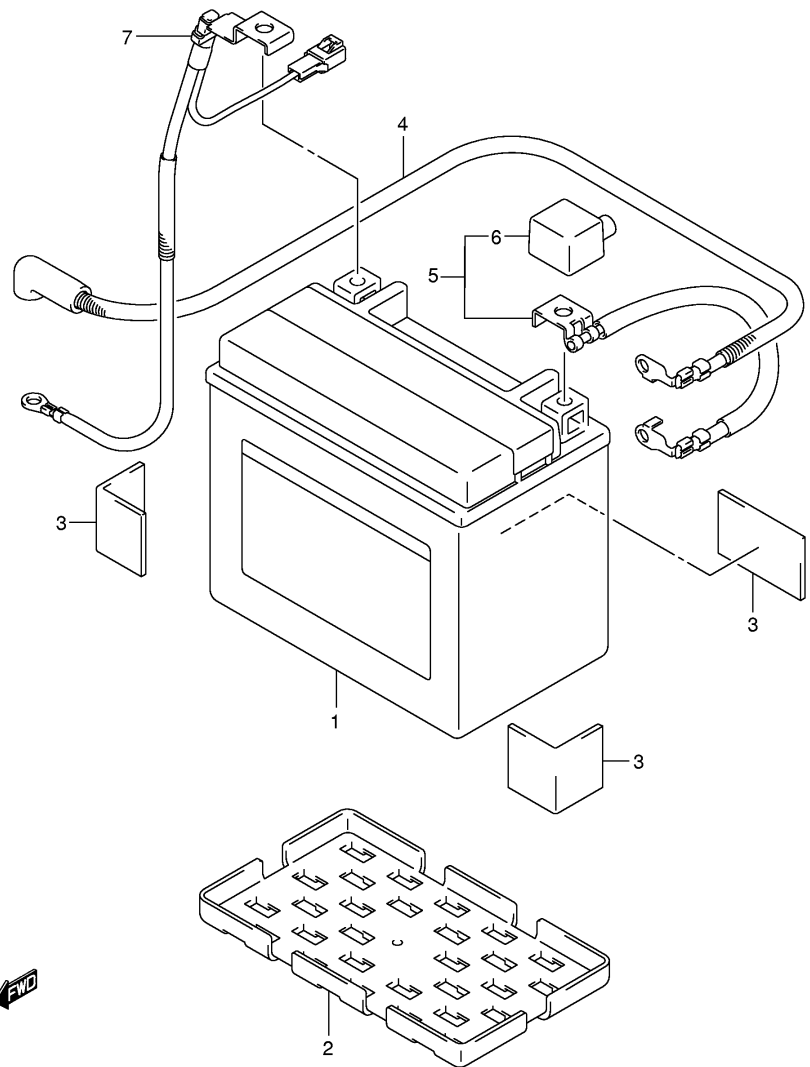


GSX1300RK8 E03 E28\_029  
 BATTERY-C

**FIG.30**

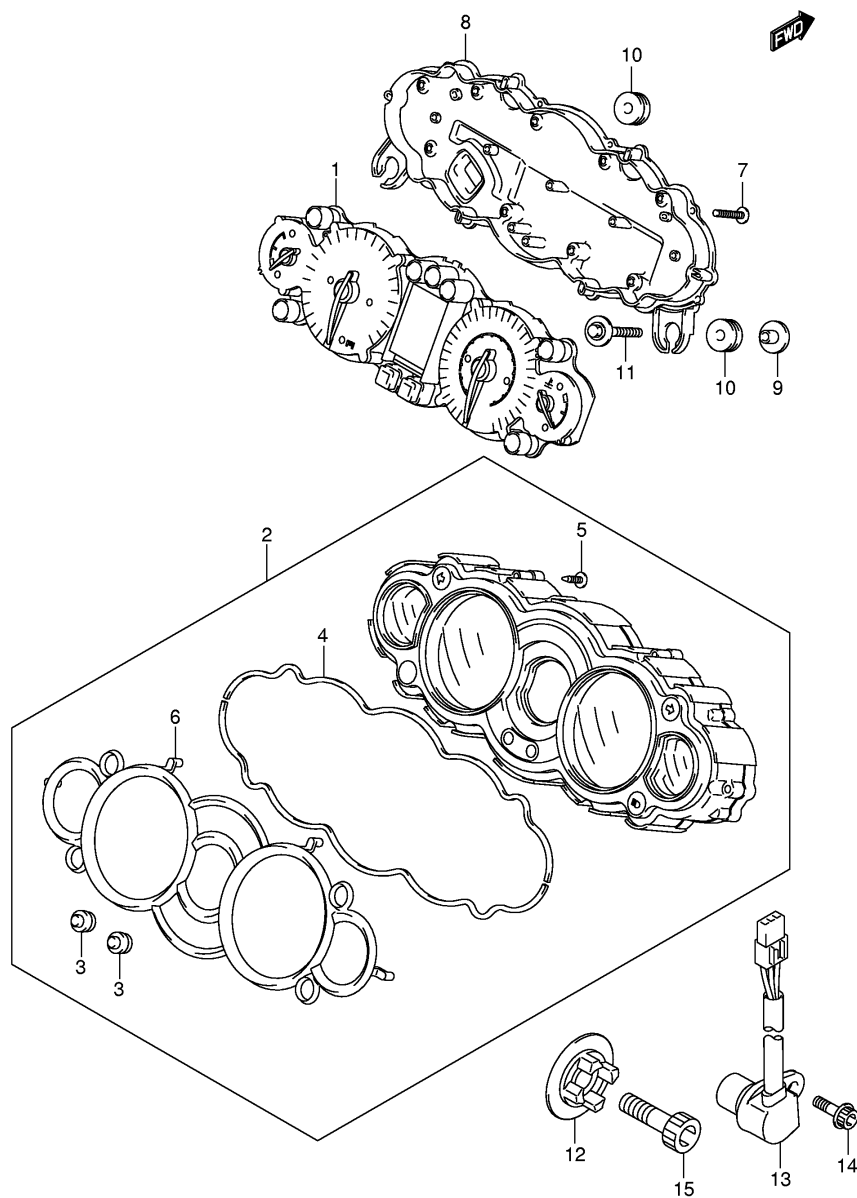

Ref No	Part No	Description
1	34120-15H10	Combination Meter
1	34120-15H00	Combination Meter
2	34150-15H00	Upper Case Assy
3	34124-39G00	• Switch Rubber
4	34153-15H00	• Packing
5	34183-31F10	• Screw (2.3x8)
6	34193-15H00	• Ring
7	09132-03008	Screw (3x16)
8	34111-15H00	Lower Case Assy
9	34187-24F00	Washer, Speedometer
10	34955-13E00	Cushion, Speedometer
11	09116-06186	Bolt, Speedometer
12	34981-15H00	Rotor, Speed
13	34990-35F00	Sensor, Speed
14	07120-0512B	Bolt, Speed Sensor
15	07130-0825B	Bolt, Speed Rotor


**FIG.31**

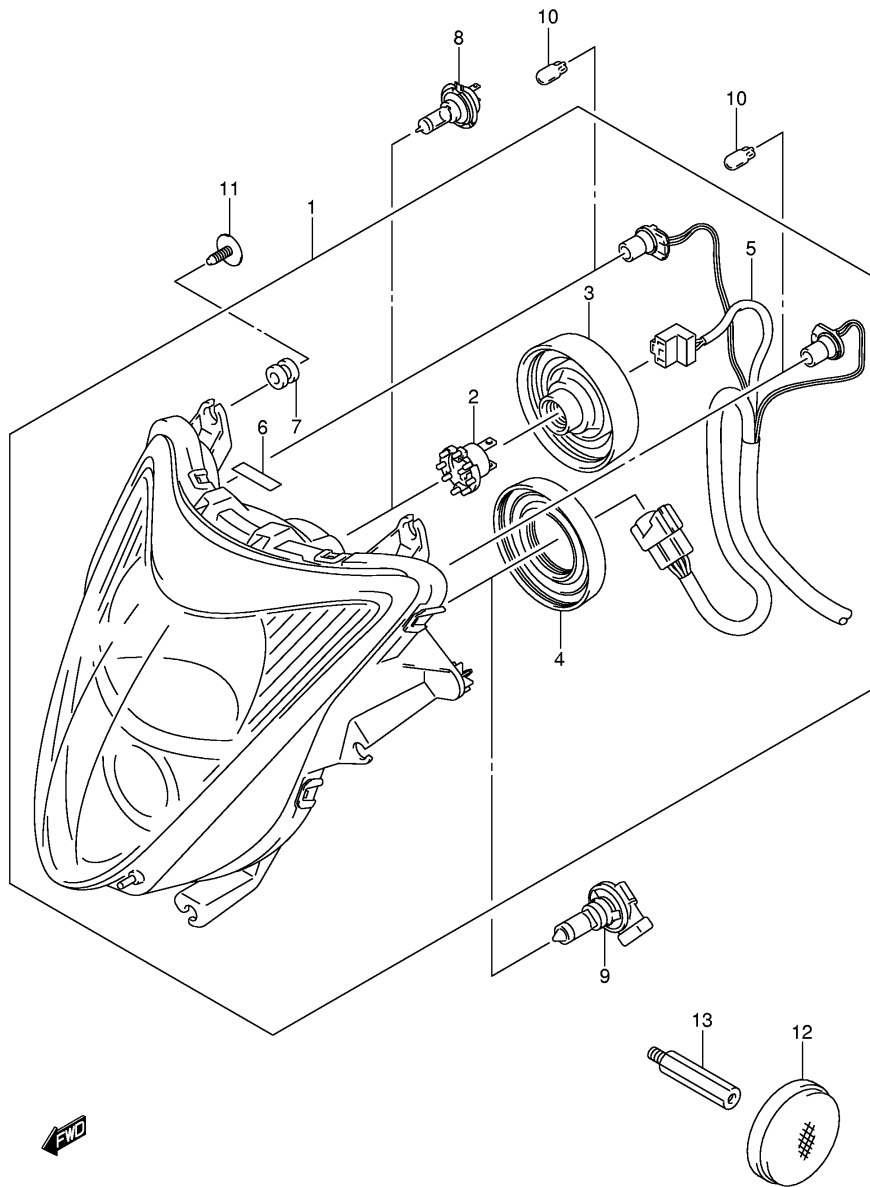

Ref No	Part No	Description
1	35100-15H30-999	Headlamp Assy
2	35175-24F00	• . Adaptor Assy
3	35173-15H00	• . Socket, Cover
4	35173-14G00	• . Socket, Cover
5	36118-15H00	• . Cord Assy
6	94443-21H00	• . Tape (5x20x0.4)
7	09320-09039	• . Cushion
8	09471-12188	Bulb (12v55w,h7)
9	09471-12222	Bulb (12v65w,h9)
10	09471-12216	Bulb (12v5w)
11	09136-05062	Screw, Headlamp (5x15)
12	35950-14A10	Reflex Reflector Assy, Fr
13	09119-06104	Bolt, Fr Side


GSX1300RK8 E03 E28\_031  
 HEADLAMP-C

**FIG.32**

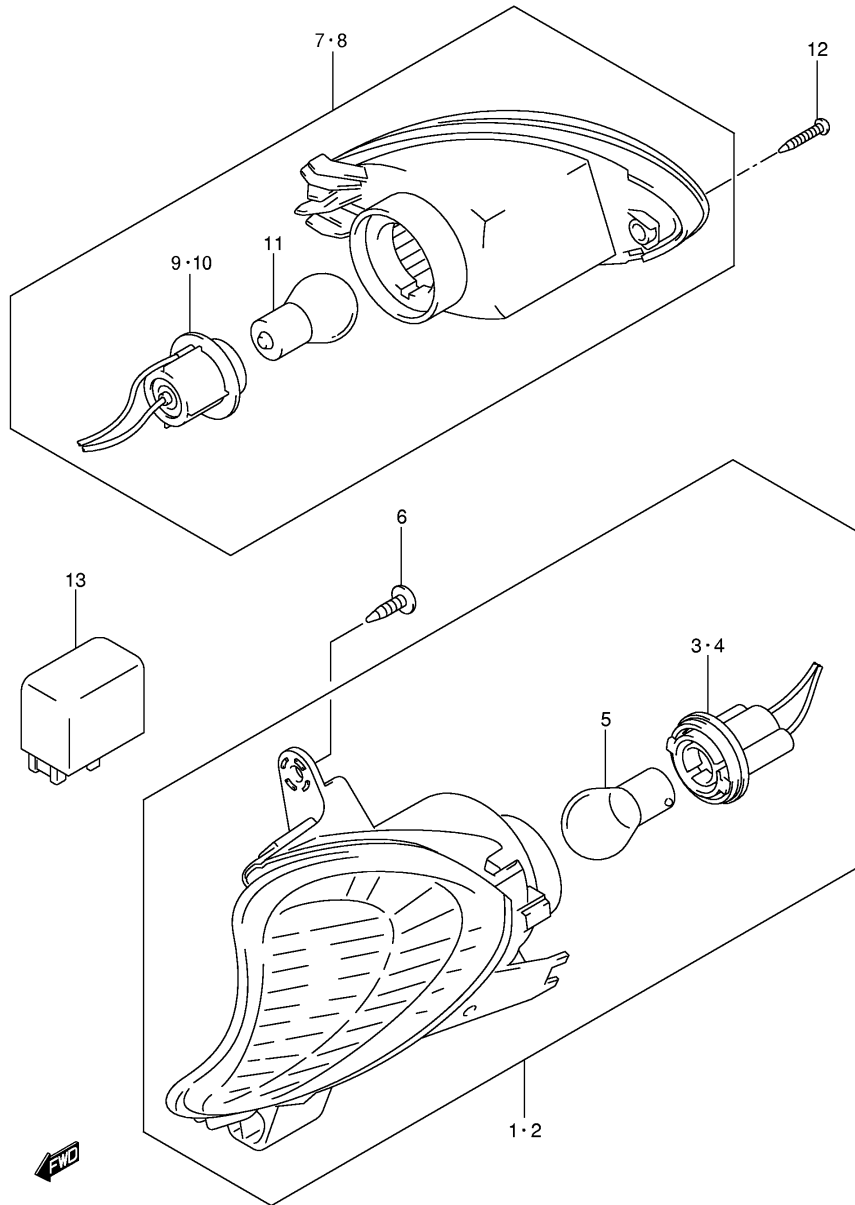

Ref No	Part No	Description
1	35601-15H00	Lamp Assy, Front Turnsignal, R
2	35602-15H00	Lamp Assy, Front Turnsignal, L
3	35618-15H00	• . Socket & Cord, R
4	35638-15H00	• . Socket & Cord, L
5	09471-12186	• . Bulb (12v21w)
6	03541-0516B	Screw, Fr Turnsignal
7	35603-15H00	Lamp Assy, Rear Turnsignal, R
8	35604-15H00	Lamp Assy, Rear Turnsignal, L
9	35658-15H00	• . Socket & Cord, R
10	35678-15H00	• . Socket & Cord, L
11	09471-12186	• . Bulb (12v21w)
12	09132-04032	Screw, Rr Turnsignal
13	38610-03F00	Relay Assy, Turnsignal Lamp


**FIG.33**

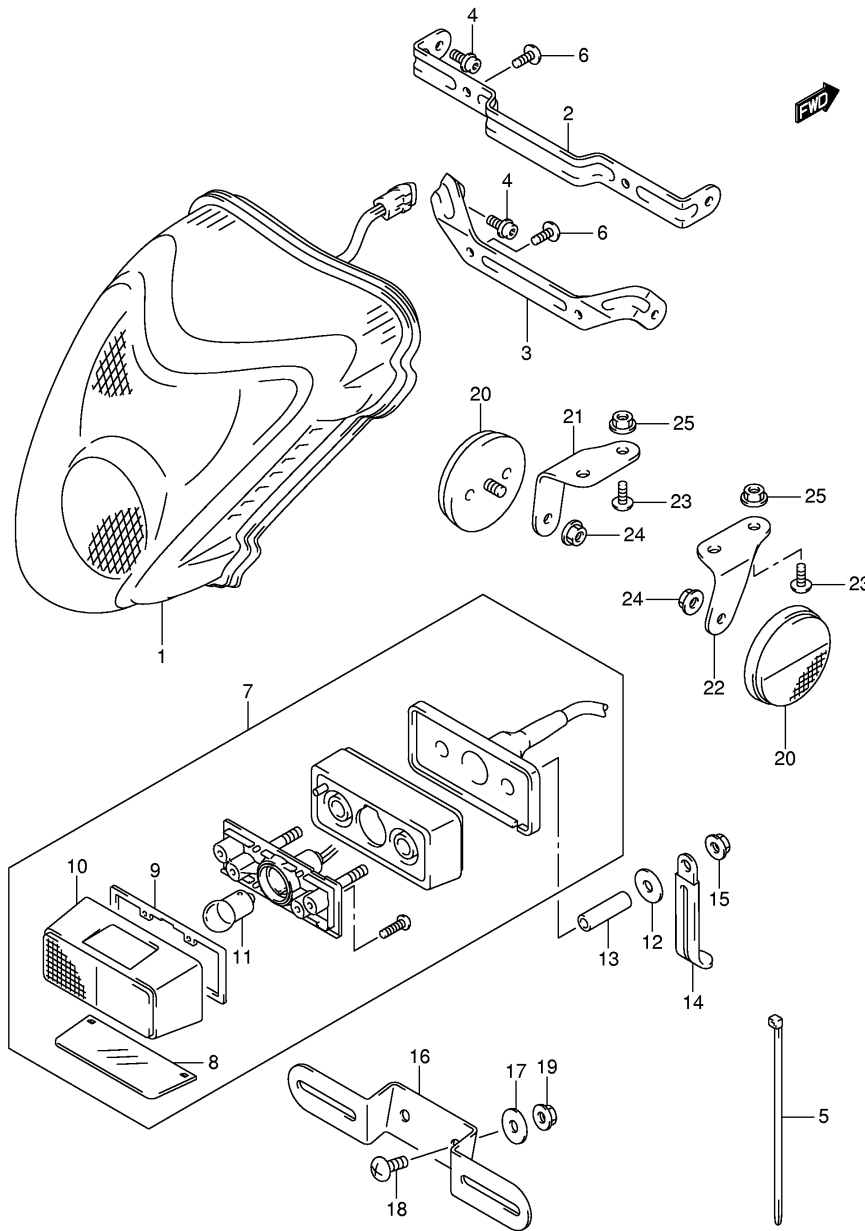

Ref No	Part No	Description
1	35710-15H30	Lamp Assy, Rr Comb
2	35726-15H00	Bracket, Rr Comb
3	35726-15H10	Bracket, Rr Comb
4	09106-05031	Bolt, Rr Comb
5	09407-14407	Clamp, License (I:145)
6	03541-0516A	Screw, Rr Comb
7	35910-41G30	Lamp Assy, License
8	35912-41G00	• . Lens, License
9	35913-41G00	• . Gasket
10	35917-41G00	• . Cover, License Lamp
11	09471-12140	• . Bulb (12v5w,bf150-40160a)
12	09160-06077	Washer, License Lamp
13	09180-06356	Spacer, License Lamp
14	09404-06429	Clamp (I:45)
15	08316-1006A	Nut, License Lamp
16	35927-15H00	Bracket, License Plate
17	09160-06077	Washer (6.5x20x1.2)
18	02142-0616A	Screw
19	08316-1006A	Nut
20	35970-14A20	Reflector Assy, Rr Side
21	35975-15H00	Brkt, Rr Side Rr, R
22	35976-15H00	Brkt, Rr Side Rr, L
23	02142-0612A	Screw Rr Brkt
24	08316-1005A	Nut, Rr Side Rr
25	08316-1006A	Nut, Rr Side Rr Brkt

GSX1300RK8 E03 E28\_033  
 REAR COMBINATION LAMP-C


**FIG.34**

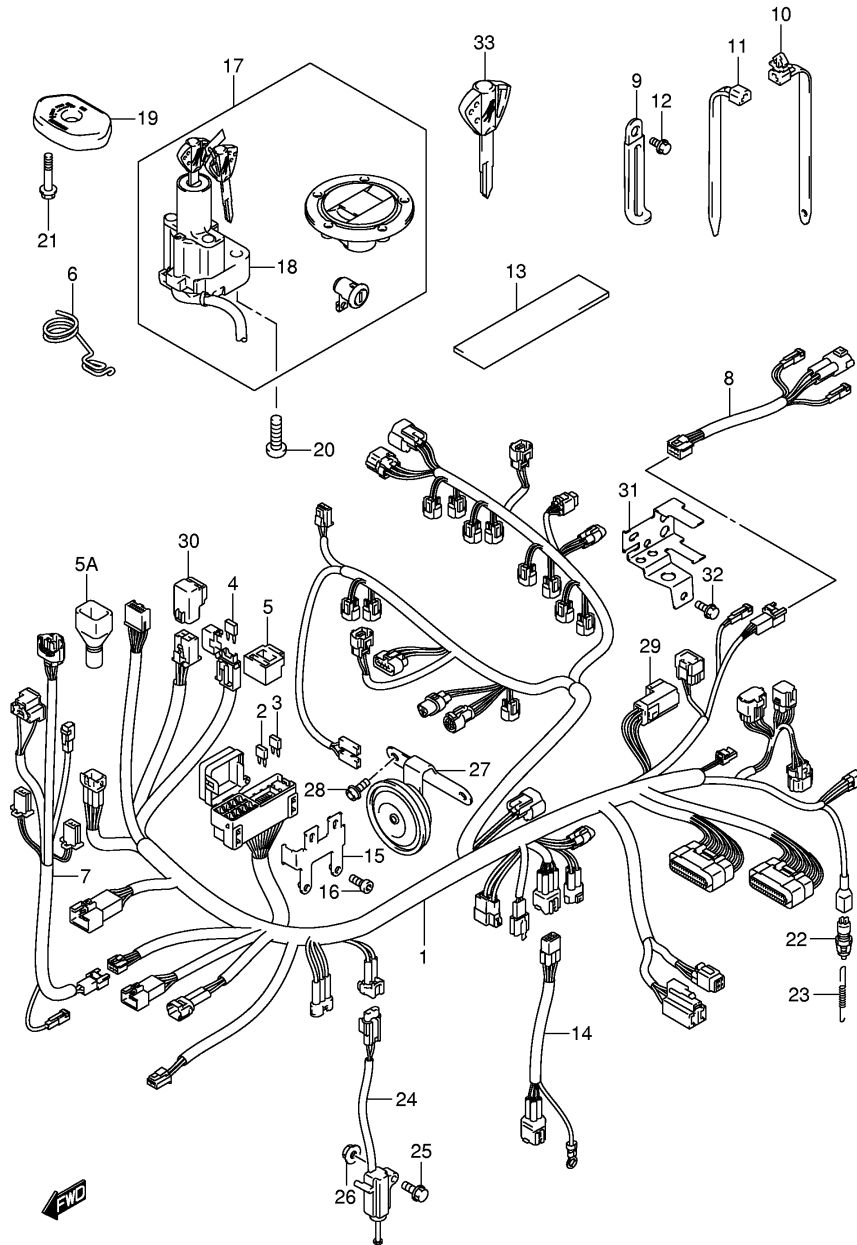

Ref No	Part No	Description
1	36610-15H30	Harness, Wiring
1	36610-15H40	Harness, Wiring
2	09481-10501	• Fuse (10a)
3	09481-15501	• Fuse (15a)
4	09481-15101	• Fuse (15a)
5	36742-39D00	• Holder
5a	36618-33E00	• Boot, Meter
6	36619-15H00	Guide, Wiring Harness
7	36620-15H00	Harness, Wiring No.2
8	36857-15H00	Wire, Rear Comb
9	09404-06429	Clamp (l:45)
9	09404-06435	Clamp (l:135)
10	09407-11402	Clamp (l:90)
11	09407-14403	Clamp (l:125)
11	09407-18402	Clamp (l:165)
12	01550-0610B	Bolt, Wiring Harness
13	36920-45G00	Protector, Wiring Harness
14	36855-15H00	Wire, O2 Sensor
15	36744-24F00	Bracket, Fuse Box
16	07120-0510B	Bolt, Fuse Box
17	37000-15880	Lock Set
17	37000-15890	Lock Set
18	37100-15H30	• Lock Assy, Steering
19	37180-15H00	Cover, Steering Lock
20	09139-08016	Screw, Steering Lock (8x20)
21	01547-0530A	Bolt, Immobilizer
22	37740-19F00	Switch Assy, Stop Lamp
23	09443-06012	Spring
24	37840-24F00	Switch Assy, Side Stand
25	09103-08357	Bolt, Side Stand
26	08316-1008B	Nut, Side Stand
27	38500-24F00	Horn Assy
28	01550-0612B	Bolt, Horn
29	38740-26E00	Relay Assy, Fuel Pump
30	38740-26E00	Relay Assy, Fan Motor
31	38741-24F00	Bracket, Fuel Pump Rly
32	01550-0612B	Bolt, Fuel Pump Rly
33	37146-15H00	Key, Blank


GSX1300RK8 E03 E28\_034  
 WIRING HARNESS-C

**FIG.35**

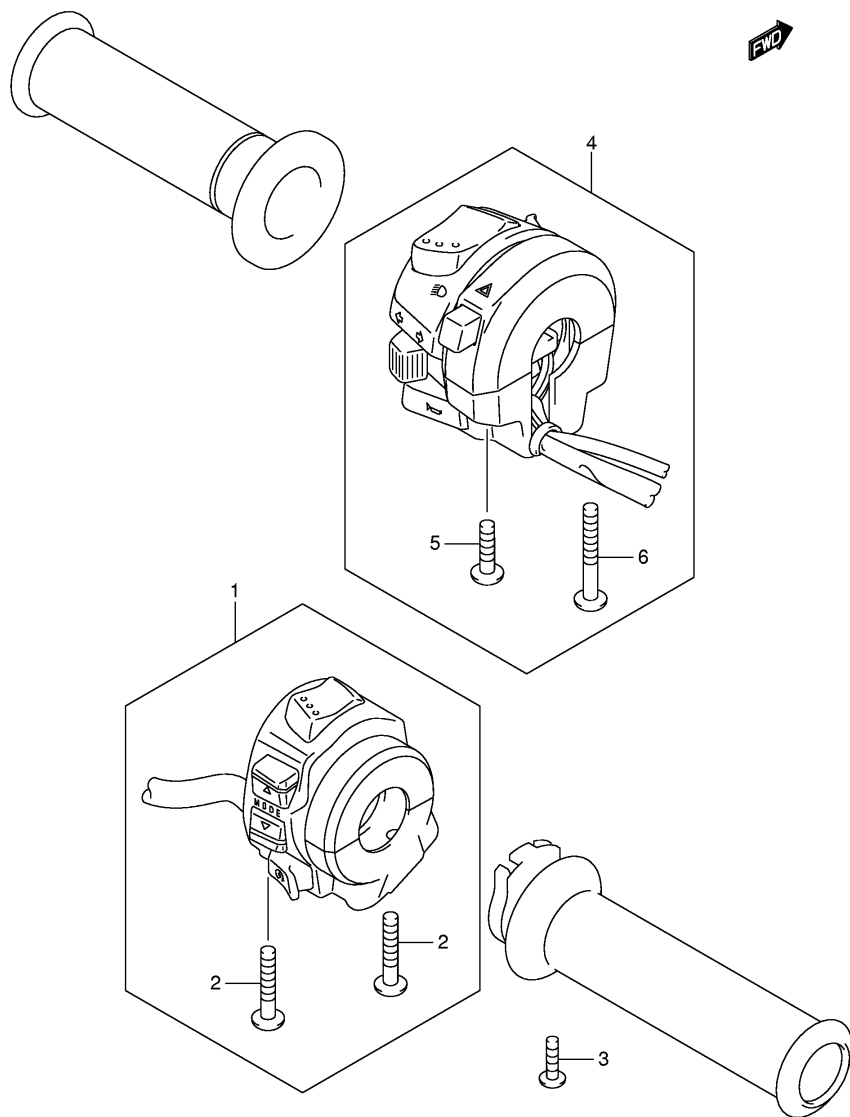


Ref No	Part No	Description
1	37200-15H00	Switch Assy, Handle, R
2	02112-0530B	. Screw
3	02112-0510B	Screw, Throttle Cable
4	37400-18H10	Switch Assy, Handle, L
5	02112-0525B	. Screw
6	02112-05453	. Screw

**FIG.36**

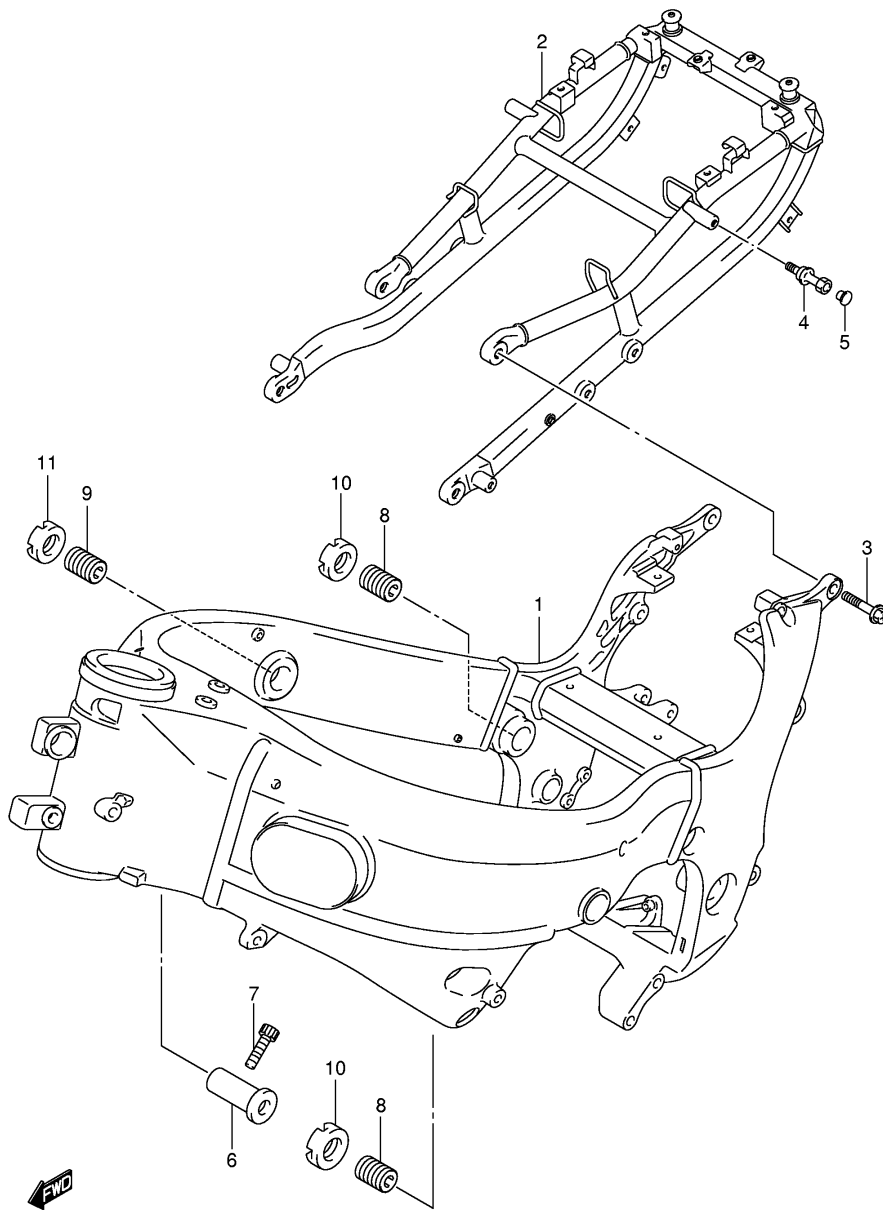


Ref No	Part No	Description
1	41100-15H00-YAP	Frame (black)
2	41200-15H00	Rail, Seat
3	09103-10296	Bolt, Seat Rail
4	46315-24F01	Hook, Seat Rail
5	09250-05009	Cap
6	41911-33E10	Spacer, Engine Mount
7	09106-08105	Bolt, Spacer
8	41921-15H00	Bolt, Crankcase Adjust
9	41921-15H10	Bolt, Crankcase Adjust
10	41922-19F11	Nut, Crank Case Adjust
11	41922-33E10	Nut, Crank Case Adjust

**FIG.37**

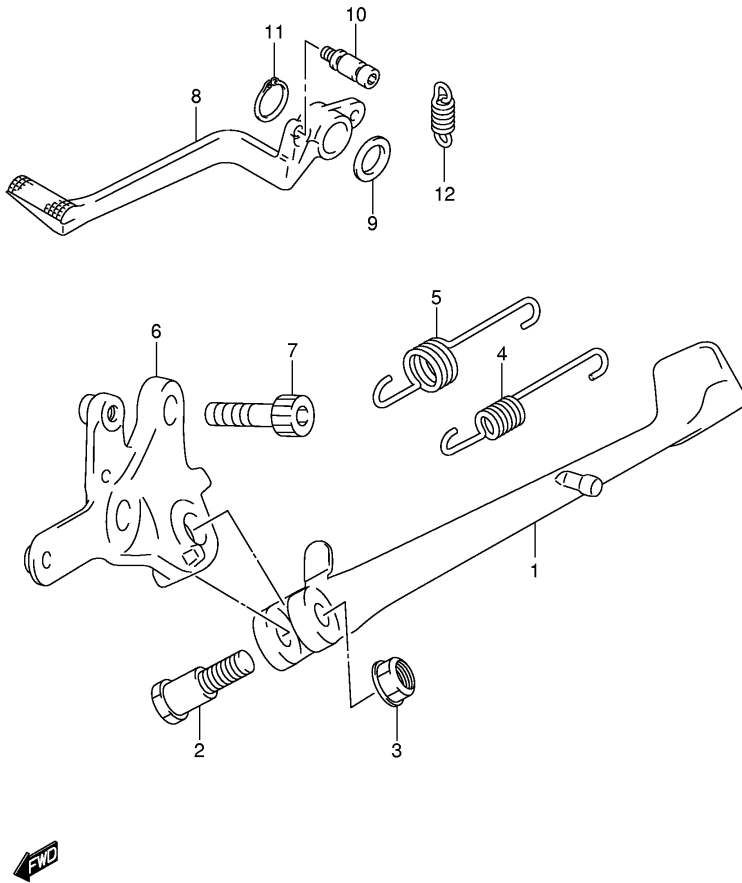

Ref No	Part No	Description
1	42310-24F00	Stand, Prop
2	09111-10059	Bolt, Prop Stand
3	09159-10103	Nut
4	09443-14068	Spring, Inner
5	09443-19015	Spring, Outer
6	42330-24F00	Bracket, Prop Stand
7	09106-12003	Bolt
8	43111-24F00	Pedal, Brake
9	09160-18022	Washer
10	43561-24F00	Hook, Return Spring
11	08331-3118A	Clip
12	09443-13032	Spring, Return


**FIG.38**

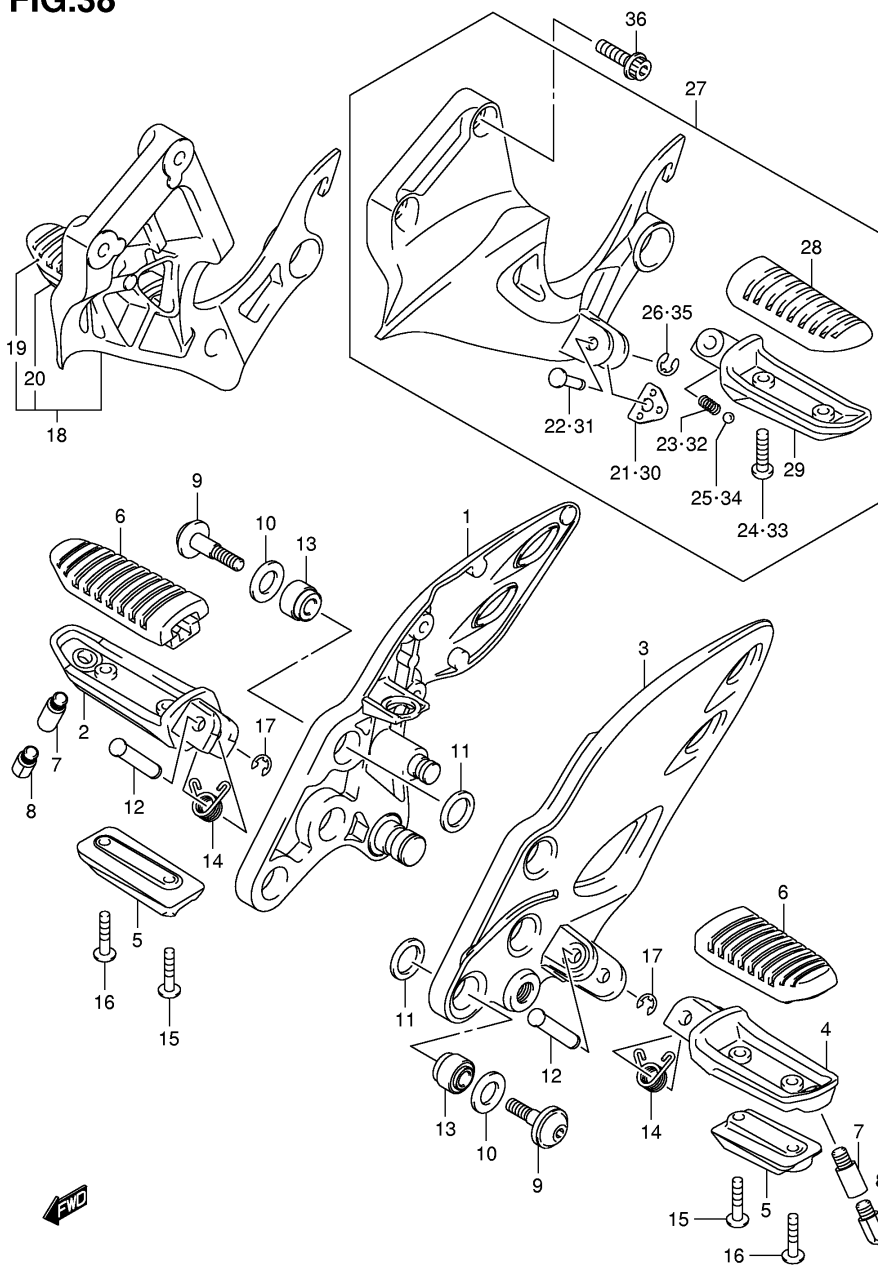

Ref No	Part No	Description
1	43510-15H00	Bracket, Front Footrest Rh
2	43511-44G10	Bar, Front Footrest Rh
3	43521-15H00	Bracket, Front Footrest Lh
4	43521-44G10	Bar, Front Footrest Lh
5	43536-44G00	Balancer, Front Footrest
6	43550-44G10	Rubber, Footrest
7	43576-15H00	Bolt, Bank Sensor
8	43576-15H10	Bolt, Bank Sensor
9	09106-08147	Bolt, Footrest Bracket
10	09161-13004	Washer, Footrest Bush Outer
11	09161-17002	Washer, Footrest Bush Inner
12	09208-08019	Pin
13	09319-08045	Bush
14	09448-14046	Spring
15	02142-0525A	Screw, Inner
16	02142-0530A	Screw, Outer
17	08332-1106A	E Ring
18	43600-15H00	Footrest Assy, Pillion Rh
19	43550-44G00	. Rubber
20	43611-44G00	. Bar, Pillion Footrest Rh
21	43816-01H10	. Plate, Pillion Footrest
22	09208-08020	. Pin
23	09440-05003	. Spring
24	02142-0516A	. Screw
25	06111-07004	. Ball
26	08332-1106A	. E Ring
27	43700-15H00	Footrest Assy, Pillion Lh
28	43550-44G00	. Rubber
29	43621-44G00	. Bar, Pillion Footrest Lh
30	43816-01H10	. Plate, Pillion Footrest
31	09208-08020	. Pin
32	09440-05003	. Spring
33	02142-0516A	. Screw
34	06111-07004	. Ball
35	08332-1106A	. E Ring
36	09106-08121	Bolt, Pillion Footrest


GSX1300RK8 E03 E28\_038  
 FOOTREST-C

FIG.39

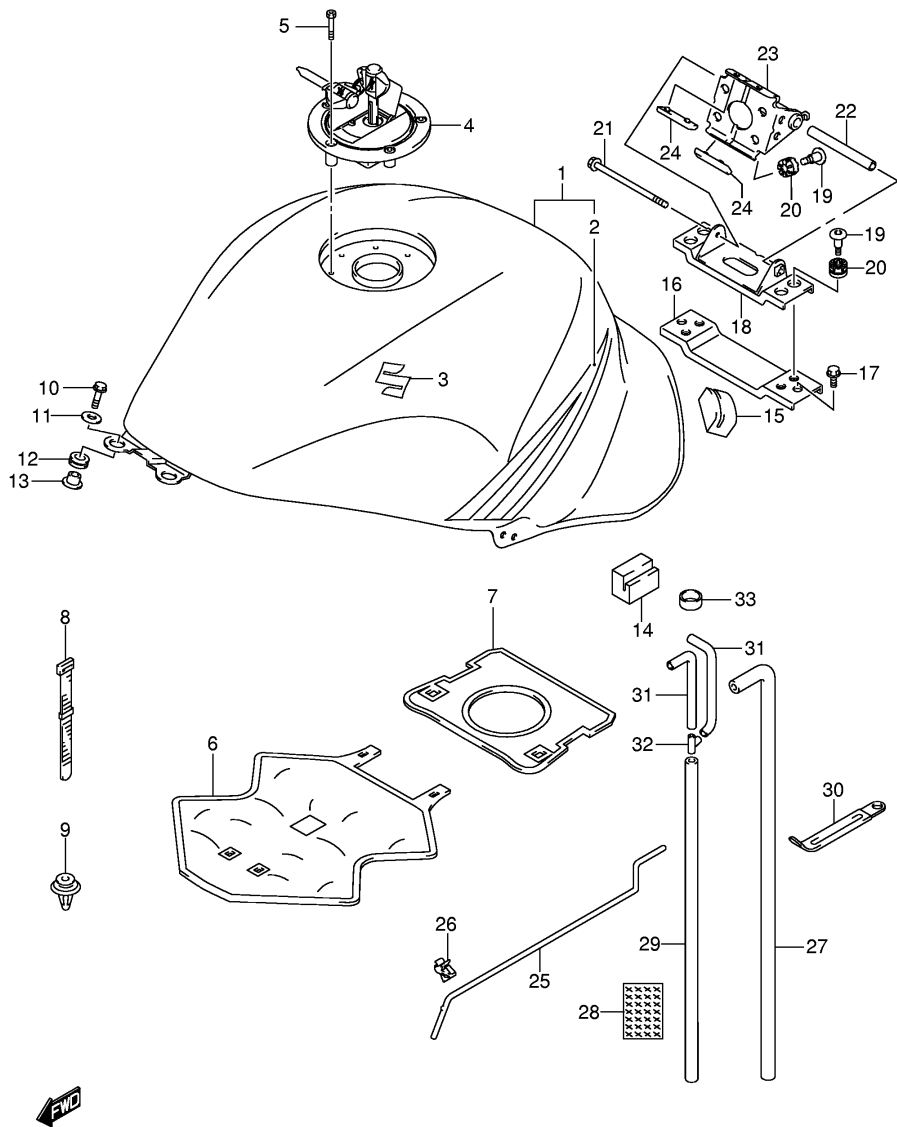

Ref No	Part No	Description
1	44100-15H00-YHF	Tank Assy, Fuel (gray)
1	44100-15H00-YPA	Tank Assy, Fuel (white)
1	44100-15H00-YME	Tank Assy, Fuel (orange)
1	44100-15H00-YKZ	Tank Assy, Fuel (blue)
1	44100-15H20-YHF	Tank Assy, Fuel (gray)
1	44100-15H20-YPA	Tank Assy, Fuel (white)
1	44100-15H20-YME	Tank Assy, Fuel (orange)
1	44100-15H20-YKZ	Tank Assy, Fuel (blue)
2	68110-15H00-EWW	. . Tape Set
2	68110-15H00-EWY	. . Tape Set
2	68110-15H00-EWZ	. . Tape Set
2	68110-15H00-EYA	. . Tape Set
3	68111-18G20	Emblem, "s"
4	44200-16850	Cap Set, Fuel Tank
4	44200-16870	Cap Set, Fuel Tank
5	09106-05017	Bolt
6	44191-15H00	Shield, Heat Front
7	44191-15H10	Shield, Heat Rear
8	09407-18402	Clamp
9	09409-06322	Clip
10	09139-06029	Bolt, Front
11	09160-06054	Washer
12	44511-16G00	Cushion
13	44512-16G00	Spacer
14	44541-24F00	Cushion, Side
15	44543-15H00	Cushion, Rear
16	44555-15H00	Bracket, Rear Lower
17	01550-0812B	Bolt
18	44550-15H00	Bracket, Rear Upper
19	09139-06132	Bolt
20	09320-08071	Cushion
21	07120-0695B	Bolt, Joint
22	44561-18G00	Spacer, Joint
23	44530-15H00	Bracket, Rear Front
24	45149-44G00	Cushion, Bracket
25	44574-35F00	Stay
26	09403-05310	Clamp, Stay
27	44423-15H00	Hose, Drain
28	44427-15H00	Shield, Drain Hose Heat
28	44427-15H10	Shield, Drain Hose Heat
29	44424-15H00	Hose, Breather
30	09404-06431	Clamp, Drain Hose
31	44424-15H10	Hose, Breather No.2
32	09367-06007	3 Way
33	09352-12163-600	Hose, Joint (1:600->0)

**FIG.40**

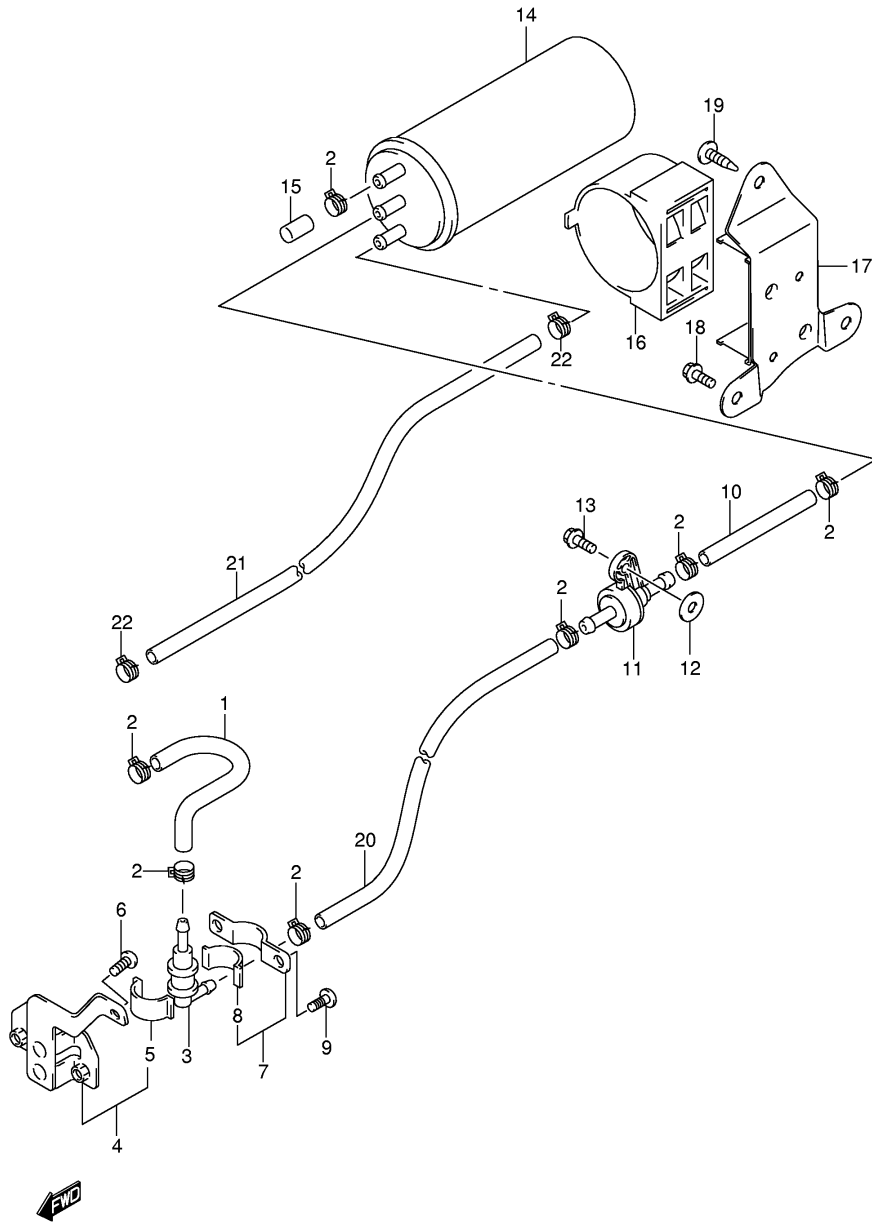


Ref No	Part No	Description
1	44434-15H00	Hose, Tank & Valve
2	09401-11413	Clip
3	44240-17C00	Valve, Breather
4	44890-24F00	Plate, Breather Valve
5	44894-24A00	• Cushion
6	02142-0610B	Screw, Plate
7	44892-24A00	Plate, Valve No.2
8	44894-24A00	• Cushion
9	02142-0408B	Screw
10	44435-15H00	Hose, 2 Way & Breather
11	44240-24F00	Valve, 2 Way & Canister
12	09160-06077	Washer
13	01550-0616B	Bolt
14	17210-15H00	Canister
15	09251-07003	Cap
16	44883-06G00	Cushion, Canister
17	44880-15H00	Bracket, Canister
18	01550-0612B	Bolt, Bracket
19	02142-0610B	Screw, Holder
20	44437-15H00	Hose, Canister & 2 Way Valve
21	09359-54113-700	Hose, Canister & Carb
22	09401-12404	Clip

GSX1300RK8 E03 E28\_040  
 EVAP SYSTEM-C




**FIG.42**

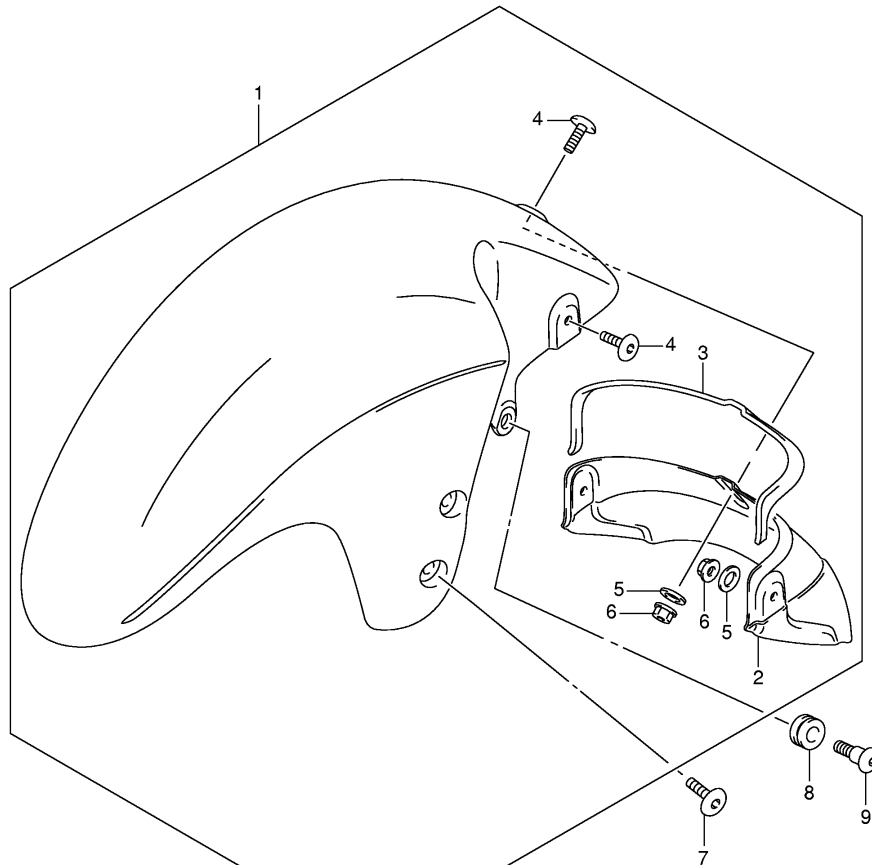

Ref No	Part No	Description
1	53100-15H00-YHF	Fender, Front (gray)
1	53100-15H00-YPA	Fender, Front (white)
1	53100-15H00-YAY	Fender, Front (black)
1	53100-15H00-YKZ	Fender, Front (blue)
2	53331-15H00	• . Mudguard, Front Fender
3	94424-05H00	• . Cushion
4	09139-06129	• . Bolt
5	09160-06129	• . Washer
6	08319-3106A	• . Nut
7	09139-06131	Screw, Front
8	09320-09016	Cushion
9	09139-06146	Screw, Rear


**FIG.43**

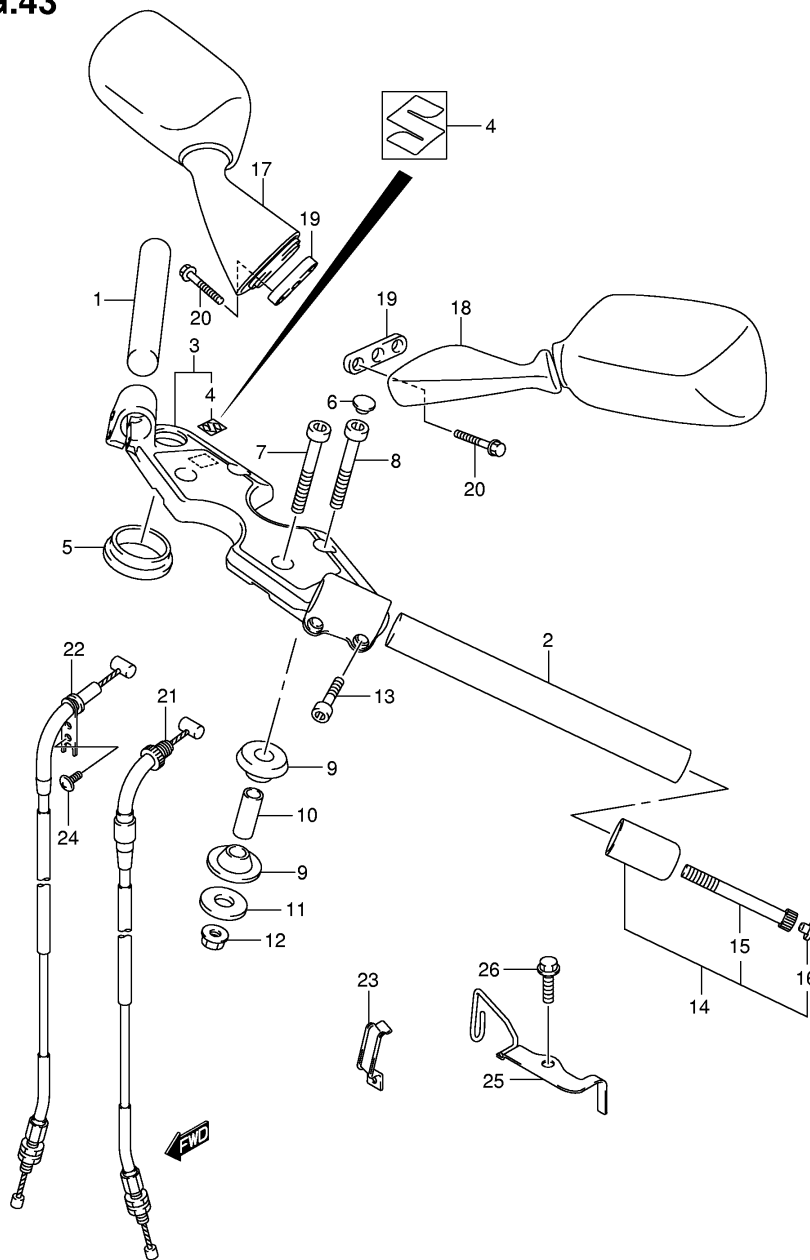

Ref No	Part No	Description
1	56111-15H00	Handlebar, Rh
2	56151-15H00	Handlebar, Lh
3	56210-15H00	Holder, Handle
4	68281-35F00	• Emblem
5	56247-24F00	Cushion, Handle Holder
6	56246-24F00	Cap, Bolt
7	07130-1065B	Bolt, Front
8	07130-10607	Bolt
9	56240-01D00	Cushion
10	56243-01D00	Spacer
11	09160-10094	Washer
12	08319-3110A	Nut
13	09106-06090	Bolt, Clamp
14	56200-15830	Balancer Set, Handlebar
15	07130-0660B	• Bolt
16	09250-05009	• Cap
17	56500-24F00	Mirror Assy, Rear View Rh
18	56600-24F00	Mirror Assy, Rear View Lh
19	94576-24F00	Cushion
20	01547-0630B	Bolt
21	58300-15H00	Cable Assy, Throttle No.1
22	58300-15H10	Cable Assy, Throttle No.2
23	58623-24F10	Guide, Cable
24	02142-0510A	Screw, Case
25	58620-15H00	Guide, Cable
26	01547-0612B	Bolt

GSX1300RK8 E03 E28\_043  
 HANDLEBAR-C

**FIG.44**

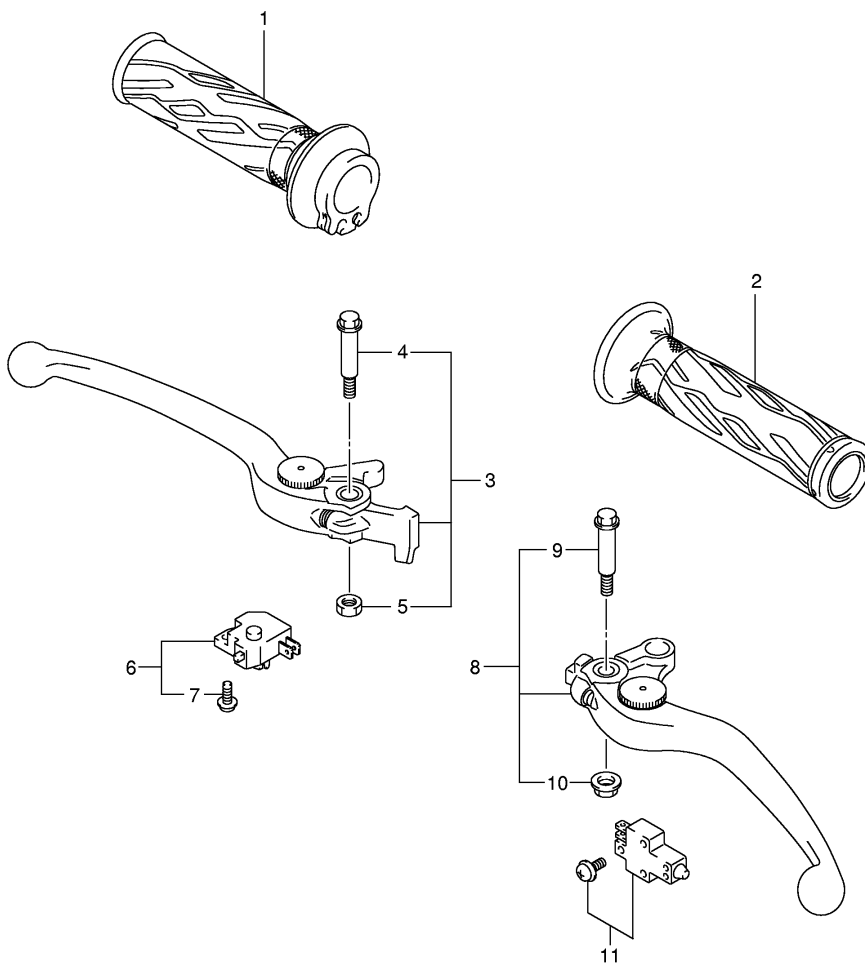


Ref No	Part No	Description
1	57110-21H00	Grip, Throttle
2	57211-21H00	Grip, L
3	57300-14G20	Lever Assy, Brake
4	57431-17H00	• Bolt, Lever Pivot
5	08319-2106A	• Nut, Lever Pivot
6	57460-17C11	Switch Assy, Front Brake
7	57465-17C00	• Screw
8	57500-24F20	Lever Assy, Clutch
9	57431-17H00	• Bolt, Lever Pivot
10	08316-1606B	• Nut, Lever Pivot
11	57560-02FA0	Switch Assy, Clutch




Ref No	Part No	Description
1	63111-15H00-291	Fender, Rear (black)
2	01550-0616A	Bolt
3	63130-15H00	Bracket, Front
4	63411-24F00	Mudguard, Rear
5	09409-07333	Clip
6	63421-24F00	Mudguard, Rear Upper
7	63120-15H00	Bracket, Rear Fender
8	01550-0616A	Bolt
9	63112-15H00-291	Fender, Rear (black)
10	09111-06099	Bolt
11	33652-49000	Cushion
12	47851-15H00	Shield, Inner
13	94479-35F00	Clip
14	09800-21039	Tool Assy
15	09280-61002	O Ring
16	63113-15H00	Cushion, Fender
17	63192-16GA0	Cushion, Cover
18	09321-06028	Cushion, License Plate
19	09160-06126	Washer, Side Bracket

**FIG.45**

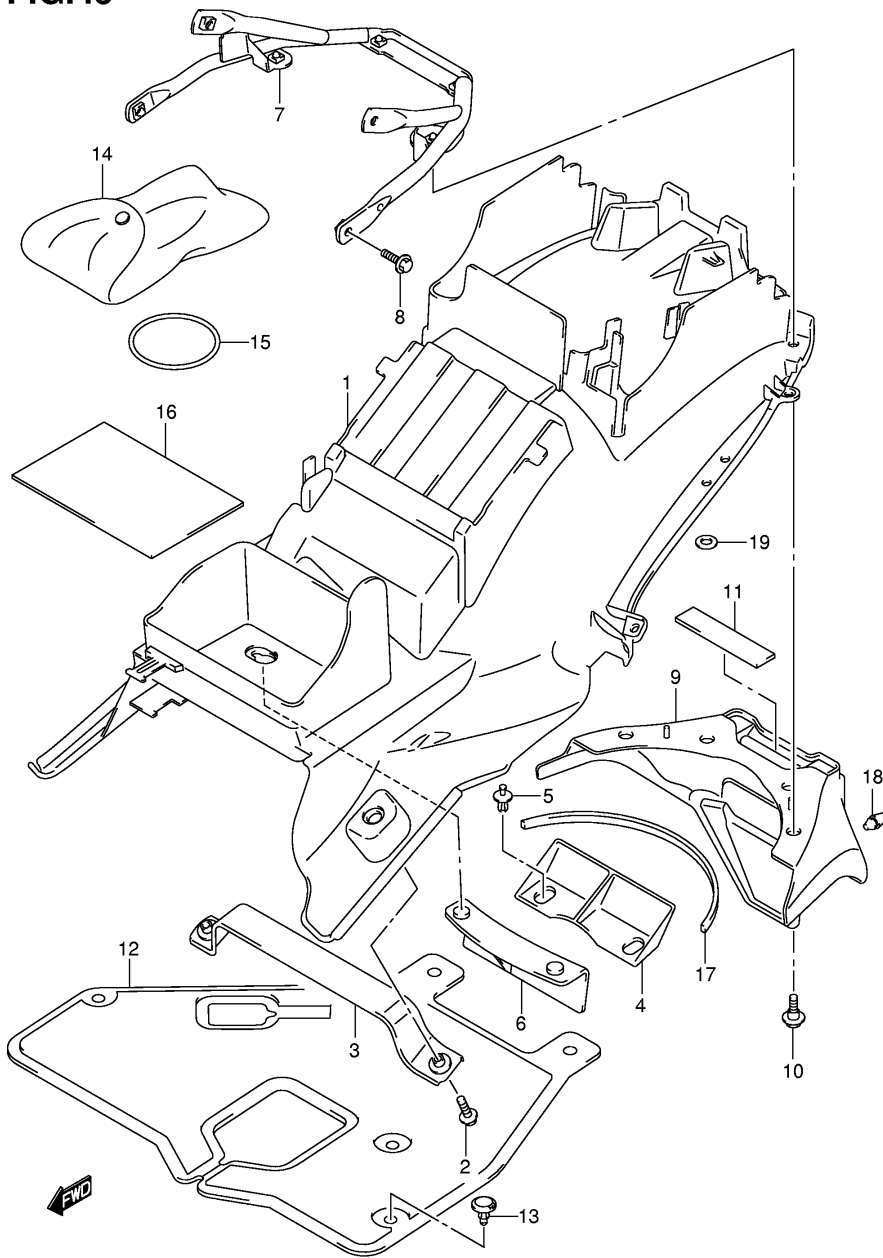


GSX1300RK8 E03 E28\_045  
 REAR FENDER-C

**FIG.46**

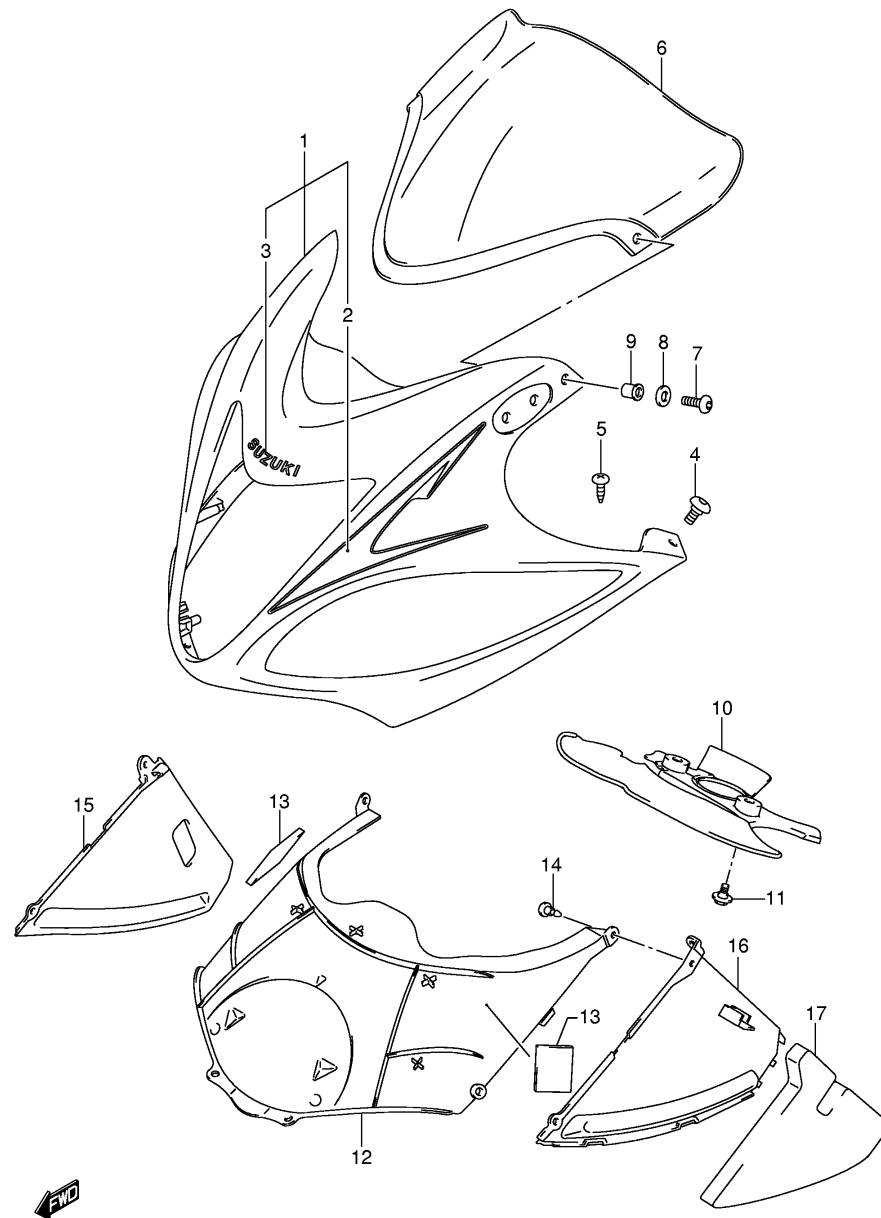


Ref No	Part No	Description
1	94401-15H00-YHF	Body, Cowling (gray)
1	94401-15H00-YPA	Body, Cowling (white)
1	94401-15H00-YME	Body, Cowling (orange)
1	94401-15H00-YKZ	Body, Cowling (blue)
2	68270-15H00-CVN	. . Tape Set
2	68270-15H00-EYC	. . Tape Set
2	68270-15H00-EYK	. . Tape Set
2	68270-15H00-EYD	. . Tape Set
3	68281-24F10-YD8	. . Emblem (silver)
3	68281-24F10-019	. . Emblem (black)
4	09139-05077	Screw
5	03541-0516B	Screw, Intake Pipe
6	94611-15H00	Windscreen
7	09139-05025	Screw, Screen
8	08322-0105B	Washer
9	09159-05019	Nut
10	94458-15H00	Cover, Lower Bracket
11	63161-43E00	Bolt
12	94419-15H00	Cover, Body Cowl
13	36930-82010	Cushion, Cover
14	09409-06314-5PK	Clip (black)
15	94461-15H00	Cowl, Inner Rh
16	94462-15H00	Cowl, Inner Lh
17	94463-15H00	Cushion, Lh

**FIG.47**

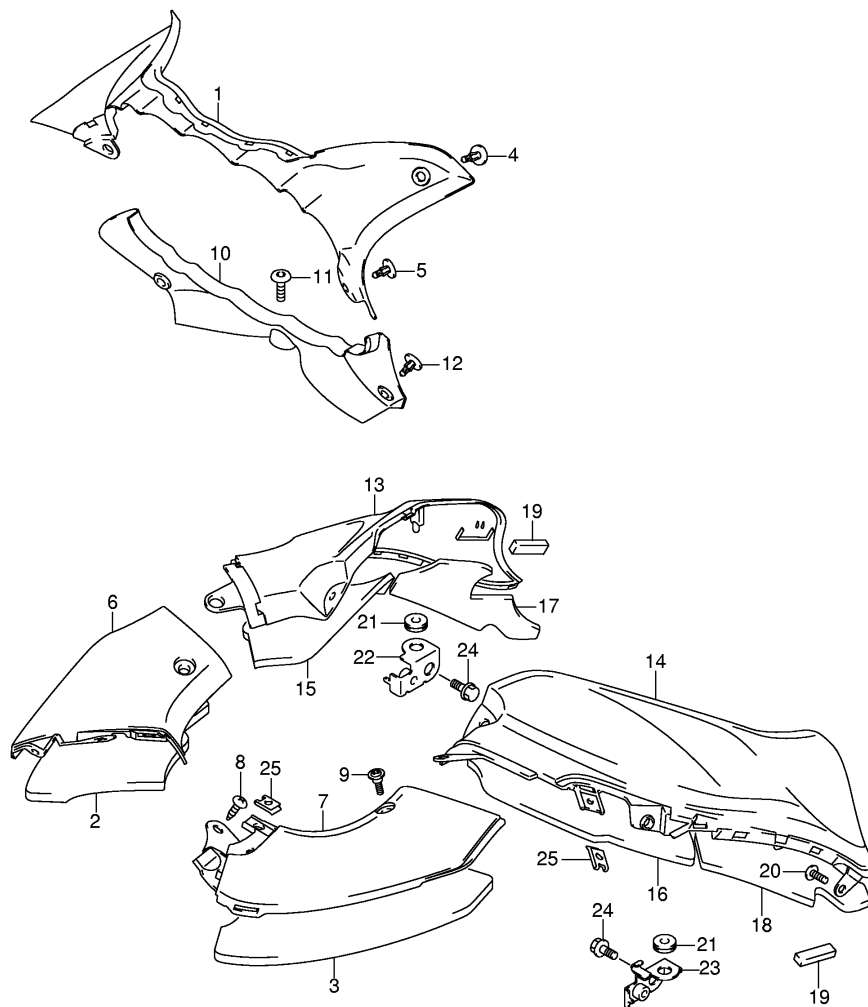


Ref No	Part No	Description
1	94424-15H00	Panel, Meter Upper
2	94643-15H00	Cushion, Rh
3	94644-15H00	Cushion, Lh
4	09409-06314-5PK	Clip (black)
5	09409-07333	Clip
6	94641-15H00	Panel, Meter Rh
7	94651-15H00	Panel, Meter Lh
8	03241-1516B	Screw, Center
9	09139-05504	Screw, Side
10	94425-15H00	Panel, Meter Rear
11	09139-05503	Screw
12	09409-08327	Clip
13	94621-15H00	Panel, Side Rh
14	94631-15H00	Panel, Side Lh
15	94622-15H00	Cushion, Front Rh
16	94632-15H00	Cushion, Front Lh
17	94623-15H00	Cushion, Rear Rh
18	94633-15H00	Cushion, Rear Lh
19	33652-02H00	Cushion
20	03541-0516B	Screw, Side
21	09320-08018	Cushion
22	94520-24F00	Bracket, Rh
23	94530-24F00	Bracket, Lh
24	01550-0620B	Bolt, Bracket
25	94484-24F00	Nut

**FIG.48**

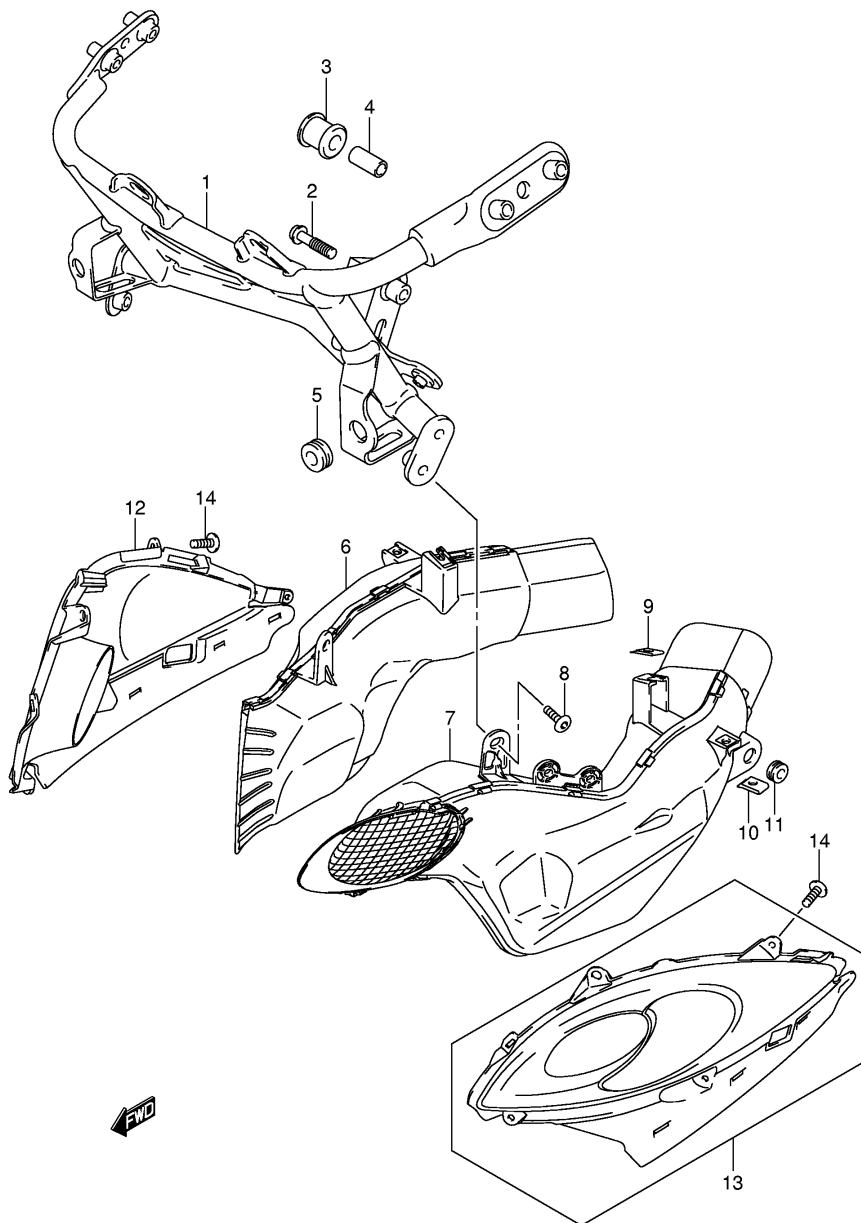


Ref No	Part No	Description
1	94510-15H00	Brace, Cowling
2	09103-08367	Bolt, Brace
3	94541-41C00	Cushion, Upper
4	09180-08215	Spacer, Uper
5	09320-08028	Cushion, Headlamp
6	94420-15H00	Pipe, Intake Rh
7	94430-15H00	Pipe, Intake Lh
8	94423-15H00	Screw
9	94484-24F00	Nut, Meter Panel
10	09148-05038	Nut, Rear
11	09320-08028	Cushion, Side
12	94670-15H00-YHF	Cover, Intake Rh (gray)
12	94670-15H00-YPA	Cover, Intake Rh (white)
12	94670-15H00-YME	Cover, Intake Rh (orange)
12	94670-15H00-YKZ	Cover, Intake Rh (blue)
13	94680-15H00-YHF	Cover, Intake Lh (gray)
13	94680-15H00-YPA	Cover, Intake Lh (white)
13	94680-15H00-YME	Cover, Intake Lh (orange)
13	94680-15H00-YKZ	Cover, Intake Rh (blue)
14	03541-0516B	Screw

**FIG.49**

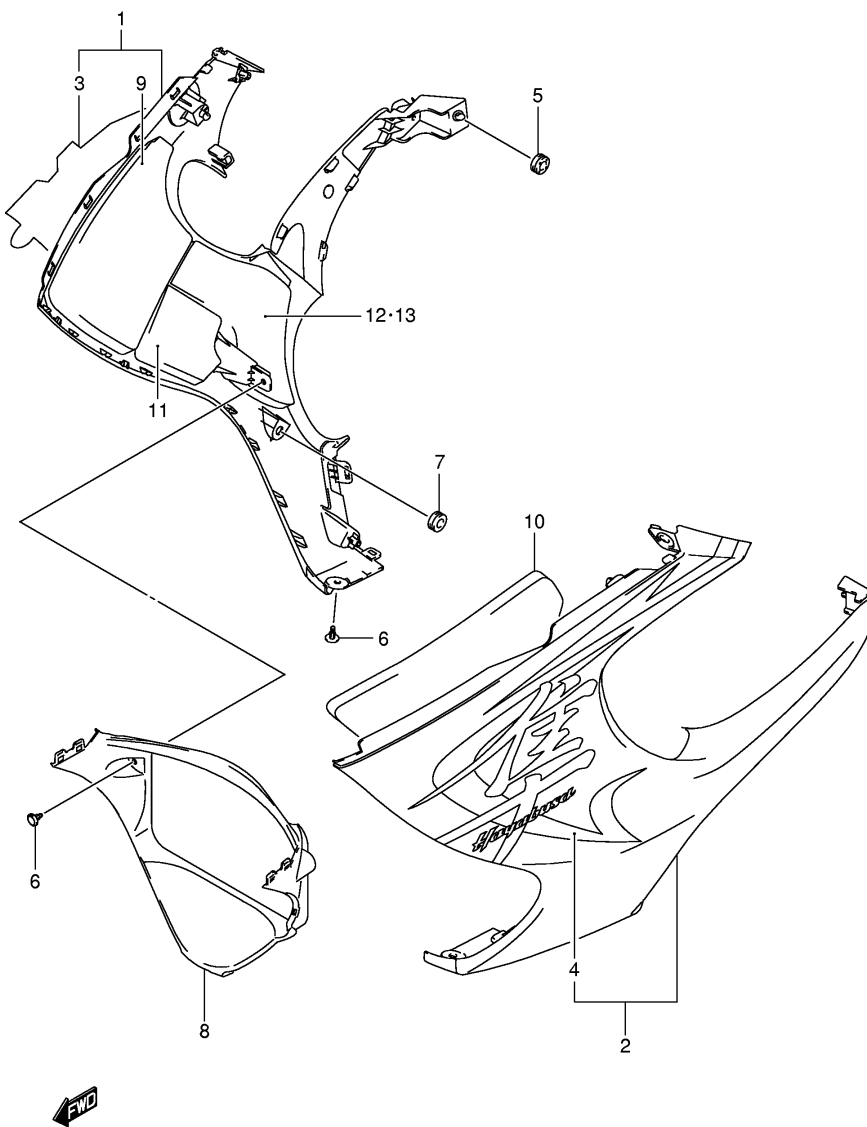


Ref No	Part No	Description
1	94450-15H00-YHF	Cowling, Side Rh (gray)
1	94450-15H00-YPA	Cowling, Side Rh (white)
1	94450-15H00-YME	Cowling, Side Rh (orange)
1	94450-15H00-YKZ	Cowling, Side Rh (blue)
2	94460-15H00-YHF	Cowling, Side Lh (gray)
2	94460-15H00-YPA	Cowling, Side Lh (white)
2	94460-15H00-YME	Cowling, Side Lh (orange)
2	94460-15H00-YKZ	Cowling, Side Lh (blue)
3	68680-15H00-EYL	. . Tape Set, Rh
3	68680-15H00-EYM	. . Tape Set, Rh
3	68680-15H00-EYN	. . Tape Set, Rh
3	68680-15H00-EYP	. . Tape Set, Rh
4	68690-15H00-EYL	. . Tape Set, Lh
4	68690-15H00-EYM	. . Tape Set, Lh
4	68690-15H00-EYN	. . Tape Set, Lh
4	68690-15H00-EYP	. . Tape Set, Lh
5	09320-08028	Cushion, Upper
6	94479-35F00	Clip
7	09321-10018	Cushion, Lower
8	94498-15H00	Cowling, Under Center
9	94476-15H00	Cushion, Side Upper Rh
10	94486-15H00	Cushion, Side Upper Lh
11	94476-15H10	Cushion, Side Lower
12	94474-15H00	Shield, Side Rh
13	94484-15H00	Shield, Side Lh

**FIG.50**

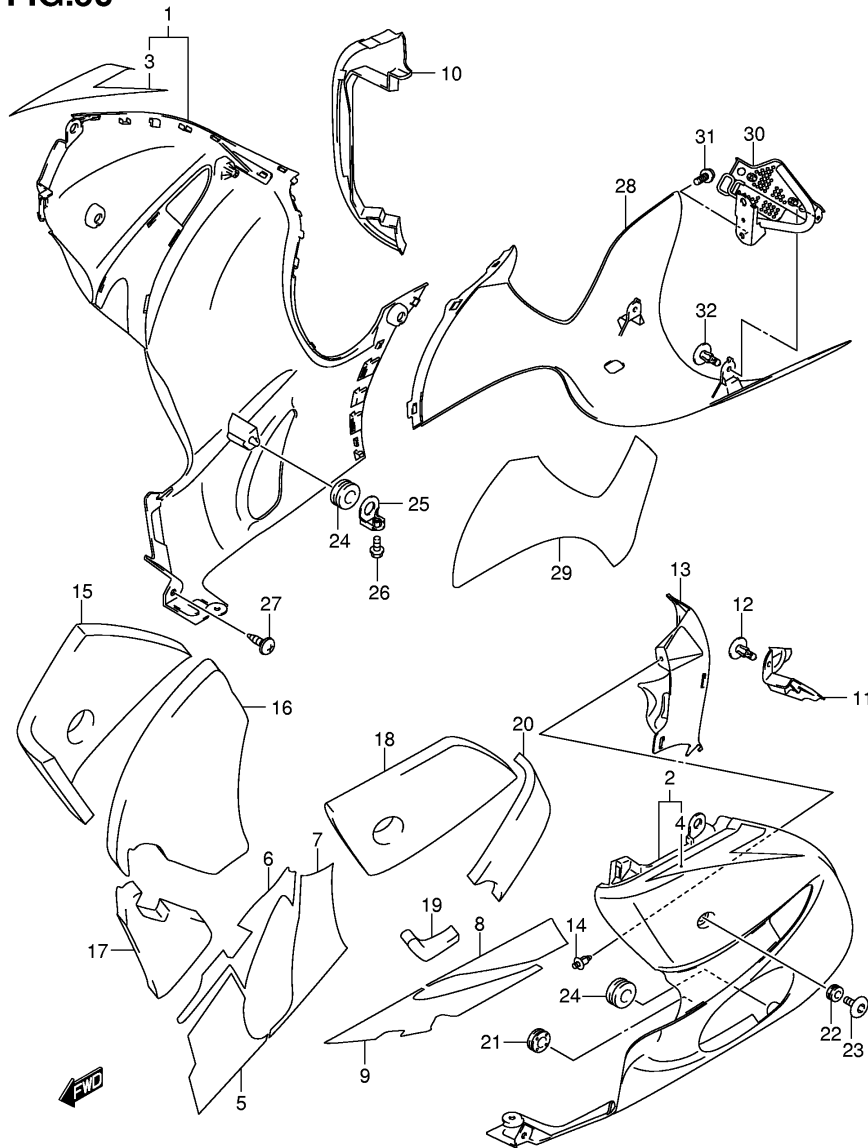


Ref No	Part No	Description
1	94470-15H00-YAY	Cowling, Under Rh (black)
1	94470-15H00-YMD	Cowling, Under Rh (silver)
1	94470-15H00-4CX	Cowling, Under Rh (black)
1	94470-15H00-4DX	Cowling, Under Rh (black)
2	94480-15H00-YAY	Cowling, Under Lh (black)
2	94480-15H00-YMD	Cowling, Under Lh (silver)
2	94480-15H00-4CX	Cowling, Under Lh (black)
2	94480-15H00-4DX	Cowling, Under Lh (black)
3	68185-15H00-EYR	. . Tape, Under Rh
3	68185-15H00-EYS	. . Tape, Under Rh
3	68185-15H00-EYT	. . Tape, Under Rh
3	68185-15H00-EYU	. . Tape, Under Rh
4	68195-15H00-EYR	. . Tape, Under Lh
4	68195-15H00-EYS	. . Tape, Under Lh
4	68195-15H00-EYT	. . Tape, Under Lh
4	68195-15H00-EYU	. . Tape, Under Lh
5	94472-15H00	Shield, Heat Front Rh
6	94472-15H20	Shield, Heat Center Rh
7	94472-15H10	Shield, Heat Rear Rh
8	94482-15H00	Shield, Heat Front Lh
9	94482-15H10	Shield, Heat Rear Lh
10	94475-15H00	Protector, Rh
11	94485-15H00	Protector, Rh
12	94479-35F00	Clip, Lh
13	94489-15H00	Cover, Under Lh
14	09409-06314-5PK	Clip, Lh (black)
15	94478-15H00	Cushion, Upper Rh
16	94478-15H10	Cushion, Center Rh
17	94478-15H20	Cushion, Rear Rh
18	94488-15H00	Cushion, Upper Lh
19	94488-15H10	Cushion, Center Lh
20	94488-15H20	Cushion, Rear Lh
21	94479-15H00	Cushion, Lh
22	09320-09016	Cushion, Upper
23	09139-06126	Screw
24	09320-08028	Cushion, Plate
25	94560-15H00	Plate, Under Cowl
26	01550-0612B	Bolt, Plate
27	03541-0516B	Screw
28	94661-15H00-YAY	Cowling, Under Rear (black)
28	94661-15H00-YMD	Cowling, Under Rear (silver)
29	94667-15H00	Shield, Heat
30	94540-15H00	Bracket, Rear Cowling
31	01550-0816B	Bolt
32	94479-35F00	Clip

**FIG.51**

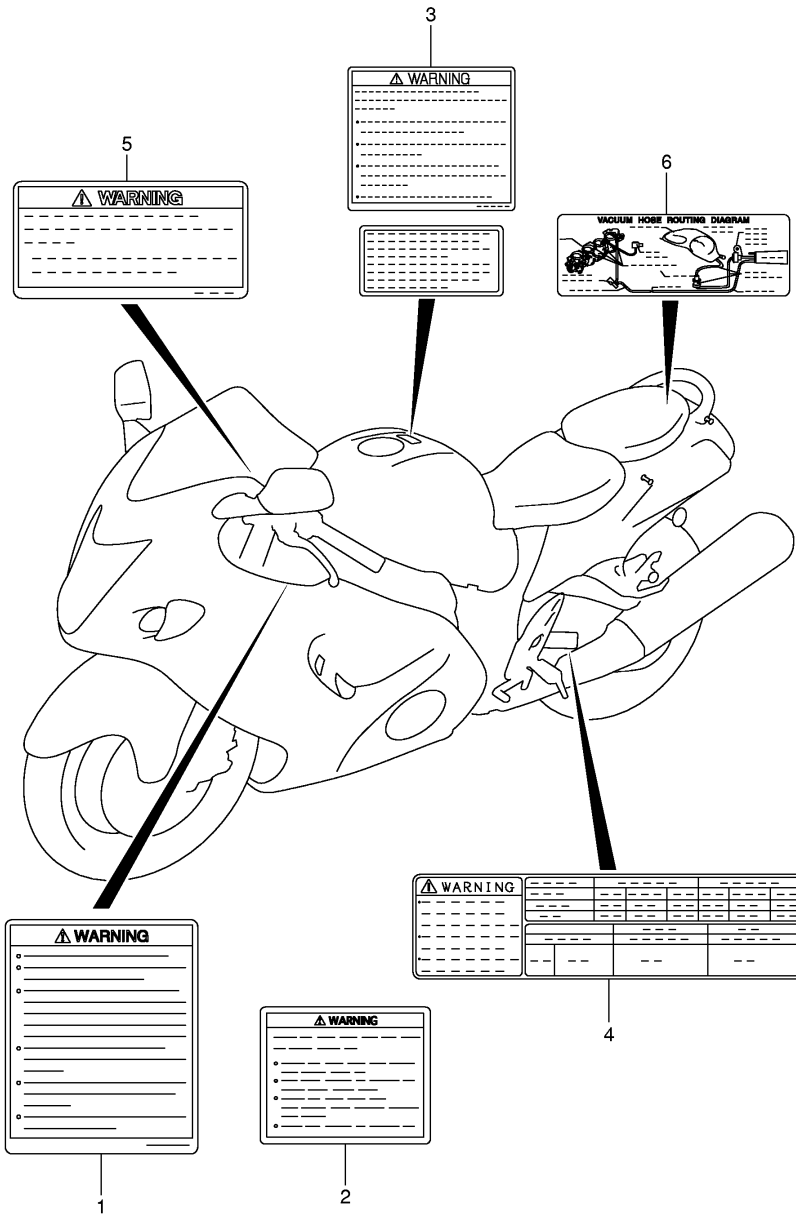


Ref No	Part No	Description
1	68319-29F00	Label, Warning
1	68319-29F10	Label, Warning
2	68922-29F00	Label, Screen
2	68922-29F30	Label, Screen (french)
3	68353-26E02	Label, Manual Notice
4	68332-24F60	Label, Tire
4	68332-24F50	Label, Tire
5	68613-18E00	Label, Steering
5	68613-24F00	Label, Steering
6	68387-15H00	Label, Routing
7	99011-15H50-03A	Manual, Owner's
7	99011-15H50-01A	Manual, Owner's
7	99011-15H50-01F	Manual, Owner's

**FIG.52**

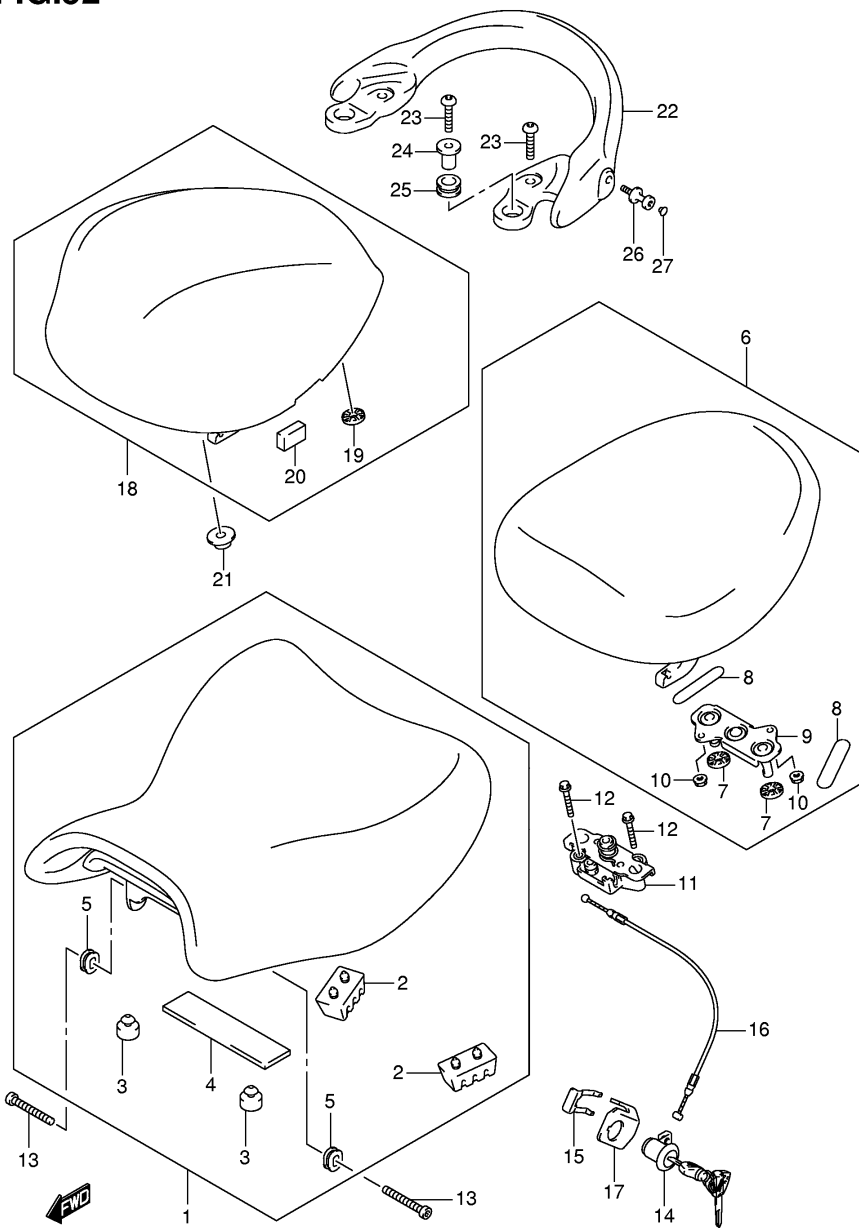


Ref No	Part No	Description
1	45100-15H00-EJY	Seat Assy
2	45149-15H00	• Cushion
3	09321-10011	• Cushion
4	45117-15H00	• Cushion
5	45118-15H00	• Cushion
6	45300-15H00-U6H	Seat Assy, Pillion (black)
7	45213-42F00	• Cushion
8	45149-15H00	• Cushion
9	45290-15H00	• Striker, Seat Lock
10	08319-3106A	• Nut
11	45220-15H00	Bracket, Seat Support
12	01547-0630A	Screw
13	45191-15H00	Bolt, Seat Front
14	95700-14810	Lock Assy, Seat
15	45289-11F00	Plate, Seat Lock
16	45280-18G00	Cable, Seat Lock
17	45288-14F20	Guide, Cable
18	45550-15H00-YAY	Box, Seat Tail (black)
18	45550-15H00-YHF	Box, Seat Tail (gray)
18	45550-15H00-YKZ	Box, Seat Tail (blue)
18	45550-15H00-YPA	Box, Seat Tail (white)
19	45213-42F00	• Cushion
20	45553-15H00	• Cushion
21	47190-24F01	Washer
22	46211-15H00-YAY	Handle, Pillion Rider (black)
22	46211-15H00-YHF	Handle, Pillion Rider (gray)
22	46211-15H00-YKZ	Handle, Pillion Rider (blue)
22	46211-15H00-YPA	Handle, Pillion Rider (white)
23	09106-08137	Bolt
24	47190-24F11	Washer, Pillion Rider Hdl Fr
25	46217-24F00	Cushion, Pillion Rider Hdl
26	46212-24F11	Hook, Handle
27	09250-05009	Cap

**FIG.53**

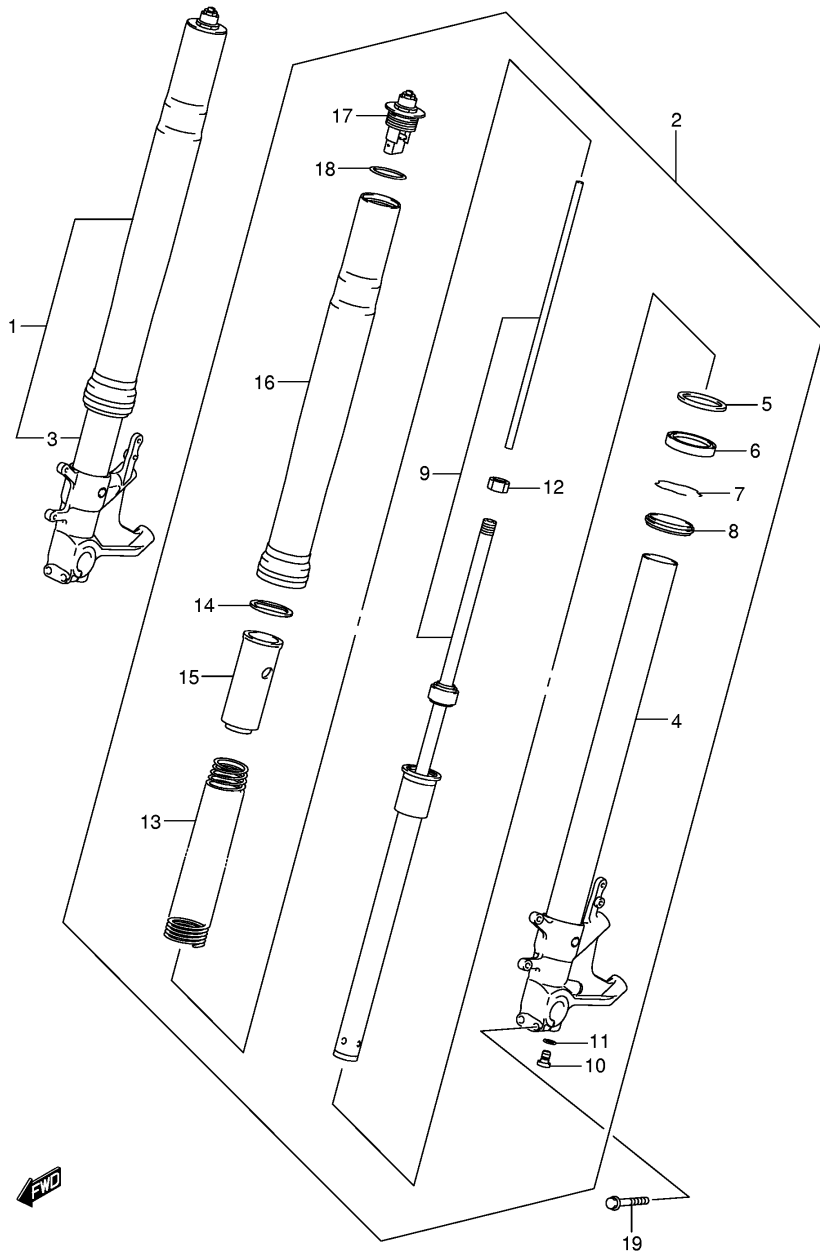


Ref No	Part No	Description
1	51103-24F50	Damper Assy, Front Fork Rh
2	51104-24F50	Damper Assy, Front Fork Lh
3	51110-24F50	. Tube, Inner Rh
4	51120-24F50	. Tube, Inner Lh
5	51158-14200	. Washer
6	51153-41G00	. Seal, Oil
7	51156-14200	. Ring, Stopper
8	51173-41G00	. Seal, Dust
9	51146-24F50	. Cylinder
10	51147-24F50	. Bolt
11	51148-41310	. Gasket
12	51352-13A60	. Nut
13	51171-24F50	. Spring, Front
14	51158-40F30	. Guide, Spring
15	51176-40F30	. Spacer, Spring
16	51130-24F50	. Tube, Outer (bronze)
17	51351-24F50	. Cap, Front Fork
18	62278-14100	. O Ring
19	51166-24F50	Bolt

**FIG.54**

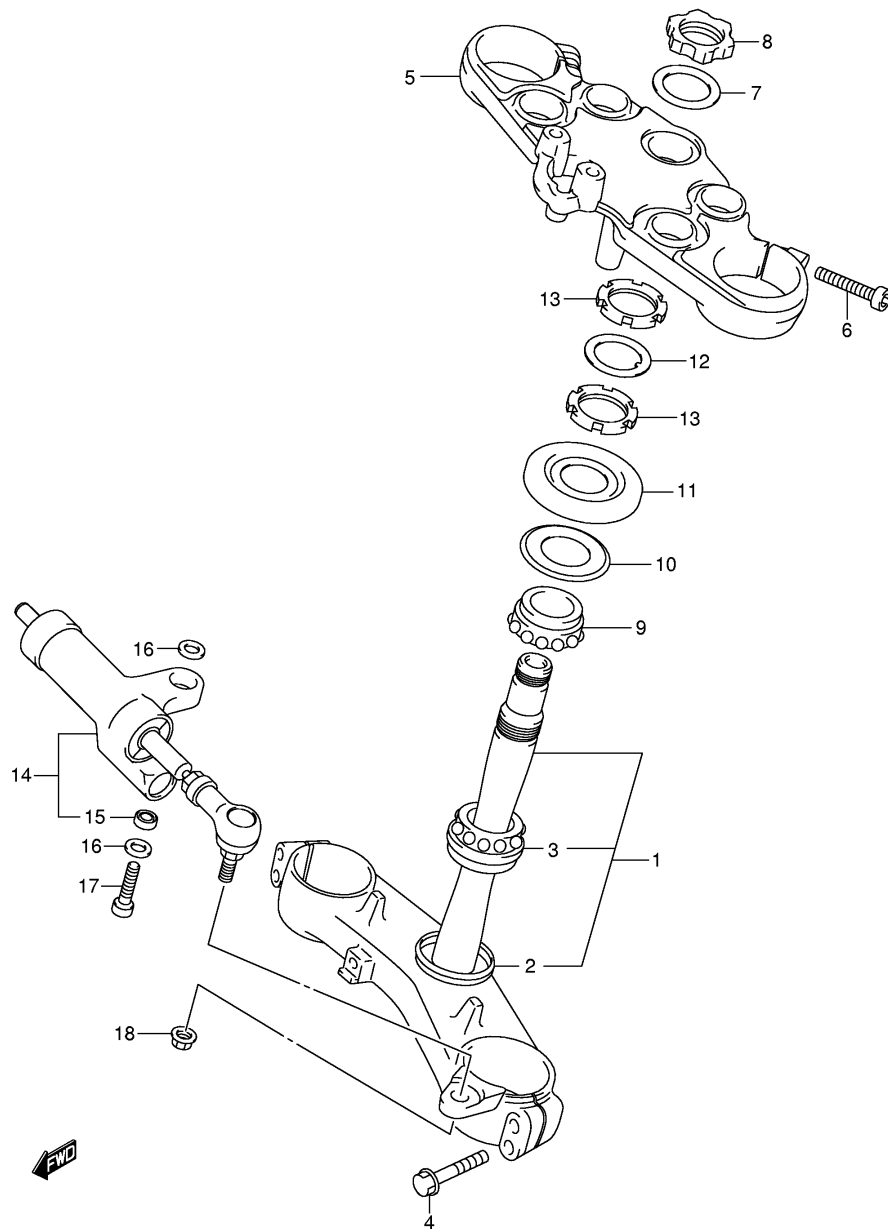


Ref No	Part No	Description
1	51410-24F50	Bracket, Lower
2	51644-12C00	• Seal, Lower
3	09267-30010	• Bearing (30x55x17)
4	51166-01D80	Bolt
5	51311-24F50	Bracket, Upper
6	51328-24F50	Bolt
7	51356-24F50	Washer
8	51353-24F00	Nut
9	09267-30010	Bearing (30x55x17)
10	51644-12C00	Seal, Dust Upper (30.1x56x4)
11	51643-41G00	Cover, Steering Upper
12	51641-33E00	Washer, Stem
13	51631-33E00	Nut, Stem
14	51750-15H00	Damper Assy, Steering
15	09269-08003	• Bearing (8x17.5x11)
16	64339-14101	Seal, Dust
17	07130-08307	Bolt
18	08319-3108A	Nut

**FIG.55**

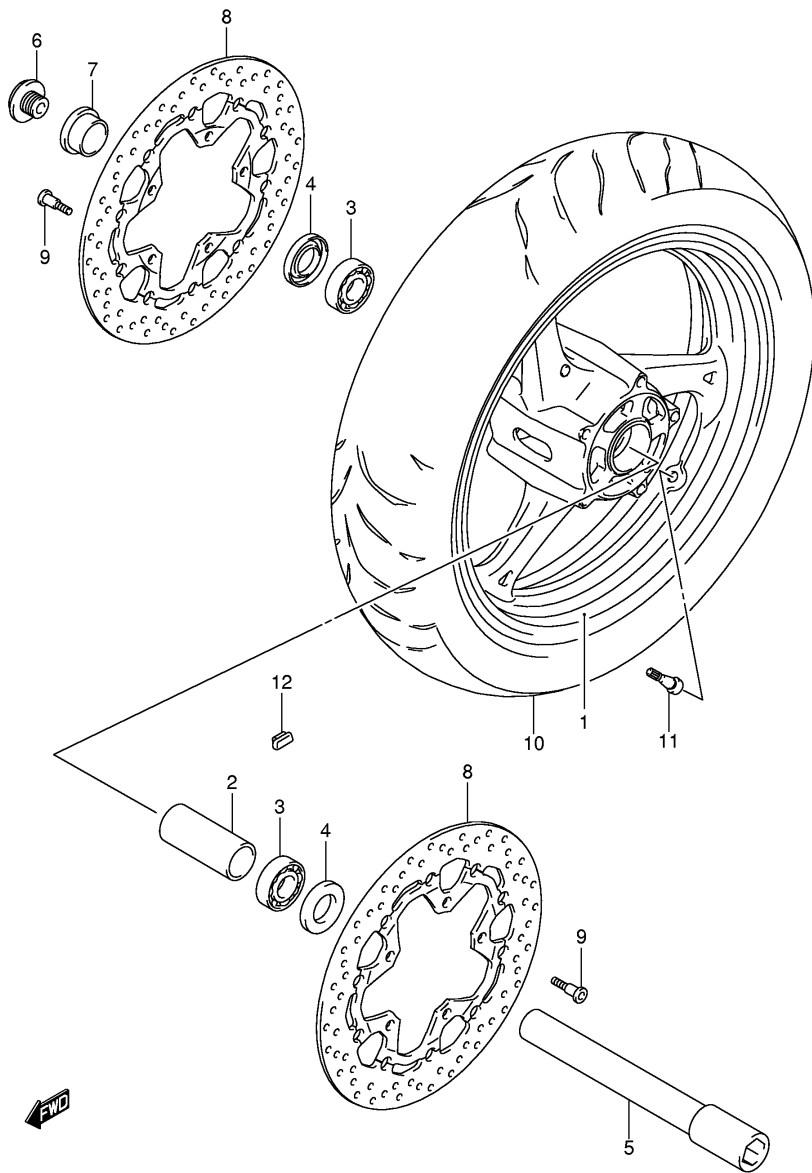

Ref No	Part No	Description
1	54111-15H00-019	Wheel, Front (17xmt3.50) (black)
1	54111-15H00-0FR	Wheel, Fr, 17m/cxmt3.50 (gold)
2	54731-33E20	Spacer, Hub Bearing
3	09262-25061	Bearing (25x52x15)
4	09285-32004	Seal (32x52x7)
5	54711-15H00	Axle, Front
6	54712-41G00	Bolt, Front Axle
7	54751-41G00	Spacer, Front Axle, R
8	59210-15H00	Disc, Front Brake (black)
9	09106-08160	Bolt
10	55110-24F50	Tire, Front, 120/70 Zr17 (58w) (bridgestone)
11	43130-24A00	Valve Assy, Wheel Rim (tr412)
12	55411-39G00	Balancer, Wheel, No.1
12	55412-39G00	Balancer, Wheel, No.2
12	55413-39G00	Balancer, Wheel, No.3


**FIG.56**

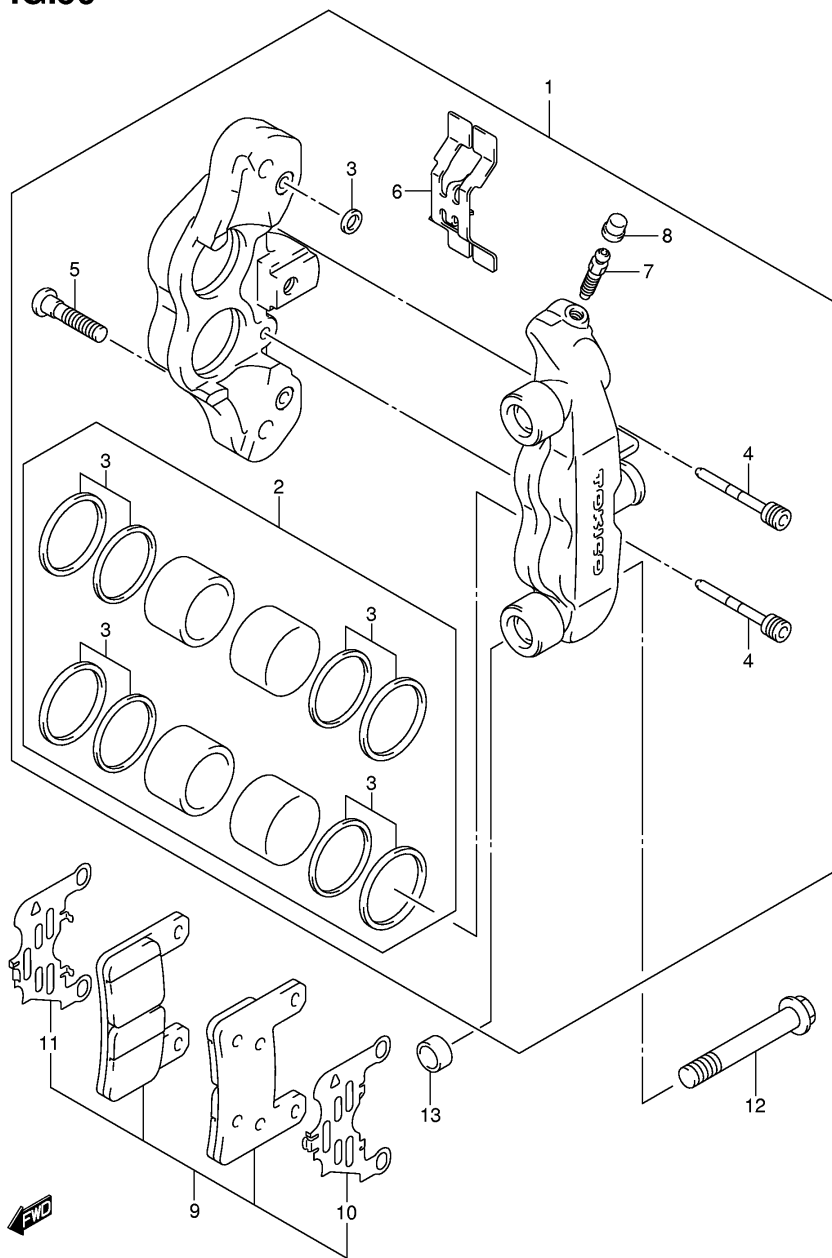

Ref No	Part No	Description
1	59100-41G30-999	Caliper Assy, Front Rh
1	59300-41G30-999	Caliper Assy, Front Lh
2	59100-41820	• . Piston Set
3	59100-41810	•• .. Seal Set, Piston
4	59141-41G00	• . Pin
5	59145-18G00	• . Bolt
6	59151-29G00	• . Spring, Pad
7	59121-18410	• . Bleeder
8	55156-66310	• . Cap
9	59100-29840	Pad & Shim Set
10	59171-41G00	• . Shim
11	59172-41G00	• . Shim
12	09103-10392	Bolt (10x30)
13	59151-41G00	Pin, Caliper

GSX1300RK8 E03 E28\_056  
 FRONT CALIPER-C


**FIG.57**

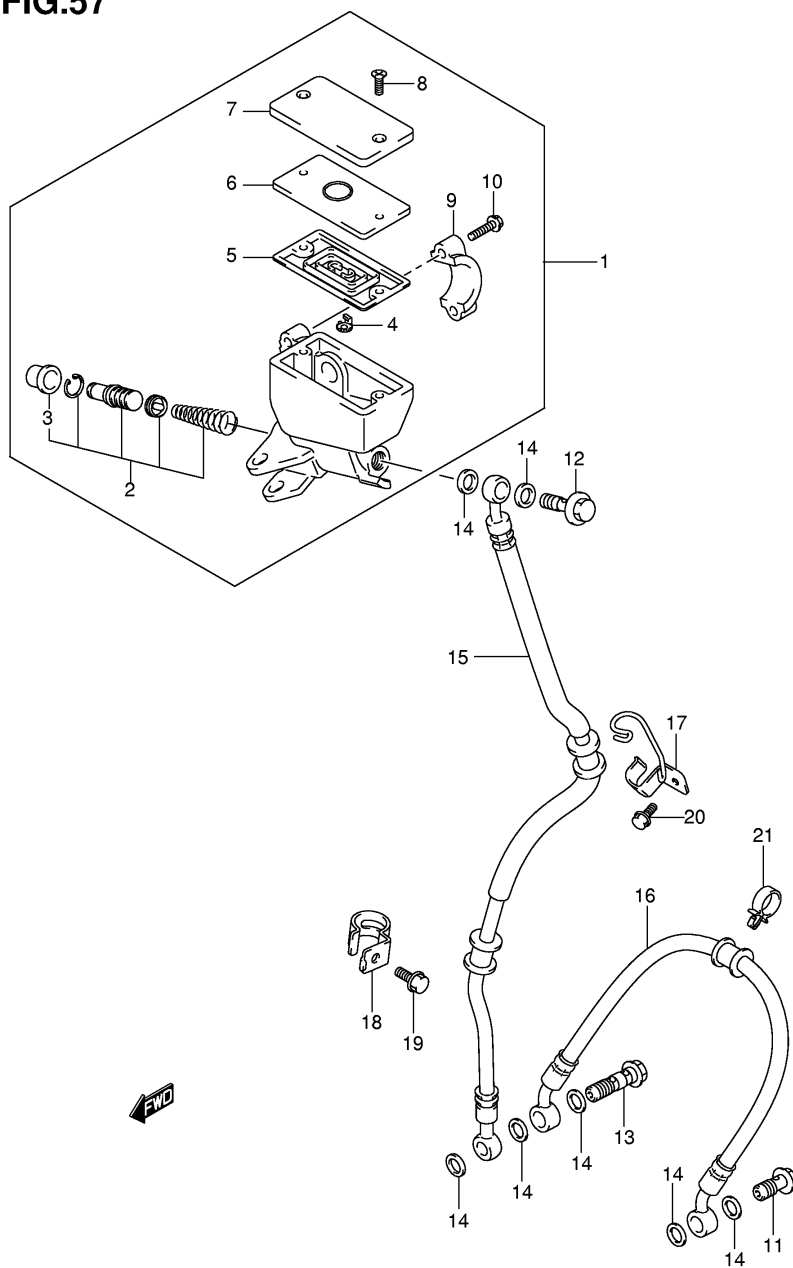

Ref No	Part No	Description
1	59600-24F10	Cylinder Assy, Front Master
2	59600-24810	• . Piston/cup Set
3	59666-44300	• . . Boot
4	59664-48B00	• . Protector
5	59667-49460	• . Diaphragm
6	59668-41C00	• . Plate
7	59669-10G00	• . Cap
8	69689-49300	• . Screw
9	59671-36500	• . Holder
10	59675-02FA0	• . Bolt (6x22)
11	09360-10062	Bolt, Upper (10x1.25x22)
12	09360-10062	Bolt, Lower Lh (10x1.25x22)
13	09360-10064	Bolt, Lower Rh (10x1.25x36)
14	09161-10009	Washer (10x15x1.5)
15	59480-15H00	Hose, Front Brake No.1
16	59240-15H00	Hose, Front Brake No.2
17	59260-41G00	Clamp, Brake Hose No.1
18	59270-15H00	Clamp
19	63161-43E00	Bolt, Brake
20	01547-0612A	Bolt
21	09403-16412	Clamp, Brake Hose No.2


GSX1300RK8 E03 E28\_057  
 FRONT BRAKE HOSE-C

**FIG.58**

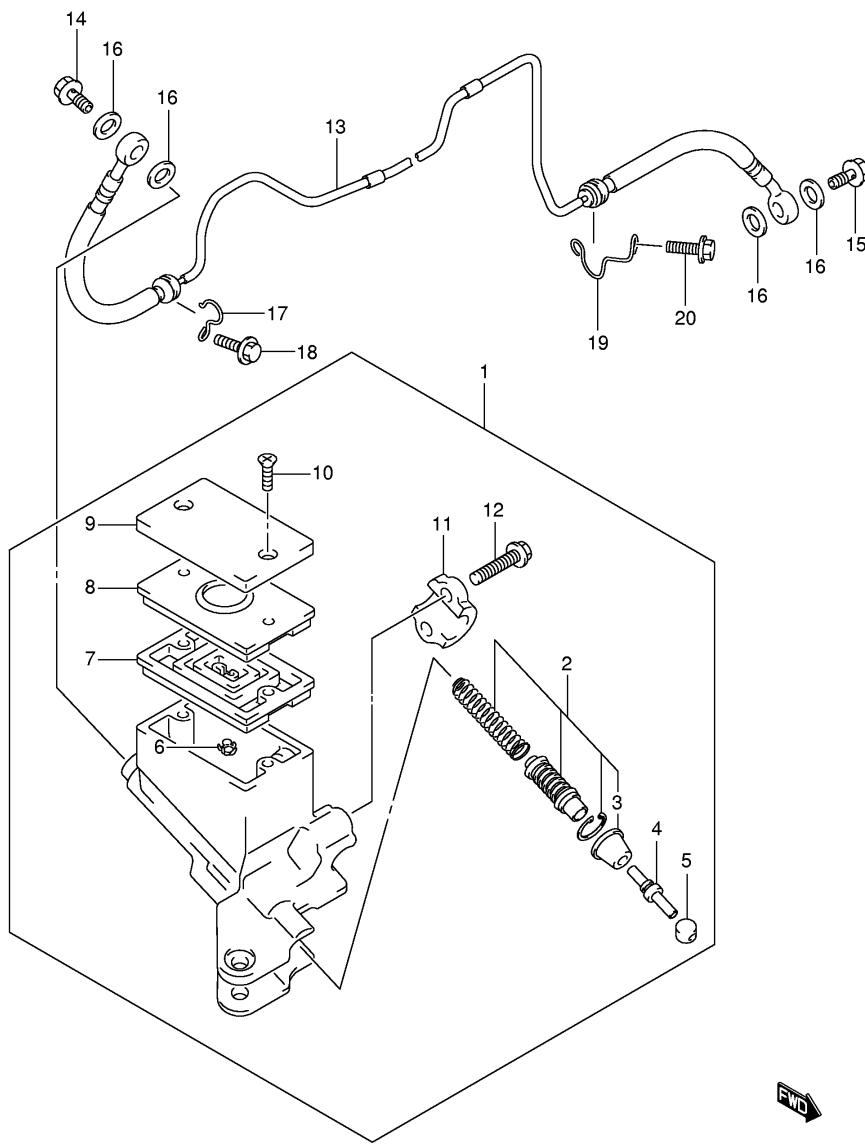


Ref No	Part No	Description
1	59800-24F10	Cylinder Assy, Clutch Master
2	59800-24810	. Piston/cup Set
3	59866-23H00	• . Boot
4	59871-23H00	. Rod, Push
5	59892-08A00	. Bush
6	59664-48B00	. Protector
7	59667-49460	. Diaphragm
8	59668-41C00	. Plate
9	59669-10G00	. Cap
10	69689-49300	. Screw
11	59671-36500	. Holder
12	59675-02FA0	. Bolt (6x22)
13	59910-24F10	Hose, Clutch
14	09360-10062	Bolt, Upper (10x1.25x22)
15	09360-10062	Bolt, Lower (10x1.00x22)
16	09161-10009	Washer (10x15x1.5)
17	59915-24F00	Clamp, Hose No.1
18	01550-0612A	Bolt
19	59921-24F00	Clamp, Hose No.2
20	01550-0616A	Bolt

**FIG.59**

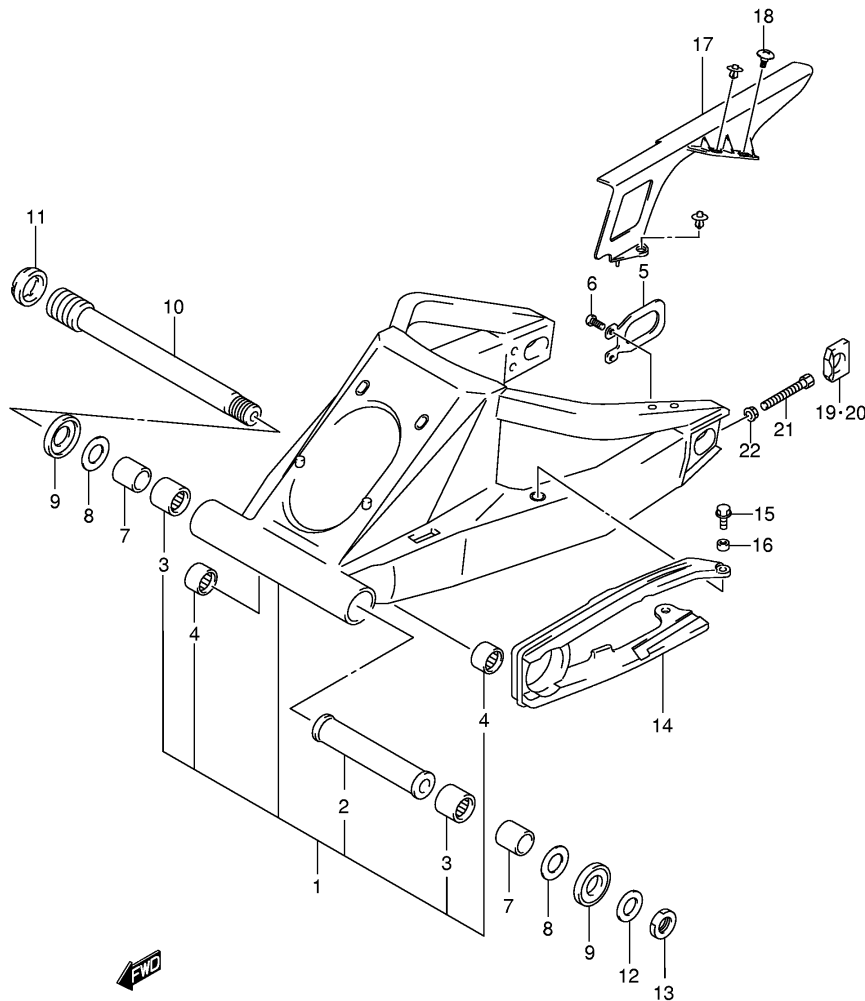

Ref No	Part No	Description
1	61000-24F40-YAP	Swinging Arm Assy, Rear
2	61281-33E20	. Spacer, Center
3	09263-30040	. Bearing, Pivot (30x40x25)
4	09263-17037	. Bearing, Rod (20x27x23.5)
5	61124-33E00	Plate, Bracket
6	09125-06073	Screw
7	61251-17E10	Spacer, Bearing
8	08211-25481	Washer
9	61262-17E10	Seal, Dust
10	61211-16G00	Shaft, Pivot
11	61214-40C31	Nut, Pivot Shaft
12	09160-25070	Washer
13	09159-25001	Nut
14	61273-15H00	Buffer, Chain Touch Defense
15	09116-06152	Bolt (6x20)
16	09180-06306	Spacer (6.5x9x5)
17	61311-15H00	Case, Chain
18	09139-06165	Screw (6x16)
19	61446-40F10	Adjuster, Chain Rh
20	61445-40F20	Adjuster, Chain Lh
21	09100-08287	Bolt (8x50)
22	08316-1008A	Nut


**FIG.60**

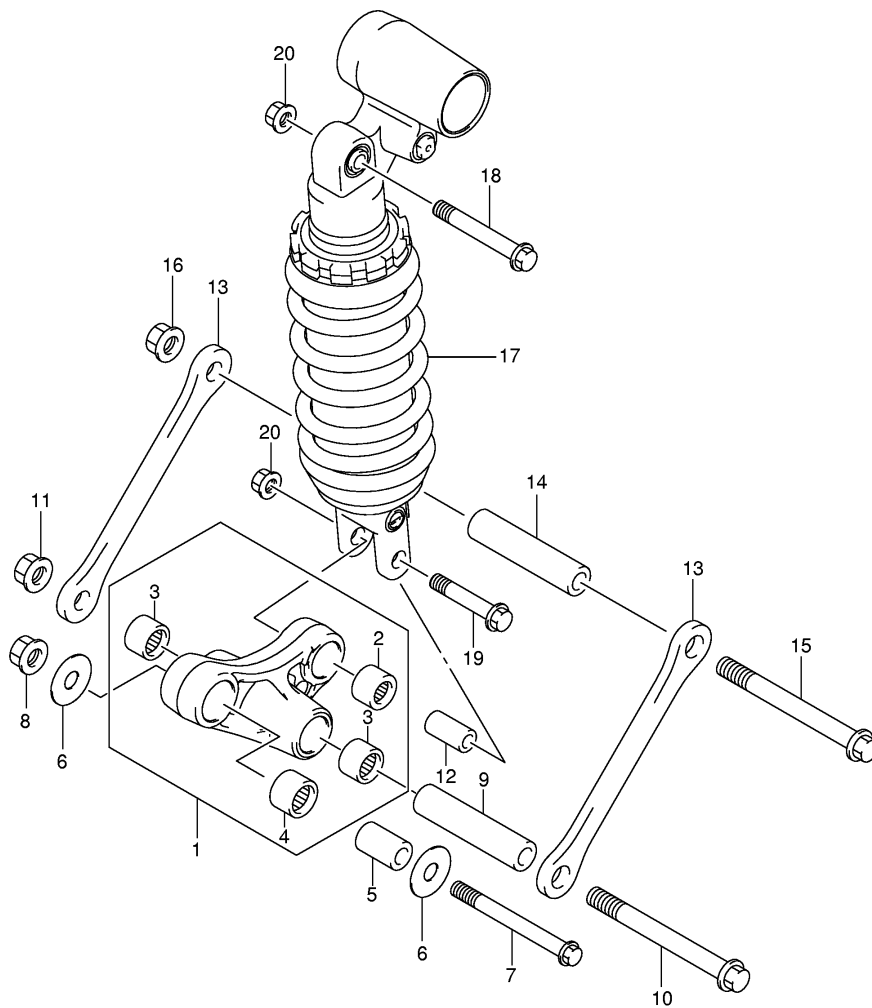

Ref No	Part No	Description
1	62600-24830	Lever Set, Rear Cushion
2	09263-20073	• Bearing, Front (20x27x30)
3	09263-20038	• Bearing, Center
4	09263-17034	• Bearing, Rear (17x24x26)
5	62684-12C00	Spacer, Front (12x20x32)
6	08211-12301	Washer
7	62658-19F00	Bolt, Front (12x78)
8	08319-3112A	Nut
9	62626-33D00	Spacer, Center
10	62621-33D10	Bolt, Center
11	08319-3112A	Nut
12	62684-40A10	Spacer, Rear (10x17x30)
13	62641-24F00	Rod, Rear Cushion
14	62626-33D00	Spacer, Rod
15	62621-33D10	Bolt, Rod
16	08319-3112A	Nut
17	62100-24F60	Absorber Assy, Rear Shock
17	62100-24F50	Absorber Assy, Rear Shock
18	09103-10033	Bolt, Upper
19	09103-10143	Bolt, Lower
20	09159-10115	Nut




**FIG.61**

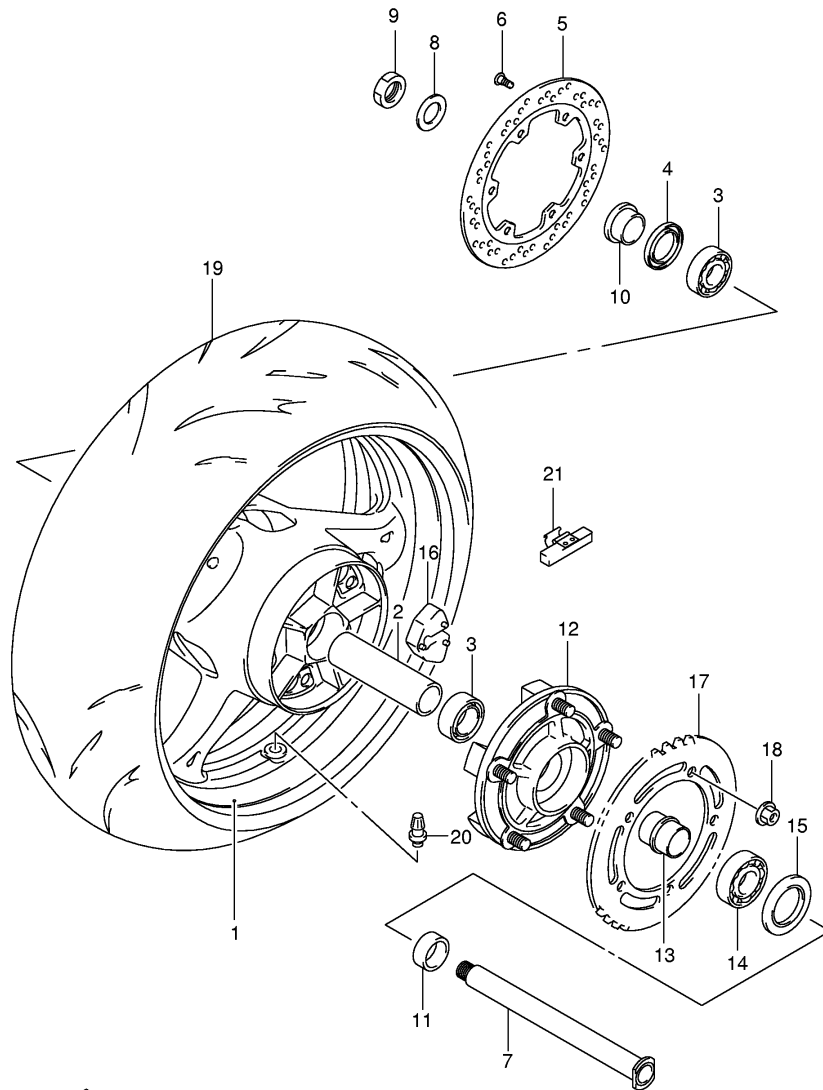

Ref No	Part No	Description
1	64111-15H00-019	Wheel, Rear (17xmt6.00) (black)
1	64111-15H00-0FR	Wheel, Rr, 17m/cxmt6.00 (gold)
2	64731-40F10	Spacer, Hub Bearing
3	09262-28043	Bearing
4	09284-37001	Seal, Rh
5	69211-15H00	Disc, Rear Brake
6	09106-08160	Bolt (8x33)
7	64711-33E20	Axle, Rear
8	09160-25070	Washer, Rr Axle
9	09159-25003	Nut
10	64741-35F00	Spacer, Axle Rh
11	64751-49G00	Spacer, Axle Lh
12	64610-35F30	Drum, Rear Sprocket
13	64733-35F00	Retainer, Sprocket Drum
14	09262-32007	Bearing (32x65x17)
15	09285-39001	Seal (39x65x7)
16	64651-35F20	Absorber, Hub Shock
17	64511-40F50	Sprocket, Rear (nt:43-530)
18	08319-3110A	Nut
19	65110-24F50	Tire, Rear, 190/50 Zr17 (73w) (bridgestone)
20	43130-24A00	Valve Assy, Wheel Rim (tr412)
21	55411-39G00	Balancer, Wheel, No.1
21	55412-39G00	Balancer, Wheel, No.2
21	55413-39G00	Balancer, Wheel, No.3


**FIG.62**

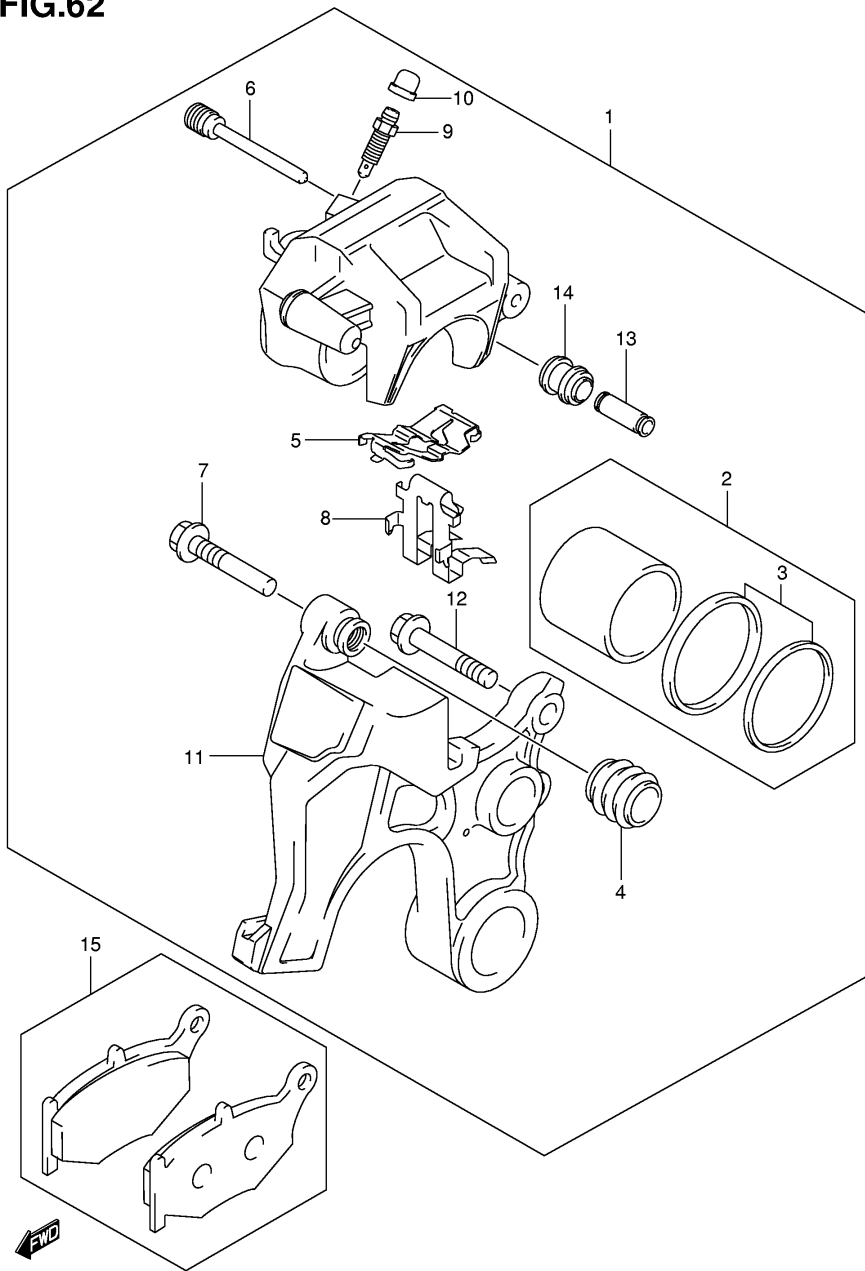

Ref No	Part No	Description
1	69100-15H00-999	Caliper Assy, Rear
2	69100-44890	. Piston Set
3	69102-05880	• . Seal Set, Piston
4	59112-44B00	. Boot, Axle
5	69115-44G00	. Spring, Pad
6	59141-40F00	. Pin
7	69105-44G00	. Pin, Bolt
8	69116-44G00	. Retainer
9	59121-18410	. Bleeder
10	55156-66310	. Cap
11	69150-15H00	Bracket
12	69182-44G00	Bolt
13	69185-44G00	Sleeve
14	69186-44G00	Boot, Sleeve
15	69100-15820	Pad Set


GSX1300RK8 E03 E28\_062  
 REAR CALIPER-C

**FIG.63**

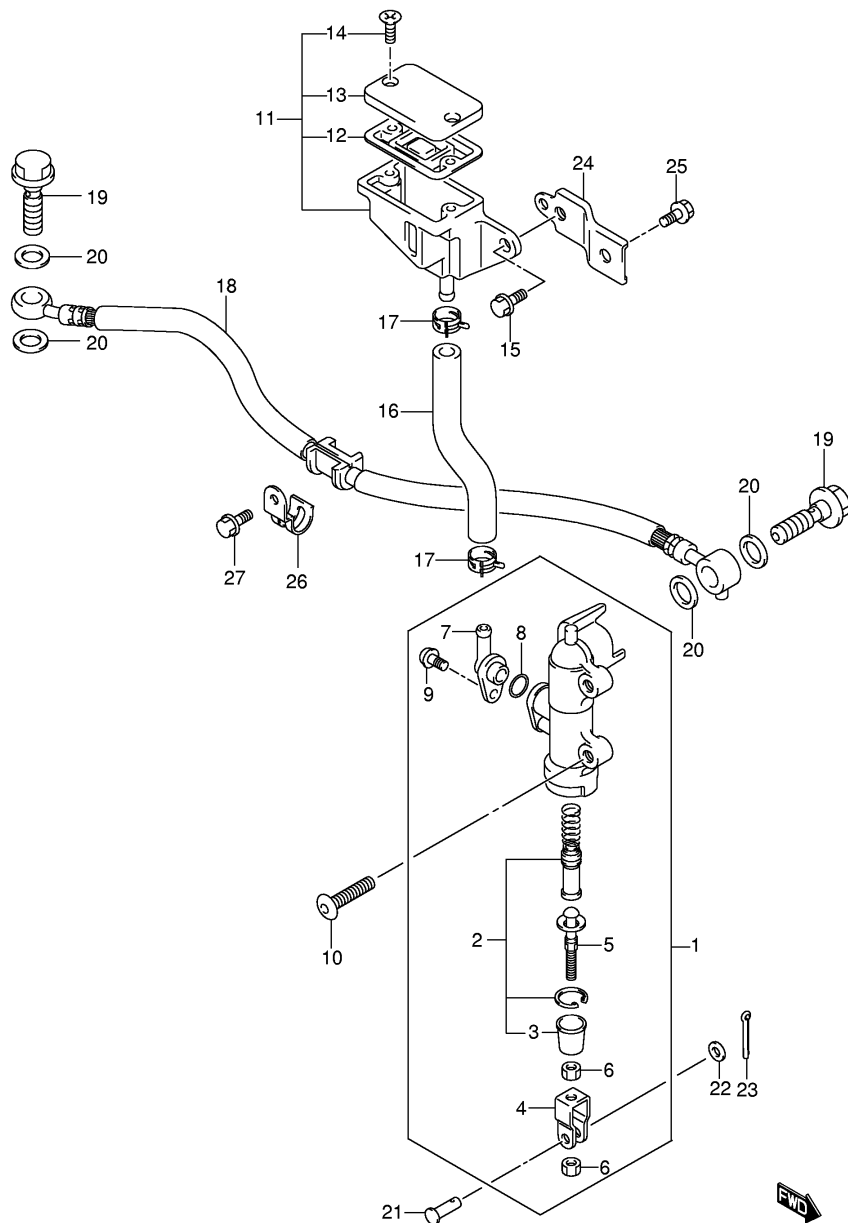

Ref No	Part No	Description
1	69600-15H00	Cylinder Assy, Rear Master
2	69600-04820	. . Piston / Cap Set
3	69691-00A00	• • .. Boot
4	69692-27A30	. . Yoke
5	69670-27A30	. . Rod, Push
6	69693-05A00	. . Nut
7	69672-05A00	. . Connector
8	69686-34200	. . O Ring
9	02112-7412A	. . Screw
10	09139-06028	Bolt (6x20)
11	69740-01D02	Tank Assy, Rear Reservoir
12	59667-04700	. . Diaphragm
13	59669-05D00	. . Cap
14	69689-04A00	. . Screw
15	01547-0612A	Bolt
16	69731-24F00	Hose, Reservoir Tank
17	09401-13417	Clamp
18	69480-15H00	Hose, Rear Brake
19	09360-10062	Bolt (10x1.00x22)
20	09161-10009	Washer (10x15x1.5)
21	09200-06068	Pin
22	08322-0106A	Washer
23	04111-2015A	Pin, Cotter
24	69750-15H00	Bracket, Reservoir Tank
25	01550-0612A	Bolt
26	69268-15H00	Clamp, Rear Brakehose
27	01547-0612A	Bolt

**FIG.64**

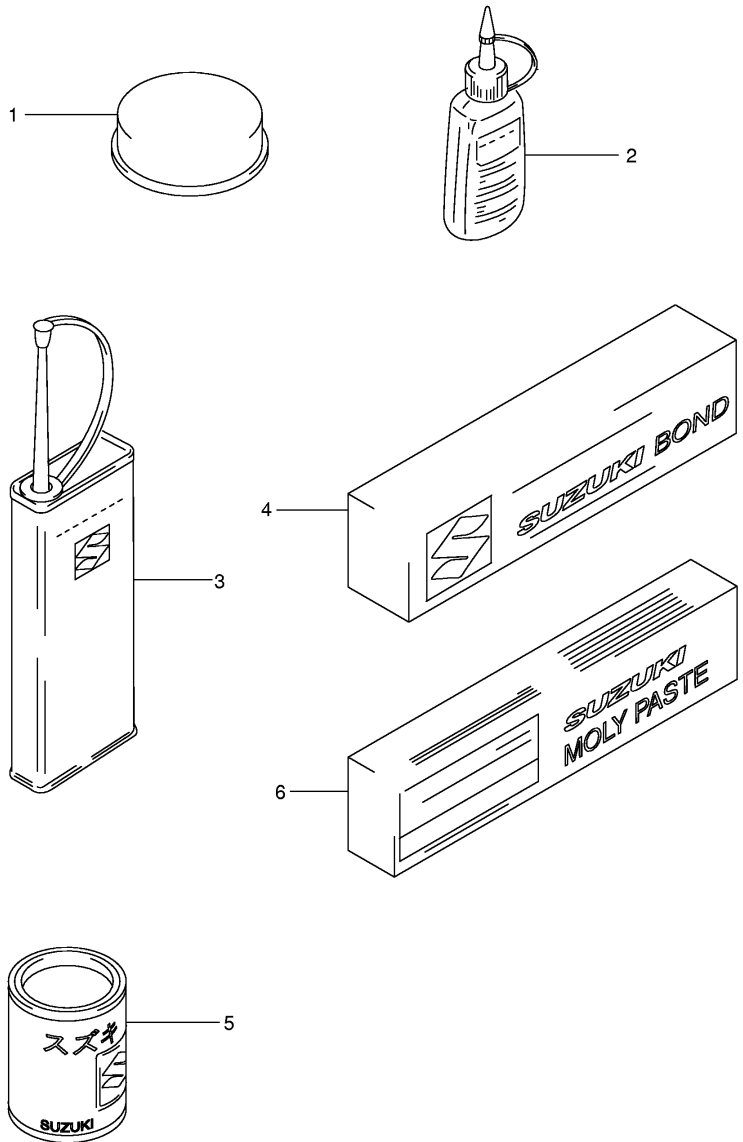

Ref No	Part No	Description
1	99000-25110	Suzuki Pbc Grease
2	99104-32020	Thread Lock Super (1361a)
2	99104-32030	Thread Lock Super (1363a)
2	99000-32050	Thread Lock Super (1342)
2	99000-32100	Thread Lock Super (1305)
2	99000-32130	Thread Lock Super (1360)
3	99000-32040	Thread Lock Cement
4	99000-31140	Suzuki Bond (1207b)black
4	99000-31110	Suzuki Bond (1215)
5	99000-25030	Suzuki Super Grease
6	99000-25140	Suzuki Moly Paste